

TOPUTURE TP2

TOPUTURE Walking Pad Under Desk Treadmill

Model: TP2 - User Manual

1. INTRODUCTION

Thank you for choosing the TOPUTURE Walking Pad Under Desk Treadmill. This 2-in-1 folding treadmill is designed for both walking and light running, offering a convenient way to stay active at home or in the office. Featuring a 7% fixed incline, smart app integration, and a compact design, it provides an efficient and comfortable exercise experience. Please read this manual thoroughly before use to ensure proper operation, maintenance, and safety.



Image: The TOPUTURE Walking Pad Under Desk Treadmill in its two configurations: with the handle up for walking/running, and folded down for under-desk use.

2. IMPORTANT SAFETY INFORMATION

To reduce the risk of serious injury, read all important precautions and instructions in this manual before using the treadmill. TOPUTURE assumes no responsibility for personal injury or property damage sustained by or through the use of this product.

- Always place the treadmill on a level surface.
- Keep children and pets away from the treadmill during operation.
- Wear appropriate athletic footwear.
- Do not operate the treadmill if it has a damaged power cord or plug.
- Always use the safety key during operation.

- Do not exceed the maximum weight capacity of 300 lbs (130 kg).
- Consult a physician before beginning any exercise program.

3. PACKAGE CONTENTS

Verify that all components are present and undamaged:

- TOPUTURE Walking Pad Under Desk Treadmill (Model TP2)
- Remote Control
- Power Cord
- Safety Key
- User Manual
- Lubricant (may be included or recommended for separate purchase)

4. PRODUCT FEATURES

- **2-in-1 Design:** Functions as a walking pad (handle folded) or a traditional treadmill (handle upright).
- **7% Fixed Incline:** Simulates uphill walking for increased calorie burn.
- **Speed Range:** 0.6 - 7.5 MPH (1 - 12 km/h).
- **Powerful & Quiet Motor:** 2.5 HP motor with low noise operation (approx. 45db).
- **Multi-Function LED Display:** Shows time, calories, speed, and distance.
- **Double Shock Absorption:** 5-layer anti-slip belt, 6 silicone shock absorbers, and 2 soft rubber pads for joint protection.
- **Smart App Integration:** Connects to fitness apps like FitShow, Zwift, and Kinomap for personalized workouts and data tracking.
- **Portable & Space Saving:** Foldable design with built-in transport wheels for easy movement and storage.
- **Device Holder:** Integrated holder for your phone or tablet.
- **Remote Control:** Convenient control of speed and start/stop functions.

Connect the APP to Gym At Home



Image: Smart App Integration for personalized workouts and data tracking.

5. SETUP

The TOPUTURE Walking Pad Treadmill features an installation-free design, meaning it is ready to use almost immediately out of the box.

1. **Unpack:** Carefully remove the treadmill from its packaging.
2. **Position:** Place the treadmill on a flat, stable surface with adequate clearance around it.
3. **Unfold Handle (Optional):** If you intend to use the treadmill with the handle up, lift the handle until it locks securely into place. Ensure both quick-release handles are engaged.
4. **Connect Power:** Plug the power cord into the treadmill and then into a grounded electrical outlet.
5. **Insert Safety Key:** Attach the safety key to the designated slot on the console. The treadmill will not operate without the safety key in place.

Easy Storage & Space Saving



Image: The treadmill's compact design and transport wheels facilitate easy movement and storage.

6. OPERATING INSTRUCTIONS

6.1 Basic Operation

1. **Power On:** Press the power button on the treadmill or remote control. The LED display will illuminate.
2. **Start:** Press the 'Start' button on the remote or console. The treadmill will beep three times and begin at a low speed (e.g., 0.6 MPH).

3. **Adjust Speed:** Use the '+' and '-' buttons on the remote or console to increase or decrease speed.
4. **Stop:** Press the 'Stop' button on the remote or console, or pull the safety key to immediately stop the treadmill.

6.2 Modes of Use

- **Walking Pad Mode (Handle Folded):** Ideal for use under a standing desk. Speed range typically 0.6 - 4 MPH.
- **Treadmill Mode (Handle Upright):** Provides a handrail for support during walking or light running. Speed range 0.6 - 7.5 MPH.

2-IN-1 Under Desk Treadmill



Walking mode: 0.6-4MPH



Running mode: 4-7.5MPH



Image: The 2-in-1 functionality allows for both walking pad and traditional treadmill use.

6.3 LED Display

The integrated LED display provides real-time workout data:

- **SPEED:** Current speed in MPH or km/h.
- **TIME:** Duration of your workout.
- **DIST:** Distance covered.
- **CAL:** Estimated calories burned.



Image: The LED display provides essential workout metrics, and the remote offers convenient control.

7. APP INTEGRATION

Enhance your workout experience by connecting your treadmill to compatible fitness applications.

1. **Download App:** Download the recommended 'FitShow' app or other compatible apps (e.g., Zwift, Kinomap) from your device's app store.
2. **Connect:** Follow the in-app instructions to connect your device to the treadmill via Bluetooth.
3. **Explore Features:** The app allows you to record exercise data, access tailored exercise plans, participate in online courses, and enjoy virtual scenery during your workout.

8. MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your treadmill.

- **Cleaning:** Wipe down the treadmill with a damp cloth after each use. Avoid using abrasive cleaners.
- **Lubrication:** The running belt requires periodic lubrication to reduce friction and wear. Refer to the specific instructions provided with your lubricant or consult the manufacturer's guidelines. Typically, this involves applying silicone oil under the belt every few months, depending on usage.
- **Belt Adjustment:** If the running belt becomes misaligned or slips, refer to the detailed instructions in the full manual for adjustment procedures.
- **Storage:** When not in use, fold the handle down and store the treadmill in a dry, safe place. Utilize the transport wheels for easy relocation.

5-Layer Anti-Slip Shock-Absorbing Running Belt

- Anti-Slip Layer
- Enhanced Layer
- Absorbing Layer
- Supporting Layer
- Fabric Knitted Layer

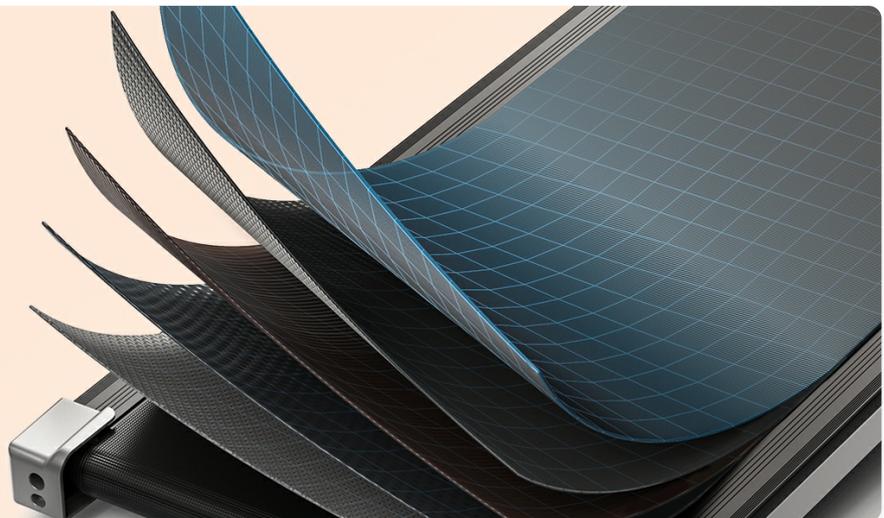


Image: The treadmill features a 5-layer anti-slip shock-absorbing running belt for comfort and durability.

9. TROUBLESHOOTING

If you encounter issues with your treadmill, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Treadmill does not start	Power cord not plugged in; Safety key not inserted; Power switch off.	Ensure power cord is securely plugged in; Insert safety key; Turn on power switch.
Running belt slips or stops	Belt too loose; Lack of lubrication; Overload.	Adjust belt tension (refer to manual); Lubricate the running belt; Reduce user weight.
Unusual noise during operation	Lack of lubrication; Loose parts; Belt misalignment.	Lubricate the running belt; Check and tighten any loose bolts; Adjust belt alignment.
Display not working	Loose connection; Power issue.	Check all connections; Ensure stable power supply.

If the problem persists, please contact customer support.

10. SPECIFICATIONS

Feature	Specification
Brand	TOPUTURE
Model	TP2
Color	Black
Product Dimensions (LxWxH)	51.2"D x 22"W x 5.2"H (130cm x 56cm x 13.2cm)
Folded Size (LxWxH)	51.2" x 22" x 5.2" (130cm x 56cm x 13.2cm)
Item Weight	23 Kilograms (approx. 50.7 lbs)
Maximum Weight Recommendation	130 Kilograms (approx. 300 lbs)
Motor Power	2.5 HP
Speed Range	0.6 - 7.5 Miles per Hour
Maximum Incline Percentage	7% (Fixed)
Deck Length	40 Inches (101.6 cm)
Deck Width	16 Inches (40.6 cm)
Display Type	LED
Connectivity Technology	Power Cord, Bluetooth (for App)
Assembly Required	No (Installation-free design)

11. WARRANTY AND SUPPORT

The TOPUTURE Walking Pad Under Desk Treadmill comes with a **1-year warranty** from the date of purchase, covering manufacturing defects and major components. Please retain your proof of purchase for warranty claims.

For technical support, warranty inquiries, or any questions regarding your product, please contact TOPUTURE customer service through the retailer where you purchased the product or visit the official TOPUTURE brand store online.

TOPUTURE Brand Store: [Visit TOPUTURE Store on Amazon](#)

© 2024 TOPUTURE. All rights reserved.

Related Documents

 The image shows the cover of the user manual for the Toputure TP1 Folding Treadmill. It features a line drawing of the treadmill in its folded position. The text on the cover includes the Toputure logo, the title 'USER MANUAL Model TP1', and 'FOLDING TREADMILL'.	<p>Toputure TP1 Folding Treadmill User Manual</p> <p>Comprehensive user manual for the Toputure TP1 Folding Treadmill, covering installation, operation, safety, maintenance, and troubleshooting.</p>
 The image shows the cover of the user manual for the Toputure TP2 Home Treadmill. It features a line drawing of the treadmill. The text on the cover includes the Toputure logo, the title 'USER MANUAL Model TP2', and 'HOME TREADMILL'.	<p>Toputure TP2 Home Treadmill User Manual</p> <p>User manual for the Toputure TP2 Home Treadmill, covering installation, operation, maintenance, and safety guidelines.</p>
 The image shows the cover of the user manual for the Toputure TP1 Folding Treadmill. It features a line drawing of the treadmill in its folded position. The text on the cover includes the Toputure logo, the title 'USER MANUAL Model TP1', and 'FOLDING TREADMILL'.	<p>Toputure TP1 Folding Treadmill User Manual</p> <p>Comprehensive user manual for the Toputure TP1 Folding Treadmill, covering installation, operation, maintenance, and troubleshooting.</p>
 The image shows the cover of the user manual for the Toputure TP3 Incline Walking Pad. It features a line drawing of the walking pad. The text on the cover includes the Toputure logo, the title 'USER MANUAL Model TP3', and 'INCLINE WALKING PAD'.	<p>Toputure TP3 Incline Walking Pad User Manual</p> <p>User manual for the Toputure TP3 Incline Walking Pad, covering installation, usage, maintenance, and troubleshooting.</p>

Toputure




[\[pdf\]](#) User Manual Installation Guide Instructions

Toputure TP2 USER MANUAL Model TP2 HOME TREADMILL Operating instructions a In the fully manual operation mode press this button to start motor and then pause motor B17oxdgv dLm media amazon images | B17oxdgv dL ref dp product quick view TREADMILLUSER motor The treadmill has running walking modes up 7.5 MPH is easy install It speed of 6.5mph US 1 12km h UKm viewm ||| |||

...

lang: score:24 filesize: 3.09 M page_count: 24 document date: 2024-10-18

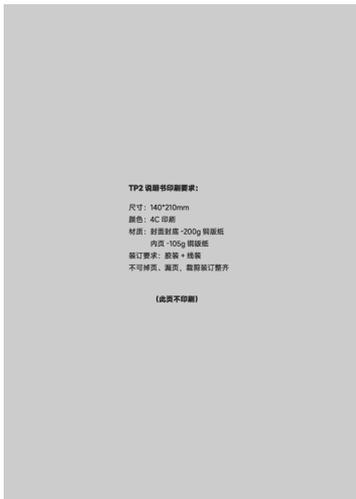

[Toputure TP2 Home Treadmill User Manual](#)

User manual for the Toputure TP2 Home Treadmill, covering installation, operation, maintenance, and safety guidelines.

lang:en score:20 filesize: 4.05 M page_count: 26 document date: 2024-03-26

Toputure



[\[pdf\]](#)

Toputure TP2 Treadmill for Home with Tilt 2 in 1 Walking Pad 12 km h Foldable Incline 5HP Under Desk Office Remote Control and App No Installation Amazon de Sports Outdoors B17oxdgv dL m media amazon images | |||

...

lang:en score:9 filesize: 3.09 M page_count: 24 document date: 2024-10-18

