

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [TOPUTURE](#) /

› [TOPUTURE TP4 Foldable Walking Pad Treadmill with 9% Incline and Handle Bar User Manual](#)

TOPUTURE TP4

TOPUTURE TP4 Foldable Walking Pad Treadmill User Manual

Model: TP4 | Brand: TOPUTURE

1. IMPORTANT SAFETY INFORMATION

Please read this entire manual carefully before operating the TOPUTURE TP4 Foldable Walking Pad Treadmill. Retain this manual for future reference.

- **Consult a Physician:** Before starting any new exercise program, consult with your physician, especially if you have pre-existing health conditions.
- **Supervision:** Keep children and pets away from the treadmill during operation. This appliance is not intended for use by persons with reduced physical, sensory, or mental capabilities unless supervised.
- **Proper Footwear:** Always wear appropriate athletic footwear while using the treadmill.
- **Emergency Stop:** Familiarize yourself with the emergency stop function and safety key. Always attach the safety key clip to your clothing during use.
- **Stable Surface:** Place the treadmill on a flat, stable surface with adequate clearance around it (at least 2 feet on each side and 6 feet behind).
- **Power Cord:** Ensure the power cord is not pinched or damaged. Do not operate if the cord is damaged.
- **Weight Limit:** Do not exceed the maximum user weight of 300 pounds (136 kg).
- **Maintenance:** Perform regular maintenance as described in this manual to ensure safe and optimal performance.

2. PRODUCT OVERVIEW

2.1 Key Features

- **Adjustable 9% Incline:** Manually adjustable incline to simulate uphill walking and enhance calorie burning.
- **Powerful 2.5HP Motor:** Provides consistent performance with quiet operation (below 45dB).
- **Dual LED Display:** Clear real-time display of time, speed, distance, and calories on both the main unit and handlebar.

- **Mute Control:** Remote control features a mute button to eliminate harsh beeps.
- **Double Shock Absorption:** Equipped with a 5-layer anti-slip belt, 6 silicone shock absorbers, and 2 soft rubber pads for joint protection.
- **Compact & Foldable Design:** Folds to 50"L x 23"W x 4.5"H for easy storage under furniture.
- **App Connectivity:** Connects via Bluetooth to fitness apps like Fitshow for tracking and sharing workout data.
- **Magnetic Remote Control:** Conveniently attaches to the folding bar for easy access.
- **No Assembly Required:** Ready to use directly out of the box.

2.2 Product Components

The TOPUTURE TP4 treadmill includes the following main components:

- Running Belt
- Handlebar with Integrated Display and Device Holder
- Main Unit with LED Display
- Power Cord
- Magnetic Remote Control
- Safety Key
- L-Wrench (for maintenance)
- User Manual (this document)



Image: The TOPUTURE TP4 Foldable Walking Pad Treadmill shown in both its compact, folded state and its upright, unfolded state with the handlebar. This illustrates its space-saving design and readiness for use.



Image: A close-up view of the treadmill's dual LED screens, highlighting the clear display of workout data such as speed, distance, time, and calories. The magnetic remote control is also visible.

3. SETUP INSTRUCTIONS

3.1 Unfolding the Treadmill

1. Carefully remove the treadmill from its packaging.
2. Place the treadmill on a flat, stable surface.
3. Lift the handlebar until it locks into the upright position. Ensure it is securely locked before use.
4. The treadmill is designed for immediate use without complex assembly.

Your browser does not support the video tag.

Video: This video demonstrates the unfolding process of the TOPUTURE 4-in-1 Treadmill with Incline, showing how quickly and easily it can be set up for use without requiring complex assembly.

3.2 Placement

- Ensure the treadmill is placed on a level, hard surface. Avoid thick carpets that may obstruct ventilation or movement.
- Maintain a minimum clearance of 2 feet (0.6 meters) on each side and 6 feet (1.8 meters) behind the treadmill for safety.
- Connect the power cord to a grounded electrical outlet.

4. OPERATING INSTRUCTIONS

4.1 Power On/Off

1. Plug the power cord into a suitable outlet.
2. Insert the safety key into its designated slot on the console. The display will illuminate.
3. To power off, remove the safety key and unplug the treadmill.

4.2 Using the Control Panel and Remote Control

The treadmill can be controlled via the integrated control panel on the handlebar or the magnetic remote control.

- **Start/Pause:** Press the 'Start/Pause' button to begin or temporarily stop your workout.
- **Speed Adjustment:** Use the '+' and '-' buttons to increase or decrease the speed. Speed ranges from

0.6 to 7.6 mph.

- **Mode:** Press the 'MODE' button to cycle through different display modes (Time, Distance, Calories).
- **Mute:** The remote control features a mute button to silence operational beeps.

4.3 Incline Adjustment

The TP4 treadmill features a manual 9% incline for varied workout intensity.

1. **Unfold the Footpad:** Locate and unfold the adjustable footpad at the rear of the treadmill.
2. **Insert the Pin:** Insert the provided pin into the designated hole to secure the footpad in the incline position.
3. **Adjust Middle Footpad:** Ensure the middle footpad is properly adjusted for stability.



Image: A visual guide demonstrating the three steps required to manually adjust the incline of the treadmill, ensuring proper setup for an elevated workout.



Image: This graphic compares the calorie-burning potential at 0% incline (200 Kcal/H) versus 9% incline (500 Kcal/H), illustrating the benefit of using the manual incline feature.

4.4 App Connectivity (Bluetooth)

Enhance your workout experience by connecting your treadmill to compatible fitness applications via Bluetooth.

1. Download a compatible fitness app (e.g., Fitshow) from your device's app store.
2. Ensure Bluetooth is enabled on your smartphone or tablet.
3. Open the app and follow the on-screen instructions to pair with your TOPUTURE TP4 treadmill.

4. Once connected, you can track your exercise data, set goals, and access various workout programs.

Double Your Running Pleasure with Apps

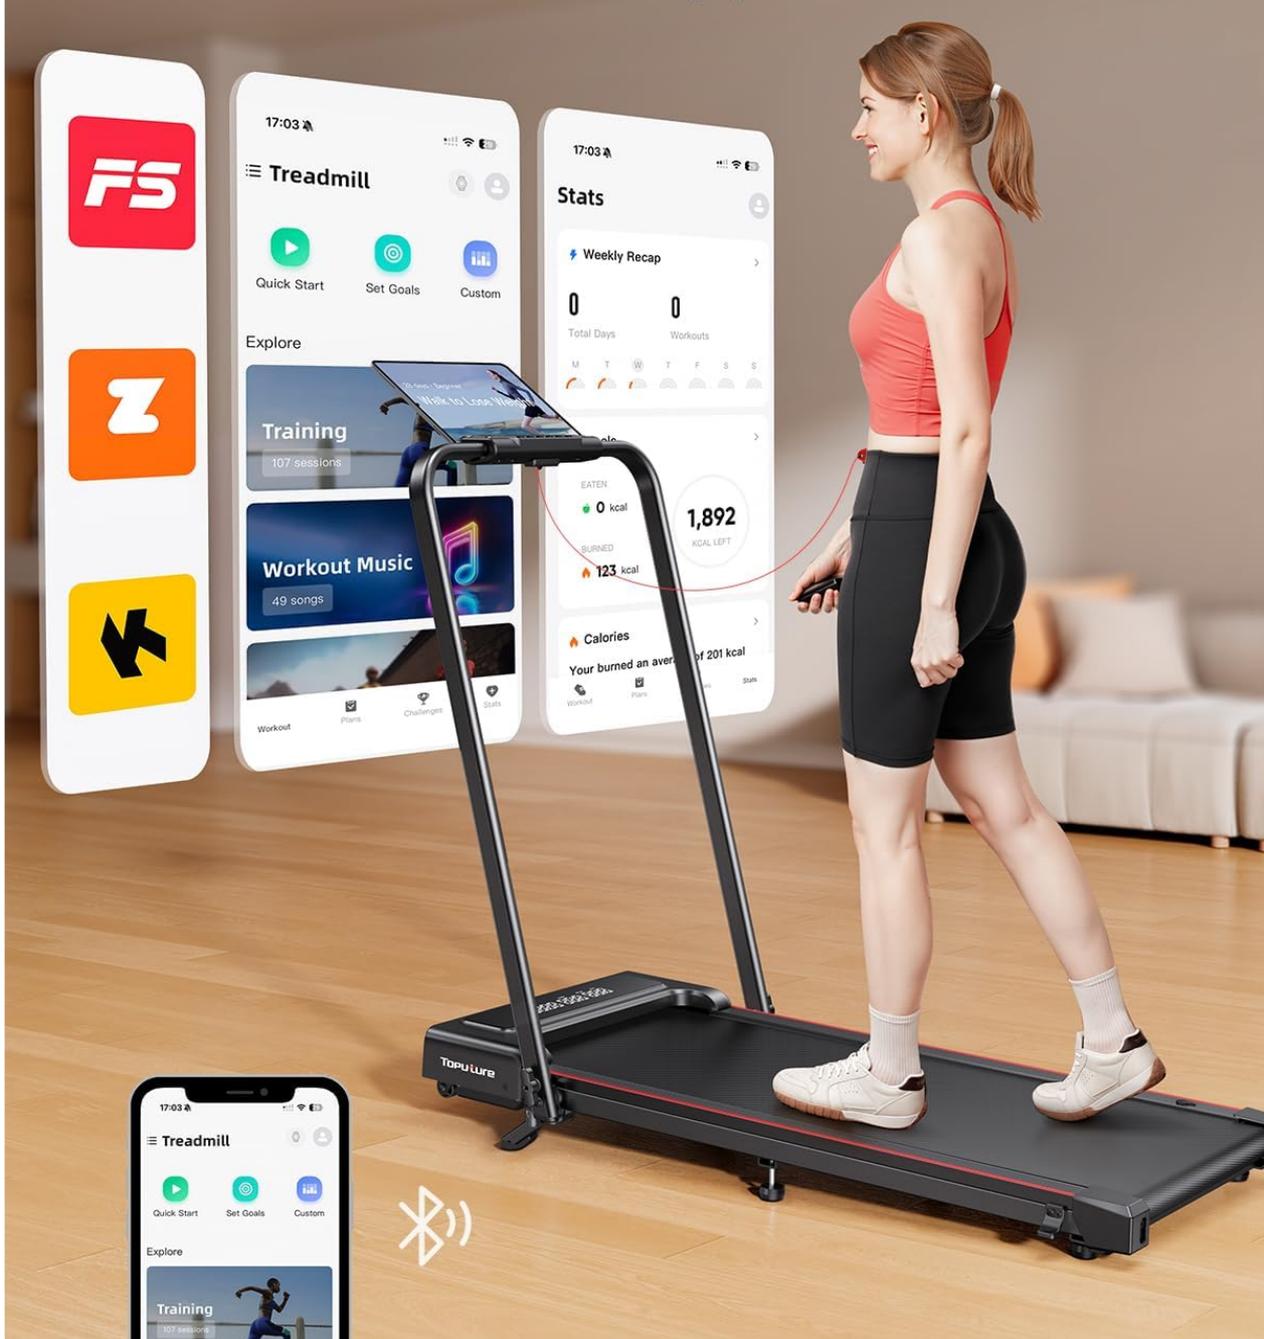


Image: A user is shown interacting with a fitness application on a tablet, which is securely placed on the treadmill's device holder. This highlights the treadmill's Bluetooth connectivity and app integration for tracking workouts.

4.5 Safety Key Usage

The safety key is a critical safety feature. The treadmill will not operate without it.

- Attach the red clip of the safety key to your clothing before starting your workout.
- If you fall or move too far back on the belt, the safety key will detach, immediately stopping the treadmill.
- Always ensure the safety key is properly inserted before beginning your exercise.

5. MAINTENANCE

Regular maintenance ensures the longevity and safe operation of your treadmill.

5.1 Cleaning

- Always unplug the treadmill before cleaning.
- Wipe down the console and other surfaces with a soft, damp cloth. Avoid abrasive cleaners or solvents.
- Periodically vacuum underneath the treadmill to remove dust and debris.

5.2 Lubrication

The running belt requires periodic lubrication to reduce friction and extend its lifespan. The TP4 features a convenient drip tube design for lubrication.

- Refer to the specific instructions provided with your lubricating oil for frequency and application method.
- Typically, lift the edge of the running belt and apply silicone lubricant to the center of the deck.



Image: This graphic illustrates the process of adding lubricating oil to the treadmill belt and how to adjust the belt tension, ensuring smooth operation and extending the product's life.

5.3 Belt Adjustment

If the running belt starts to slip or drift to one side, it may need adjustment.

- Use the provided L-wrench to make small adjustments to the rear roller bolts.
- Turn the bolt clockwise to move the belt to the right, and counter-clockwise to move it to the left.
- Adjust in small increments (quarter turns) and test the belt after each adjustment.

5.4 Storage

The treadmill's foldable design and transport wheels make storage convenient.

- Fold the handlebar down to convert it into an under-desk walking pad or for compact storage.
- Utilize the integrated transport wheels to easily move the treadmill to a storage location, such as under a bed or sofa.

Weight Capacity MAX 300 LBS



Image: This image demonstrates the treadmill's space-saving capabilities, showing it folded and stored under a sofa, along with a close-up of its transport wheels for easy mobility.

6. TROUBLESHOOTING

If you encounter issues with your treadmill, refer to the following common problems and solutions:

| Problem | Possible Cause | Solution |
|---------------------------------|---|--|
| Treadmill does not power on. | Power cord not plugged in; Safety key not inserted; Power switch off. | Ensure power cord is securely plugged in. Insert the safety key. Check the main power switch. |
| Running belt slips or stops. | Belt too loose; Lack of lubrication; Motor overload. | Adjust the running belt tension (refer to Section 5.3). Lubricate the running deck (refer to Section 5.2). Reduce user weight or speed. |
| Unusual noise during operation. | Loose components; Lack of lubrication; Belt misalignment. | Check for and tighten any loose screws. Lubricate the running deck. Adjust belt alignment. |
| Remote control not responding. | Battery low or dead; Obstruction between remote and sensor. | Replace remote control battery. Ensure clear line of sight to the treadmill's sensor. |

If the problem persists after attempting these solutions, please contact customer support.

7. SPECIFICATIONS

| Feature | Specification |
|------------------|---------------|
| Brand | TOPUTURE |
| Model | TP4 |
| Motor Horsepower | 2.5 HP |
| Speed Range | 0.6 - 7.6 MPH |

| Feature | Specification |
|-------------------------------|--|
| Incline | Manual 9% |
| Maximum Weight Recommendation | 300 Pounds (136 kg) |
| Running Area | 40"L x 16"W |
| Product Dimensions (Unfolded) | 50"D x 23"W x 4.5"H (Note: 4.5"H is likely folded height, actual unfolded height with handle will be more) |
| Folded Size | 50"L x 23"W x 4.5"H |
| Item Weight | 45 Kilograms (approx. 99 lbs) |
| Material | Alloy Steel |
| Connectivity | Bluetooth 5.0, App Interconnection |
| Included Components | Safety Key, Power Cord, Remote Control, User Manual, L-Wrench |

8. WARRANTY AND SUPPORT

8.1 Warranty Information

The TOPUTURE TP4 Foldable Walking Pad Treadmill comes with a **1-year manufacturer warranty** from the date of purchase. This warranty covers defects in materials and workmanship under normal use. It does not cover damage caused by misuse, accident, unauthorized modification, or improper maintenance.

Please retain your proof of purchase for warranty claims.

8.2 Customer Support

For any questions, technical assistance, or warranty claims, please contact TOPUTURE customer support through the retailer where you purchased the product or visit the official TOPUTURE website for contact information.

When contacting support, please have your model number (TP4) and purchase date readily available.

Related Documents - TP4

| | |
|--|--|
|  <p>The image shows the cover of the user manual for the Toputure TP3 Incline Walking Pad. It features the Toputure logo at the top, a line drawing of the treadmill, and a yellow banner at the bottom that reads 'USER MANUAL (model TP3) INCLINE WALKING PAD'.</p> | <p>Toputure TP3 Incline Walking Pad User Manual</p> <p>Comprehensive user manual for the Toputure TP3 Incline Walking Pad, covering installation, safety precautions, features, operation, maintenance, and troubleshooting. Includes technical specifications, error codes, and FCC compliance information.</p> |
|--|--|

| | |
|---|---|
| <p>Toputure</p>  <p>USER MANUAL Model TP3 INCLINE WALKING PAD</p> | <p>Toputure TP3 Incline Walking Pad User Manual</p> <p>User manual for the Toputure TP3 Incline Walking Pad, covering installation, usage, maintenance, and troubleshooting.</p> |
| <p>Toputure</p>  <p>USER MANUAL Model TP1 FOLDING TREADMILL</p> | <p>Toputure TP1 Folding Treadmill User Manual</p> <p>Comprehensive user manual for the Toputure TP1 Folding Treadmill, covering installation, operation, safety, maintenance, and troubleshooting.</p> |
| <p>Toputure</p>  <p>USER MANUAL Model TP1 FOLDING TREADMILL</p> | <p>Toputure TP1 Folding Treadmill User Manual</p> <p>Comprehensive user manual for the Toputure TP1 Folding Treadmill, covering installation, operation, maintenance, and troubleshooting.</p> |
| <p>Toputure</p>  <p>USER MANUAL Model TP2 HOME TREADMILL</p> | <p>Toputure TP2 Home Treadmill User Manual</p> <p>Comprehensive user manual for the Toputure TP2 Home Treadmill, covering installation, operation, maintenance, safety, and troubleshooting. Includes detailed instructions, parameters, and fault diagnostics.</p> |
| <p>Toputure</p>  <p>USER MANUAL Exercise Bike Model TEB1</p> | <p>Toputure Exercise Bike TEB1 User Manual</p> <p>User manual for the Toputure Exercise Bike, Model TEB1, covering installation, product instructions, LCD indicator functions, app connection, maintenance, troubleshooting, and warranty information.</p> |