

[manuals.plus](#) /

› [SUNVIVI](#) /

› [SUNVIVI 3-in-1 Sandwich, Waffle, and Panini Maker Instruction Manual \(Model ZWF017BK\)](#)

SUNVIVI ZWF017BK

SUNVIVI 3-in-1 Sandwich, Waffle, and Panini Maker Instruction Manual

Model: ZWF017BK

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:


1. Read all instructions before operating the appliance.
2. Do not touch hot surfaces. Use handles or knobs.
3. To protect against electrical shock, do not immerse cord, plugs, or the appliance in water or other liquid.
4. Close supervision is necessary when any appliance is used by or near children.
5. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
6. Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner. Contact customer service for examination, repair, or adjustment.
7. The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
8. Do not use outdoors.
9. Do not let cord hang over edge of table or counter, or touch hot surfaces.
10. Do not place on or near a hot gas or electric burner, or in a heated oven.
11. Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
12. Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
13. Do not use appliance for other than intended use.
14. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
15. Children should be supervised to ensure that they do not play with the appliance.

PRODUCT OVERVIEW

The SUNVIVI 3-in-1 Sandwich Maker (Model ZWF017BK) is a versatile kitchen appliance designed for preparing sandwiches, waffles, and grilled items. It features interchangeable non-stick plates for various cooking needs.


3-In-1 Sandwich Maker

3 different baking trays for all your cooking needs

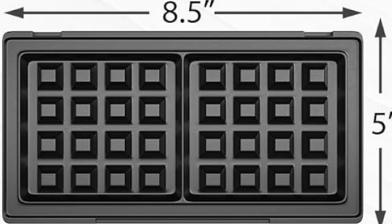


Waffle Plates

8.5" x 5"

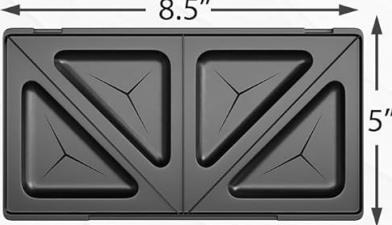

Sandwich Plates

8.5" x 5"

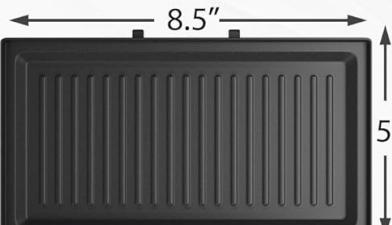

Grill Plates

8.5" x 5"













Figure 1: Overview of the 3-in-1 Sandwich Maker with interchangeable plates (Waffle, Sandwich, Grill) and corresponding food examples.

Key Features:

- 3 Interchangeable Plates:** Includes waffle, sandwich, and grill plates for diverse cooking.
- Non-stick Coating:** Ensures easy food release and simplified cleaning.
- 800W Power:** Provides quick and even heating.
- Cool-Touch Handle:** Designed for safe operation.
- Safety Indicator Lights:** Red light indicates power on, green light indicates preheating complete.
- Overheat Protection:** Automatically regulates temperature to prevent overheating.
- Compact Design:** Suitable for small kitchens and easy storage.



Figure 2: Detailed view of the appliance's safety and operational features.

SETUP AND FIRST USE

- Unpack:** Carefully remove the appliance and all accessories from the packaging. Retain packaging for future storage or disposal.
- Clean Plates:** Before first use, wipe the non-stick cooking plates with a damp cloth or sponge. Dry thoroughly. Do not immerse the main unit in water.
- Position:** Place the appliance on a stable, heat-resistant, and dry surface. Ensure there is adequate ventilation around the unit.
- Initial Heating:** For the first use, it is recommended to operate the appliance without food for approximately 5-10 minutes to burn off any manufacturing residues. A slight odor or smoke may be present; this is normal. Ensure the area is well-ventilated.
- Cool Down:** After the initial heating, unplug the appliance and allow it to cool completely. Wipe the plates again if necessary.

OPERATING INSTRUCTIONS

1. Changing the Plates

The appliance comes with three sets of interchangeable plates: sandwich, waffle, and grill. To change plates:

1. Ensure the appliance is unplugged and completely cool.
2. Locate the plate release buttons on the side of the cooking plates.
3. Press the release buttons and gently lift the plates out.
4. Align the desired plates with the slots and press down until they click securely into place.



Figure 3: Demonstrating the interchangeable cooking plates.

2. General Cooking Steps

1. **Prepare Ingredients:** Have all your ingredients ready before starting.
2. **Insert Plates:** Ensure the correct cooking plates are securely installed.
3. **Preheat:** Close the lid and plug the appliance into a standard electrical outlet. The red indicator light will illuminate, indicating power. The green indicator light will turn on when the appliance is preheating and turn off when the desired temperature is reached.

4. **Add Food:** Once the green light turns off (indicating preheated), carefully open the lid and place your food onto the bottom plate.
5. **Cook:** Close the lid. The green light may cycle on and off during cooking to maintain temperature. Cook for the recommended time or until desired doneness.
6. **Remove Food:** Use a heat-resistant plastic or wooden utensil to remove food. *Do not use metal utensils as they can damage the non-stick coating.*
7. **Unplug:** After use, unplug the appliance and allow it to cool completely before cleaning.



Figure 4: Step-by-step guide for easy operation.

3. Specific Usage Tips:

- **For Sandwiches:** Butter the outer sides of the bread for a crispier finish. Do not overfill to prevent spillage. Cooking time is typically 3-5 minutes.
- **For Waffles:** Use a standard waffle batter. Pour batter onto the center of the bottom waffle plate, ensuring it spreads evenly. Close the lid. Cooking time is typically 4-6 minutes, or until golden brown.
- **For Grilling:** Lightly brush the grill plates with cooking oil for best results. Place meat, vegetables, or panini on the bottom plate. Close the lid and cook until desired doneness.

Done in 5 minutes

Quick breakfast,
start your day full of energy.



Figure 5: Quick preparation of meals using the appliance.

Your browser does not support the video tag.

Video 1: Demonstration of the SUNVIVI 3-in-1 sandwich maker, waffle iron, and grill in use, showing plate changes and cooking various foods.

CLEANING AND MAINTENANCE

Proper cleaning and maintenance will extend the life of your appliance.

- Unplug and Cool:** Always unplug the appliance from the power outlet and allow it to cool completely before cleaning.
- Remove Plates:** Press the plate release buttons and remove the cooking plates.
- Clean Plates:** Wash the removable non-stick plates with warm, soapy water using a soft sponge or cloth. Rinse thoroughly and dry completely. The plates are also dishwasher safe.
- Clean Exterior:** Wipe the exterior of the appliance with a damp cloth. *Never immerse the main unit, cord, or plug in water or any other liquid.*
- Stubborn Residue:** For stubborn food residue on the plates, soak them in warm, soapy water for a

few minutes before cleaning. Do not use abrasive cleaners, scouring pads, or metal utensils, as these can damage the non-stick coating.

6. **Storage:** Once clean and dry, store the appliance with the plates installed or separately in a dry place. The compact design allows for vertical storage to save space.



Figure 6: Easy cleaning of non-stick plates.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in; power outlet malfunction.	Ensure the power cord is securely plugged into a working electrical outlet. Test the outlet with another appliance.

Problem	Possible Cause	Solution
Food is not cooking evenly or taking too long.	Appliance not fully preheated; plates not properly installed; too much food.	Wait for the green indicator light to turn off before adding food. Ensure plates are securely clicked into place. Do not overfill the plates.
Smoke or odor during first use.	Manufacturing residues burning off.	This is normal for first use. Ensure good ventilation. It should dissipate after a few minutes.
Food sticks to the plates.	Plates not properly seasoned (first use); insufficient oil/butter; damaged non-stick coating.	Ensure plates are clean and dry. Lightly brush plates with cooking oil or butter before adding food. Avoid using metal utensils.

SPECIFICATIONS

- **Model:** ZWF017BK
- **Power:** 800W
- **Voltage:** 120V~60Hz (Standard US)
- **Dimensions:** 8.94"D x 8.7"W x 3.94"H
- **Weight:** 5.13 pounds
- **Material:** Metal, Glass Top
- **Special Feature:** Non-stick coating, Removable plates, Overheat protection, Cool-touch handle
- **Certifications:** ETL certified

WARRANTY AND CUSTOMER SUPPORT

This SUNVIVI appliance comes with a **1-year warranty** from the date of purchase, covering manufacturing defects under normal household use.

If you encounter any quality issues or require assistance, please contact SUNVIVI customer service. Please have your model number (ZWF017BK) and purchase information ready when contacting support.

For further assistance, please visit the official SUNVIVI store or contact their customer service channels as provided at the point of purchase.