

[Manuals.plus](#) /

› [Fansbe Direct](#) /

› Fansbe Direct A6 Multifunctional Alarm Clock Radio User Manual

Fansbe Direct A6

Fansbe Direct A6 Multifunctional Alarm Clock Radio User Manual

Model: A6

INTRODUCTION

This manual provides comprehensive instructions for the setup, operation, and maintenance of your Fansbe Direct A6 Multifunctional Alarm Clock Radio. Please read this manual thoroughly before using the device to ensure proper function and to maximize your user experience.



Image: The Fansbe Direct A6 Alarm Clock, showcasing its wireless charging capability with a smartphone placed on its top surface. Another smartphone displays the alarm clock's control application, illustrating app integration.

PRODUCT OVERVIEW

Key Features:

- **Digital Time Display:** Clear 12/24H format with adjustable brightness.
- **Multiple Alarms:** Up to 10 alarms configurable via the app, with 6 built-in tones or FM radio as wake-up sound.
- **Snooze Function:** 9-minute snooze for additional rest.
- **Wireless Charging:** Integrated pad for compatible smartphones.
- **USB-A Charging Port:** For charging other devices like smartwatches or headphones.
- **Bluetooth Speaker:** Connects via Bluetooth 5.0 for audio streaming.
- **FM Radio:** 87-108MHz frequency range with auto-search and station saving.
- **White Noise Machine:** 23 soothing sounds, including white noise, fan sounds, and natural sounds.
- **App Control:** Comprehensive control and customization via a dedicated smartphone application.
- **Physical Buttons:** Intuitive buttons for essential functions.

Components:

Large Buttons for Easy Operation



Image: A detailed diagram of the Fansbe Direct A6 Alarm Clock, highlighting the wireless charging area, various control buttons (Alarm 1/2, Time Set, Snooze/Dimmer, Volume, 12/24H Toggle), and rear ports (AUX, USB Charging/Flash Drive, DC Power).

Top Panel: Wireless Charging Area, Time Set (M) button, Alarm 1 Setting/On/Off, Alarm 2 Setting/On/Off, Snooze/Dimmer, Decrease/Previous, 12/24H Toggle/Play/Pause/FM Station Search, Increase/Next, Volume Up/Down.

Rear Panel: AUX Port, USB Charging Port/USB Flash Drive Port, DC Power Port.

Front Panel: Digital LED Display, Speaker Grille.

SETUP

1. **Power Connection:** Connect the provided power adapter to the DC Power Port on the rear of the alarm clock and plug it into a wall outlet. The display will illuminate.
2. **Battery Installation (Backup):** The device includes 1 AAA battery for backup. Ensure it is correctly installed to retain time settings during power outages.

3. Initial Time Setting:

- **Manual Setting:** Press and hold the "Time Set (M)" button. Use the "Increase/Next" and "Decrease/Previous" buttons to adjust the hour and minute. Press "Time Set (M)" again to confirm each setting.
- **Bluetooth Time Sync:** For automatic time synchronization, connect the alarm clock to your smartphone via Bluetooth. The time will sync automatically.

4. **12/24 Hour Format:** Press the "12/24H Toggle" button to switch between 12-hour and 24-hour display formats.

5. **App Download:** Scan the QR code in the quick start guide or search for the companion app in your smartphone's app store. Install the app for advanced control features.



Image: The alarm clock displaying time, with a smartphone next to it indicating automatic time synchronization via Bluetooth, eliminating the need for manual Daylight Saving Time adjustments.

OPERATING INSTRUCTIONS

1. Alarm Settings:

Multifunctional Alarm Clock

Built-in dual alarm on the device and 10 alarms setting via the app

-  9-Minute Snooze
-  6 Alarm Tones
-  Adjustable Initial Alarm Volume
-  Set radio as alarm tone

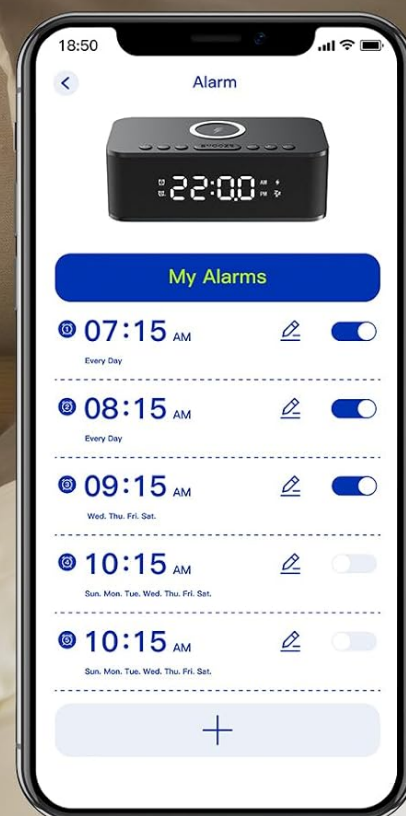


Image: The alarm clock on a nightstand, accompanied by a smartphone showing the app interface for setting multiple alarms, snooze duration, alarm tones, and initial volume.

- **Setting Alarms (Device):** Press and hold "Alarm 1" or "Alarm 2" button. Use "Increase/Next" and "Decrease/Previous" to set the time. Press the alarm button again to confirm.
- **Setting Alarms (App):** Use the companion app to set up to 10 alarms, customize alarm tones (6 built-in or FM radio), and adjust initial alarm volume.
- **Snooze Function:** When an alarm sounds, press the "Snooze/Dimmer" button to activate a 9-minute snooze.
- **Turning Off Alarm:** Press any button other than "Snooze/Dimmer" to turn off the alarm for the day.

2. FM Radio:

Built-in FM Radio

Unlock additional features via the app: scheduled on/off and favorites selection.

- ✓ FM Radio 87.5-108MHz
- ✓ Auto Search & Storage
- ✓ Radio Ringtones



Image: The alarm clock actively broadcasting FM radio, with a smartphone showing the app's FM radio interface, including frequency display and controls.

- **Activating FM Radio:** Press the "Time Set (M)" button repeatedly until "FM" mode is displayed.
- **Auto Scan:** In FM mode, press and hold the "12/24H Toggle/Play/Pause/FM Station Search" button to automatically scan and save available stations.
- **Manual Tuning:** Use the "Increase/Next" and "Decrease/Previous" buttons to manually tune to a specific frequency.
- **Volume Adjustment:** Use the "Vol+" and "Vol-" buttons.
- **App Control:** The app allows for scheduling radio on/off, saving favorite stations, and one-touch selection.

3. Bluetooth Speaker:

Multi-Mode Speaker

Easily play your favorite songs with one click via the app.



Bluetooth 5.3



USB playback



3.5mm AUX

Image: The alarm clock functioning as a multi-mode speaker, with a smartphone demonstrating music playback via Bluetooth, USB, or 3.5mm AUX connection.

- **Pairing:** Press the "Time Set (M)" button repeatedly until "BT" mode is displayed. The device will enter pairing mode. On your smartphone, search for "A6" (or similar) in Bluetooth settings and connect.
- **Playback:** Play audio from your connected device. Use the "Play/Pause" button on the alarm clock or your device to control playback.
- **Volume:** Adjust using the "Vol+" and "Vol-" buttons on the alarm clock or your connected device.
- **Other Audio Inputs:** The device also supports 3.5mm AUX input and USB playback for audio files.

4. White Noise Machine:

White Noise Machine



Image: The alarm clock providing soothing sounds, with a smartphone showing the app interface for selecting from 23 white noise options and setting an auto-off timer.

- **Activating White Noise:** Press the "Time Set (M)" button repeatedly until "WN" mode is displayed.
- **Sound Selection:** Use the "Increase/Next" and "Decrease/Previous" buttons to cycle through the 23 available soothing sounds.
- **Volume:** Adjust using the "Vol+" and "Vol-" buttons.
- **Auto-off Timer (App):** Use the app to set a timer for the white noise to automatically turn off after a specified duration (e.g., 15, 30, 60, 120 minutes).

5. Charging Functions:

Wireless Charging & USB-A Charging

Supports devices compatible with wireless charging



Image: The alarm clock demonstrating its wireless charging capability for a smartphone on its top surface, and a USB-A port on the rear being used to charge another device.

- **Wireless Charging:** Place your Qi-compatible smartphone on the designated wireless charging area on top of the alarm clock. Ensure the phone is centered for optimal charging. A charging indicator may appear on the clock display or your phone.
- **USB-A Charging:** Connect your device (e.g., smartwatch, headphones) to the USB-A charging port on the rear of the alarm clock using a compatible USB cable.

6. Display Brightness:

Customizable Screen Brightness

Easily find the most comfortable light for you.



Image: A visual representation of the alarm clock's display at various brightness levels, from completely off to maximum illumination, demonstrating the customizable screen brightness feature.

- **Adjusting Brightness:** Press the "Snooze/Dimmer" button repeatedly to cycle through the 6 adjustable brightness levels, including off.
- **App Control:** The app also provides a slider for fine-tuning the display brightness.

APP CONTROL

The dedicated smartphone application offers enhanced control and customization options for your Fansbe Direct A6 Alarm Clock. Ensure your device is connected via Bluetooth to utilize these features.

- Set up to 10 individual alarms with custom tones and volumes.
- Schedule auto-off timers for white noise or FM radio playback.
- Pre-schedule FM radio play times.
- Save and quickly select favorite FM radio stations.
- Directly select music, white noise, or saved stations.
- Adjust display brightness with a fine-tune slider.
- Enable or disable "Child Lock" (if available in app).

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the surface of the alarm clock. Do not use liquid cleaners or abrasive materials.
- **Placement:** Place the device on a stable, flat surface. Avoid direct sunlight, excessive heat, or moisture.
- **Power:** Always use the original power adapter provided with the device.
- **Battery Replacement:** If the backup battery (AAA) needs replacement, ensure the device is powered off or unplugged before opening the battery compartment. Dispose of old batteries responsibly.

TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Clock display is off or dim.	Power adapter not connected; brightness set to minimum.	Ensure power adapter is securely connected. Press "Snooze/Dimmer" button to increase brightness.
Alarm does not sound.	Alarm not activated; volume too low; incorrect time setting.	Verify alarm is enabled (indicator on display). Increase alarm volume. Check alarm time setting.
Wireless charging not working.	Phone not Qi-compatible; phone not centered; phone case too thick.	Ensure phone supports Qi wireless charging. Reposition phone on the charging pad. Remove thick phone cases.
Cannot connect via Bluetooth.	Device not in BT mode; phone Bluetooth off; too far from device.	Ensure alarm clock is in "BT" mode. Turn on Bluetooth on your phone. Move phone closer to the alarm clock.
FM radio reception is poor.	Weak signal; interference.	Reposition the alarm clock to improve signal. Avoid placing near other electronic devices that may cause interference.
App not responding or connecting.	Bluetooth connection lost; app glitch.	Ensure Bluetooth is connected. Close and restart the app. Restart the alarm clock.

SPECIFICATIONS

Brand	Fansbe Direct
Model	A6
Color	Black
Display Type	Digital LED
Product Dimensions	10"W x 3"H
Item Weight	2.03 pounds
Power Source	Corded Electric
Backup Battery	1 AAA (included)
Connectivity	Bluetooth 5.0, 3.5mm AUX, USB-A
FM Radio Frequency	87-108MHz
White Noise Sounds	23 (4 white noise, 3 fan, 16 natural)
Frame Material	Plastic

WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the contact details provided with your product packaging or visit the official Fansbe Direct website. Keep your purchase receipt as proof of purchase for warranty claims.

Online Support: [Fansbe Direct Store on Amazon](#)

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question