

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [TOPUTURE](#) /

› [TOPUTURE TP4 4-in-1 Foldable Walking Pad Treadmill User Manual](#)

TOPUTURE TP4

TOPUTURE TP4 4-in-1 Foldable Walking Pad Treadmill User Manual

Model: TP4

1. IMPORTANT SAFETY INSTRUCTIONS

Please read all instructions carefully before using this treadmill. Keep this manual for future reference. Failure to follow these instructions may result in injury or damage to the product.

- Always place the treadmill on a flat, stable surface.
- Ensure adequate clearance around the treadmill (at least 2 meters behind and 0.6 meters on each side).
- Keep children and pets away from the treadmill during operation.
- Do not operate the treadmill if it has a damaged cord or plug, or if it is not working properly.
- Wear appropriate athletic footwear and clothing.
- Consult a physician before starting any exercise program.
- The maximum user weight capacity for this treadmill is **300 lbs (136 kg)**. Do not exceed this limit.
- Always hold the handrails when starting or stopping the treadmill, or when adjusting speed/incline.
- Disconnect the power cord after use and before cleaning or maintenance.

2. PRODUCT OVERVIEW

The TOPUTURE TP4 is a versatile 4-in-1 foldable walking pad and treadmill designed for home and office use. It features a 2.5HP motor, manual incline, remote control, app connectivity, and an LED display.

Dual LED Screen Display

Clear display of data



Figure 2.1: The TOPUTURE TP4 treadmill in its walking pad configuration, suitable for use under a standing desk.

Key Features:

- **4-in-1 Design:** Functions as a walking pad or a full treadmill with handles.
- **2.5HP Motor:** Provides reliable power for walking and running.
- **9% Manual Incline:** Adjustable incline for varied workout intensity.
- **Dual LED Display:** Shows time, speed, distance, and calories.
- **Remote Control:** Convenient adjustment of settings.
- **Smart App Connectivity:** Syncs data, offers training plans, and tracks progress.
- **Compact & Foldable:** Easy to store and move with built-in wheels.
- **Shock Absorption:** Multi-layer damping system to protect joints.

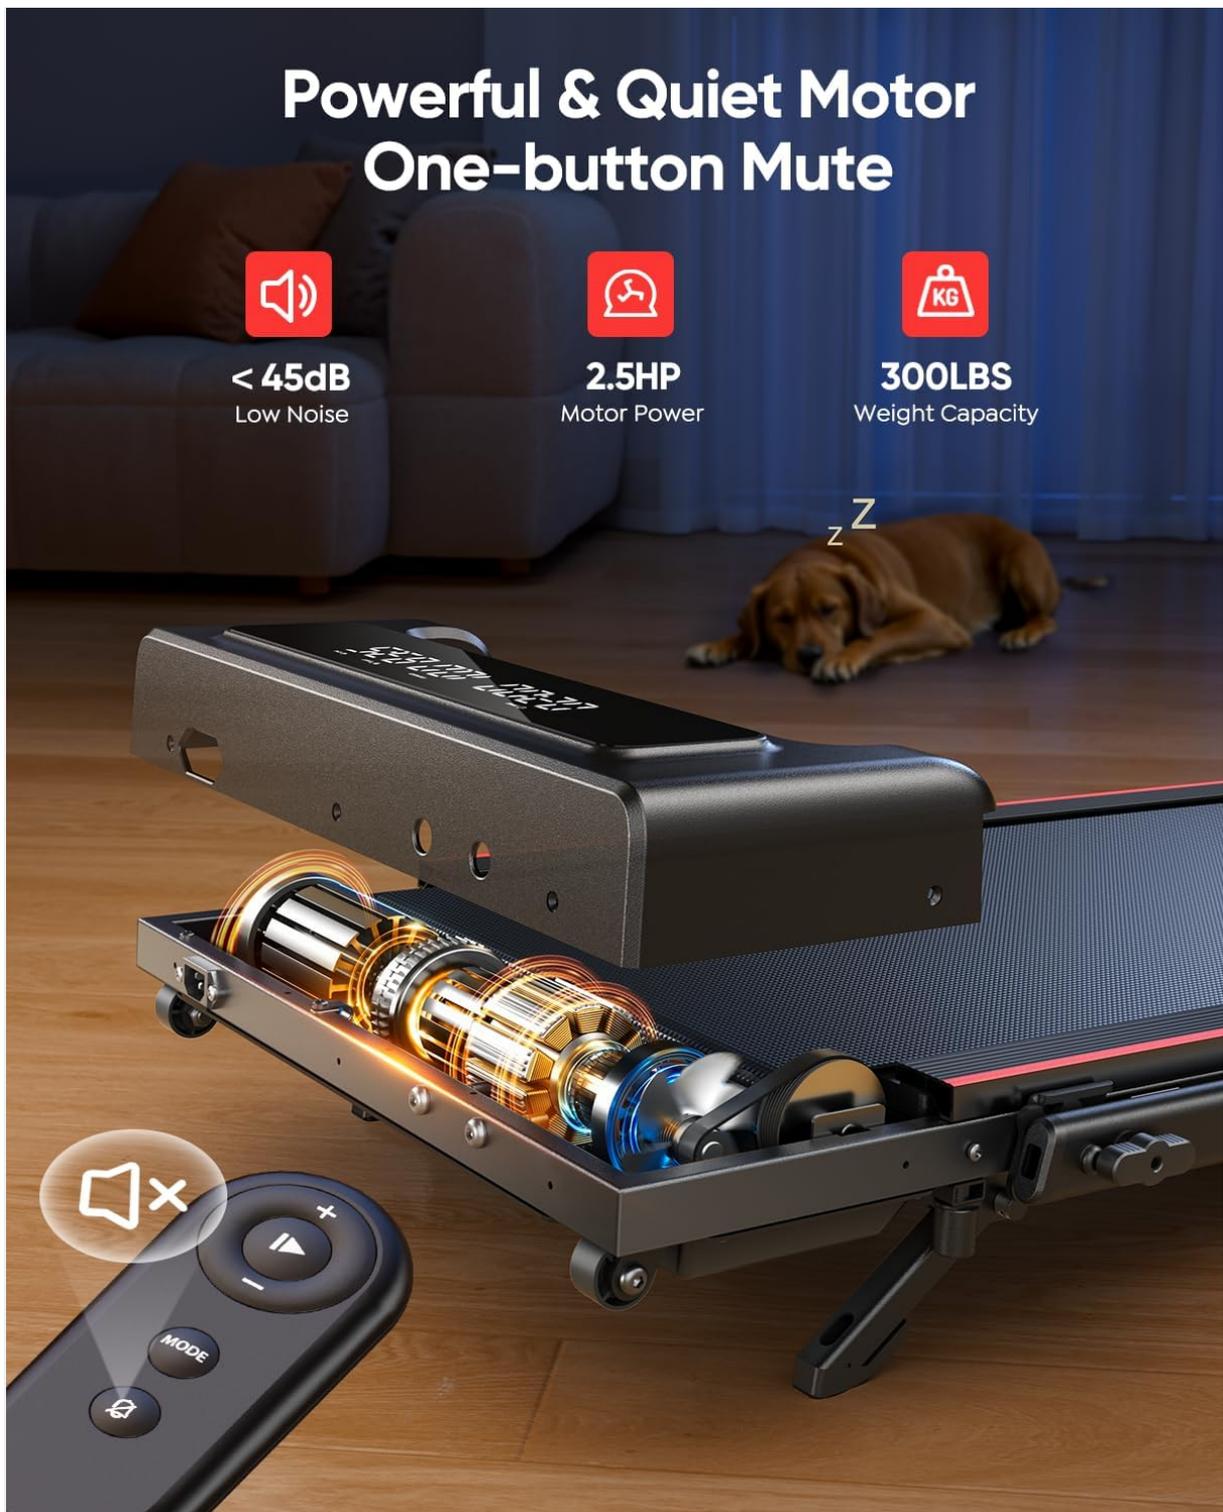


Figure 2.2: Internal view of the powerful and quiet 2.5HP motor, designed for low noise operation (below 45dB).

3. SETUP AND ASSEMBLY

The TOPUTURE TP4 treadmill is designed for minimal assembly and is ready to use almost directly out of the box.

3.1 Unpacking

1. Carefully remove the treadmill from its packaging.
2. Check for any visible damage during transit. If damage is found, contact customer support immediately.
3. Ensure all included components are present: Power Cord, Tool Kit, User Manual.

3.2 Placement

- Place the treadmill on a firm, level surface. Avoid placing it on thick carpets, which may obstruct ventilation.
- Ensure there is at least 2 meters (6.5 feet) of clear space behind the treadmill and 0.6 meters (2 feet) on each side for safe operation and emergency dismount.
- The compact design allows it to fit under beds or sofas when folded for storage.

3.3 Initial Setup

1. **Unfold the Treadmill:** If in folded position, carefully lift the handle or deck until it locks into the upright or flat position, depending on your desired use (treadmill with handles or walking pad).
2. **Connect Power:** Plug the power cord into the treadmill and then into a grounded electrical outlet.
3. **Power On:** Locate the power switch (usually near the power cord inlet) and turn it to the 'ON' position. The LED display should illuminate.

4. OPERATION

This section details how to operate your TOPUTURE TP4 treadmill, including basic controls, modes, and smart app features.

4 IN 1 Walking Pad with Incline



Walking mode: 0.6-5MPH



Running mode: 5-7.6MPH



Figure 4.1: The 4-in-1 functionality, demonstrating both walking pad (0.6-5 MPH) and running (5-7.6 MPH) modes.

4.1 Basic Controls (Remote & Display)

The treadmill is controlled via a remote control and displays information on the dual LED screen.

Adjustable 0%-9% Incline Treadmill

Boost fat burning

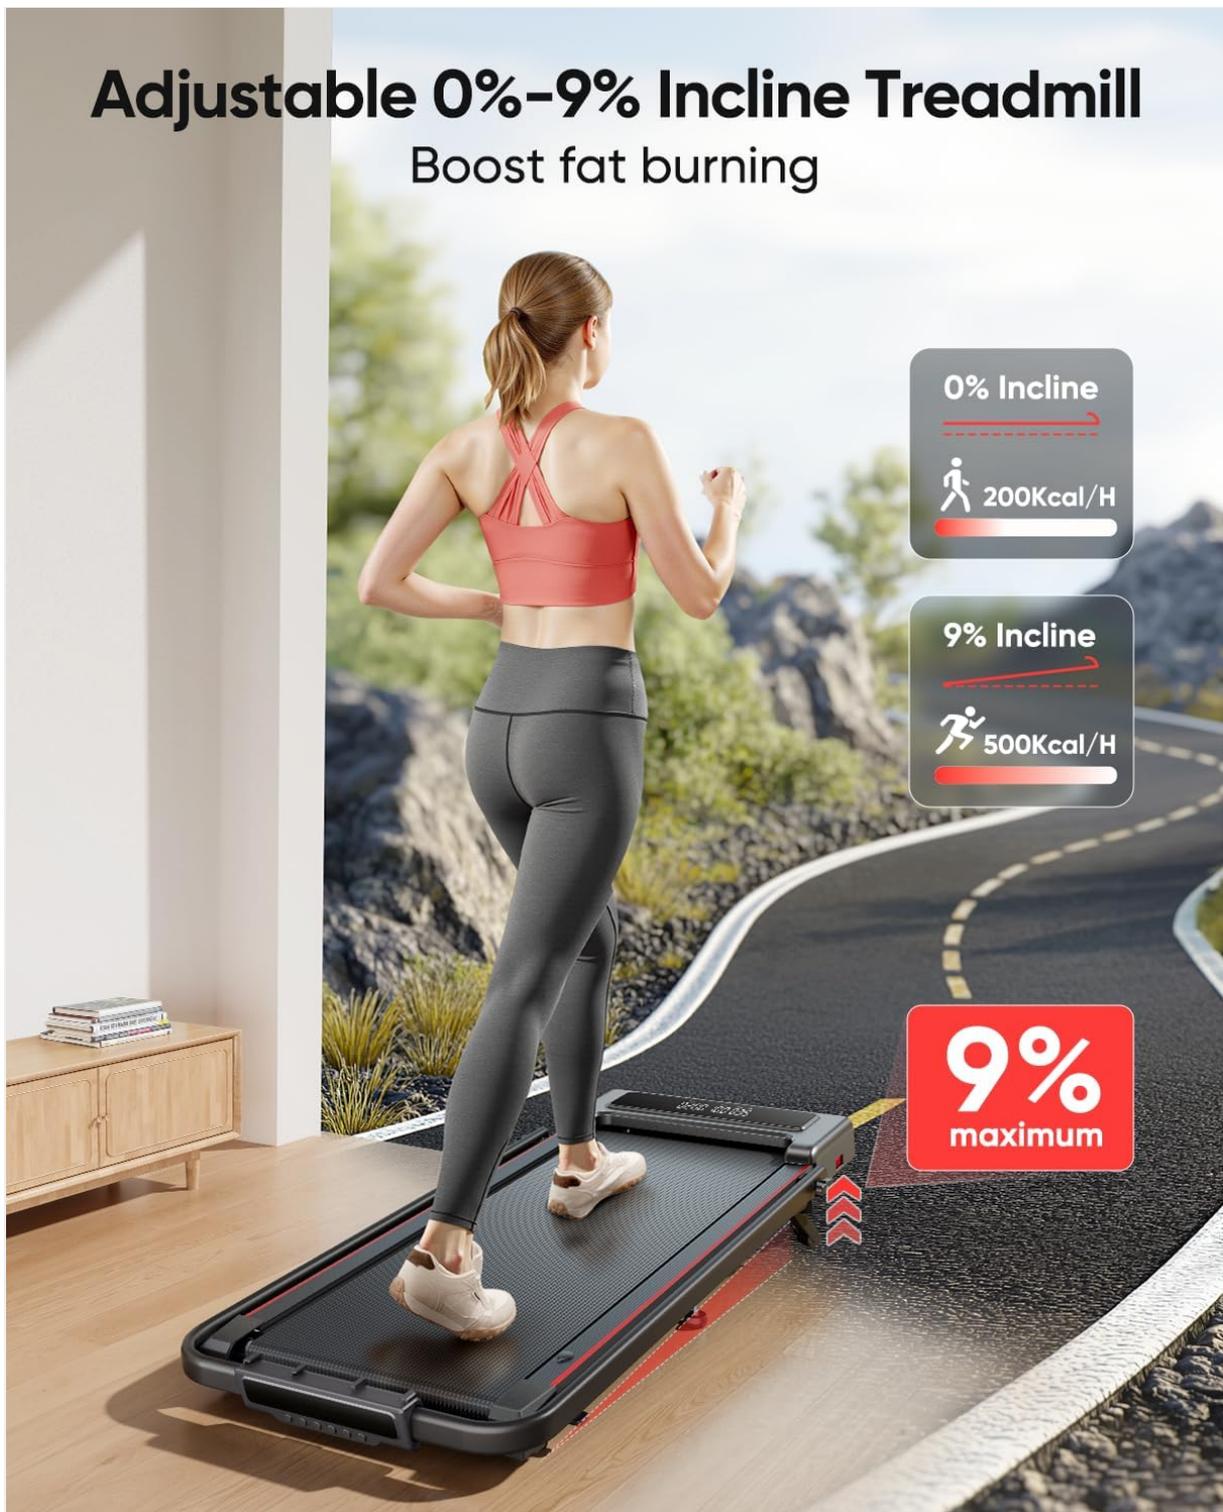


Figure 4.2: The dual LED display provides real-time workout data, while the remote control allows for easy adjustments.

- **Start/Stop Button:** Press to begin or end your workout.
- **Speed +/- Buttons:** Adjust the belt speed.
- **Mode Button:** Cycle through different display modes or workout programs (if available).
- **LED Display:** Shows real-time data including *Time*, *Speed*, *Distance*, and *Calories Burned*.

4.2 Workout Modes

- **Walking Mode:** When the handle is folded down, the treadmill operates as a walking pad with a speed range of **0.6 to 5 MPH**.
- **Running Mode:** With the handle upright, the treadmill functions as a traditional treadmill with a speed range of **5 to 7.6 MPH**.

- **M Mode:** Allows you to set specific workout goals based on *time*, *calories*, or *distance*. Refer to the display for setting these parameters.

4.3 Incline Adjustment

The treadmill features a **9% manual incline adjustment**. To adjust the incline, you will need to manually set the incline level at the rear of the treadmill deck. Ensure the treadmill is powered off and unplugged before making any adjustments. Refer to the physical incline mechanism for specific instructions on how to raise or lower the incline.

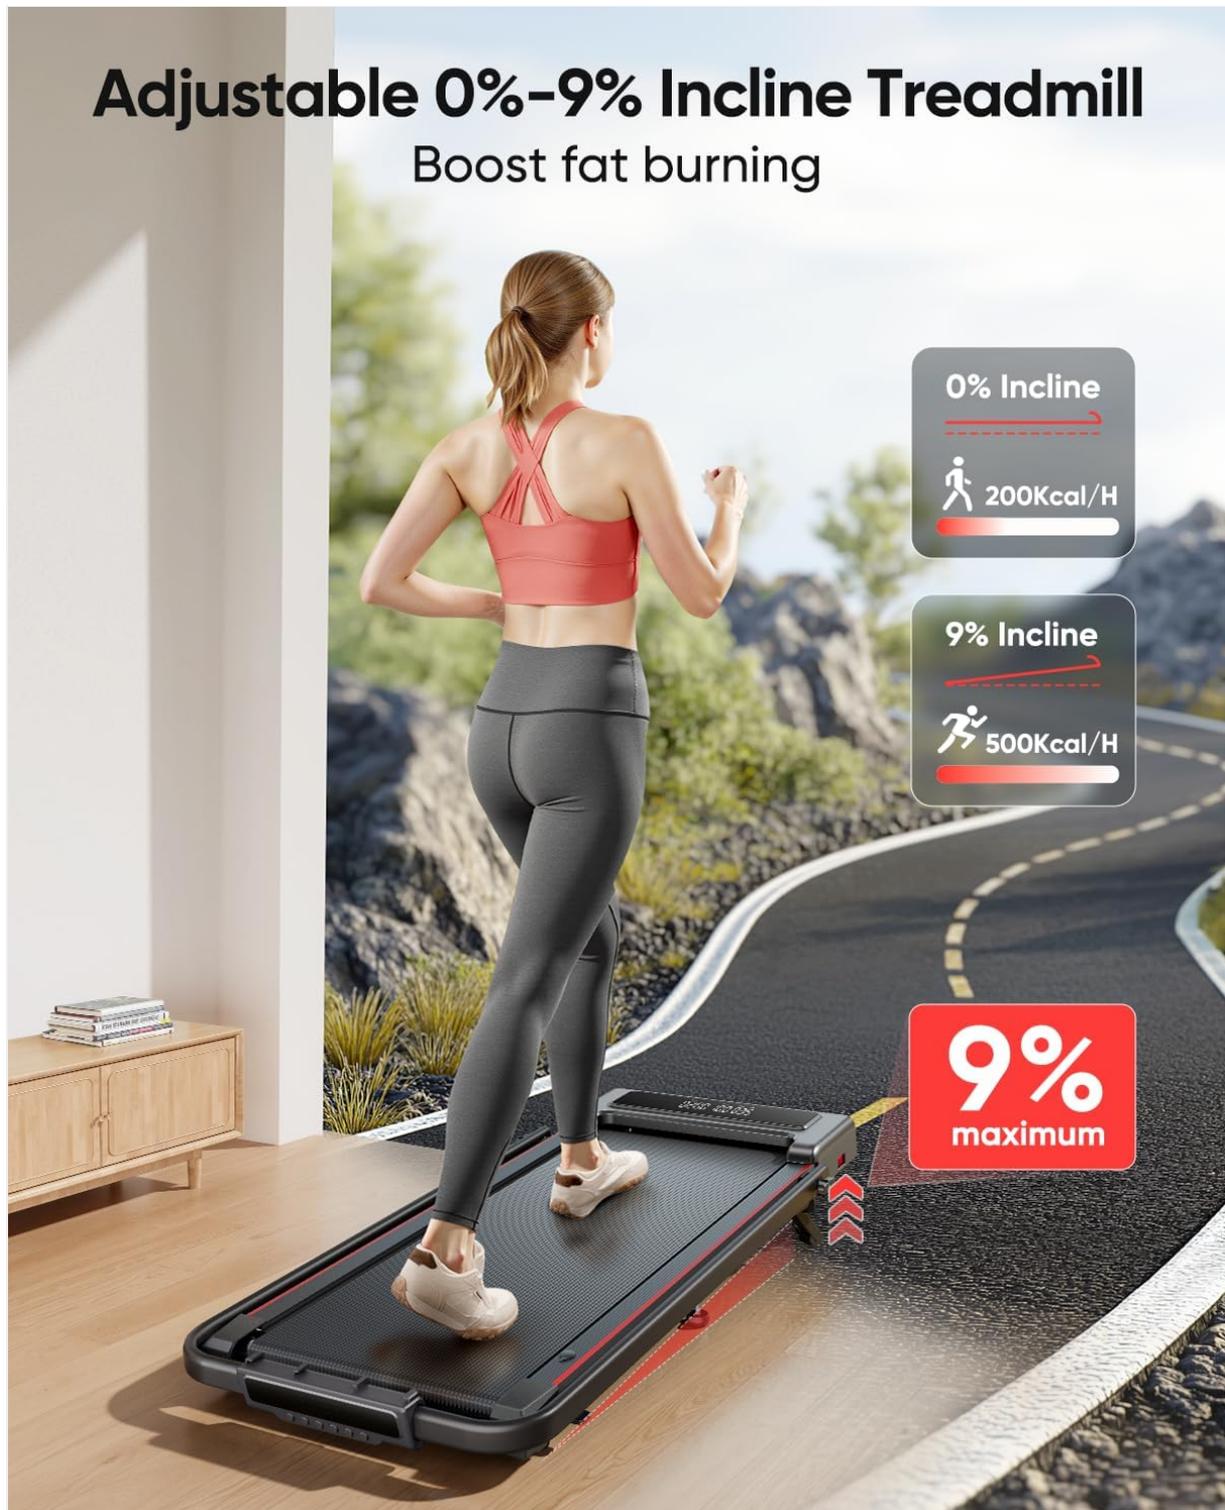


Figure 4.3: The 9% manual incline feature simulates uphill running, increasing calorie expenditure.

4.4 Smart App Connectivity

Enhance your workout experience by connecting the treadmill to the dedicated smart app.

Double Your Running Pleasure with Apps



Figure 4.4: The smart app allows for real-time data synchronization, personalized training, and progress tracking.

1. **Download the App:** Search for the official TOPUTURE fitness app on your smartphone's app store.
2. **Pair Device:** Follow the in-app instructions to pair your smartphone with the treadmill via Bluetooth.
3. **Features:** Once connected, you can sync exercise data, access personalized training plans, track your progress, participate in running challenges, and share achievements.

5. MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your treadmill. Always unplug the treadmill before performing any maintenance.

5.1 Cleaning

- Wipe down the treadmill surfaces, including the console and handrails, with a damp cloth after each use.
- Do not use abrasive cleaners or solvents, as these can damage the finish.
- Keep the area around the treadmill clean and free of dust and debris.

5.2 Lubrication

The treadmill features lubrication holes for easy maintenance. Regular lubrication of the running belt is crucial to reduce friction and extend the life of the motor and belt.

1. Refer to the included Tool Kit for the appropriate lubricant.
2. Locate the lubrication holes on the side of the treadmill deck.
3. Apply a small amount of lubricant into the holes as per the instructions provided with the lubricant.
4. Frequency of lubrication depends on usage; generally, every 3-6 months for moderate use.

5.3 Belt Adjustment

Over time, the running belt may become misaligned or loose. Use the included tool kit to adjust the belt tension and alignment. Refer to the specific instructions in the tool kit for detailed steps.

5.4 Storage

When not in use, the treadmill can be folded and stored to save space. Use the front wheels for easy mobility to move it under a bed or sofa.

6. TROUBLESHOOTING

If you encounter any issues with your TOPUTURE TP4 treadmill, refer to the following common troubleshooting steps.

- **Treadmill does not power on:**
 - Ensure the power cord is securely plugged into both the treadmill and a working electrical outlet.
 - Check if the power switch is in the 'ON' position.
 - Verify the circuit breaker has not tripped.
- **Belt stops or slips during use:**
 - The running belt may require lubrication (refer to Section 5.2).
 - The running belt may need adjustment for tension or alignment (refer to Section 5.3).
 - Ensure you are not exceeding the maximum user weight capacity.
- **Unusual noises:**
 - Check for loose parts and tighten if necessary.
 - Lubricate the running belt if a squeaking sound is heard.
 - If the noise persists, discontinue use and contact customer support.
- **Remote control not working:**
 - Replace the batteries in the remote control.
 - Ensure there are no obstructions between the remote and the treadmill's receiver.

For issues not listed here or if troubleshooting steps do not resolve the problem, please contact TOPUTURE customer support.

7. SPECIFICATIONS

| | |
|--------------------------------------|--|
| Model Number | TP4 |
| Brand | TOPUTURE |
| Motor Horsepower | 2.5 HP |
| Maximum Speed | 7.6 Miles per Hour |
| Speed Range (Walking Mode) | 0.6 - 5 MPH |
| Speed Range (Running Mode) | 5 - 7.6 MPH |
| Maximum Incline | 9% (Manual) |
| Maximum User Weight | 300 lbs (136 kg) |
| Product Dimensions (Unfolded) | 126 x 12 x 62 cm (50 x 23 x 42 inches) |
| Folding Size | 50 x 23 x 4.5 inches |
| Item Weight | 28 kg (61.7 lbs) |
| Material | Alloy Steel |
| Display Metrics | Calories Burned, Distance, Speed, Time |
| Special Features | Compact Design, Foldable, Lightweight, Manual Incline, Shock Absorbent |
| Included Components | Power Cord, Tool Kit, User Manual |

8. WARRANTY AND SUPPORT

8.1 Warranty Information

TOPUTURE provides a **TWO-YEARS Warranty** for this product. This warranty covers manufacturing defects and issues arising from normal use.

8.2 Customer Support

If you have any questions, require assistance, or need to claim warranty service, please contact TOPUTURE customer support through the following steps:

1. Log in to your Amazon account.
2. Navigate to "Your Orders".
3. Find the order ID for your TOPUTURE TP4 treadmill.
4. Click on "Contact Seller" to reach our support team.