

## REACHER KL245

# REACHER KL245 Vibrating Alarm Clock Watch Instruction Manual

Model: KL245 | Brand: REACHER

## 1. INTRODUCTION

The REACHER KL245 Vibrating Alarm Clock Watch is designed to provide a silent and effective wake-up solution, particularly for heavy sleepers and individuals with hearing impairments. This watch utilizes strong, gradual vibrations to alert the user without disturbing others. Its comfortable design and long-lasting battery make it suitable for daily wear.

### The Perfect Wake-Up Solution for Heavy Sleepers



The watch provides a gradual vibration wake-up, starting gently and increasing in intensity.

## Powerful vibration motor

- **15** min consistent vibration
- Strong power with no noise
- Always wakes you up



Equipped with a powerful vibration motor for consistent and effective alerts.

## 2. GETTING STARTED

### 2.1 Package Contents

Before using your REACHER KL245 Vibrating Alarm Clock Watch, please ensure all items are present:

- REACHER KL245 Vibrating Alarm Clock Watch
- Magnetic Charging Cable
- Instruction Manual (this document)

### 2.2 Initial Charging

It is recommended to fully charge the watch before its first use. The watch features a magnetic charging port.

1. Connect the magnetic charging cable to the charging port on the back of the watch. The cable will snap into place.
2. Connect the USB end of the charging cable to a standard USB power adapter (not included) or a computer USB port.
3. The battery indicator on the watch display will show charging status. A full charge typically provides 7+ days of battery life.



## 7-Day Battery & Magnetic Power Snap

Connect the magnetic charging cable to the watch for easy power replenishment.

### 2.3 Wearing the Watch

The watch is designed for comfortable and secure wear on wrists ranging from 5.1 to 9.8 inches. The soft woven strap features a hook-and-loop fastener for quick adjustment.

1. Place the watch on your wrist.
2. Adjust the hook-and-loop strap to a comfortable and secure fit. Ensure it is snug enough for the vibrations to be felt effectively, but not too tight to restrict circulation.

# Flexible Hook-and-Loop Band

Effortlessly adjusts to your perfect fit



Adjustable Fit ( **5,1 - 9,8** )in

The flexible hook-and-loop band allows for effortless adjustment to achieve a perfect fit.

## 3. SETTING THE TIME AND ALARM

The watch features simple buttons for operation. Refer to the watch's physical buttons for specific labels (e.g., +, -, M, S).

### Simple Buttons, Easy Operation



The watch features simple buttons for easy operation and setting adjustments.

### 3.1 Setting the Current Time

1. Press and hold the 'M' (Mode) button until the time display starts flashing.
2. Use the '+' and '-' buttons to adjust the hour.
3. Press 'M' again to move to minutes, then use '+' and '-' to adjust.
4. Continue pressing 'M' to cycle through 12/24-hour format selection. Set the time in 24-hour mode first to ensure correct AM/PM, then switch to 12-hour mode if preferred.
5. Press 'M' one last time or wait a few seconds for the settings to save automatically.

### 3.2 Setting the Alarm Time

1. From the normal time display, press the 'S' (Set) button once. The alarm time will be displayed.
2. Press and hold the 'S' button until the alarm hour display starts flashing.
3. Use the '+' and '-' buttons to adjust the alarm hour.
4. Press 'S' again to move to alarm minutes, then use '+' and '-' to adjust.
5. Press 'S' one last time or wait a few seconds for the alarm settings to save.

### 3.3 Turning the Alarm On/Off

After setting the alarm, you can activate or deactivate it:


- From the normal time display, press the 'S' button briefly.
- A small green light indicator will appear on the display when the alarm is active. Press 'S' again to turn it off, and the green light will disappear.

## 4. OPERATING INSTRUCTIONS

### 4.1 Viewing the Time

To conserve battery and ensure minimal light disturbance during sleep, the display automatically turns off. To view the current time:

- Press any button briefly. The time will display for approximately 3 seconds before turning off again.

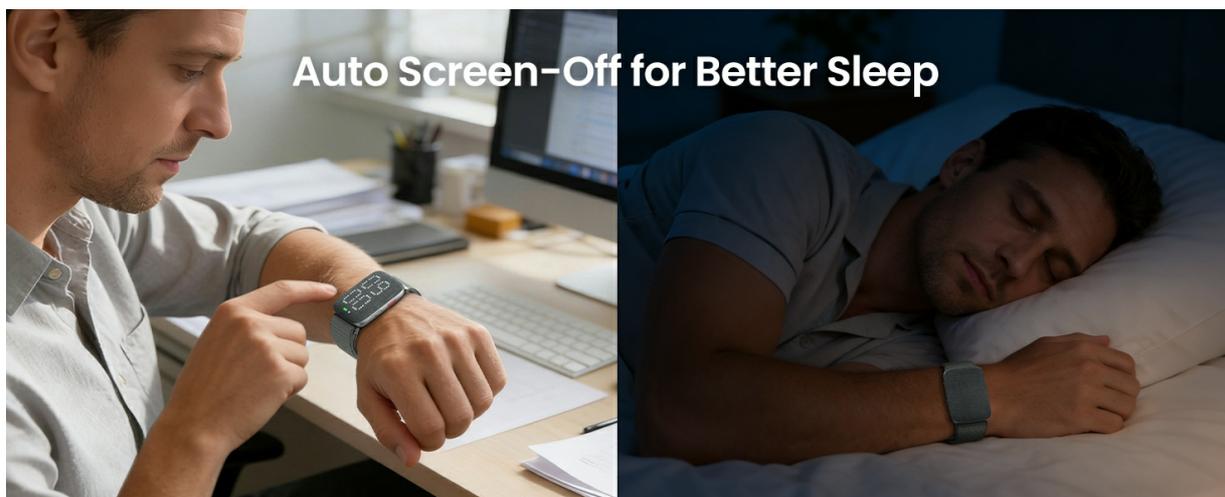


The auto screen-off feature helps ensure better sleep by minimizing light disturbance.

### 4.2 Alarm Function and Snooze

When the alarm activates, the watch will begin to vibrate on your wrist. The vibration starts gently and gradually intensifies over a period of up to 15 minutes.

- **To Snooze:** Briefly press the top right button (often labeled 'Snooze' or similar). The alarm will pause for 9 minutes and then resume.
- **To Turn Off Alarm:** Press and hold any button for a few seconds until the vibration stops completely. The alarm will reset for the next day.

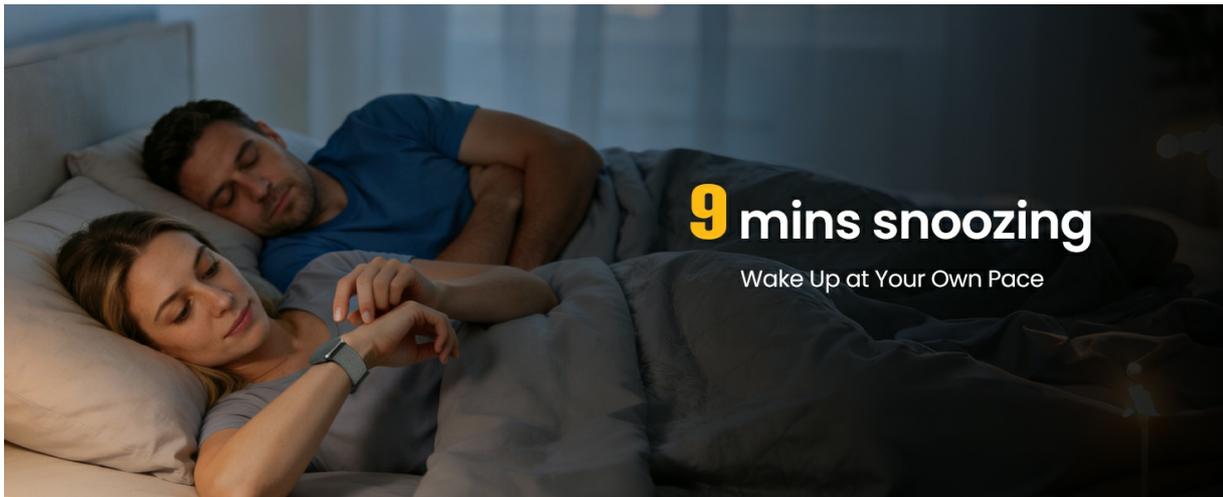

The snooze function allows for an additional 9 minutes of rest before the alarm resumes.

## 5. CARE AND MAINTENANCE

### 5.1 Battery Life and Charging

The watch offers a long-lasting battery, providing over 7 days of use on a single charge. When the battery is low, the indicator light will turn red. Recharge using the provided magnetic charging cable.

### 5.2 Water Resistance

The REACHER KL245 watch has an IPX4 splash resistance rating. This means it is protected against splashes of water from any direction, making it suitable for daily activities like hand washing or light rain. It is **not** suitable for swimming, showering, or submersion in water.

# Splash-Proof for Everyday Wear



The watch is splash-proof for everyday wear, protecting against sweat and hand washing.

## 5.3 Cleaning

To clean your watch, gently wipe the fabric-covered display and zinc alloy case with a soft, damp cloth. Avoid using harsh chemicals or abrasive materials, as these can damage the watch.

# Premium Materials, Designed for Comfort



The watch features a soft fabric-covered display and a smooth zinc alloy case for comfort and durability.

## 6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Watch not vibrating for alarm.	Alarm is not set or turned off. Low battery. Watch not worn correctly.	Ensure the alarm is set and the green indicator light is on. Charge the watch. Adjust the strap for a snug fit.
Display is blank.	Auto screen-off feature is active. Low battery.	Press any button to activate the display. Charge the watch if the battery is low.
Cannot set time/alarm.	Buttons not pressed correctly or held long enough.	Refer to Section 3 for detailed instructions on setting time and alarm. Ensure buttons are pressed and held as specified.
Watch not charging.	Magnetic cable not properly connected. Faulty cable or power source.	Ensure the magnetic cable is securely attached. Try a different USB power adapter or port.

## 7. PRODUCT SPECIFICATIONS

Feature	Detail
Brand	REACHER
Model Number	KL245
Color	Gray
Display Type	Digital
Special Features	Battery Indicator, LED Display, Silent Clock, Snooze
Product Dimensions	1.26"W x 4.33"H
Power Source	Battery Powered
Material	Zinc (Frame)
Item Weight	2.5 Ounces
Batteries	1 Lithium Metal battery (included)
Water Resistance	IPX4 Splash Resistant
Wrist Size Compatibility	5.1–9.8 inches

## 8. WARRANTY AND SUPPORT

### 8.1 Product Warranty

The REACHER KL245 Vibrating Alarm Clock Watch comes with a **12-month warranty** from the date of purchase. This warranty covers manufacturing defects and malfunctions under normal use. It does not cover damage caused by misuse, accidents, unauthorized modifications, or failure to follow the instructions in this manual.

### 8.2 Customer Support

For technical assistance, warranty claims, or any questions regarding your REACHER KL245 watch, please contact the seller, **ReacherDirect**, through your purchase platform or their official support channels. Please have your purchase details and model number (KL245) ready when contacting support.

## 9. PRODUCT OVERVIEW VIDEO

Your browser does not support the video tag.

Official product overview video for the REACHER KL245 Vibrating Alarm Clock Watch, demonstrating its features and functionality.