

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

> [CUCKOO](#) /

> [CUCKOO CRP-PHTR0609FS Twin Pressure Rice Cooker User Manual](#)

CUCKOO CRP-PHTR0609FS

CUCKOO CRP-PHTR0609FS Twin Pressure Rice Cooker User Manual

Model: CRP-PHTR0609FS | Brand: CUCKOO

[Introduction](#)

[Safety Information](#)

[Setup](#)

[Operation](#)

[Maintenance](#)

[Troubleshooting](#)

[Warranty &](#)

[Support](#)

[Specifications](#)

1. INTRODUCTION

This manual provides essential instructions for the safe and efficient use of your CUCKOO CRP-PHTR0609FS Twin Pressure Rice Cooker. Please read this manual thoroughly before operating the appliance and retain it for future reference.

The CUCKOO CRP-PHTR0609FS is designed for versatile cooking, featuring Twin Pressure technology for various rice textures, Induction Heating for even cooking, a Silent Pressure System for reduced noise, and an Open Cooking Mode for flexible ingredient addition. It has a 6-cup uncooked (12-cup cooked) capacity.

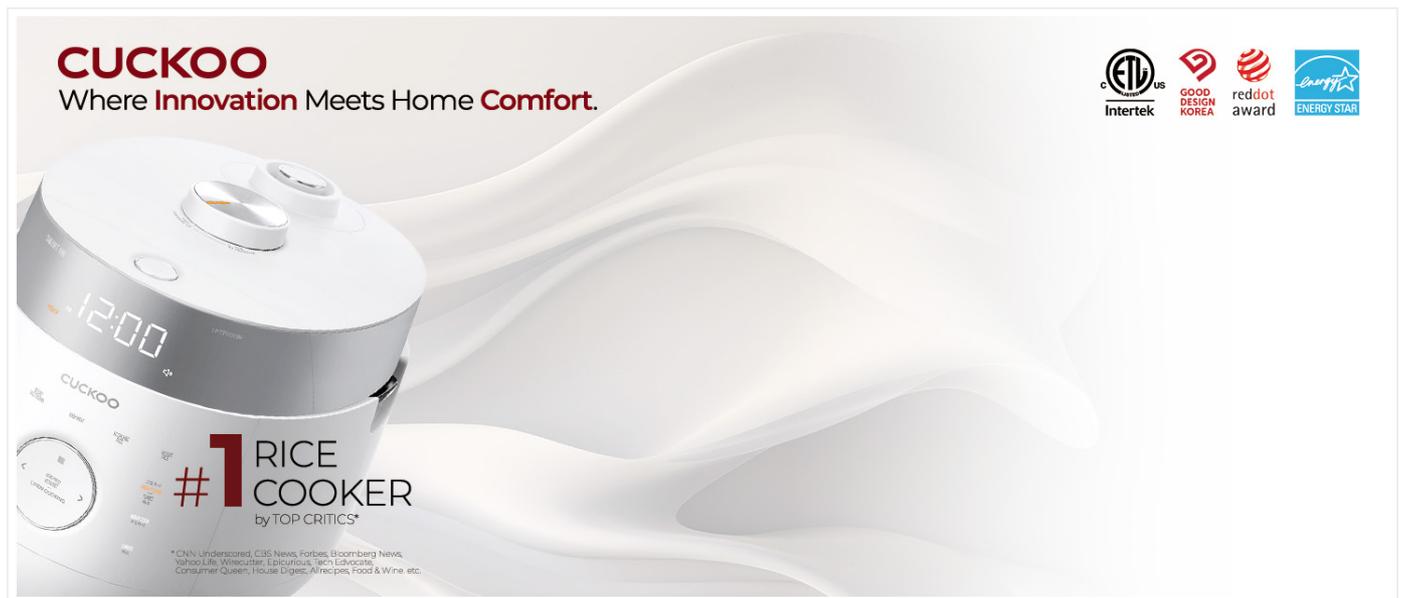


Figure 1: CUCKOO CRP-PHTR0609FS Twin Pressure Rice Cooker overview.

2. IMPORTANT SAFETY INFORMATION

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and injury.

- Read all instructions before use.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or the main unit in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- This appliance cooks under pressure. Improper use may result in scalding injury. Make certain unit is properly closed before operating.
- Never force open the cooker. Do not open until unit has cooled and internal pressure has been released.
- Never use the pressure cooker without adding water.
- Do not fill the unit over 2/3 full. When cooking foods that expand during cooking, such as rice or dried vegetables, do not fill the unit over 1/2 full.
- Always check the pressure release device for clogging before use.
- Do not use this pressure cooker for frying with oil.
- Do not tamper with any safety systems.

3. SETUP AND FIRST USE

3.1 Unpacking

Carefully remove all packaging materials and accessories. Inspect the rice cooker for any damage. Keep packaging materials away from children.

3.2 Initial Cleaning

Before first use, wash the inner pot, inner lid, steam plate, rice paddle, and measuring cup with warm, soapy water. Rinse thoroughly and dry completely. Wipe the exterior of the main unit with a damp cloth.



Figure 2: Included accessories for the CUCKOO CRP-PHTR0609FS.

3.3 Placement

Place the rice cooker on a stable, level, heat-resistant surface, away from direct sunlight and heat sources. Ensure adequate ventilation around the unit.

3.4 Setting the Clock

Upon plugging in the unit, the display will show the current time. To adjust the time, refer to the detailed instructions in the 'Operating Instructions' section under 'Setting Time and Date'.

4. OPERATING INSTRUCTIONS

4.1 Basic Rice Cooking (High Pressure Mode)

1. Measure the desired amount of rice using the provided measuring cup. Rinse the rice thoroughly until the water runs clear.
2. Place the rinsed rice into the inner pot. Add water according to the water level markings inside the inner pot for the type of rice being cooked.
3. Place the inner pot into the main unit. Ensure the inner pot is seated correctly.
4. Close the lid securely. Rotate the Twin Pressure dial to the **HIGH PRESSURE** position.
5. Select your desired rice cooking mode (e.g., White Rice, Multigrain) using the control panel.
6. Press the **START** button to begin cooking. The display will show the cooking progress.



Figure 3: Twin Pressure dial for selecting cooking modes.

4.2 Non-Pressure Cooking Mode

For softer, fluffier rice or other dishes that do not require high pressure, rotate the Twin Pressure dial to the **NON PRESSURE** position. Follow steps 1-3 from Basic Rice Cooking, then select the appropriate non-pressure menu option (e.g., Quinoa, Porridge) and press **START**.

4.3 Open Cooking Mode

The Open Cooking Mode allows you to add ingredients during the cooking process. This mode is available only when the Twin Pressure dial is set to **NON PRESSURE**. You can lift the lid to stir or add ingredients like vegetables or seasonings, then close the lid to continue cooking.



Figure 4: Utilizing the Open Cooking feature to add ingredients mid-cook.

4.4 Quick Mode

For fast cooking of white rice, select the Quick Mode. This feature can cook a single serving of rice in approximately 12 minutes. Ensure the Twin Pressure dial is set to **HIGH PRESSURE** for optimal results with Quick Mode.



OPEN COOKING

ADD INGREDIENTS ANYTIME

Enjoy flexible open cooking that lets you add, mix, and adjust as you go

Non-Pressure Open Cooking



Braised Pork



Clam Chowder



Baby Food



Figure 5: Quick Mode for rapid rice preparation.

4.5 Dynamic Display and Voice Guide

The rice cooker features a dynamic display that shows cooking progress and settings. A voice guide provides audible instructions and notifications, available in English and Korean, to assist with operation.



Figure 6: Dynamic display with intuitive controls.

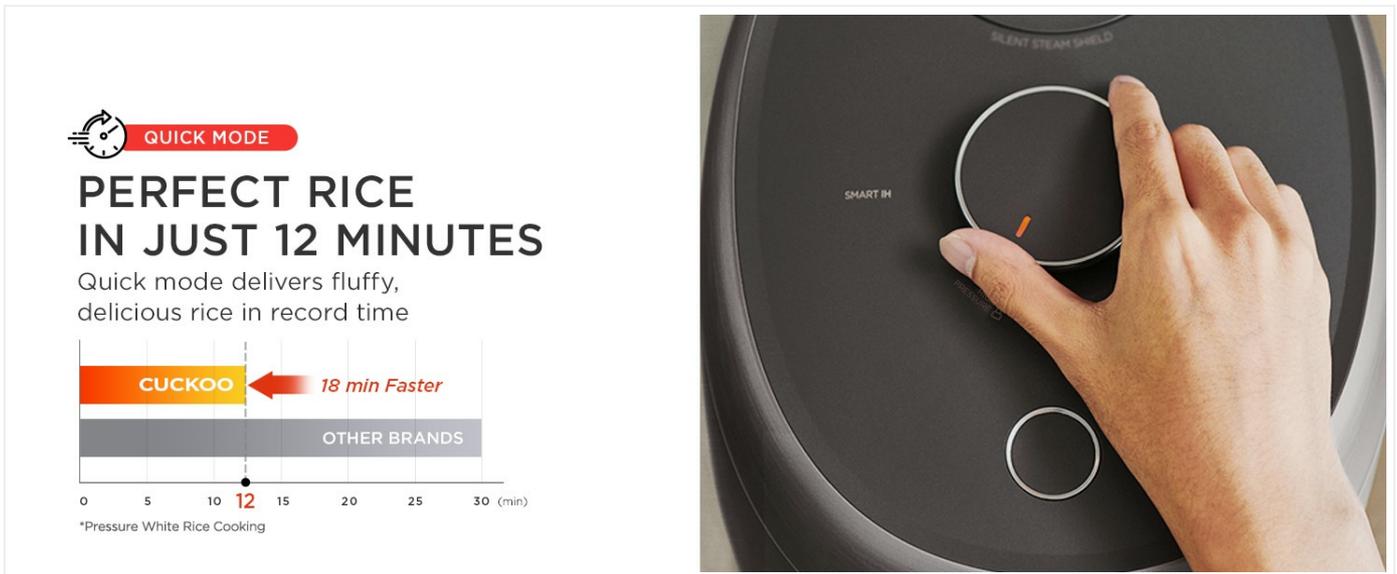


Figure 7: Voice Guide feature for simplified operation.

4.6 Official Product Video



Video 1: Official CUCKOO CRP-PHTR0609FS Product Video. This video demonstrates key features and operation of the rice cooker.

5. MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and longevity of your rice cooker.

5.1 Inner Pot and Inner Lid

The inner pot has a non-stick coating and should be washed with a soft sponge and mild detergent. The inner lid is detachable for easy cleaning. Press the release button to remove it, wash, rinse, and dry before reattaching.

Rich, Sticky, Flavorful Rice			Light, Fluffy, Separate Grains		
					
					
Braised Short Rib	Chicken Soup	Mixed Rice	Kimbap	Pudding	Baby Food

DIGITAL RECIPE BOOK INCLUDED 

Figure 8: Components for easy cleaning.



Figure 9: Detachable inner lid for thorough cleaning.

5.2 Silent Steam Valve and Water Tray

The Silent Steam Valve should be wiped clean regularly to prevent blockages. The wide removable water tray collects condensation and should be emptied and cleaned after each use to maintain hygiene and prevent odors.



Figure 10: Cleaning the wide steam valve.



Figure 11: Removing and cleaning the wide water tray.

5.3 Exterior

Wipe the exterior of the rice cooker with a soft, damp cloth. Do not use abrasive cleaners or immerse the unit in water.

6. TROUBLESHOOTING

If you encounter issues with your rice cooker, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Rice is too hard/dry	Insufficient water; incorrect rice-to-water ratio; lid not properly sealed.	Add more water next time; ensure lid is securely closed and pressure dial is set correctly.
Rice is too soft/mushy	Too much water; incorrect rice-to-water ratio.	Reduce water next time; ensure correct water level for rice type.
Unit does not power on	Power cord not plugged in; power outage.	Check power connection; verify power outlet is functional.
Steam leaks from lid	Lid not properly closed; gasket/seal damaged or dirty.	Ensure lid is securely closed; clean or replace gasket/seal if necessary.
Display shows error code	Internal malfunction; sensor issue.	Refer to the full instruction manual for specific error codes or contact customer support.

For issues not listed here, please consult the comprehensive user manual or contact CUCKOO customer support.

7. PRODUCT SPECIFICATIONS

Feature	Detail
Brand	CUCKOO
Model Name	CRP-PHTR0609FS
Capacity	6-Cup Uncooked / 12-Cup Cooked
Product Dimensions	10.59"D x 10.83"W x 10.55"H
Power Source	Corded Electric
Voltage	120 Volts
Material	Stainless Steel (Inner Pot: Eco-Friendly Non-Stick, optional Full Stainless Steel sold separately)
Special Features	Advanced Fuzzy Logic, Automatic Keep Warm, Automatic Shut Off, Induction Heating, Non-Stick, Pressure Control Device, Programmable, Silent Steam System, Open Cooking Mode, Dynamic Display, Voice Guide
Item Weight	15.21 Pounds
Included Components	Inner Pot, Instruction Manual, Recipe Guide, Steam Plate, Rice Paddle, Measuring Cup

8. WARRANTY AND SUPPORT

8.1 Warranty Information

This CUCKOO product comes with a manufacturer's warranty. Please refer to the warranty card included in your product packaging for specific terms, conditions, and duration. Keep your proof of purchase for warranty claims.

8.2 Customer Support

For technical assistance, troubleshooting, or service inquiries, please contact CUCKOO customer support. Contact information can typically be found on the CUCKOO official website or in the warranty documentation.

You can also visit the official CUCKOO store on Amazon for more information: [CUCKOO Store](#).

