

## Wireless Controller

# Generic Wireless Controller User Manual

MODEL: WIRELESS CONTROLLER

## Product Overview

---

This manual provides instructions for the Generic Wireless Controller, compatible with Xbox Series X|S, Xbox One, Windows PC, iOS, and Android devices. It features Bluetooth connectivity, dual vibration motors, a 3.5mm audio jack, and programmable TURBO and Macro functions. Please read this manual carefully before use.

## Package Contents

---

- 1 x Wireless Controller
- 1 x USB Charging Cable
- 1 x User Manual

## Controller Layout

---

Familiarize yourself with the buttons and ports on your controller.



Image: A detailed diagram labeling the Left Stick, VIEW button, D-pad, Headphone Jack, Turbo button, Home button, Menu button, X, Y, A, B buttons, Right Stick, RB (Right Bumper), RT (Right Trigger), USB Charging Port, LB (Left Bumper), LT (Left Trigger), PR (Programmable Rear Left Button), Set button, and PL (Programmable Rear Right Button).

## Setup and Initial Use

### Charging the Controller

Connect the supplied USB charging cable to the controller's USB Charging Port and the other end to a power source (e.g., PC USB port, USB wall adapter). The charging indicator will show the charging status. A full charge typically takes approximately 2.5 hours.

### Important: Xbox Compatibility Update

**Before connecting to an Xbox console (Xbox One, Xbox Series X|S), the controller requires a firmware update using a Windows PC. If you only intend to use the controller with a PC, this update is not necessary.**

To update the firmware:

1. Download the upgrade program from: [we.tl/t-UdkREIOJts](https://we.tl/t-UdkREIOJts)
2. Follow the on-screen instructions to complete the update. The process typically takes 2-3 minutes.

# If you can't connect your Xbox upgrade your controller

Upgrade program download URL: [we.tl/t-UdkRElOjTS](https://we.tl/t-UdkRElOjTS)

It will continue to be compatible with Xbox devices after upgrading, and the upgrade can only be done on Windows PC. Upgrading is easy and only takes 2-3 minutes.



Image: An illustration emphasizing the need to upgrade the controller firmware for Xbox compatibility, providing a download link for the upgrade program.

## Connecting the Controller

### Bluetooth Pairing (Xbox, PC, iOS, Android)

The controller uses Bluetooth wireless technology for connection.

1. Ensure the controller is charged.
2. On your device (Xbox, PC, iOS, Android), navigate to the Bluetooth settings.
3. Put the controller into pairing mode (typically by holding a small pairing button or the Home button for a few seconds until the indicator light flashes rapidly).
4. Select the controller from the list of available Bluetooth devices on your system.
5. Once paired, the controller's indicator light will stabilize.

The controller offers stable connectivity within a range of approximately 9 meters (32 feet).



## 32FT WIRELESS DISTANCE

High-speed connection without any delays or interruptions, providing you with a better gaming experience.

BATTERY CAPACITY  
**1000MAH**

CHARGING TIME  
**2.5H**

GAMING TIME  
**12-15H**



Image: A visual representation of the controller's wireless range (32 feet) and battery specifications, including 1000mAh capacity, 2.5 hours charging time, and 12-15 hours gaming time.

## Operating Instructions

### Dual Vibration and Gyro Function

The controller features built-in dual vibration motors and a 6-axis sensor for immersive motion sensing and realistic feedback during gameplay.



Image: An illustration detailing the Gyro and Dual-Vibration capabilities, showing internal motor components.

## TURBO Function

The adjustable TURBO function allows for rapid, repeated button presses, enhancing performance in games requiring quick inputs.

1. Press and hold the **T** (Turbo) button.
2. While holding **T**, press the action button you wish to assign Turbo to (e.g., A, B, X, Y, RB, RT, LB, LT).
3. Release both buttons. The assigned button will now activate Turbo mode.
4. To adjust the Turbo speed, repeat the process and cycle through available speeds (e.g., 20 shots/s).
5. To clear Turbo, repeat the process for the assigned button, or consult the full manual for specific reset instructions.



Image: A visual guide to activating the manual Turbo function, showing the 'T' button combined with action buttons and an example of 20 shots/s.


### Macro Function (Programmable Buttons)

The controller features programmable rear buttons (PR and PL) for custom macro assignments, allowing for more efficient operations.

1. Press the **SET** button (located on the back of the controller). The indicator light may change.
2. Press either **PR** or **PL** (the button you want to program).
3. Input the sequence of buttons you want to record (e.g., A, B, X, Y, RB, RT, LB, LT).
4. Press **SET** again to save the macro. The indicator light will return to normal.
5. Now, pressing **PR** or **PL** will execute the recorded sequence.
6. To clear a macro, press **SET**, then the **PR** or **PL** button you wish to clear, then **SET** again without inputting a sequence.

## PROGRAMMABLE BUTTON DESIGN

PR/PL=A+B+X+Y+RB+RT+LB+LT  
Custom MACRO buttons make  
your operation more efficient  
and smoother on multi-platform  
device.

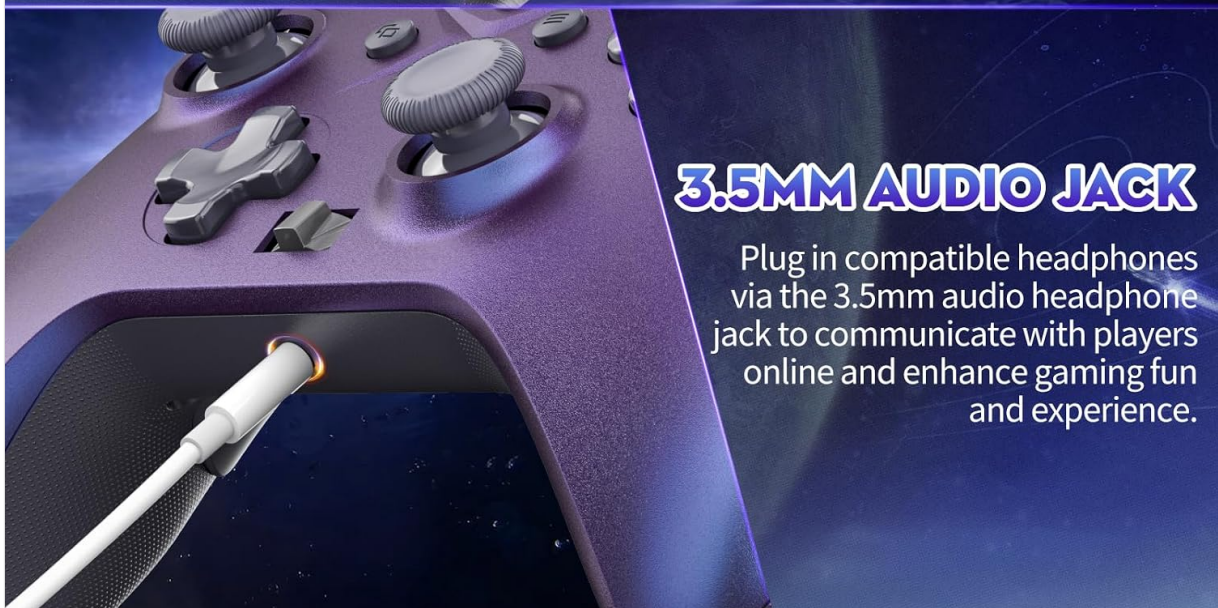

## 3.5MM AUDIO JACK

Plug in compatible headphones  
via the 3.5mm audio headphone  
jack to communicate with players  
online and enhance gaming fun  
and experience.

Image: A view of the controller's rear, highlighting the programmable PR, SET, and PL buttons, and also showing the 3.5mm audio jack.

### Using the 3.5mm Audio Jack

Plug compatible headphones into the standard 3.5mm stereo headphone jack for private game audio. An integrated button allows for easy volume adjustment.

### Maintenance

To ensure the longevity and optimal performance of your controller:

- Keep the controller clean by wiping it with a soft, dry cloth.
- Avoid exposing the controller to extreme temperatures, humidity, or direct sunlight.
- Do not attempt to disassemble the controller, as this may void any potential warranty.
- Store the controller in a safe place when not in use to prevent physical damage.

### Troubleshooting

#### Controller Not Connecting to Xbox

- Ensure you have performed the necessary firmware update using a Windows PC. Refer to the

"Important: Xbox Compatibility Update" section.

- Verify the Xbox console's Bluetooth is enabled and in pairing mode.

## Controller Not Connecting to PC/iOS/Android

- Verify Bluetooth is enabled on your device.
- Ensure the controller is in pairing mode (indicator light flashing rapidly).
- Try restarting both the controller and your device.
- Remove the controller from your device's Bluetooth list and attempt to pair again.

## Input Lag or Disconnections

- Ensure you are within the 9-meter wireless range.
- Minimize interference from other wireless devices (e.g., Wi-Fi routers, other Bluetooth devices).
- Ensure the controller is fully charged.

## Vibration Not Working

- Check in-game settings to ensure vibration feedback is enabled. Some games allow you to disable this feature.
- Ensure the controller's firmware is up to date.

## Audio Jack Not Working

- Ensure your headphones are fully plugged in.
- Check headphone functionality with another device to rule out headphone issues.
- Verify in-game or system audio settings.

## Specifications

---

- **Compatibility:** Xbox Series X|S, Xbox One, Windows PC, iOS, Android
- **Connectivity:** Bluetooth Wireless Technology
- **Wireless Range:** Approximately 9 meters (32 feet)
- **Battery Capacity:** 1000mAh
- **Charging Time:** Approximately 2.5 hours
- **Gaming Time:** Approximately 12-15 hours
- **Audio:** 3.5mm Stereo Headphone Jack
- **Feedback:** Dual Vibration Motors, 6-axis Sensor
- **Special Features:** TURBO Function, Programmable Macro Buttons (PR/PL)

## Support

---

If you encounter any issues or have questions regarding your wireless controller, please do not hesitate to contact the seller for assistance. Provide your product model and a detailed description of the issue for quicker resolution.