

[Manuals.plus](#) /

› [OLIXIS](#) /

› OLIXIS Electric Grill Outdoor/Indoor Instruction Manual

OLIXIS NPJ1023-BK

OLIXIS Electric Grill Outdoor/Indoor

MODEL: NPJ1023-BK - INSTRUCTION MANUAL

1. Introduction

Thank you for choosing the OLIXIS Electric Grill Outdoor/Indoor. This versatile appliance is designed to enhance your cooking experience, offering 8 distinct functions including Air Fry, Bake, Roast, Vegetable, Steak, Reheat, Broil, and Dehydrate. It features a non-stick coating for easy cleanup and consistent heating from 140°F to 450°F. This manual provides essential information for safe operation, setup, maintenance, and troubleshooting to ensure optimal performance of your grill.



Image 1.1: The OLIXIS Electric Grill being used by a family for outdoor cooking.

2. Important Safety Instructions

Please read all instructions carefully before using the OLIXIS Electric Grill. Failure to follow these safety guidelines may result in electric shock, fire, or serious injury.

- **Electrical Safety:** Ensure the grill is connected to a grounded 120V AC outlet. Do not use extension cords unless

absolutely necessary and ensure they are rated for the appliance's wattage (1550W).

- **Hot Surfaces:** The grill and its components become extremely hot during operation. Always use oven mitts or heat-resistant gloves when handling hot parts. Allow the appliance to cool completely before cleaning or storing.
- **Water and Liquids:** Do not immerse the main unit, cord, or plug in water or other liquids. Avoid spilling liquids onto electrical components.
- **Children and Pets:** Keep the appliance out of reach of children and pets. Close supervision is necessary when the grill is in use near them.
- **Ventilation:** Ensure adequate ventilation when operating the grill, especially indoors. Do not block air vents.
- **Placement:** Place the grill on a stable, heat-resistant surface, away from walls, curtains, and other flammable materials. Maintain at least 6 inches of clearance on all sides.
- **Intended Use:** Use the appliance only for its intended purpose as described in this manual. Do not modify the appliance or use unauthorized attachments.

3. Package Contents

Verify that all components are present and in good condition upon unpacking. If any items are missing or damaged, contact customer support.

- OLIXIS Electric Grill Main Unit
- Grill Cover
- Fry Basket
- Grill Plate (Non-Stick)
- User Manual (this document)

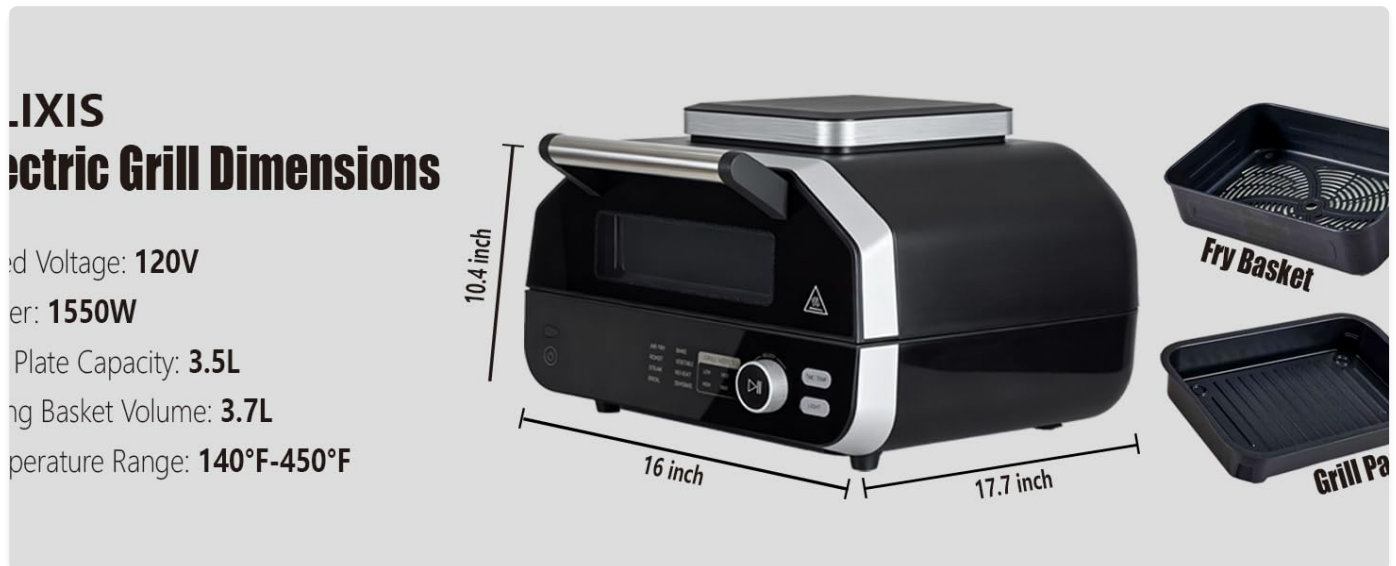


Image 3.1: OLIXIS Electric Grill dimensions and included accessories: Fry Basket and Grill Pan.

4. Product Overview

Familiarize yourself with the main parts of your OLIXIS Electric Grill.

1. **Main Unit:** Houses the heating elements and control panel.
2. **Grill Cover:** Hinged lid that encloses the cooking area, featuring a viewing window and internal air circulation system.

3. **Control Panel:** Digital display and rotary knob for selecting functions, adjusting time/temperature, and power.
4. **Grill Plate:** Non-stick cooking surface for grilling.
5. **Fry Basket:** Non-stick basket for air frying.
6. **Integrated Thermometer:** For precise temperature monitoring of food (visible in some models).



Image 4.1: Front view of the OLIXIS Electric Grill.



MULTI-FUNCTION AIR FRYER GRILL

Take your cooking to the next level with crispy, healthier air-fried food and perfectly grilled steak—all in one appliance.

Image 4.2: The built-in thermometer for precise cooking.

5. Setup

Follow these steps for initial setup before first use.

1. **Unpack:** Carefully remove all packaging materials and promotional labels from the grill and its accessories.
2. **Clean:** Wash the grill plate, fry basket, and grill cover with warm, soapy water. Rinse thoroughly and dry completely. Wipe the exterior of the main unit with a damp cloth.
3. **Placement:** Place the main unit on a flat, stable, heat-resistant surface. Ensure there is at least 6 inches of clear space around all sides of the grill for proper ventilation.
4. **Power Connection:** Plug the power cord into a grounded 120V AC electrical outlet. The display will illuminate.
5. **Pre-heat (Optional):** For first use, it is recommended to run the grill empty for about 10-15 minutes on a medium setting to burn off any manufacturing residues. Ensure good ventilation during this process.

6. Operating Instructions

Your OLIXIS Electric Grill offers 8 functions and 4 grill modes for diverse cooking needs.

6.1 Control Panel Overview



Image 6.1: Detailed view of the control panel with function and mode selections.

- **Power Button:** Turns the grill on/off.
- **Function Selection:** Use the rotary knob to cycle through Air Fry, Bake, Roast, Vegetable, Steak, Reheat, Broil, and Dehydrate.
- **Grill Modes:** For grilling functions, select Low, Med, High, or Max temperature settings.
- **Time/Temp Button:** Press to toggle between adjusting cooking time and temperature. Use the rotary knob to set values.
- **Start/Pause Button:** Initiates or pauses the cooking cycle.
- **Light Button:** Activates the internal light to view food through the cover window.

6.2 General Operation Steps

1. **Prepare Food:** Place your food on the grill plate or in the fry basket, depending on the desired function.
2. **Insert Accessory:** Place the grill plate or fry basket into the main unit. Close the grill cover.
3. **Power On:** Press the Power Button.
4. **Select Function:** Rotate the knob to choose your desired cooking function (e.g., Steak, Air Fry).
5. **Set Time/Temperature:** Press the Time/Temp button. Rotate the knob to adjust the cooking time and temperature according to your recipe or preference. For grilling functions, select a grill mode (Low, Med, High, Max).
6. **Start Cooking:** Press the Start/Pause button to begin cooking.
7. **Monitor Progress:** Use the internal light to check on your food without opening the lid. If your model includes a thermometer, insert it into the food for precise temperature readings.
8. **Finish:** The grill will beep when the cooking cycle is complete. Carefully open the lid and remove food using heat-resistant utensils.



Image 6.2: The 8-in-1 functions of the OLIXIS Electric Grill.

Your browser does not support the video tag.

Video 6.3: An official product video demonstrating the versatility and ease of use of the OLIXIS Electric Grill for various cooking tasks, including grilling and air frying.

7. Cooking Tips

- **Preheating:** Always preheat the grill for 5-10 minutes before adding food to achieve optimal cooking results and searing.
- **Oil Usage:** For grilling, a small amount of high-smoke-point oil can be brushed onto the grill plate or food to prevent sticking and enhance flavor. For air frying, minimal oil is needed.
- **Even Cooking:** For best results, arrange food in a single layer on the grill plate or in the fry basket. Avoid overcrowding to ensure even cooking and browning.
- **Turning Food:** Flip food halfway through the cooking time for even grilling or air frying.
- **Internal Temperature:** Always use a food thermometer to ensure meats are cooked to safe internal temperatures.

8. Maintenance and Cleaning

Regular cleaning ensures the longevity and optimal performance of your grill.

1. **Unplug and Cool:** Always unplug the grill from the power outlet and allow it to cool completely before cleaning.
2. **Removable Parts:** The grill plate and fry basket are non-stick and can be easily removed for cleaning. Wash them with warm, soapy water using a soft sponge or cloth. Avoid abrasive cleaners or metal scouring pads that can damage the non-stick coating.
3. **Grill Cover:** Wipe the inside and outside of the grill cover with a damp cloth. For stubborn residue, use a mild detergent.
4. **Main Unit:** Wipe the exterior of the main unit with a damp cloth. Do not immerse the main unit in water.
5. **Storage:** Ensure all parts are clean and dry before storing the grill. Store in a cool, dry place.



Image 8.1: Cleaning the non-stick grill plate.

9. Troubleshooting

If you encounter issues with your OLIXIS Electric Grill, refer to the following common problems and solutions.

Problem	Possible Cause	Solution
Grill does not power on.	Not plugged in; power outlet issue; power button not pressed.	Ensure the grill is securely plugged into a working outlet. Press the power button firmly.
Food not cooking evenly.	Overcrowding; insufficient preheating; lid not fully closed.	Avoid overcrowding the grill. Always preheat the grill. Ensure the lid is fully closed during cooking.
Excessive smoke during cooking.	Food with high fat content; grease buildup; incorrect temperature.	Trim excess fat from food. Clean the grill plate and drip tray regularly. Adjust temperature settings as needed. Ensure proper ventilation.
Non-stick coating appears damaged.	Use of metal utensils or abrasive cleaners.	Always use silicone, wooden, or plastic utensils. Clean with soft sponges and mild detergent.

If the problem persists after trying these solutions, please contact OLIXIS customer support.

10. Specifications

Feature	Detail
Brand	OLIXIS
Model Number	NPJ1023-BK
Product Dimensions (D x W x H)	17.72" x 16" x 10.43"
Item Weight	16.5 Pounds

Feature	Detail
Color	Black
Material	Metal, Stainless Steel
Special Features	Non-Stick Surface, Programmable, Removable Plate
Wattage	1550 watts
Voltage	120 Volts
Temperature Range	140°F - 450°F
Included Components	Fry Basket, Grill Cover, User Manual
GTIN / UPC	751074091660

11. Warranty and Support

Warranty: The OLIXIS Electric Grill is covered by a **1 Year Manufacturer Warranty** from the date of purchase. This warranty covers defects in materials and workmanship under normal use. It does not cover damage resulting from misuse, accident, alteration, or unauthorized repair.

Customer Support: For warranty claims, technical assistance, or any questions regarding your OLIXIS Electric Grill, please contact our customer support team. Refer to the contact information provided on the OLIXIS official website or your purchase documentation.

Please have your model number (NPJ1023-BK) and proof of purchase ready when contacting support.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0G3V465KD>

More documents and user manuals: <https://manuals.plus/>