



[Manuals.plus](#) /

> [Lifelong](#) /

> Lifelong BRIK 2-in-1 Air Fryer & Barbeque (Model LLHFDG01) Instruction Manual

Lifelong LLHFDG01

Lifelong BRIK 2-in-1 Air Fryer & Barbeque Instruction Manual

Model: LLHFDG01

1. INTRODUCTION

Thank you for purchasing the Lifelong BRIK 2-in-1 Air Fryer & Barbeque. This appliance is designed to provide versatile cooking options, combining the benefits of air frying and grilling in one compact unit. Please read this manual thoroughly before use to ensure safe and efficient operation. Keep this manual for future reference.



Image 1.1: The Lifelong BRIK 2-in-1 Air Fryer & Barbeque, showcasing its sleek silver and black design with a glass window displaying food inside.

2. IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed, including the following:

1. Read all instructions before operating the appliance.
2. Do not touch hot surfaces. Use handles or knobs.
3. To protect against electric shock, do not immerse cord, plugs, or the main unit in water or other liquid.
4. Close supervision is necessary when any appliance is used by or near children.
5. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
6. Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner. Contact customer support for assistance.
7. The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.

8. Do not use outdoors.
9. Do not let cord hang over edge of table or counter, or touch hot surfaces.
10. Do not place on or near a hot gas or electric burner, or in a heated oven.
11. Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
12. Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
13. Do not use appliance for other than intended use.
14. Ensure the appliance is placed on a stable, heat-resistant surface.
15. Do not block any ventilation openings.

3. PRODUCT OVERVIEW

The Lifelong BRIK 2-in-1 Air Fryer & Barbeque features a unique flip design, allowing it to function as both an air fryer and a grill. It includes a 4.2L capacity basket with a glass window for monitoring food, an LED touch panel for easy control, and 8 preset cooking modes.

Key Features:

- **Dual Functionality:** Easily switch between air frying and grilling modes by flipping the unit.
- **Powerful Performance:** 1350W heating element for quick and efficient cooking.
- **Generous Capacity:** 4.2-liter basket, suitable for small families.
- **Visible Cooking:** Integrated glass window allows monitoring of food without opening.
- **Intuitive Controls:** LED touch panel with 8 preset cooking modes.
- **Healthy Cooking:** 360° Rapid Air Technology for crispy results with minimal oil.
- **Safety Features:** Built-in light and auto shut-off function.

Smart Features

For effortless operation



1350W
Power

Built-in
Light

Auto
Shut-off

Image 3.1: Illustration of the smart features including 1350W Power, Built-in Light, and Auto Shut-off.

4. SETUP

4.1 Unpacking

1. Carefully remove the appliance and all accessories from the packaging.
2. Remove any stickers or labels.
3. Retain the packaging for storage or future transport.

4.2 Initial Cleaning

Before first use, clean all parts that will come into contact with food:

- Wash the air fryer basket, grill plate, and any removable accessories with warm, soapy water. Rinse thoroughly and dry completely.
- Wipe the exterior of the main unit with a damp cloth. Do not immerse the main unit in water.

4.3 Placement

- Place the appliance on a stable, flat, heat-resistant surface.
- Ensure there is adequate space (at least 10 cm) around the appliance for proper air circulation.
- Do not place the appliance near flammable materials or heat sources.

5. OPERATING INSTRUCTIONS

5.1 Powering On and Off

- Plug the power cord into a grounded electrical outlet. The appliance will beep, and the LED display will illuminate briefly.
- Press the power icon on the LED touch panel to turn the appliance on.
- To turn off, press and hold the power icon until the display turns off.

5.2 Switching Between Air Fryer and Barbeque Modes

The Lifelong BRIK features a unique flip design to switch between modes:

1. Ensure the unit is unplugged and cooled down.
2. To switch from Air Fryer to Barbeque mode: Lift and detach the top display unit from the base. Flip the top unit over to reveal the grilling element. Place the grill plate onto the base.
3. To switch from Barbeque to Air Fryer mode: Remove the grill plate. Flip the top unit back to its original position and reattach it to the base. Insert the air fryer basket.

Easy Steps That Make Grilling Effortless

Organized storage for every spice



Image 5.1: A four-panel image demonstrating how to switch to grilling mode: 1. Lift & detach the display unit. 2. Flip to reveal barbeque. 3. Fix the grill plate. 4. Set the time/temperature.

Enjoy the Best of Both Worlds

With a smart flip design



- Air fry on one side
- Barbeque on the other

Image 5.2: The appliance shown in both air frying mode (top) and grilling mode (bottom), highlighting its dual functionality.

5.3 Using the LED Touch Panel

The LED touch panel allows you to select cooking modes, adjust temperature, and set cooking time.



Smooth Touch Control Panel

Clear Digital Display. Seamless Experience

Image 5.3: A close-up of the LED touch control panel, showing various icons for presets, temperature, and time adjustments.

5.4 Preset Modes


The appliance comes with 8 preset modes for common dishes. To use a preset:

1. Turn on the appliance.
2. Select the desired preset icon on the touch panel. The default time and temperature for that preset will display.
3. You can adjust the time and temperature manually using the +/- buttons if needed.
4. Press the start button to begin cooking.

Available presets include:

- French Fries
- Sausage
- Shrimp
- Chicken
- Steak

- Cake
- Bread
- Fish

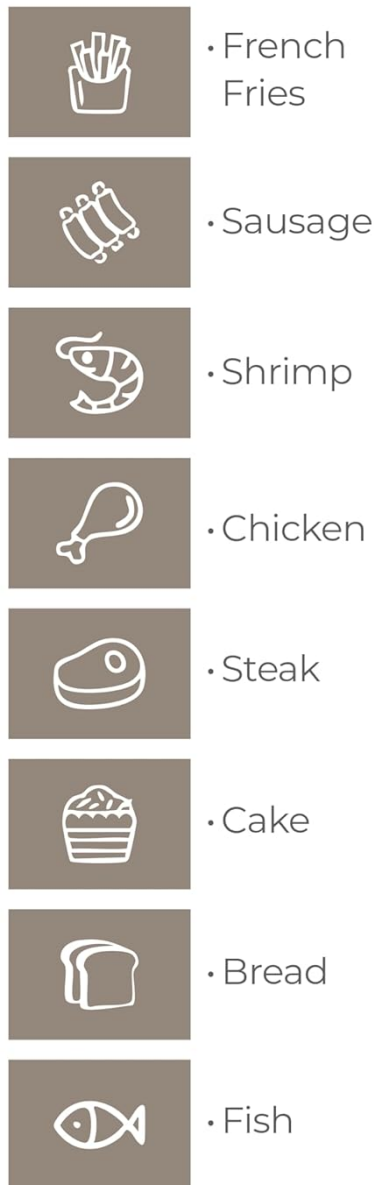

8 Presets for Everyday Dishes

Cook your everyday favourites in minutes

Image 5.4: The appliance displaying the 8 preset icons for various dishes like French Fries, Chicken, Steak, and Fish.

5.5 Manual Operation (Air Frying)

1. Ensure the appliance is in Air Fryer mode with the basket inserted.
2. Place food into the air fryer basket. Do not overfill.
3. Turn on the appliance.
4. Use the temperature and time buttons to set your desired cooking parameters.
5. Press the start button. The appliance will begin heating and circulating hot air.
6. Shake the basket halfway through cooking for even results, if necessary.
7. The appliance will beep when cooking is complete and automatically shut off.

5.6 Manual Operation (Grilling)

1. Ensure the appliance is in Barbeque mode with the grill plate in place.
2. Preheat the grill plate for 3-5 minutes.
3. Carefully place food onto the hot grill plate.
4. Use the temperature and time buttons to set your desired cooking parameters.
5. Press the start button.
6. Flip food as needed for even grilling.
7. The appliance will beep when cooking is complete and automatically shut off.

6. MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and extends the lifespan of your appliance.

6.1 General Cleaning

1. Always unplug the appliance and allow it to cool completely before cleaning.
2. Wipe the exterior of the main unit with a damp cloth. Do not use abrasive cleaners.
3. The air fryer basket and grill plate are non-stick. Wash them with warm, soapy water and a non-abrasive sponge. Rinse thoroughly and dry.
4. For stubborn food residue, soak the basket or grill plate in warm, soapy water for 10-15 minutes before cleaning.

6.2 Storage

When not in use, ensure the appliance is clean and dry. Store it in a cool, dry place.

7. TROUBLESHOOTING

If you encounter any issues, please refer to the following table before contacting customer support.

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in. Power outlet malfunction.	Ensure the power cord is securely plugged into a working outlet. Try a different outlet.
Food is not cooked evenly.	Basket/grill plate overloaded. Food not shaken/flipped.	Do not overload the basket/grill plate. Shake the air fryer basket or flip food on the grill plate halfway through cooking.
White smoke coming from the appliance.	Grease residue from previous use. High fat content food.	Clean the basket/grill plate thoroughly after each use. Remove excess oil from food before cooking.
Appliance emits a burning smell.	Food residue stuck to heating element.	Unplug and allow to cool. Carefully clean the interior and heating element area.

8. SPECIFICATIONS

Feature	Specification
Model Number	LLHFDG01
Power	1350 Watts
Capacity	4.2 Liters
Product Dimensions (D x W x H)	24.1D x 12.7W x 12.2H Centimeters
Item Weight	6500 Grams
Color	Silver & Black
Technology	360° Rapid Air Technology
Control Type	LED Touch Panel
Included Components	1N Air fryer, 1N Manual cum Warranty card

4.2L Capacity

For everyday meals



Image 8.1: The appliance with its 4.2L capacity highlighted, along with its dimensions: 24.1 cm (depth), 12.7 cm (width), and 12.2 cm (height).

9. WARRANTY AND SUPPORT

9.1 Warranty Information

This product comes with a warranty. Please refer to the included Warranty Card for detailed terms, conditions, and registration information. Keep your purchase receipt as proof of purchase for warranty claims.

9.2 Customer Support

For any product-related queries, technical assistance, or service requests, please contact Lifelong customer support:

- **Phone:** +91 9711558877
- **Email:** customercare@lifelongonline.com
- **Manufacturer Address:** 5th Floor, Unit No. 508, DLF South Court, Saket District Center, Saket New Delhi, India – 110017

