

SANPTENT QF-208A

SANPTENT QF-208A Portable Digital Rice Cooker Instruction Manual

Model: QF-208A

1. PRODUCT OVERVIEW

The SANPTENT QF-208A Portable Digital Rice Cooker is a versatile kitchen appliance designed for efficient cooking of various grains and steamed dishes. It features a compact design, a non-stick inner pot, and multiple cooking functions to simplify meal preparation.

COMPACT & SIMPLE



Image 1.1: The SANPTENT QF-208A Portable Digital Rice Cooker, showcasing its compact size with dimensions of 8.3 inches (depth), 7.9 inches (width), and 7.5 inches (height).

Key Features:

- **Capacity:** 2 Liters (6-cup uncooked / 12-cup cooked rice).
- **10 Preset Menu Options:** Includes White Rice, Brown Rice, Quinoa, Oatmeal, Porridge, Steam, Reheat, Quick Cook, Mixed Grain, and Cakes.
- **Automatic Keep Warm:** Maintains food temperature after cooking.
- **24-Hour Delay Timer:** Allows for scheduled cooking.
- **Non-Stick Inner Pot:** Ensures easy food release and cleaning.
- **Included Accessories:** Steamer basket, measuring cup, and rice spatula.



Image 1.2: The rice cooker displayed with its essential accessories: the steam tray, rice spatula, and measuring cup.

2. SETUP AND FIRST USE

Unpacking and Cleaning:

1. Carefully remove all packaging materials and accessories from the box.
2. Wash the inner pot, steamer basket, measuring cup, and rice spatula with warm, soapy water. Rinse thoroughly and dry completely.
3. Wipe the exterior of the rice cooker with a damp cloth. Do not immerse the main unit in water.

Placement:

- Place the rice cooker on a stable, flat, heat-resistant surface.
- Ensure adequate ventilation around the unit.
- Keep away from direct sunlight and heat sources.



Image 2.1: The rice cooker positioned on a kitchen counter, demonstrating its compact footprint suitable for various spaces.

3. OPERATING INSTRUCTIONS

Basic Rice Cooking:

1. Measure the desired amount of rice using the provided measuring cup. Rinse the rice thoroughly until the water runs clear.
2. Place the rinsed rice into the non-stick inner pot.
3. Add the appropriate amount of water. Refer to the cooking guide below for water ratios.
4. Place the inner pot into the rice cooker and close the lid securely.
5. Plug the power cord into a suitable electrical outlet.
6. Press the 'Menu' button to select your desired cooking function (e.g., 'White Rice'). The display will show the estimated cooking time.
7. Press the 'Start' button to begin cooking. The indicator light will illuminate.
8. Once cooking is complete, the cooker will automatically switch to 'Keep Warm' mode.
9. Allow the rice to rest for 5-10 minutes before serving for best results. Use the provided spatula to fluff the rice.

10 Cooking Function

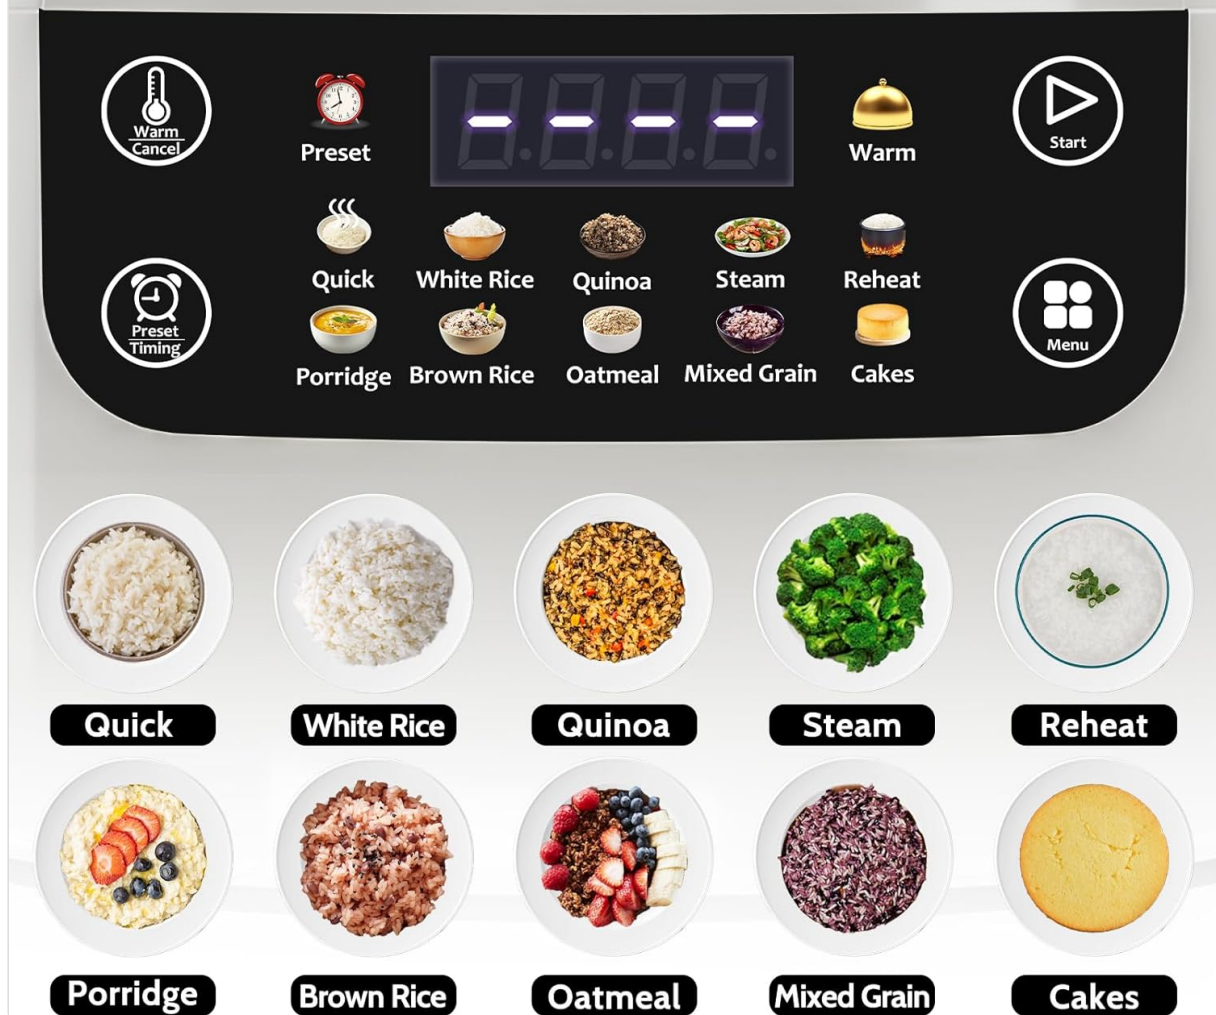


Image 3.1: The digital control panel displaying the 10 preset cooking functions, including Quick, White Rice, Quinoa, Steam, Reheat, Porridge, Brown Rice, Oatmeal, Mixed Grain, and Cakes.

Using the Delay Timer:

1. Prepare rice and water in the inner pot as described above.
2. Select your desired cooking function using the 'Menu' button.
3. Press the 'Preset Timing' button. The display will show a default delay time.
4. Use the '+' or '-' buttons to adjust the delay time in hours. The maximum delay time is 24 hours.
5. Press 'Start' to confirm the delay timer. The cooker will begin cooking after the set delay time has elapsed.

ENJOY FRESH HOT MEALS ANYTIME



Wake up and enjoy breakfast right away.



Delay Timer & Keep Warm



Get home on time to enjoy dinner.

Image 3.2: Illustration of the 24-hour delay timer and automatic keep warm function, allowing for flexible meal preparation.

Steaming with the Steamer Basket:

1. Add water to the inner pot (ensure water level is below the steamer basket).
2. Place food to be steamed (e.g., vegetables, dumplings) into the steamer basket.
3. Place the steamer basket into the inner pot.
4. Close the lid and select the 'Steam' function.
5. Press 'Start' to begin steaming.

Steam & Cook Duo

Effortlessly cook a variety of rice, grains, soups and steamed veggies with just one versatile appliance.



Image 3.3: The rice cooker demonstrating its dual functionality, cooking rice in the main pot while steaming vegetables in the upper basket.

Official Product Video:

Your browser does not support the video tag.

Video 3.1: An official product video from SANPTENT demonstrating the features and operation of the 2-Liter Portable Digital Rice Cooker.

4. COOKING GUIDE

Rice to Water Ratios (using provided measuring cup):

Rice Type	Rice (cups)	Water (cups)	Approx. Cook Time
White Rice	1	1.2 - 1.5	30-40 min
Brown Rice	1	1.5 - 2	50-60 min
Quinoa	1	2	25-35 min

Rice Type	Rice (cups)	Water (cups)	Approx. Cook Time
Oatmeal	1	2 - 3	20-30 min

Note: These ratios are general guidelines. Adjust water amounts based on desired texture and specific rice type.

12-CUP CAPACITY

Cook up to 12 cooked rice cups of white rice.





12 rice cups cooked! **6 rice cups of uncooked white rice** **12 Cups of Water**

Image 4.1: Visual representation of the cooker's capacity, showing that 6 cups of uncooked white rice yield 12 cups of cooked rice.

5. MAINTENANCE AND CLEANING

Cleaning the Inner Pot and Accessories:

1. Always unplug the rice cooker and allow it to cool completely before cleaning.
2. Remove the inner pot and steamer basket. Wash them with warm, soapy water using a soft sponge or cloth. Do not use abrasive cleaners or metal scrubbers, as this can damage the non-stick coating.
3. The inner pot and steamer basket are dishwasher-safe.
4. Rinse thoroughly and dry completely before reassembling.



Image 5.1: A close-up view of the non-stick inner pot, highlighting its easy-to-clean surface.

Cleaning the Main Unit:

1. Wipe the exterior of the rice cooker with a damp cloth.
2. Clean the inner lid and heating plate with a damp cloth. Ensure no food particles are left behind.
3. Do not use harsh chemicals or immerse the main unit in water.



Image 5.2: Features like the removable inner lid and power cord, designed for easy cleaning and convenient storage.

6. TROUBLESHOOTING

If you encounter issues with your SANPTENT QF-208A Rice Cooker, please refer to the following common problems and solutions:

- **Cooker does not turn on:** Ensure the power cord is securely plugged into both the cooker and a working electrical outlet. Check if the outlet has power.
- **Rice is undercooked or overcooked:** Verify the rice-to-water ratio. Different types of rice may require slight adjustments. Ensure the lid is properly closed during cooking.
- **Rice sticks to the inner pot:** Ensure the inner pot is clean and the non-stick coating is intact. Use the provided rice spatula for serving.
- **Steam leakage:** Check that the inner lid and outer lid are properly seated and sealed. Clean any food debris from the lid gasket.
- **Display shows an error code:** Unplug the unit, wait a few minutes, and plug it back in. If the error persists, contact customer support.

7. SPECIFICATIONS

Specification	Detail
Brand	SANPTENT
Model Name	QF-208A
Capacity	2 Liters (6-cup uncooked / 12-cup cooked)
Product Dimensions (D x W x H)	8.3" x 7.5" x 7.9"
Power Source	Corded Electric
Voltage	110 Volts
Wattage	400 watts
Material	Aluminum, Plastic
Special Features	Automatic Keep Warm, Non-Stick, Portable, 24-Hour Delay Timer
Included Components	Inner Pot, Measuring Cup, Spatula, Steamer Basket

8. WARRANTY AND SUPPORT

This SANPTENT QF-208A Portable Digital Rice Cooker comes with a standard manufacturer's warranty. Please refer to the warranty card included in your product packaging for specific terms and conditions. For technical support, troubleshooting assistance, or warranty claims, please contact SANPTENT customer service through the retailer where the product was purchased or visit the official SANPTENT website for contact information.