



ASRock Configuring a RAID Array Using UEFI Setup Utility User Guide

[Home](#) » [ASRock](#) » ASRock Configuring a RAID Array Using UEFI Setup Utility User Guide 

Contents

- [1 ASRock Configuring a RAID Array Using UEFI Setup Utility](#)
- [2 INSTALLATION](#)
 - [2.1 Installing Windows® on a RAID volume](#)
- [3 Documents / Resources](#)
 - [3.1 References](#)
- [4 Related Posts](#)



ASRock Configuring a RAID Array Using UEFI Setup Utility



Configuring a RAID array Using UEFI Setup Utility

The BIOS screenshots in this guide are for reference only and may differ from the exact settings for your motherboard. The actual setup options you will see shall depend on the motherboard you purchase. Please refer to the product specification page of the model you are using for information on RAID support. Because the motherboard specifications and the BIOS software might be updated, the content of this documentation will be subject to change without notice.

INSTALLATION

STEP 1:


Enter the UEFI Setup Utility by pressing <F2> or right after you power on the computer.

STEP 2:

Go to Advanced\Storage Configuration\VMD Configuration and set Enable VMD controller to [Enabled].




Then set Enable VMD Global Mapping to [Enabled]. Next, press <F10> to save the configuration changes and exit setup.

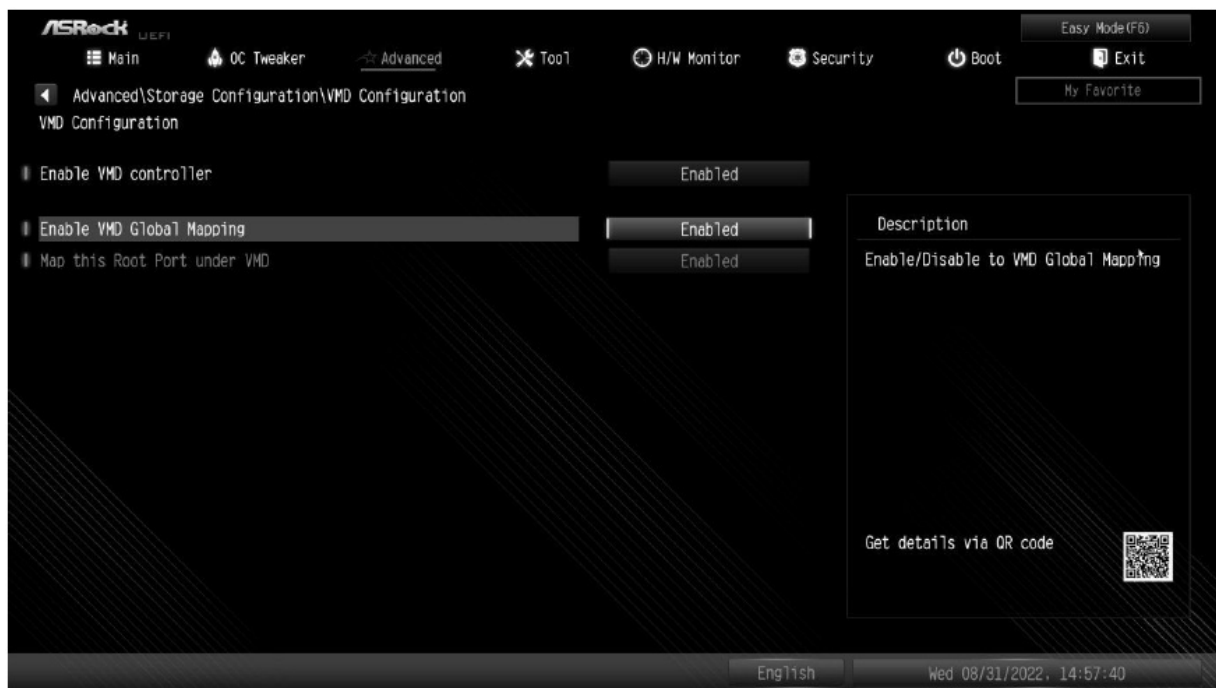


STEP 3.

Enter Intel(R) Rapid Storage Technology in the Advanced page.

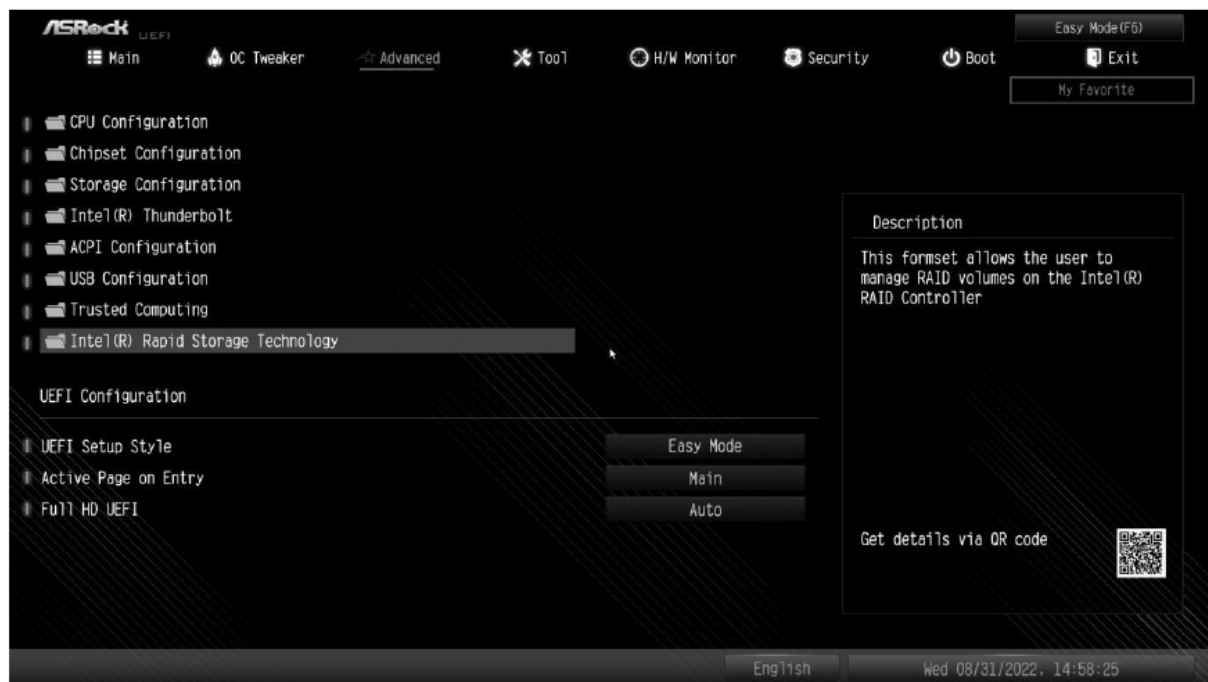

STEP 4:

Select the option Create RAID Volume and press <Enter>.

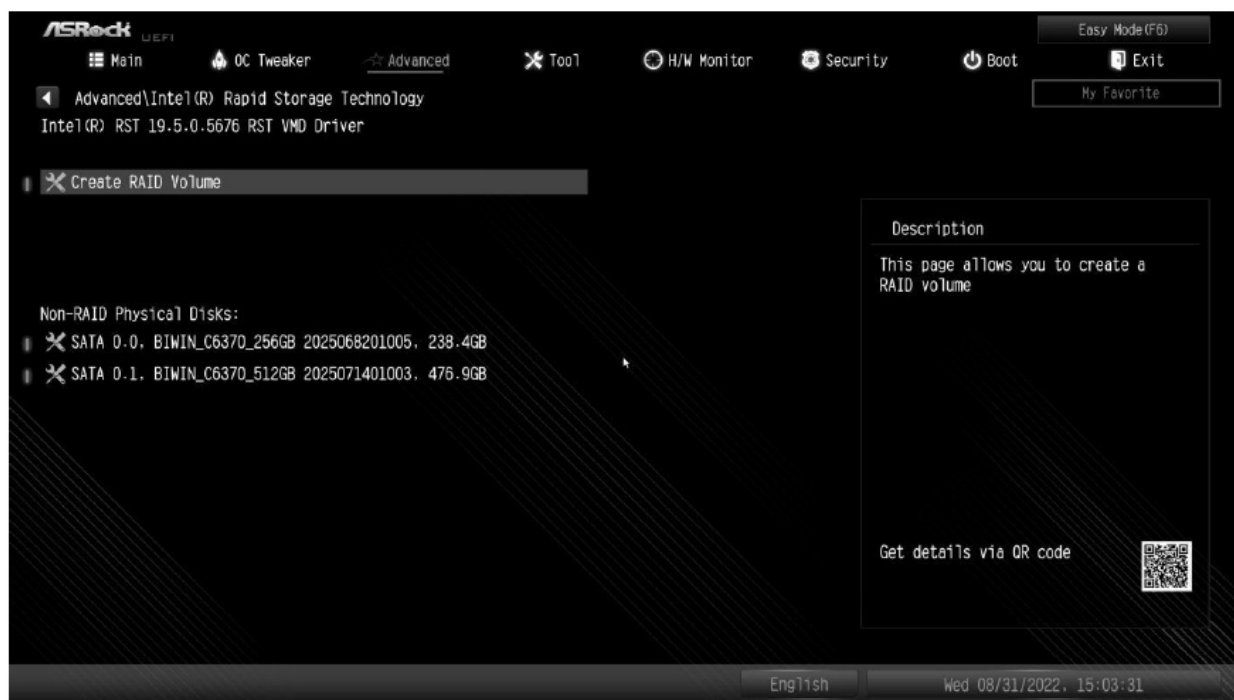


STEP 5:

Key in a volume name and press <Enter>, or simply press <Enter> to accept the default name.




STEP 6:

Select your desired RAID Level and press <Enter>.

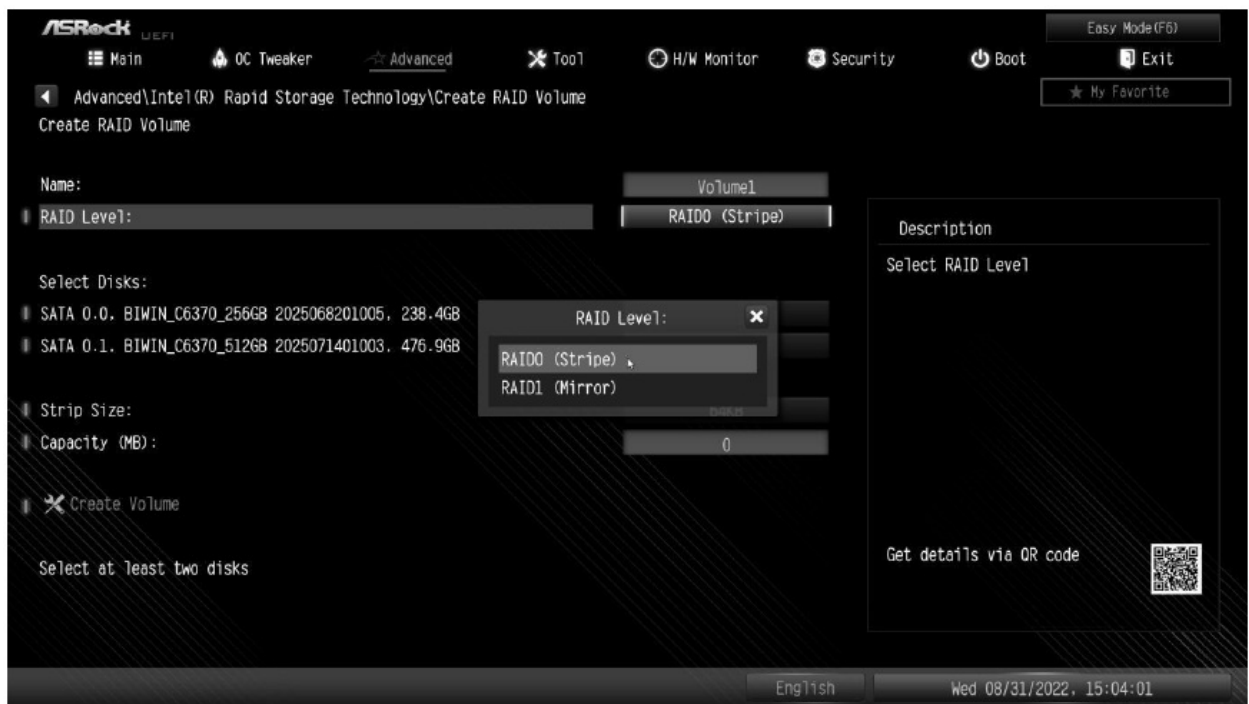


STEP 7:

Select the hard drives to be included in the RAID array and press <Enter>.

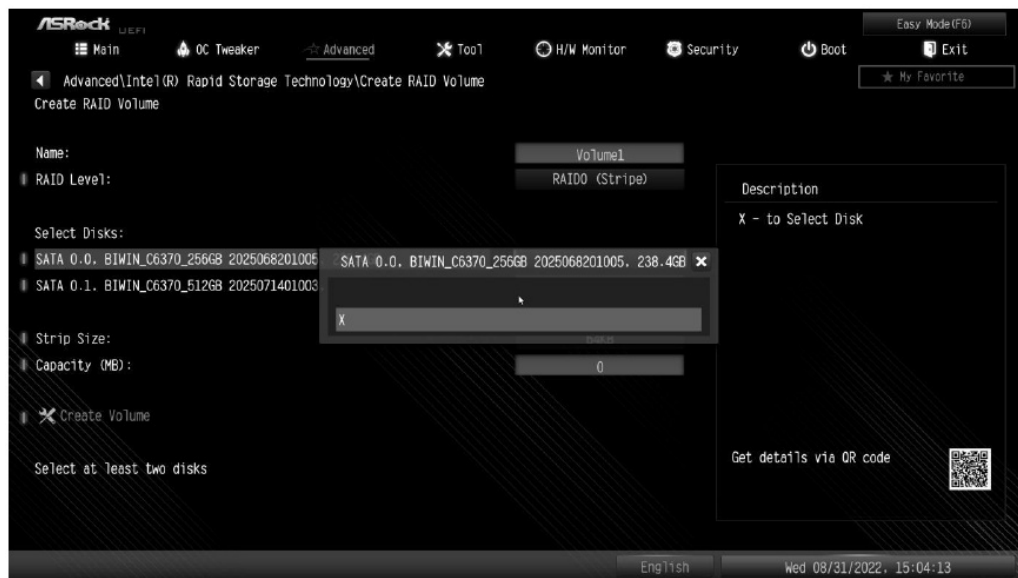

STEP 8:

Select a stripe size for the RAID array or use the default setting and press <Enter>.

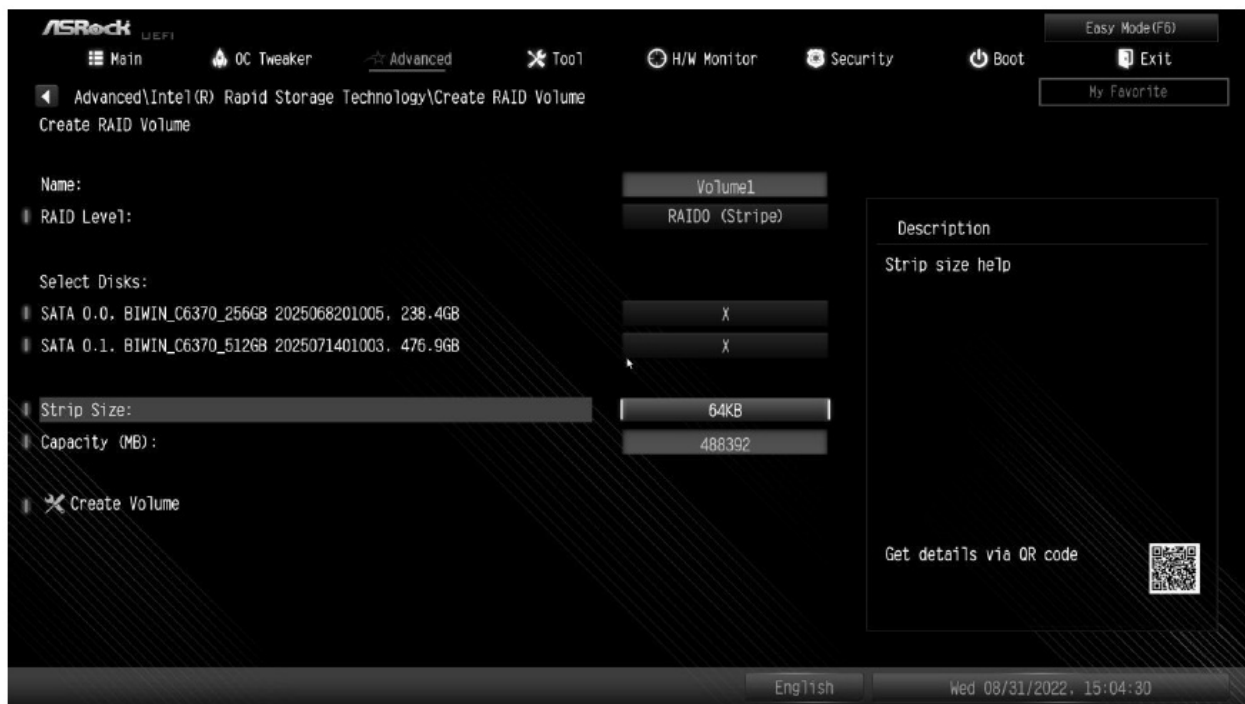


STEP 9:

Select Create Volume and press <Enter> to start creating the RAID array.



If you want to delete a RAID volume, select the option Delete on the RAID volume info page and press <Enter>.

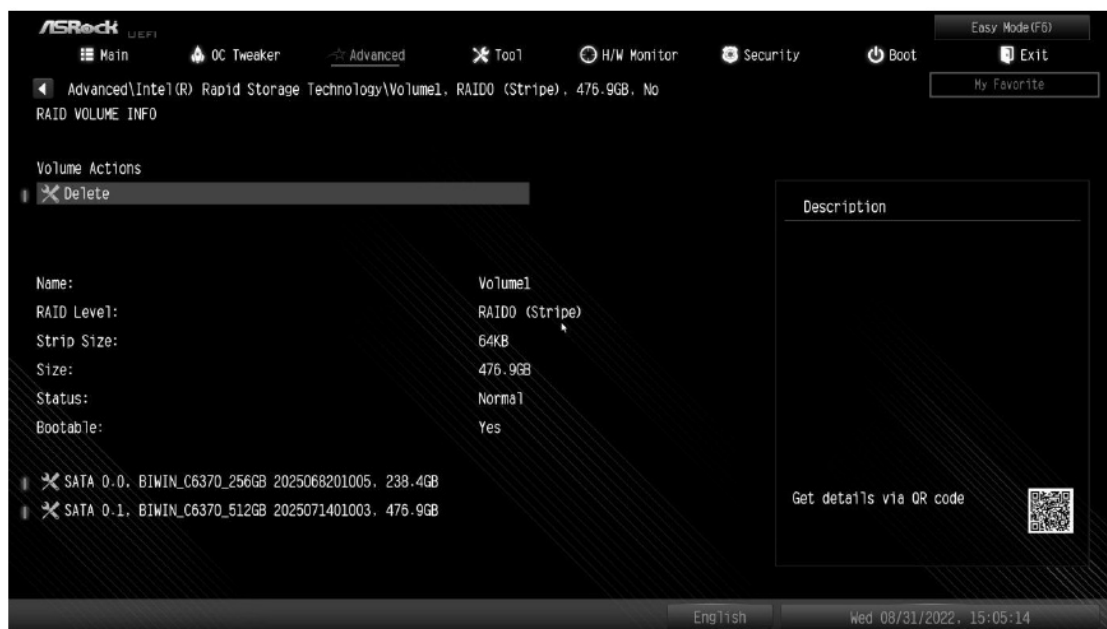

Please note that the UEFI screenshots shown in this installation guide are for reference only. Please refer to ASRock's website for details about each model motherboard.


<https://www.asrock.com/index.asp>

Installing Windows® on a RAID volume

After the UEFI and RAID BIOS setup, please follow the steps below.

STEP 1

Please download the drivers from ASRock's website (<https://www.asrock.com/index.asp>) and unzip the files to a USB flash drive.

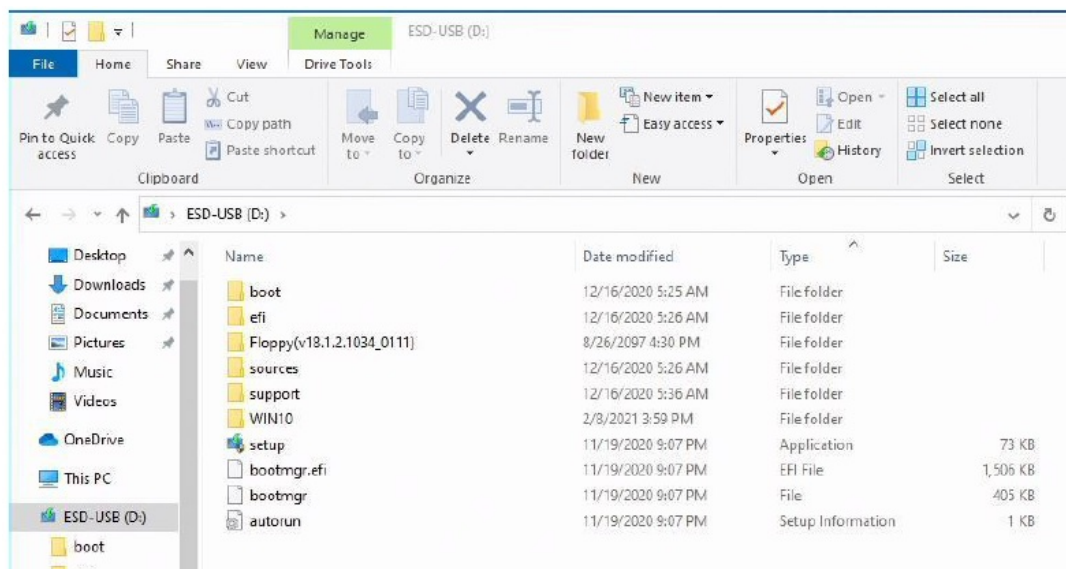

STEP 2


Press <F11> at system POST to launch the boot menu and choose the item "UEFI: <Windows installation media>" to install Windows® 10 64 bit OS.



STEP 3


(If the drive that you plan to install Windows is available, please go to STEP 6)

If during the Windows installation process the target drive is not available, please click <Load Driver>.

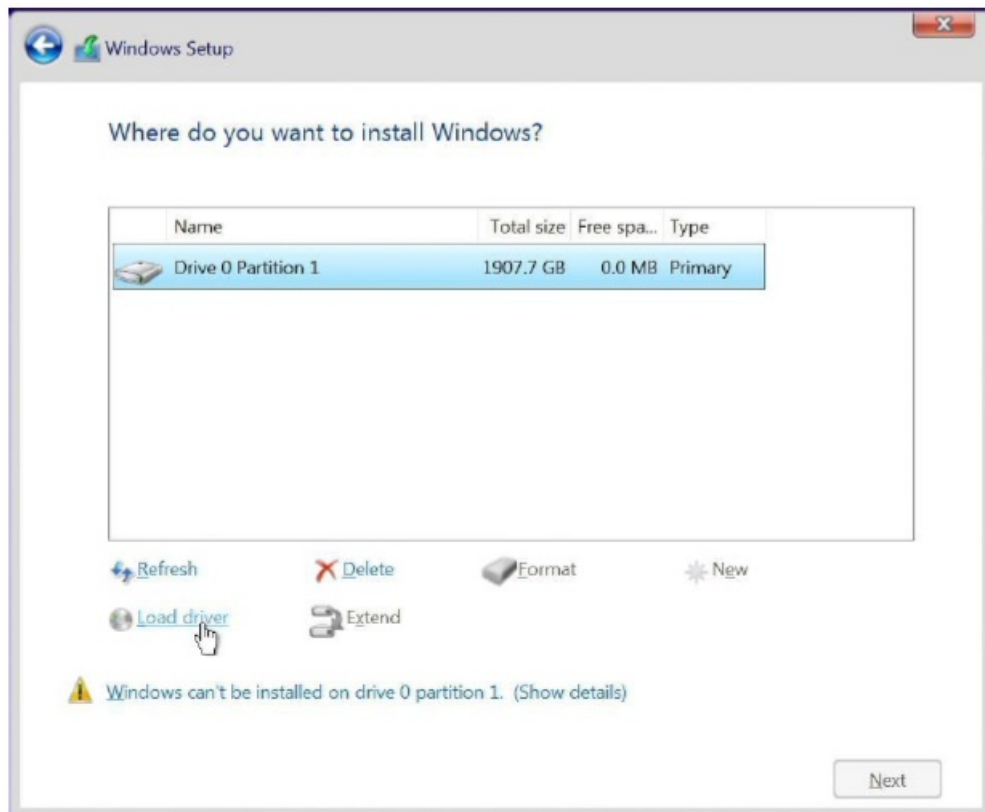


STEP 4

Click <Browse> to find the driver on your USB flash drive.

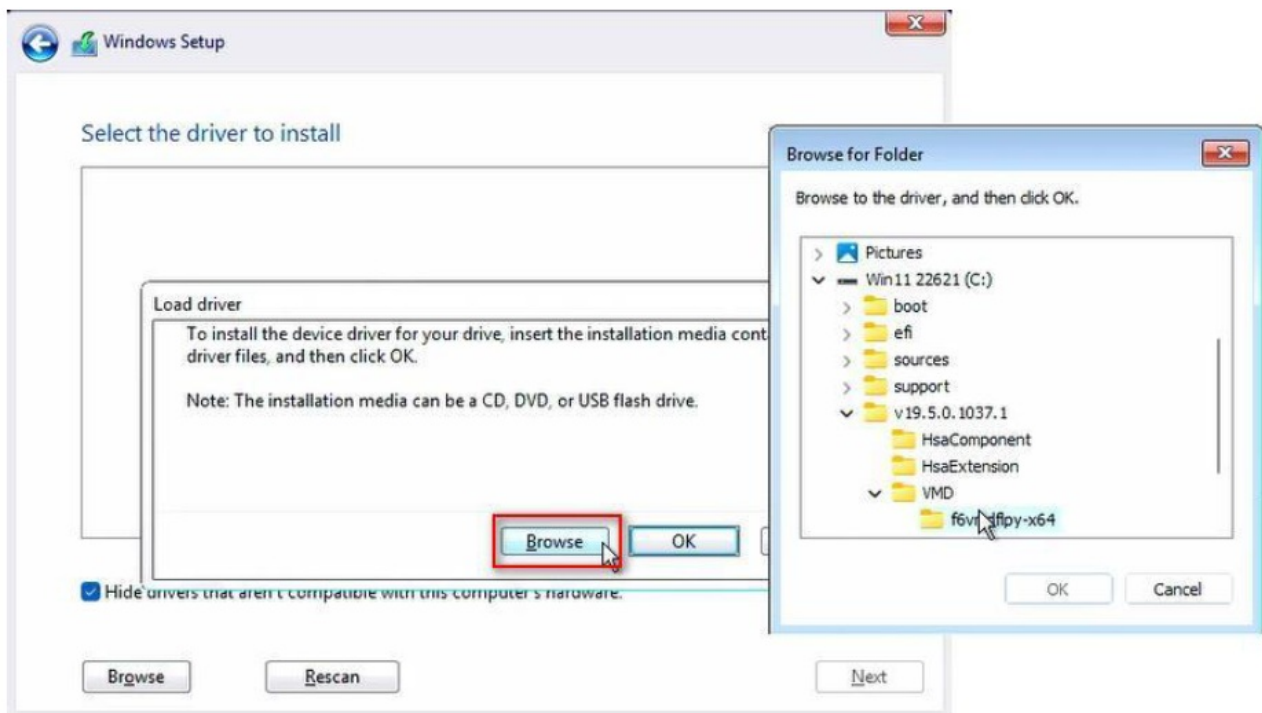


STEP 5

Select "Intel RST VMD Controller" and then click <Next>.

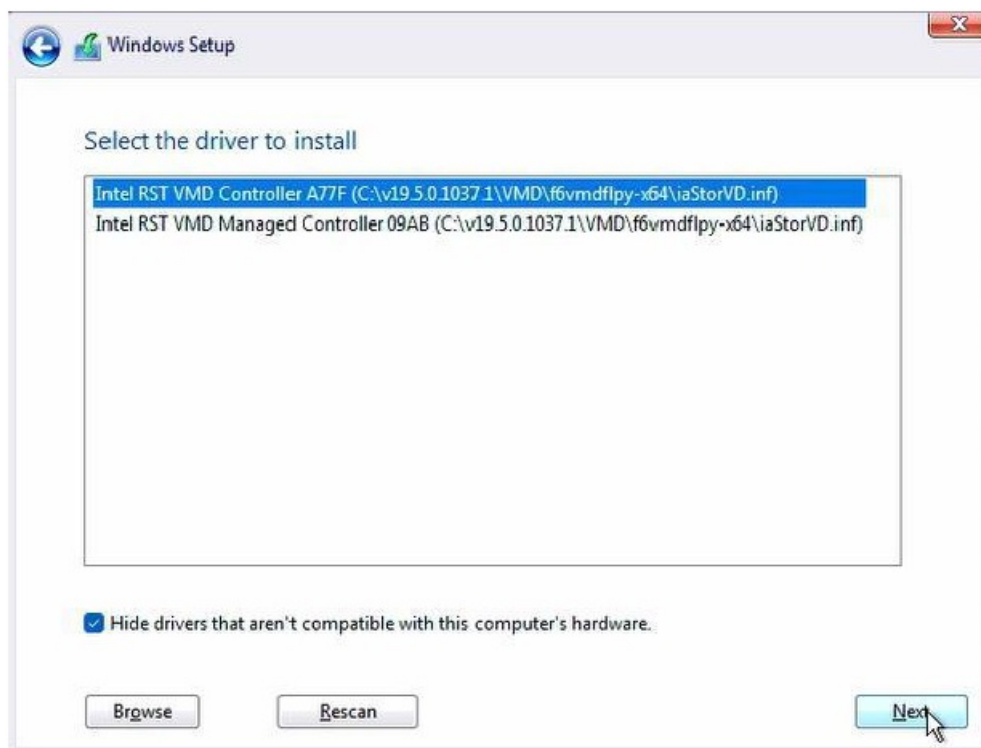

STEP 6

Select unallocated space and then click <Next>.

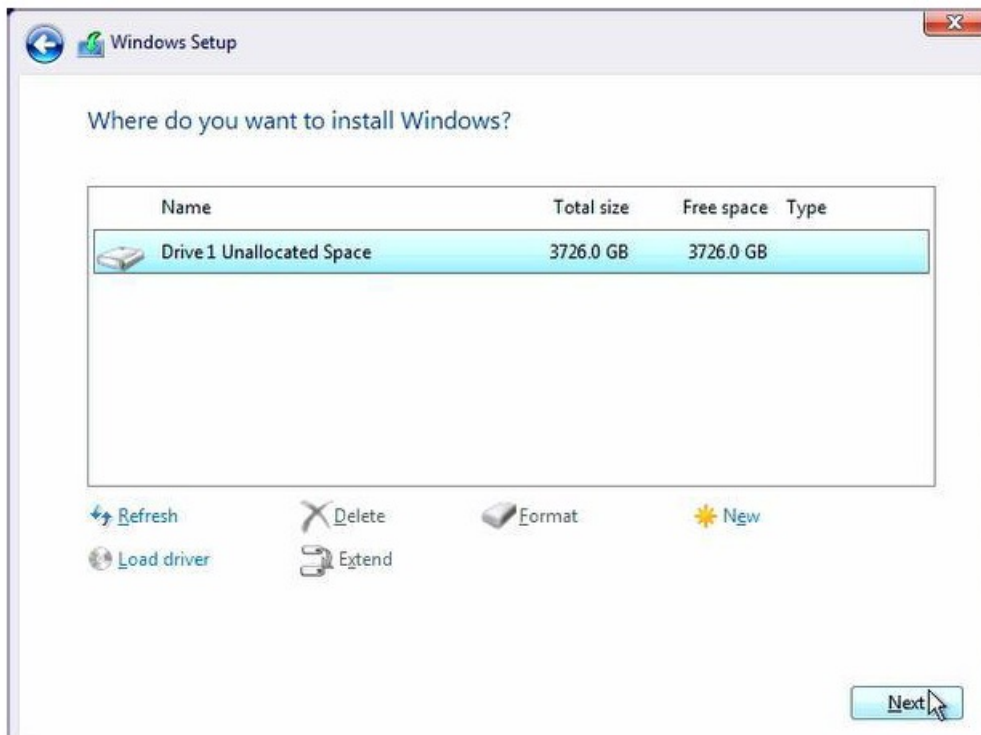


STEP 7

Please follow Windows' installation instructions to finish the process.



STEP 8

After the Windows installation is finished, please install the Rapid Storage Technology driver and utility from ASRock's website. <https://www.asrock.com/index.asp>

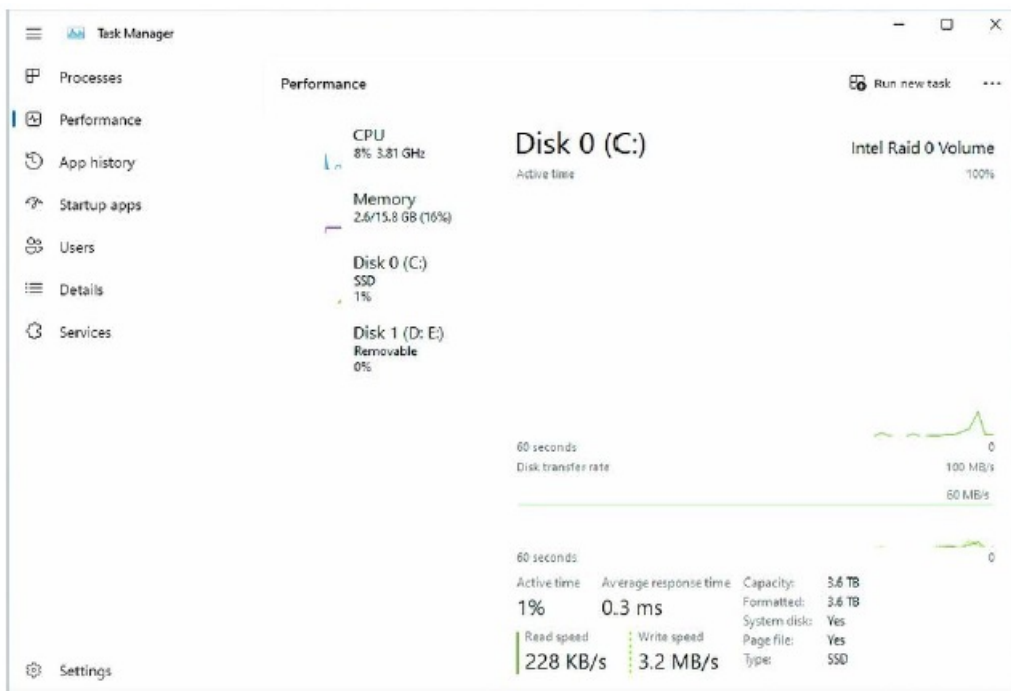

Documents / Resources

	ASRock Configuring a RAID Array Using UEFI Setup Utility [pdf] User Guide Configuring a RAID Array Using UEFI Setup Utility, Configuring a RAID Array, UEFI Setup Utility
	ASRock Configuring a RAID array Using UEFI Setup Utility [pdf] User Guide Configuring a RAID array Using UEFI Setup Utility, Configuring a RAID array, UEFI Setup Utility
	ASRock Configuring a RAID Array Using UEFI Setup Utility [pdf] Instructions Configuring a RAID Array Using UEFI Setup Utility, Configuring a RAID Array, Using UEFI Setup Utility, UEFI Setup Utility, RAID Array UEFI Setup Utility
	ASRock Configuring a RAID Array Using UEFI Setup Utility [pdf] Instructions Configuring a RAID Array Using UEFI Setup Utility, Configuring a RAID Array, RAID Array Configuring, UEFI Setup Utility RAID Array Configuring

 Configuring a RAID array Using UEFI Setup Utility 	ASRock Configuring a RAID Array Using UEFI Setup Utility [pdf] Instructions Configuring a RAID Array Using UEFI Setup Utility, Configuring a RAID Array, UEFI Setup Utility Array Configuring, Array Configuring, RAID Array Configuring, RAID Array Configuring with UEFI Setup
 Configuring a RAID array Using UEFI Setup Utility 	ASRock Configuring a RAID Array Using UEFI Setup Utility [pdf] User Guide Configuring a RAID Array Using UEFI Setup Utility, Using UEFI Setup Utility, UEFI Setup Utility, Setup Utility, Utility
 Configuring a RAID array Using UEFI Setup Utility 	ASRock Configuring A RAID Array Using UEFI Setup Utility [pdf] User Manual Configuring A RAID Array Using UEFI Setup Utility, A RAID Array Using UEFI Setup Utility, Using UEFI Setup Utility, Setup Utility, Utility
 Configuring a RAID array Using UEFI Setup Utility 	ASRock Configuring a RAID Array Using UEFI Setup Utility [pdf] User Guide Configuring a RAID Array Using UEFI Setup Utility, RAID Array Using UEFI Setup Utility, Using UEFI Setup Utility, UEFI Setup Utility
 Configuring a RAID array Using UEFI Setup Utility 	ASROCK Configuring a RAID array Using UEFI Setup Utility [pdf] User Guide Configuring a RAID array Using UEFI Setup Utility

References

-  [ASRock](#)