

# B METERS ISMA-B-MIX18-IP Bacnet and Modbus IO Module Installation Guide


[Home](#) » [B METERS](#) » B METERS ISMA-B-MIX18-IP Bacnet and Modbus IO Module Installation Guide 

## Contents

- [1 B METERS ISMA-B-MIX18-IP Bacnet and Modbus IO Module](#)
- [2 SPECIFICATION](#)
- [3 TOP PANEL](#)
- [4 TERMINALS OF THE DEVICE](#)
- [5 RS485 BIASING RESISTORS](#)
- [6 POWER SUPPLY CONSIDERATIONS](#)
- [7 FCC](#)
- [8 WIRING](#)
- [9 INSTALLATION](#)
- [10 FAQ](#)
- [11 Documents / Resources](#)
  - [11.1 References](#)
- [12 Related Posts](#)



**B METERS ISMA-B-MIX18-IP Bacnet and Modbus IO Module**

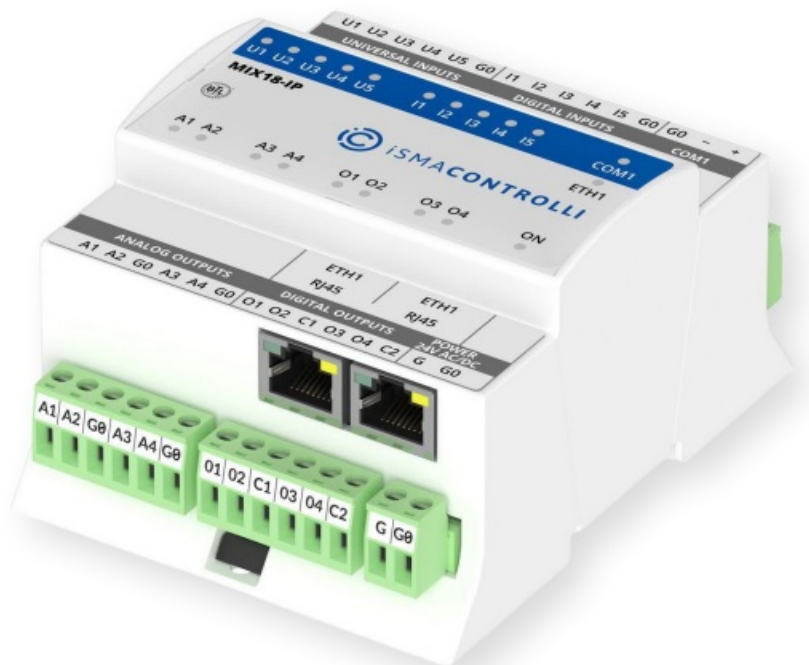


## Specifications

- **Power supply:** Universal inputs
- **Digital inputs:** 5x voltage, current, and resistance measurement, dry contact
- **Analog outputs:** 4x 0-10 V DC output
- **Digital outputs:** 4x relay output
- **Interface:** RS485 half-duplex, Modbus or BACnet, Ethernet, Modbus TCP/IP or BACnet IP
- **Baudrate:** Set by switch in range from 2400 to 115200 bps
- **Ingress protection rating:** IP40 – for indoor installation
- **Temperature:** 5 to 95% RH (without condensation)
- **Connectors Dimension:** 88x110x62 mm (3.46×4.33×2.44 in)
- **Mounting:** DIN rail mounting (DIN EN 50022 norm)
- **Housing material:** Plastic, self-extinguishing PC/ABS

## SPECIFICATION

Power supply	DC: 24 V $\pm$ 20%, 4.4 W; AC: 24 V $\pm$ 20%, 6.6 VA		
Universal inputs	5x voltage, current and resistance measurement, dry contact		
Digital inputs	5x dry contact input, high-speed pulse counter up to 100 Hz		
Analog outputs	4x 0-10 V DC output, maximum load up to 20 mA per channel, 60 mA maximum total load for analog outputs		
Digital outputs	4x relay output	Maximum ratings	UL compliant ratings
	Resistive load max.	3 A @ 230 V AC 3 A @ 30 V DC	3 A @ 24 V AC 3 A @ 30 V DC
	Inductive load max.	75 VA @ 230 V AC 30 W @ 30 V DC	8 VA @ 24 V AC 30 W @ 30 V DC
Interface	RS485 half-duplex, Modbus or BACnet, up to 128 devices on the bus, Ethernet, Modbus TCP/IP or BACnet IP		
Address	Set by switch in range from 0 to 99		
Baudrate	Set by switch in range from 2400 to 115200 bps		
Ingress protection rating	IP40 – for indoor installation		
Temperature	Operating: -10°C to +50°C (14°F to 122°F) Storage: -40°C to +85°C (-40°F to 185°F)		
Relative humidity	5 to 95% RH (without condensation)		
Connectors	Separable, max 2.5 mm <sup>2</sup> (18 – 12 AWG)		
Dimension	88x110x62 mm (3.46x4.33x2.44 in)		
Mounting	DIN rail mounting (DIN EN 50022 norm)		
Housing material	Plastic, self-extinguishing PC/ABS		

## TOP PANEL

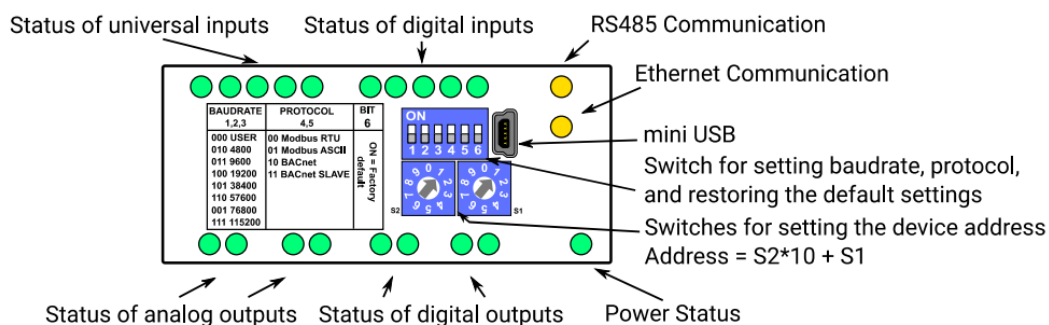

## UNIVERSAL INPUTS/DIGITAL INPUTS

<b>Voltage measurement</b> <p>Input impedance 100 kΩ</p> <p>Sensor 0-10 V DC</p> <p>Sensor power supply from PELV/SELV source</p>	<b>Current measurement</b> <p>200 Ω</p> <p>0-20 mA</p> <p>Sensor power supply from PELV/SELV source</p>	<b>Temperature measurement</b> <p>10k Thermistor</p>	<b>Dry contact</b> <p>Output current ~1 mA</p>	<b>Dry contact</b> <p>Output current ~1 mA</p>
--	--	---	---	---

## DIGITAL OUTPUTS/COMMUNICATION /POWER SUPPLY

<b>Connection of electrovalve</b> <p>Max 24 V DC 3A</p> <p>24 V DC</p> <p>Every CX terminal can be supplied by different PELV/SELV source</p>	<b>Connection of resistive load</b> <p>Max 24 V AC 3A</p> <p>24 V AC</p> <p>Every CX terminal can be supplied by different PELV/SELV source</p>	<b>Connection of inductive load</b> <p>Max 8 VA</p> <p>24 V AC</p> <p>Every CX terminal can be supplied by different PELV/SELV source</p>	<p>RS485 Modbus or BACnet</p> <p>GND +</p> <p>Shielded Twisted Cable</p>	<p>24 V AC/DC</p> <p>Power supply from PELV/SELV source</p>
--	--	--	--	---


## ANALOG OUTPUTS

<b>0-10V output</b> <p>Receiver 0-10V</p> <p>Receiver power supply from PELV/SELV source</p>	<b>Connection of relay</b> <p>Relay 12 V DC max. 20 mA</p>	<b>Connection of actuator</b> <p>Actuator</p> <p>24 V AC/DC</p> <p>Actuator power supply from PELV/SELV source</p>
---	---	---


## WARNING

- Note, an incorrect wiring of this product can damage it and lead to other hazards. Make sure the product has been correctly wired before turning the power ON.
- Before wiring, or removing/mounting the product, be sure to turn the power OFF. Failure to do so might cause electric shock.
- Do not touch electrically charged parts such as the power terminals. Doing so might cause electric shock.
- Do not disassemble the product. Doing so might cause electric shock or faulty operation.
- Use the product within the operating ranges recommended in the specification (temperature, humidity, voltage, shock, mounting direction, atmosphere etc.). Failure to do so might cause fire or faulty operation.
- Firmly tighten the wires to the terminal. Insufficient tightening of the wires to the terminal might cause fire.

## TERMINALS OF THE DEVICE

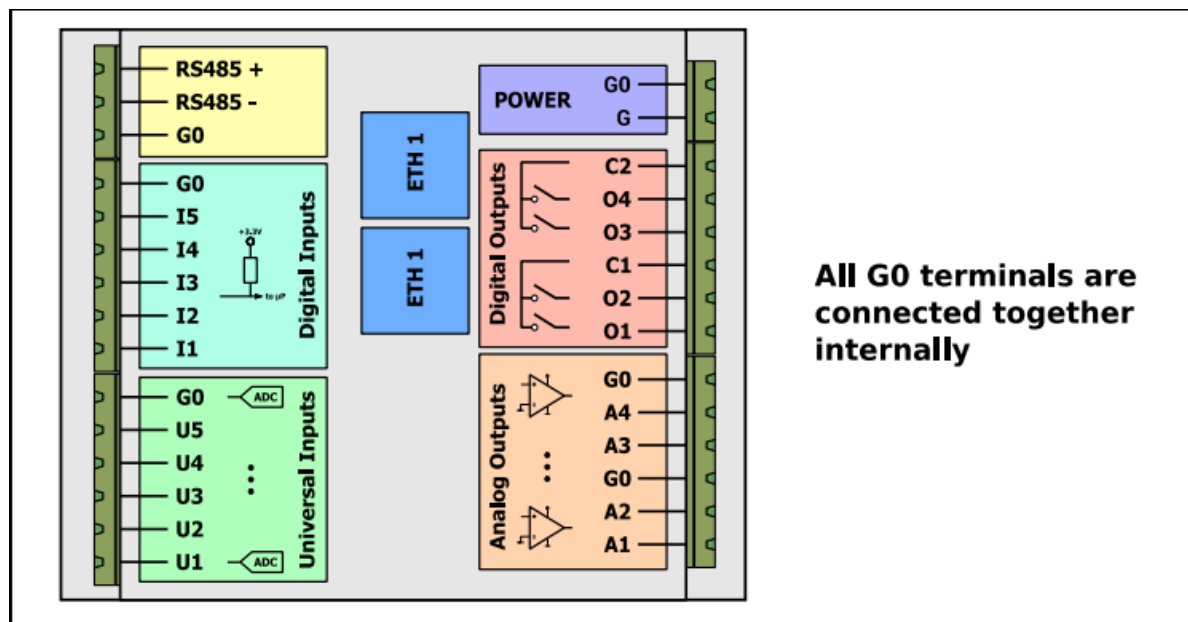

## RS485 BIASING RESISTORS

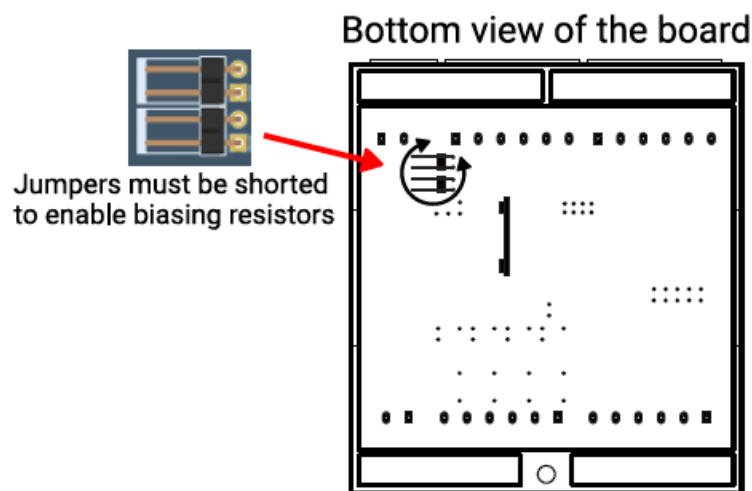

## POWER SUPPLY CONSIDERATIONS

- Electrical safety in the building automation and control systems is essentially based on the use of extra low voltage which is strictly separated from the mains voltage. This low voltage is either SELV or PELV according to EN 60730-1.
- Protection against electric shock is ensured by the following measures:
  - limitation of voltage (low voltage AC/DC 24V supply, either SELV or PELV)
  - Protective separation of the SELV system from all circuits other than SELV and PELV
  - simple separation of the SELV system from other SELV systems, from PELV systems and earth
- Field devices such as sensors, status contacts, and actuators connected to the low-voltage inputs and outputs of I/O modules must comply with the requirements for SELV or PELV. The interfaces of field devices and other systems must also satisfy SELV or PELV requirements.
- When the supply of SELV or PELV circuits is obtained from supply mains of higher voltages it shall be provided by a safety transformer or a converter designed for continuous operation to supply SELV or PELV circuits.

## FCC

## FCC COMPLIANCE NOTE

**Note:** This equipment has been tested and found to comply with the limits for a Class B digital device, under part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used by the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

## WIRING

- Line power cables must be routed with spatial separation from signal and data transmission cables.
- Analog and digital signal cables should also be separated.
- It is recommended to use shielded cables for analog signals, cable shields should not be interrupted by intermediate terminals.
- The shielding should be earthed directly after the cable enters the cabinet.
- It is recommended to install interference suppressors when switching inductive loads (e.g. coils of contactors, relays, solenoid valves). RC snubbers or varistors are suitable for AC voltage and freewheeling diodes for DC voltage loads. The suppressing elements must be connected as close to the coil as possible.

## INSTALLATION

Please read the instruction before use or operating the device. In case of any questions after reading this document, please contact the iSMA CONTROLI Support Team ([support@ismacontrolli.com](mailto:support@ismacontrolli.com)).

## WARNING

- Before wiring or removing/mounting the product, make sure to turn the power off. Failure to do so might cause an electric shock.
- Improper wiring of the product can damage it and lead to other hazards. Make sure that the product has been correctly wired before turning the power on.
- Do not touch electrically charged parts such as power terminals. Doing so might cause an electric shock.
- Do not disassemble the product. Doing so might cause an electric shock or faulty operation.
- Use the product only within the operating ranges recommended in the specification (temperature, humidity, voltage, shock, mounting direction, atmosphere, etc.). Failure to do so might cause a fire or faulty operation.
- Firmly tighten the wires to the terminal. Failure to do so might cause a fire.
- Avoid installing the product in close proximity to high-power electrical devices and cables, inductive loads, and switching devices. Proximity of such objects may cause an uncontrolled interference, resulting in an instable operation of the product.
- Proper arrangement of the power and signal cabling affects the operation of the entire control system. Avoid

laying the power and signal wiring in parallel cable trays. It can cause interferences in monitored and control signals.

- It is recommended to power controllers/modules with AC/DC power suppliers. They provide better and more stable insulation for devices compared to AC/AC transformer systems, which transmit disturbances and transient phenomena like surges and bursts to devices. They also isolate products from inductive phenomena from other transformers and loads.
- Power supply systems for the product should be protected by external devices limiting overvoltage and effects of lightning discharges.
- Avoid powering the product and its controlled/monitored devices, especially high power and inductive loads, from a single power source. Powering devices from a single power source causes a risk of introducing disturbances from the loads to the control devices.
- If an AC/AC transformer is used to supply control devices, it is strongly recommended to use a maximum 100 VA Class 2 transformer to avoid unwanted inductive effects, which are dangerous for devices.
- Long monitoring and control lines may cause loops in connection with the shared power supply, causing disturbances in the operation of devices, including external communication. It is recommended to use galvanic separators.
- To protect signal and communication lines against external electromagnetic interferences, use properly grounded shielded cables and ferrite beads.
- Switching the digital output relays of large (exceeding specification) inductive loads can cause interference pulses to the electronics installed inside the product. Therefore, it is recommended to use external relays/contactors, etc. to switch such loads. The use of controllers with triac outputs also limits similar overvoltage phenomena.
- Many cases of disturbances and overvoltage in control systems are generated by switched, inductive loads supplied by alternating mains voltage (AC 120/230 V). If they do not have appropriate built-in noise reduction circuits, it is recommended to use external circuits such as snubbers, varistors, or protection diodes to limit these effects.


**WARNING:** Electrical installation of this product must be done in accordance with national wiring codes and conform to local regulations.

B METERS UK | [www.bmetersuk.com](http://www.bmetersuk.com) | iSMA

## FAQ

- **Q: What should I do if I have questions after reading the manual?**
  - A: Contact the iSMA CONTROLLI Support Team at [support@ismacontrolli.com](mailto:support@ismacontrolli.com) for assistance.
- **Q: How should I handle wiring for the device?**
  - A: Ensure you use appropriate suppressing elements like snubbers or varistors for AC voltage and freewheeling diodes for DC voltage loads. Connect these elements close to the coil for effective operation.

## Documents / Resources

	<p><b><a href="#">B METERS ISMA-B-MIX18-IP Bacnet and Modbus IO Module</a></b> [pdf] Installation Guide ISMA-B-MIX18-IP, ISMA-B-MIX18-IP Bacnet and Modbus IO Module, Bacnet and Modbus IO Module, Modbus IO Module, IO Module, Module</p>
--	--

References

- [BMETERS UK | Next Day Delivery | Birmingham](#)
- [iSMA CONTROLLI S.p.A.](#)
- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.