



# B ONE Edge 2.0 Multi Protocol Gateway User Manual

[Home](#) » [B.One](#) » B ONE Edge 2.0 Multi Protocol Gateway User Manual 

## Contents

- [1 B ONE Edge 2.0 Multi-Protocol Gateway](#)
- [2 Product Information](#)
- [3 Product Usage Instructions](#)
- [4 FAQ](#)
- [5 Introduction](#)
- [6 Product Structure](#)
- [7 Technical Specifications](#)
- [8 Installation](#)
- [9 Device Care and Maintenance](#)
- [10 FCC Statement](#)
- [11 Warranty](#)
- [12 Documents / Resources](#)
  - [12.1 References](#)
- [13 Related Posts](#)



**B ONE Edge 2.0 Multi-Protocol Gateway**



## Product Information

### Specifications

- **Multi-protocol** Gateway with Z-Wave 700 series, Zigbee HA 3.0 profile, BLE 4.20, BT, Wi-Fi 2.4 GHz, LTE Cat M1 & Cat NB2 (NB-IoT), and Ethernet
- **State-of-the-art** parallel processing architecture
- **Compatible** with a wide range of popular Zigbee and Z-Wave devices
- **Frequency:** 50/60 Hz
- **Ethernet:** 10/100M Port LTE Cat M1 / NB2

## Product Usage Instructions

### Installation

- You will need a smartphone (Android/iOS) with the B. One Next App installed and your account is activated on it. A Wi-Fi router operating on 2.4 GHz frequency band is required.

### Addition of the Gateway

- Launch the B. One Next App. From the Home screen, navigate to Devices > Tap on (+) button > B. One Edge 2.0 and follow the instructions.

### Onboarding Procedure

- **Wi-Fi Onboarding:** After powering ON the Gateway, follow on-screen instructions to scan the QR code and provide Wi-Fi credentials for successful onboarding.
- **Ethernet Onboarding:** Connect an Ethernet cable to the Gateway, follow on-screen instructions to scan the QR code, and establish a connection for successful onboarding.

## Factory Reset

- To reset or remove the Gateway from the app, navigate to the Devices tab > select the Hub > Settings > Reset Hub. Enter the OTP sent to your registered email for confirmation.

## Reboot the Device

- To reboot the Hub, press and hold the reset button using the pin provided in the box for 3 seconds. To shut down, hold for 8 seconds.

## Device Care and Maintenance

- **Correct Disposal:** Proper disposal of the Edge 2.0 hub is vital for safety and environmental considerations. Do not dispose of the device into fire or with regular waste.

## FAQ

### Q: How do I reset the Gateway?

**A:** To reset the Gateway, navigate to the Devices tab > select the Hub > Settings > Reset Hub in the app.


### Q: What do I do if the Wi-Fi LED is not blinking red during onboarding?

**A:** Check your Wi-Fi network settings and ensure the Gateway is powered on correctly before proceeding with onboarding.

## Introduction

- Edge 2.0 is a multi-protocol Gateway with Z-Wave 700 series, Zigbee HA 3.0 profile, BLE 4. , BT, Wi-Fi 2.4 GHz, LTE Cat M1 & Cat NB2 (NB-IoT), and Ethernet.
- It incorporates the state-of-the-art parallel processing architecture with Hard Real-Time Performance to make it the fastest, most secure, and first-of-its-kind Edge Computing lot Gateway in the market.
- It is compatible with a wide range of popular Zigbee and Z-Wave devices.

## Product Structure

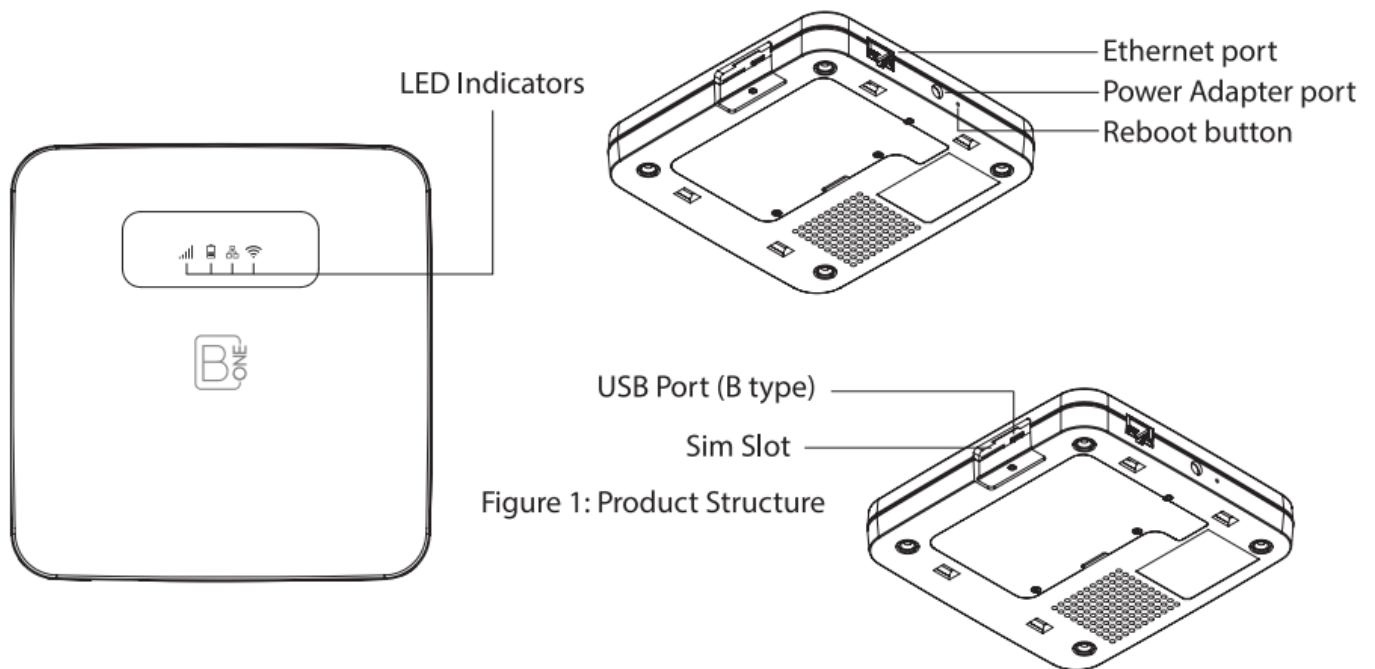

## Technical Specifications

Processor & Memory	
Processor	Make & Model Number: Allwinner A64
	Configuration: Quad Core Arm Cortex A-53 Operating Frequency: 1.2 GHz
Memory	RAM: 1 GB
	eMMC: 8 GB
Default OS: Ubuntu 18.04 LTS	
Other Key Features	
RTC, Watchdog, Debug and SIM slot	RTC: On-board RTC with CMOS battery.
	Hardware Watchdog: Incorporating an external microcontroller-based hardware watchdog to initiate processor restart in the event of system hang-ups.
	<b>Debug Port:</b> USB to UART Converter for debug purposes inside the side compartment
	<b>SIM Card slot:</b> Provision to insert a Micro SIM card is present inside the side compartment

<b>Environmental</b>	
Operating Temperature –	0°C to +55°C °C (For indoor use in dry locations only)
<b>Mechanical</b>	
Dimensions (W x H x D)	140 x 145 x 32 mm
<b>Power Supply &amp; Battery</b>	
Adapter	Input: 100 – 240 VAC 50/60 Hz
	Output: 5.0 VDC, 3.0 A

Battery Backup		Li-Polymer battery: 3.7 V, 3200 mAh (For backup up to 4 hours)
<b>Communication</b>		
Supported Protocols	Z-Wave: 700 Series	
	Wi-Fi: 2.4 GHz (b/g/n)	
	Zigbee: HA 3.0 profile	
	BLE 4.2	
	Ethernet: 10/100M Port	
	LTE Cat M1 / NB2	

## Installation

### Requirements

- You will need a smartphone (Android/iOS) with the B. One Next App installed and your account is activated on it.
- A Wi-Fi router operating on 2.4 GHz frequency band is required.





Get B.One Next App at



For a detailed user manual scan the QR code below.



#### LED Indicators

 LTE	Connected / No Internet	No Indication
	Connected / Online	Solid Green
 Battery	When powered	Solid Green
	>95%	Solid Green
	<95% / >50%	Blinking Green
	<50%	Blinking Red
 Ethernet	Connected / No Internet	No Indication
	Connected / Online	Solid Green
	Not Connected	No Indication
 Wi-Fi	Connected / No Internet	Blinking Green
	Connected / Online	Solid Green
	Not Connected	Blinking Red

## **Addition of the Gateway**

- Launch the B. One Next App. From the Home screen, navigate to Devices > Tap on (+) button > B. One Edge 2.0 and follow the instructions.

### **Onboarding Procedure Wi-Fi Onboarding:**

- After powering ON the Gateway, the Wi-Fi LED will blink Red.
- Follow the on-screen instructions to scan the QR code located at the backside of the Gateway.
- Please provide the requested Wi-Fi credentials. Wait for the app to establish a connection between the Gateway and your Wi-Fi network for successful onboarding of the Gateway.

### **Ethernet Onboarding:**

- Connect an Ethernet cable to the Gateway from the router.
- After powering ON the Gateway, the Ethernet LED will be Solid Green.
- Follow the on-screen instructions to scan the QR code located at the backside of the Gateway.
- Please wait for the app to establish a connection between the Gateway and your network to ensure successful\_onboarding of the Gateway

## **Factory Reset**

To Reset the Gateway or to remove it from the B.

### **One Next App, follow these steps:**

- On the B. One Next App, navigate to Devices tab> select the Hub > Settings > Reset Hub.
- Click on “Reset Hub” and enter the One-Time Password (OTP) that has been sent to your registered email.
- The app will display a confirmation message the reset process is completed.

## **Reboot the Device**

- To reboot the Hub, press and hold the reset button using the pin provided in the box for 3 seconds. This action will reboot the Hub.
- To shut down the Hub, press and hold the reset button using the pin provided in the box for 8 seconds. This action will initiate the shutdown process for the Hub.

## **Device Care and Maintenance**

### **Correct Disposal:**

Proper disposal of the Edge 2.0 hub is vital for safety and environmental considerations. Please adhere to the following guidelines when disposing of the device.

1. Do not dispose of the device into Fire: The Edge 2.0 Hub contains combustible components. It is imperative to

never dispose of the device by burning it or exposing it to fire. Doing so can lead to hazardous situations and environmental pollution.

2. Do not dispose of the device with regular waste.

- The Edge 2.0 Hub should not be discarded with regular household or municipal waste.
- Improper disposal may result in the device ending up in landfills or being incinerated, which can have negative effects on the environment and human health.

### **Proper Disposal Options:**

To ensure the environmentally responsible disposal of the Edge 2.0 hub, consider the following options:

1. **Electronic waste recycling:** Look for local electronic waste recycling facilities programs in your area. These facilities specialize in the proper handling and recycling of electronic devices.
  - Contact your local recycling center or municipality for information on drop-off points or collection events for electronic waste.
2. **Manufacturer or retailer programs:** Check if the manufacturer or retailer of the Edge 2.0 hub has a take-back program or recycling initiative in place.
  - Many companies offer recycling services for their products to promote responsible disposal. Visit their official website or contact their customer support for more information on how to return the device for proper recycling.
  - By following these guidelines and responsibly disposing of the Edge 2.0 hub, you contribute to minimizing environmental impact and promoting sustainable practices.

### **FCC Statement**

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference,
2. this device must accept any interference received, including interference that may cause undesired operation.

**Caution:** Any changes or modifications to this device not explicitly approved by the manufacturer could void your authority to operate this equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, according to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used under the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

### **RF Exposure Information**



This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20cm between the radiator and your body.

## **Warranty**

Blaze Automation warrants its products against defects in materials and/or workmanship under normal use for a period of ONE (1) YEAR from the date of purchase by the original purchaser ("Warranty Period"). If a defect arises and a valid claim is received within the Warranty Period, then as your sole remedy (and Blaze Automation's sole liability), Blaze Automation will at its option either 1) repair the defect at no charge, using new or refurbished replacement parts, or 2) replace the product with a new unit that is functionally equivalent to the original, in each case within a mutually agreed lead time between both the purchaser and Blaze, following receipt of the returned product. A replacement product or part assumes the remaining warranty of the original product. When a product or part is exchanged, any replacement item becomes your property and the replaced product or part becomes the property of Blaze Automation.

### **Obtaining Service:**

To obtain warranty service, speak with your point of contact at Blaze or with the authorized distributor from your country of purchase. Please be prepared to describe the product that needs service and the nature of the problem. A purchase receipt is required. The product must be insured, and shipped freight prepaid and securely packaged. You must contact Blaze for a Return Material Authorization Number (RMA Number") before shipping any product, and include the RMA Number, a copy of your purchase receipt, and a description of the problem you are experiencing with the product. Any claim under this Limited Warranty must be submitted to Blaze Automation before the end of the warranty period.

### **Exclusions:**

This warranty does not apply to a) damage caused by failure to follow the instructions(as explained in the user manual) relating to the product's use or the installation of components b) damage caused by accident, abuse, misuse, transport, neglect, fire, floods, earthquakes or other external causes; c) damage caused by service performed by anyone who is not an authorized representative of Blaze Automation; d) accessories used in conjunction with a covered product; e) the Product or part that has been modified to alter functionality or capability; f) items intended to be periodically replaced by the purchaser during the normal life of the Product including, without limitation, batteries, bulbs or cables; g) the Product that is used commercially or for a commercial purpose, in each case as determined by Blaze Automation.

BLAZE AUTOMATION SHALL NOT BE LIABLE FOR (1) ANY LOST PROFITS, COST OF PROCUREMENT OF SUBSTITUTE PRODUCTS, OR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES, OR (II) ANY AMOUNTS OVER THE PURCHASE PRICE FOR THE PRODUCT, IN EACH CASE WHETHER RESULTING FROM FROM THE USE OF OR INABILITY TO USE OF PRODUCT, OR ARISING OUT OF ANYBREACH OF THIS WARRANTY, EVEN IF COMPANY HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. TO THE EXTENT PERMITTED BY APPLICABLE LAW, BLAZE AUTOMATION DISCLAIMS ANY AND ALL STATUTORY OR IMPLIED WARRANTIES, INCLUDING WITHOUT LIMITATION, WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND WARRANTIES AGAINST HIDDEN OR LATENT DEFECTS. IF BLAZE AUTO- MATION CANNOT LAWFULLY DISCLAIM STATUTORY OR IMPLIED WARRANTIES, THEN TO THE EXTENT PERMITTED BY LAW, ALL SUCH WARRANTIES SHALL BE LIMITED IN DURATION TO THE WARRANTY PERIOD.

- To exercise your rights under this warranty, please follow the instructions above under the heading "Obtaining Service" or contact Blaze.
- Automation at Blaze Automation Services Private Limited, Q2, 10th floor, Cyber Towers, Hitech-city, Hyderabad, Telangana 500081, India.


## Reach us at:

- Visit us [www.blazeautomation.com/products/au](http://www.blazeautomation.com/products/au)
- Email us [support@powertechenergy.com.au](mailto:support@powertechenergy.com.au)

## THIS PAGE SHOULD NOT BE PRINTED

- **Paper Specification:** 80-90 GSM Coated Paper
- **Type of printing:** Double-sided
- **Type:** Booklet
- **Height:** 100 mm
- **Width (Folded size):** 100 mm
- **Full Length (Unfolded size):** 200 mm

## Documents / Resources

	<a href="#">B ONE Edge 2.0 Multi Protocol Gateway</a> [pdf] User Manual BGATEWAYV5M2, O9U-BGATEWAYV5M2, O9UBGATEWAYV5M2, Edge 2.0 Multi Protocol Gateway, Edge 2.0, Multi Protocol Gateway, Gateway
-----------------------------------------------------------------------------------	--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

## References

- [User Manual](#)

### Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.