



BABYBJÖRN Bouncer Balance Soft Owner's Manual

[Home](#) » [BABYBJÖRN](#) » BABYBJÖRN Bouncer Balance Soft Owner's Manual

BABYBJÖRN®

**OWNER'S MANUAL
BABYBJÖRN BOUNCER BALANCE SOFT
BABYBJÖRN BOUNCER BLISS**



Contents [[hide](#)]

- 1 Bouncer Balance Soft
- 2 BABYBJÖRN BOUNCER
- 3 POSITIONS
- 4 TRANSPORTATION MODE
- 5 TECHNICAL INFORMATION
- 6 SAFETY INSTRUCTIONS
- 7 Documents / Resources
 - 7.1 References
- 8 Related Posts

Bouncer Balance Soft

IMPORTANT! READ CAREFULLY AND KEEP FOR FUTURE REFERENCE.

BABYBJÖRN BOUNCER

Congratulations on choosing a BABYBJÖRN Bouncer! It was developed in close collaboration with pediatricians and has a unique ergonomic shape that gives your child's head and back the correct support.

This BABYBJÖRN Bouncer may be used both as a bouncer and as a comfy chair. It can be used as a bouncer from newborn (at least 8 lbs/3.5 kg) until your baby starts trying to sit up or has reached 20 lbs/9 kg, whichever comes first. When your child can walk and sit on his or her own, you can turn the fabric around to create a comfy chair (up to 29 lbs/13 kg or approx. 2 years).

The bouncer has many features, and you will learn how to use it best by reading the following pages.


POSITIONS

It is easy to start using the bouncer. Place it in front of you and fold up the seat until you hear a click.

Important! Only an adult shall unfold.

This BABYBJÖRN Bouncer has four positions. The lowest position, C, is recommended for newborns sitting in the bouncer. Positions A and B can be used when the child can hold his or her back and head upright in these positions without a problem. It is not dangerous to exceed the recommended maximum weight for a position, but the rocking function will not work as well.


PLEASE NOTE THE MAXIMUM WEIGHT FOR EACH POSITION

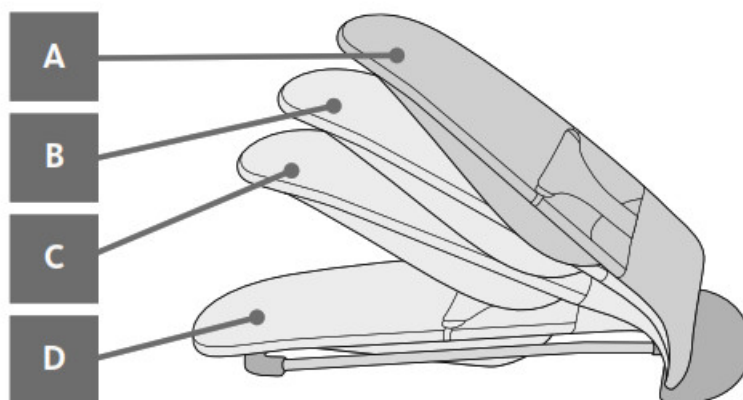

When the product is used as a bouncer, the maximum weight is 20 lbs/9 kg according to European Standard EN12790:2009. We therefore recommend the following maximum weights per position:

A. Highest position up to 20 lbs/9 kg.

- B. Medium position up to 20 lbs/9 kg.
- C. Lowest position up to 15.5 lbs/7 kg.
- D. Transportation mode – when the product is not being used.

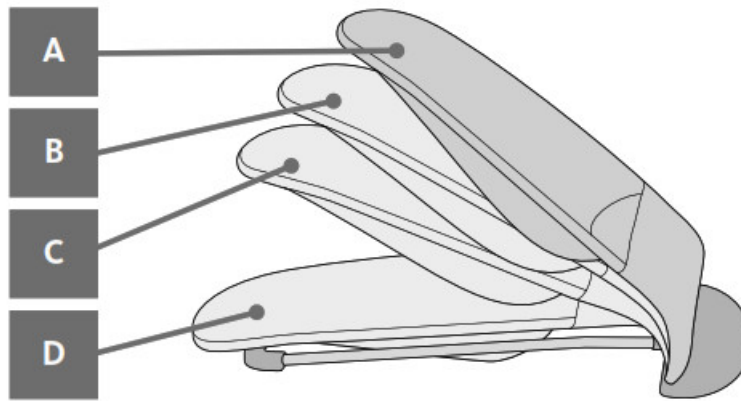

When the product is being used as a chair, we recommend the following maximum weights per position:


- A. Highest position up to 29 lbs/13 kg.
- B. Medium position up to 22 lbs/10 kg.
- C. Lowest position up to 15.5 lbs/7 kg.
- D. Transportation mode – when the product is not being used.

This reclined cradle does not replace a cradle/ crib or a bed. Should your child need to sleep, then he or she should be placed in a suitable cot or bed.

TO CHANGE POSITION


Lift the positioner and move it into the desired position, at the same time as you lift the backrest with your other hand.

Make sure that the positioner is securely locked into place before putting your child in the bouncer. If you adjust the bouncer's position when your child is sitting in it, make sure that the positioner is locked into place before letting go of the backrest.

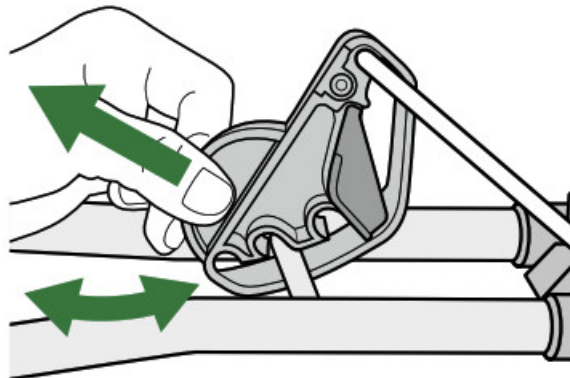

TRANSPORTATION MODE

To fold the bouncer for travel or storage the positioner must be set to position A or B. Pull back the red safety latch and set the positioner to the transport mode, D.

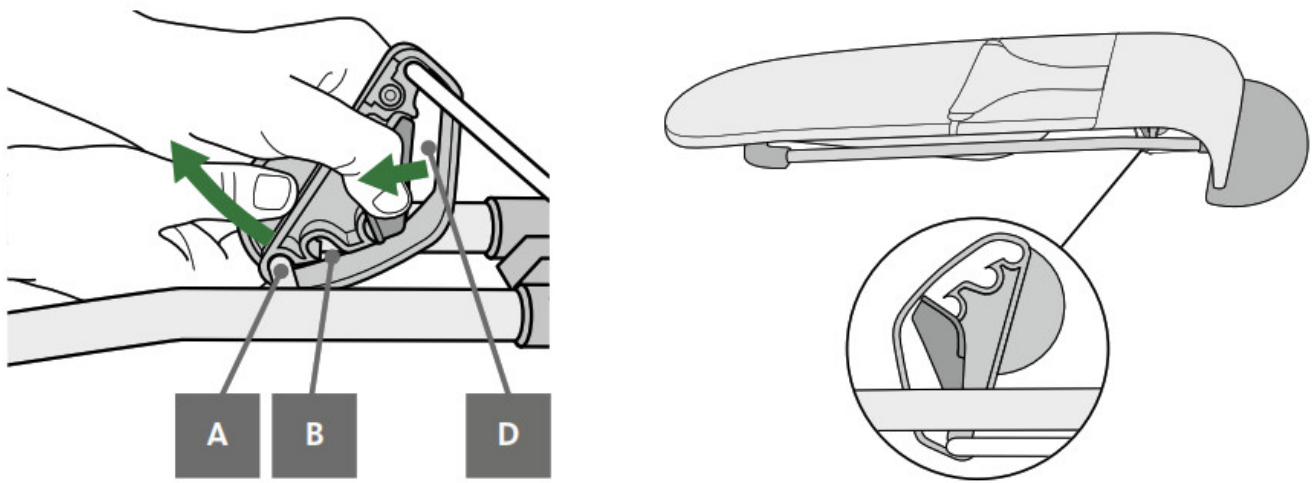

BOUNCER OR CHAIR

Bouncer (max 20 lbs/9 kg)

Always use the restraint system. Make sure that both buttons are locked. You can adjust between two positions. Stop using bouncer when baby starts trying to sit up or has reached 20 lbs/ 9kg, whichever comes first.




Chair (max 29 lbs/13 kg)


Use as chair when your child can walk and sit on his or her own. In order to convert the product into a chair, all you have to do is turn the fabric around.



REVERSIBLE FABRIC

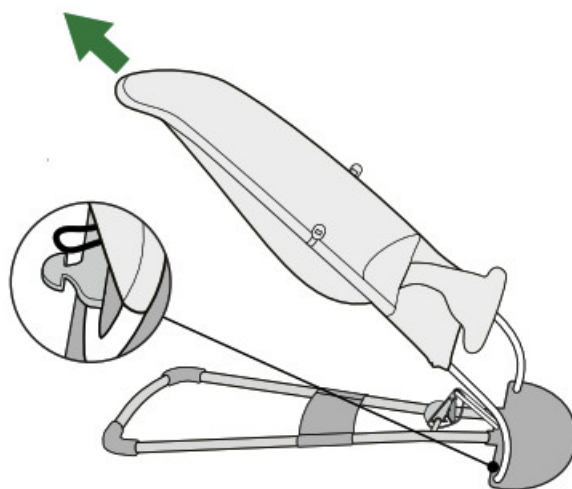

When you want to use the product as a chair, just turn the fabric seat around. Loosen the restraint system's buttons. After that, loosen the two elastic loops at the bottom and pull the fabric seat off from the frame.

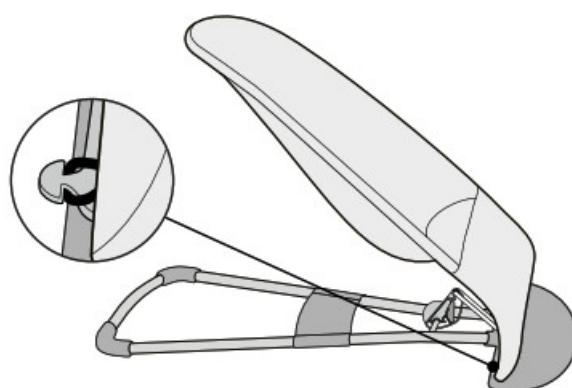

Turn the fabric seat over and slide it onto the frame again. The flat side should now be facing up. Fasten the fabric seat again with the two elastic loops at the bottom.

The restraint system will now wind up on the bottom side. Push it in as far as it can go.

Wipe the rubber strips underneath the bouncer with a damp cloth from time to time, in order to guarantee that it is fixed as firmly as possible to the floor.

TO WASH THE FABRIC

To wash the fabric seat, loosen the two elastic loops at the bottom and pull it off the frame.

Wash separately, warm/40°C. Do not tumble-dry.



Do not use accessories or replacement parts other than those approved by the manufacturer.

TECHNICAL INFORMATION

Weight: 4.6 lbs/2.1 kg

Height/length/width:

Highest position: 22 x 31 x 15.5 in/56 x 79 x 39 cm

Transport mode: 4.5 x 35 x 15.5 in/11 x 89 x 39 cm

Fabric collections

Cotton: 100% cotton

Cotton/Jersey: Cotton fabric: 100% cotton.

Jersey fabric: 71% cotton, 24% viscose, 5% polyamide.
Cotton/3D Jersey: Cotton fabric: 100% cotton.
3D Jersey fabric: 80% polyester, 16% cotton, 4% elastan.
Mesh: 100% polyester
All padding is 100% polyester. UK version has no padding.

SAFETY INSTRUCTIONS

- Do not use the product if any components are broken or missing.
- Powerful sway: Make sure that older child are not allowed to rock the baby too forcefully.
- NEVER leave baby unattended.



WARNING! Bouncer (max 20 lbs/9 kg):

- Keep the toy out of the reach of children when it is not firmly attached to the product.
- Child's activity may move the bouncer.
- Never use the toy bar to carry the reclined cradle.

WARNING

FALL HAZARD: Babies have suffered skull fractures falling while in and from bouncers.

- Use bouncer **ONLY** on floor.
- **ALWAYS** use restraints and adjust to fit snugly.
- **NEVER** lift or carry baby in bouncer.

SUFFOCATION HAZARD: Babies have suffocated when bouncers tipped over on soft surfaces and/or when bouncers are used on soft surfaces.

- **NEVER** use on a bed, sofa, cushion or other soft surface.
- Stay near and watch baby during use. This product is not safe for sleep or unsupervised use. If baby falls asleep, use baby on a firm, flat sleep surface such as a crib or bassinet.

To prevent **falls** and **suffocation**:

- **ALWAYS** use restraints and adjust to fit snugly.
- **STOP** using bouncer when baby starts trying to sit up or has reached 9kg/20lbs, whichever comes first.

Chair (max 29 lbs/13 kg):

- Use as chair when your child can walk and sit on her own.
- Do not use restraint system.

WARNING

AMPUTATION HAZARD: Chair can fold or collapse if lock is not fully engaged.
Moving Parts can amputate child's fingers.

- Keep fingers away from moving parts.

- Completely unfold chair and fully engage locks before allowing child to sit in chair.
- Never allow child to fold or unfold chair.

CONTACT US

To find the answers to most questions and contact our customer service, please visit www.babybjorn.com




Art. 005, 006. The mark BABYBJÖRN is protected by trademark registrations in several countries, i.a. US TM Reg.

Nos. 4511202 & 4518181, CA TM Reg. Nos. TMA328091 & TMA839628. The Parallel Line Design is a sign of a genuine BABYBJÖRN product. The Parallel Line Design is protected by trademark registrations in several countries, i.a. US TM Reg. No. 4,843,682. This product is protected by patent and design registrations in several countries. For more information, see www.babybjorn.com/patents. BabyBjörn AB. Bouncer © BabyBjörn AB, 2016. For more information, please contact info@babybjorn.com © BabyBjörn AB, 2020. BabyBjörn AB, Kulltorpsvägen 49, 333 74 Bredaryd, Sweden, www.babybjorn.com.

BabyBjorn Inc., 54 W 21st St., Suite 901,
New York, NY 10010, (866) 424-0200, care@babybjorn.com

Documents / Resources

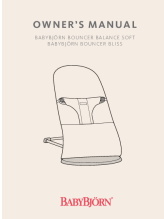	<p>BABYBJÖRN Bouncer Balance Soft [pdf] Owner's Manual Bouncer Balance Soft, Bouncer Soft, Balance Soft, Soft, Bouncer Bliss</p>
---	--

References

-  [BABYBJÖRN](#)
-  [Patents](#) | [BABYBJÖRN](#) | [BABYBJÖRN](#)