



BDE-RFM207-IN Multiprotocol 2.4G Wireless Module User Guide

[Home](#) » [BDE](#) » BDE-RFM207-IN Multiprotocol 2.4G Wireless Module User Guide 



RFM207-IN Multiprotocol 2.4G Wireless Module User Guide

Contents

- [1 Introduction](#)
- [2 Get Ready](#)
- [3 Build Your First Application](#)
- [4 Multiprotocol 2.4G Wireless Module](#)
- [5 Software Development Kit \(SDK\) installation](#)
- [6 Run an example/demo code](#)
- [7 Revision History](#)
- [8 Documents / Resources](#)
- [9 Related Posts](#)

Introduction

This user guide is for BDE-RFM207-IN, a Wireless Module based on TI CC2652R.

It is a quick start guide for how to connect the module with the evaluation board BDE-EVB07 or with the TI launchpad, and how to build the first application. It also shows a demo for how BDERFM207-IN receives a data packet that is sent from a mobile phone APP – nRF Connect.

Get Ready

The following tools are recommended to develop with BDE-RFM207-IN.
Hardware tools:

- BDE-RFM207-IN (BDE-RFM207-IN-BDE Technology Inc. (bdecomm.com))
- BDE-ADP05 V1.0 (adaptor board)

- PC or Laptop
- BDE-EVB07 (BDE-EVB07-BDE Technology Inc. (bdecomm.com)) or
- TI Launchpad (LAUNCHXL-CC26X2R1 Evaluation board | TI.com)
- USB cable for power supply and debugging

Software tools:

- Terminal software such as CCS, IAR.
- [CCS download](#)
- [Software Development Kit \(SDK\)](#)
- [nRF Connect](#)

Build Your First Application


Once have the Hardware and Software tools are in place, please follow the following steps:

A. Connect the Hardware

If chose EVB07:


Use a USB cable to connect EVB07 and PC or laptop. Plug BDE-RFM207-IN with the adaptor board into the dev board and connect all the pins with Jumpers as the following picture shows.

Multiprotocol 2.4G Wireless Module

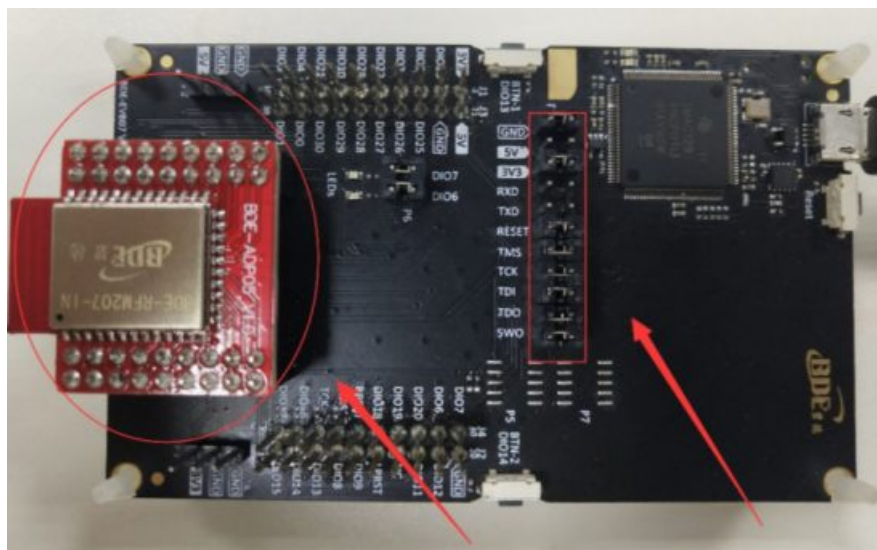

If chose TI Launchpad:

The connection is as follows.

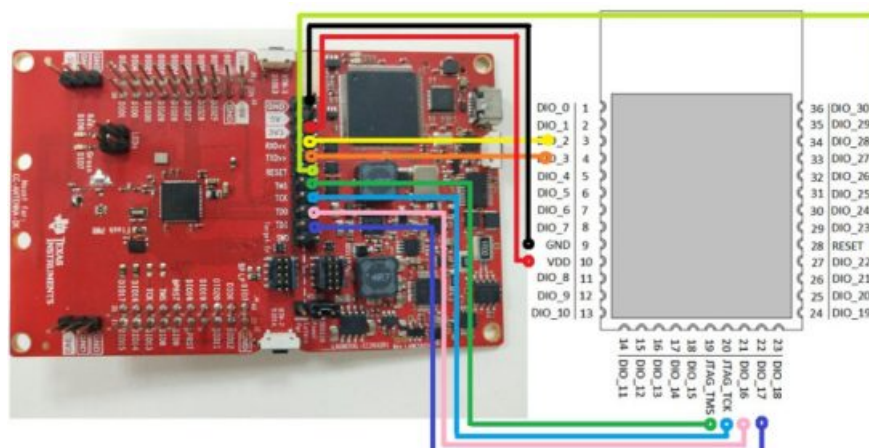

Connection Designator	BDE-RFM207	LaunchPad Pin
3V3 Power	VDD	3V3
Ground	GND	GND
RST	RST	RESET
TMS	TMS	TMS
TCK	TCK	TCK
TDO	DIO16	TDO
TDI	DIO17	TDI
RXD	DIO2	RXD
TXD	DIO3	TXD

Optional: TDO, TDI, RXD, TXD


B. Build the Application

Download and install the CCS and SDK

From the above links, follow the instructions in the following steps to download and install the CCS and SDK.

CCS Installation

1. Click on this option

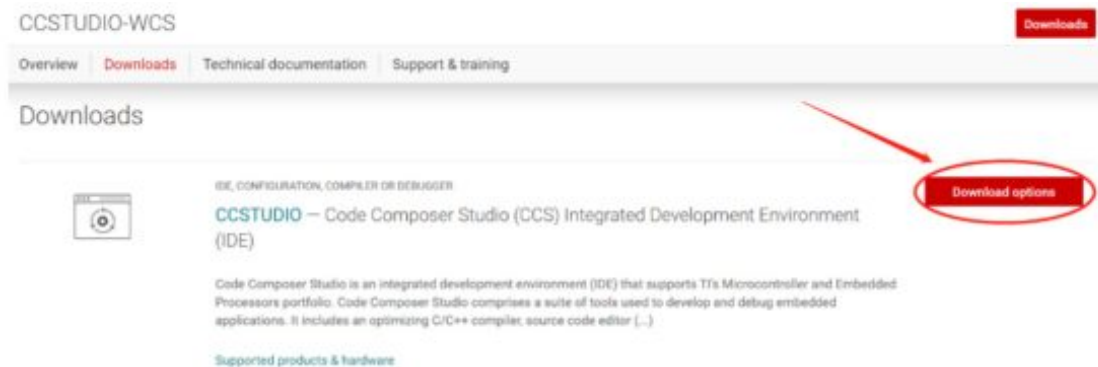

2. Select an option to download CCS

Download options



Code Composer Studio (CCS) Integrated Development Environment (IDE)

Version: 10.3.0.00007

Release date: 05 Apr 2021

SINGLE FILE INSTALLERS

↓ [Windows single file installer for CCS IDE \(1181753652 KB\)](#)

↓ [Linux single file installer for CCS IDE \(1102001729 KB\)](#)

↓ [macOS single file installer for CCS IDE \(1083552986 KB\)](#)

ON-DEMAND INSTALLERS

↓ [Windows on-demand installer for CCS IDE \(40136960 KB\)](#)

↓ [Linux on-demand installer for CCS IDE \(25338386 KB\)](#)

↓ [macOS on-demand installer for CCS IDE \(24595266 KB\)](#)

3. Unzip the package to a local disc


4. Click the setup of CCS

CCS10.3.0.00007_win64.zip	2021/4/19 11:11	WinRAR ZIP
CCS10.3.0.00007_win64	2021/4/20 11:36	文件夹


4. Click the setup of CCS

binary	2021/3/29 21:38
CCS10.3.0.00007_win64	2021/4/19 11:23
components	2021/3/29 21:38
features	2021/3/29 21:38
artifacts.jar	2021/3/29 21:38
ccs_setup_10.3.0.00007.exe	2021/3/29 21:37
content.jar	2021/3/29 21:38
README_FIRST_win64.txt	2021/3/29 21:38
timestamp.txt	2021/3/29 21:38


5. Click "Next"

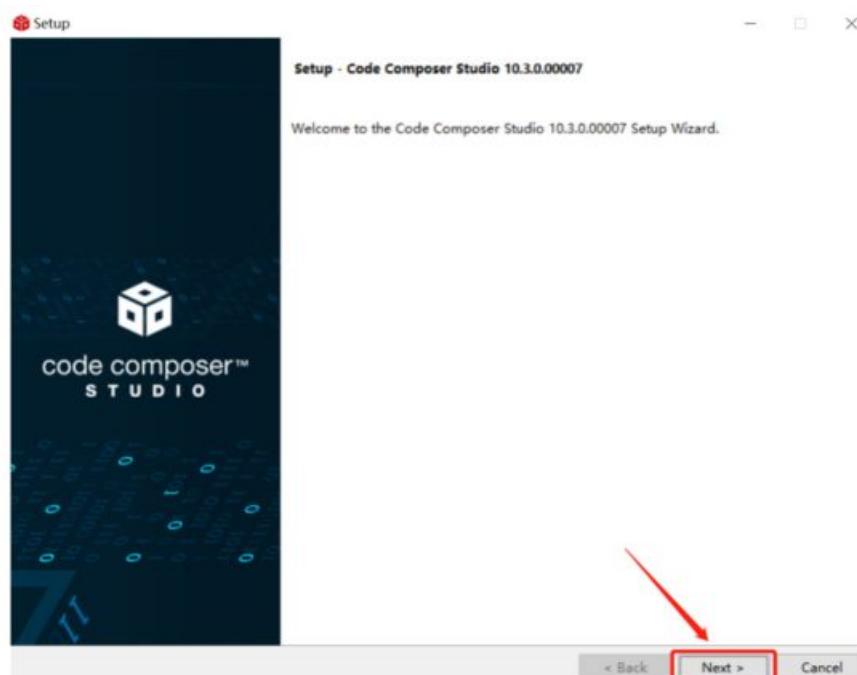


6. Select the default option

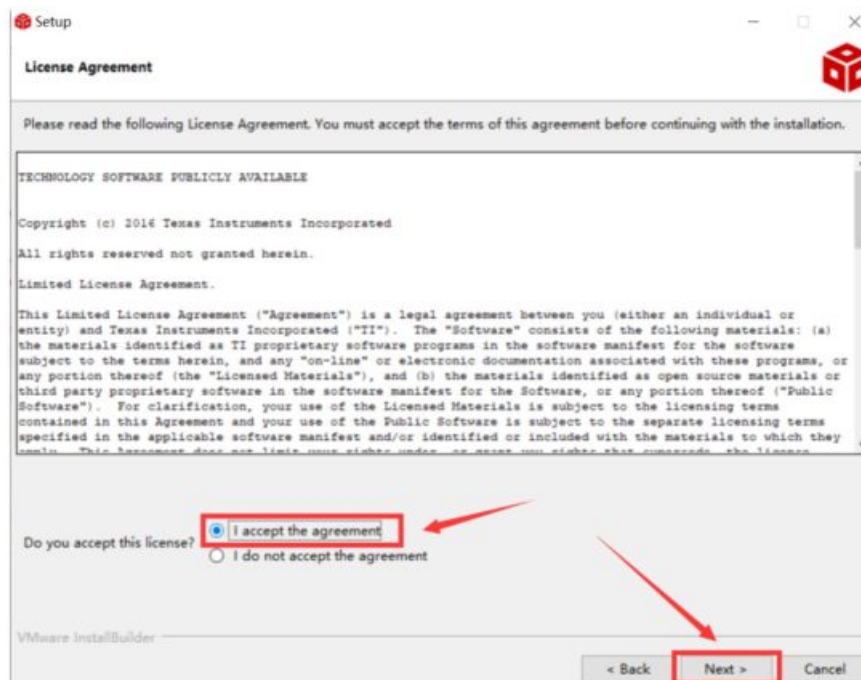


7. Click "Next"

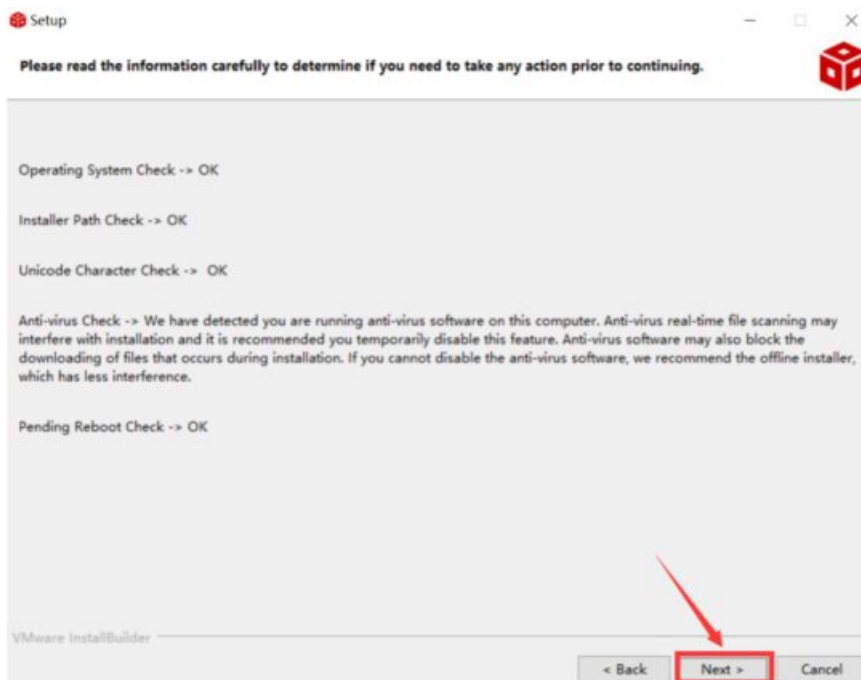


8. Select the Installation Directory.

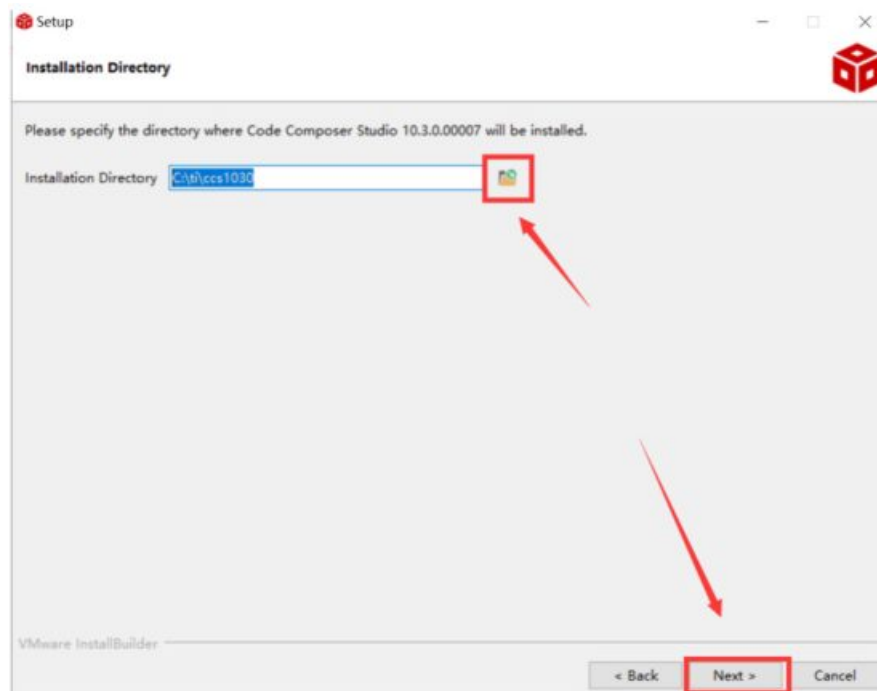


9. Select the default option.

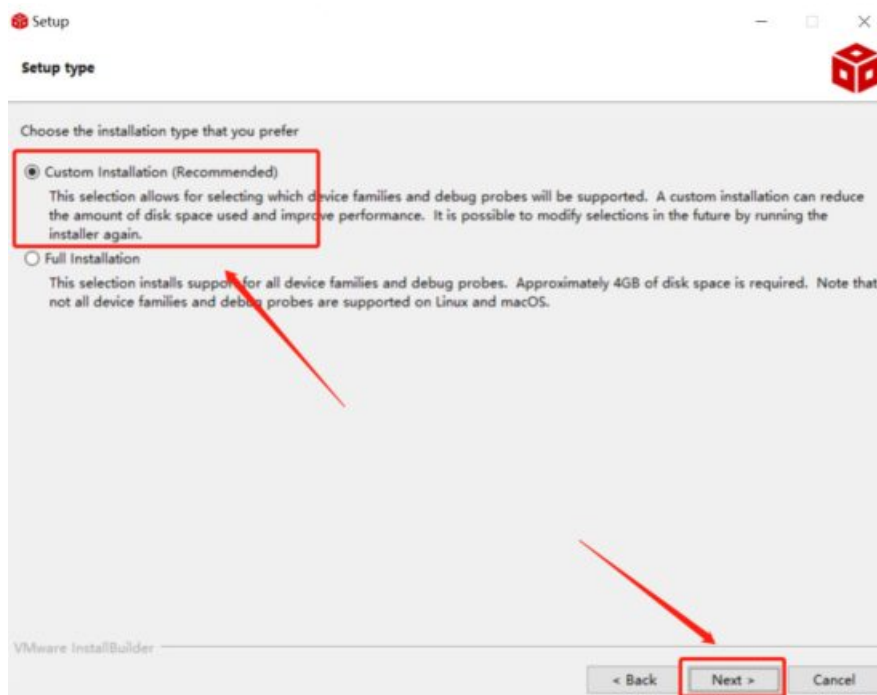


10. Select the component.

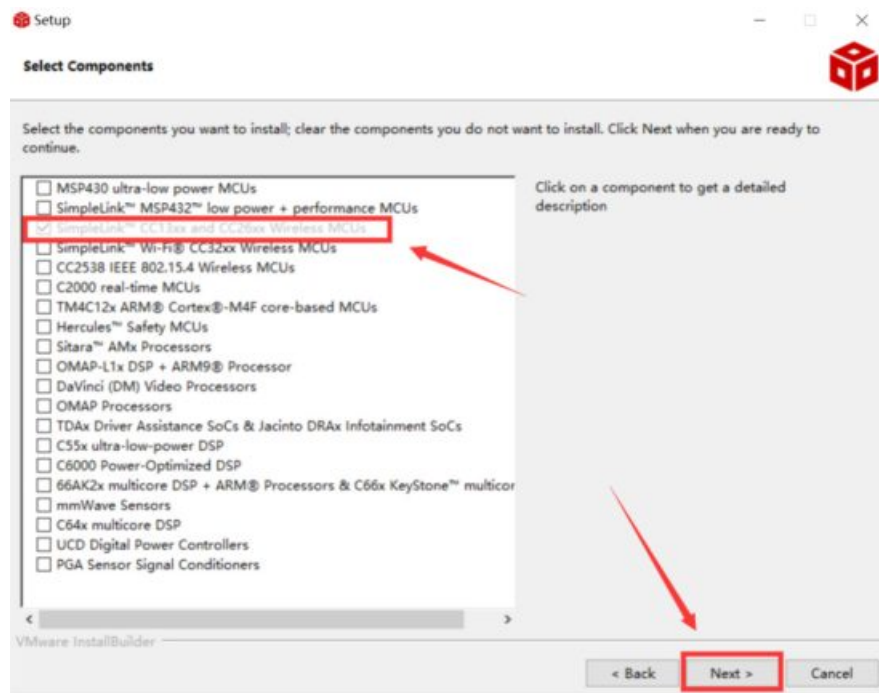


11. Select the default option

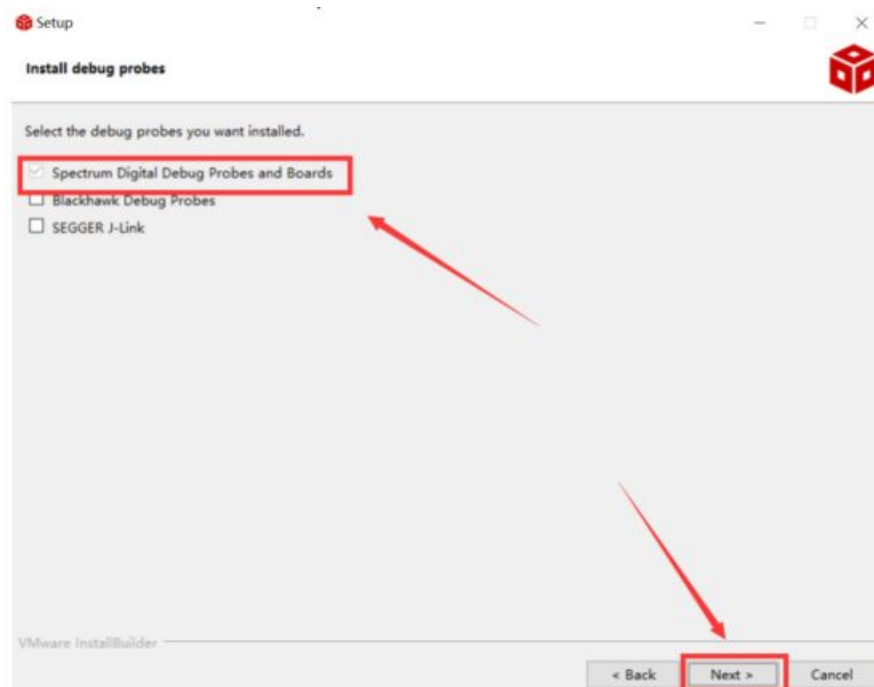


12. Click "Next"

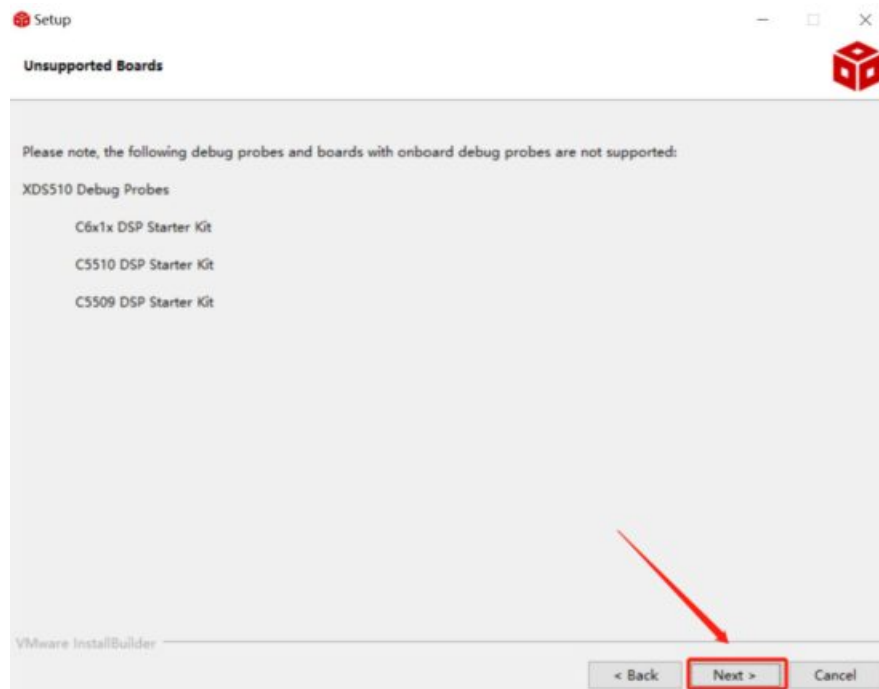

13. Click "Next"

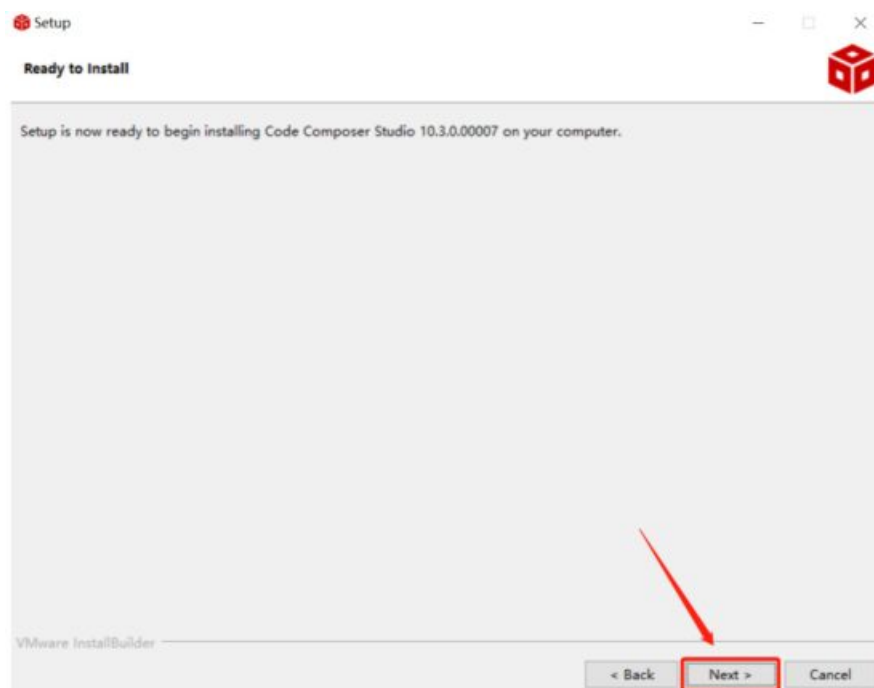


14. Waiting for installation to complete.

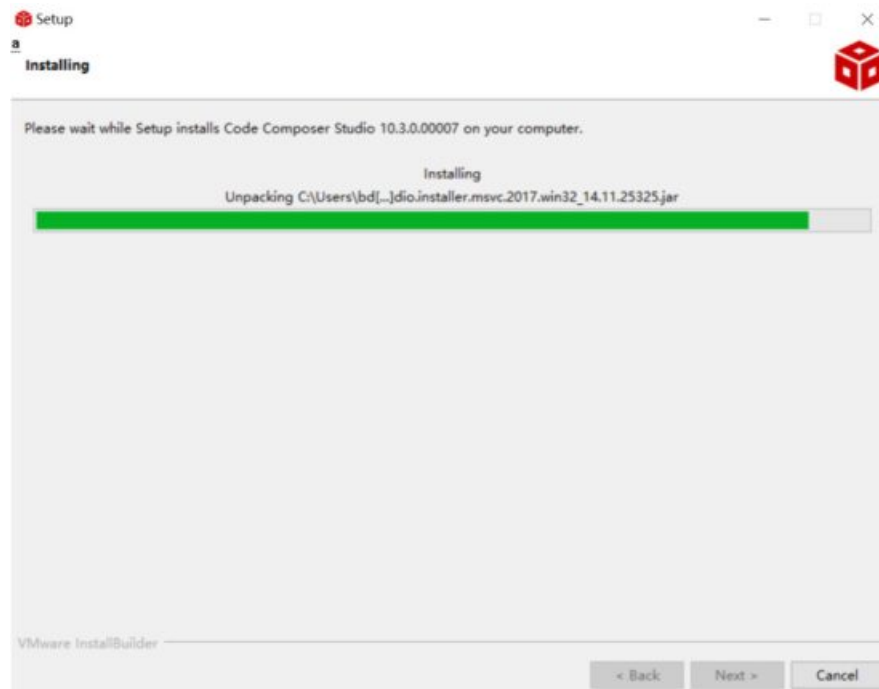


Software Development Kit (SDK) installation

1. Click on this option

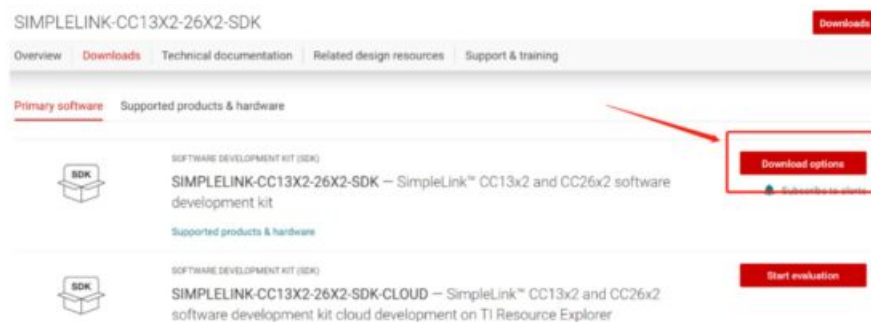

2. Select an option you need to download SDK

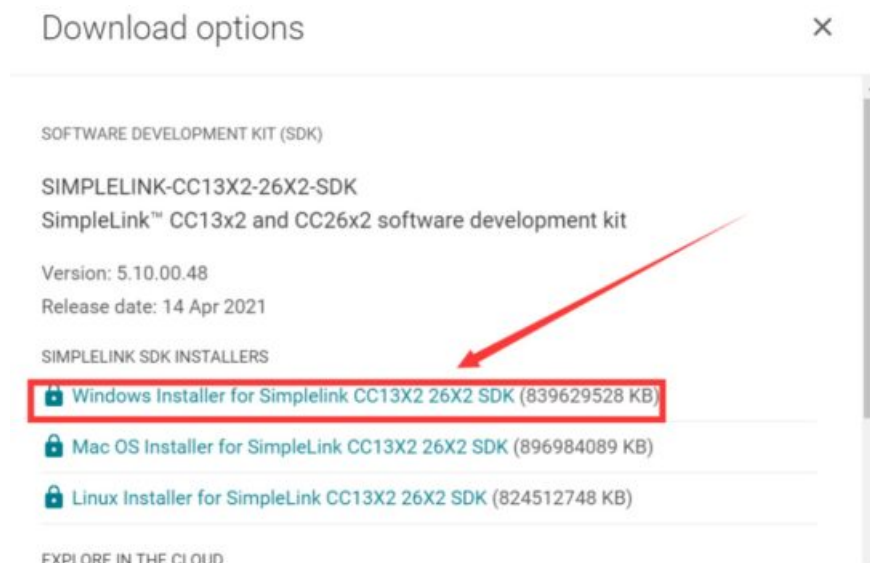

3. Log in to your TI account, if you are a new user, register a TI account first

myTI account

[myTI FAQ](#)

Existing myTI user?

Your email address

Your myTI password

☒ Remember me

[Forgot your password?](#)

By logging in, you agree to [TI's Terms of use & Privacy policy.](#)



4. Select "civil" if your application is for civil use

ort

ll

e will
d 1-

U.S. Government export approval:

All fields are Required. Incomplete information will be DENIED.

First name:

Last name:

Your email address:

Your full company/university name:

Country this file will be used in:

What end-equipment/application will you use this file for:

☐ Military

☒ Civil

I certify that the following is true:



5. Select "Yes" and submit

compliance with any such import, use, or export restrictions.

- I / We hereby certify that we will adhere to the conditions above.
- I / We do not know of any additional facts different from the above.
- I / We take responsibility to comply with these terms.
- I / We understand we are responsible to abide by the most current. versions of the Export Administration Regulations and other U.S. export and sanctions laws.

I CERTIFY ALL THE ABOVE IS TRUE:

Yes ☒

No ☐

Submit

Thank you,
Texas Instruments

6. Download SDK

TI Home

TI Request

You have been approved to receive this file.
Click "Download" to proceed.

In a few moments, you will also receive an email with the link to this file.

Download


Having trouble downloading? Try www.ti.com/software-help

Thank you,
Texas Instruments

7. Installation

 simplelink_cc13x2_26x2_sdk_5_10_00_48.exe 2021/4/19 15:11


8. Click "Next"

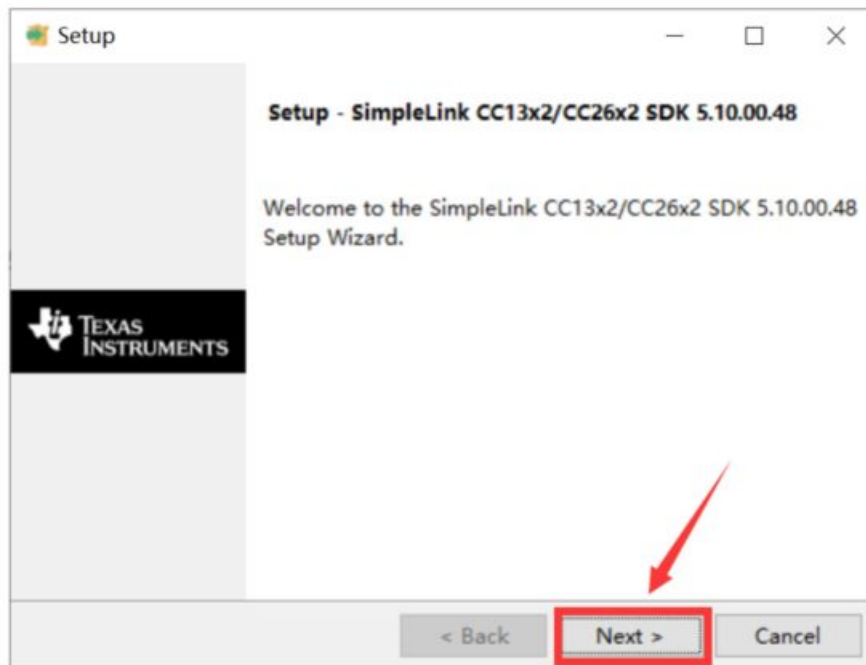


9. Select the default option




10. Select the Installation directory

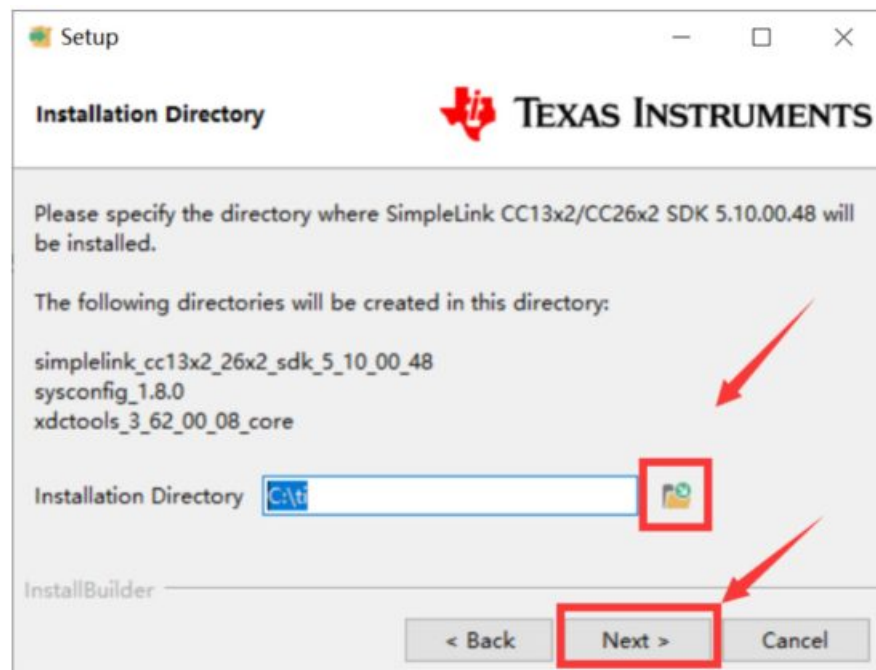

11. Click "Next"

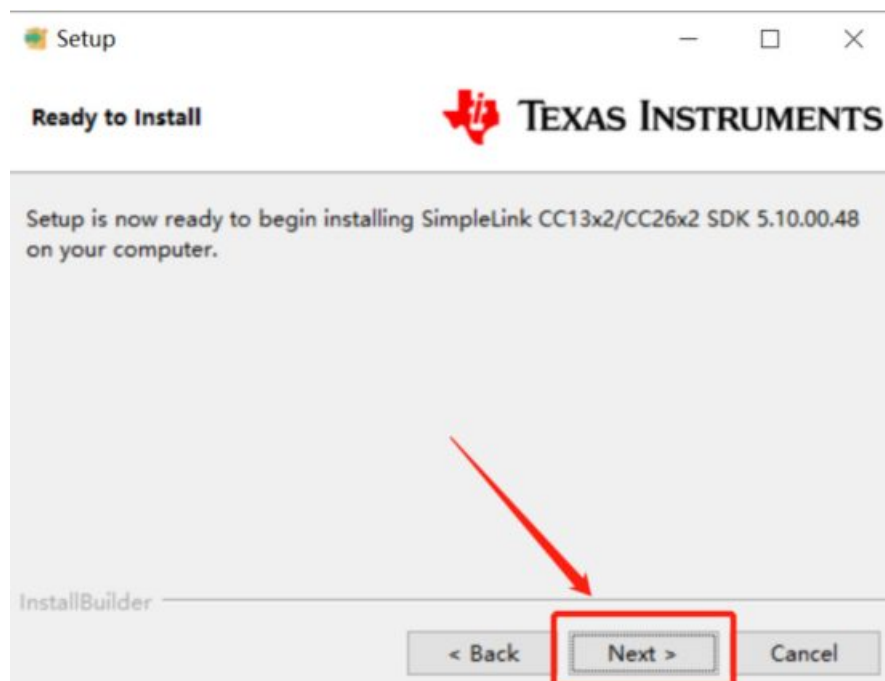


12. Waiting for installation to complete

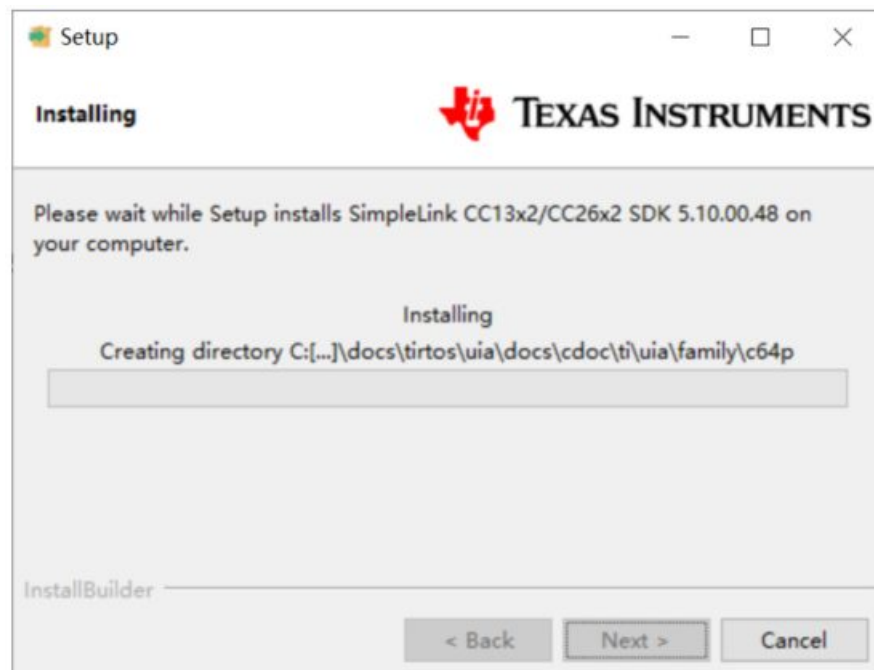


Run an example/demo code

1. Find the option named "Import CCS project..."

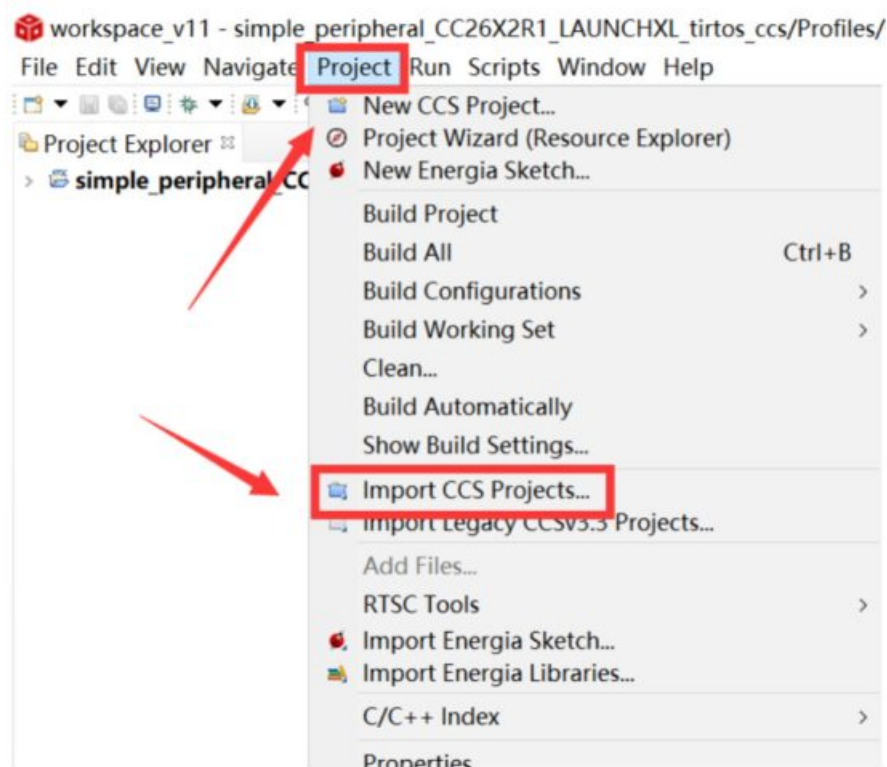


2. According to the following path to find the project:


ti\simplelink_cc13x2_26x2_sdk_5_10_00_48\examples\rtos\CC26X2R1_L
AUNCHXL\ble5stack\simple_peripheral\tirtos\ccs

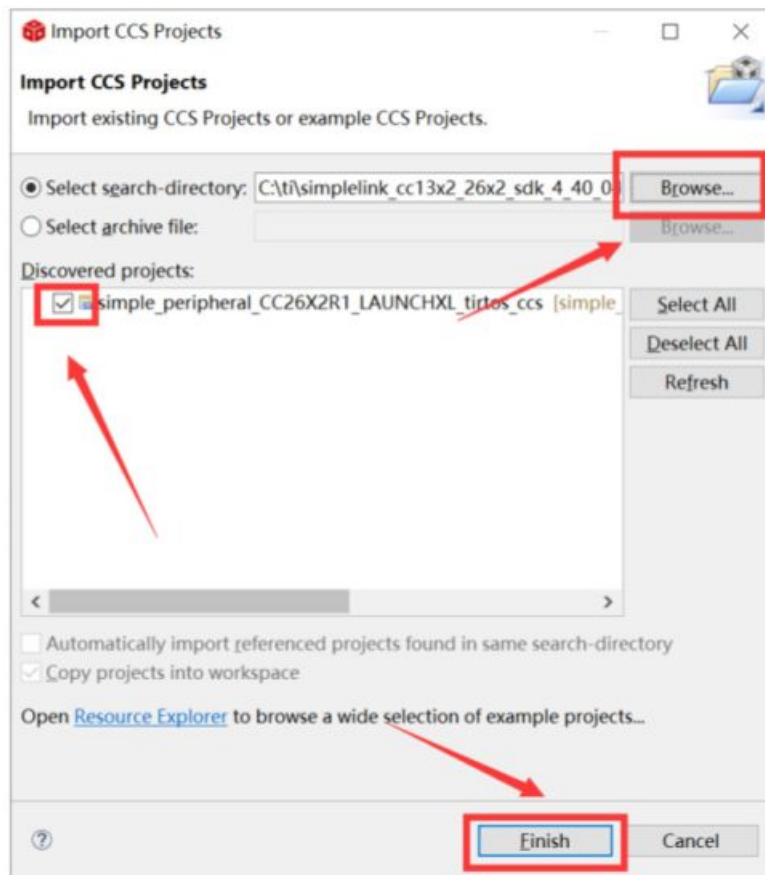


3. Right Click the project to build project

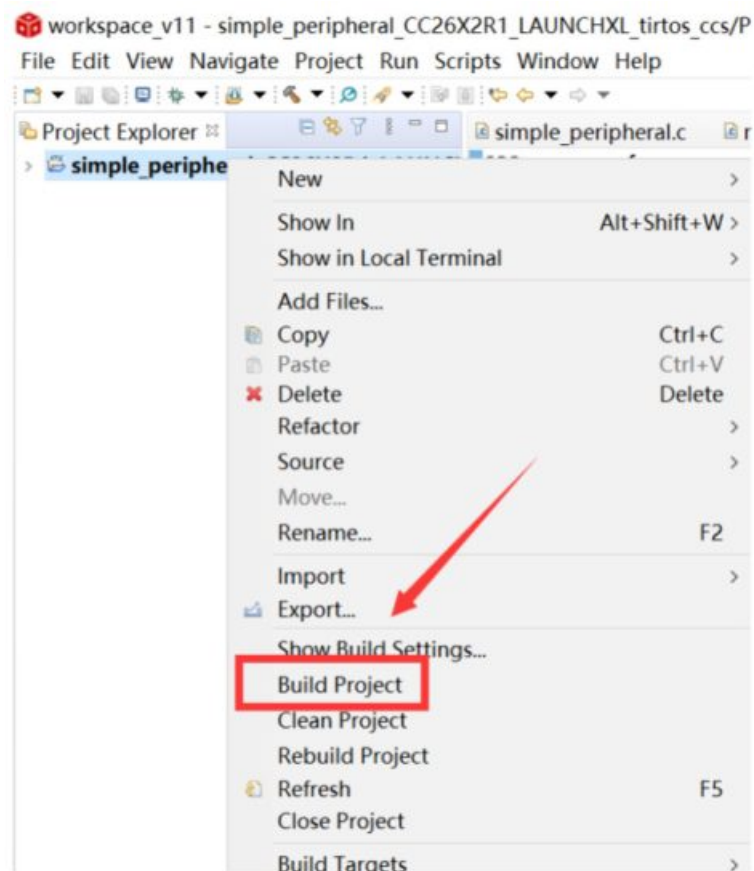


4. Click this bug icon (means download and debugging)

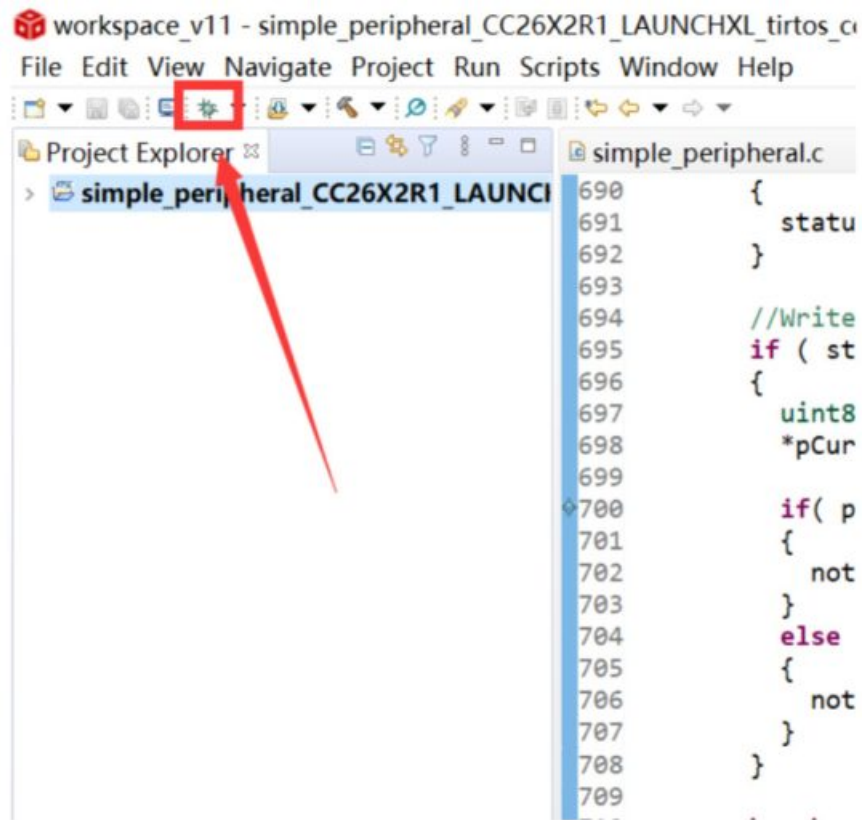


5. Download and start nRF Connect (an APP on your mobile device)

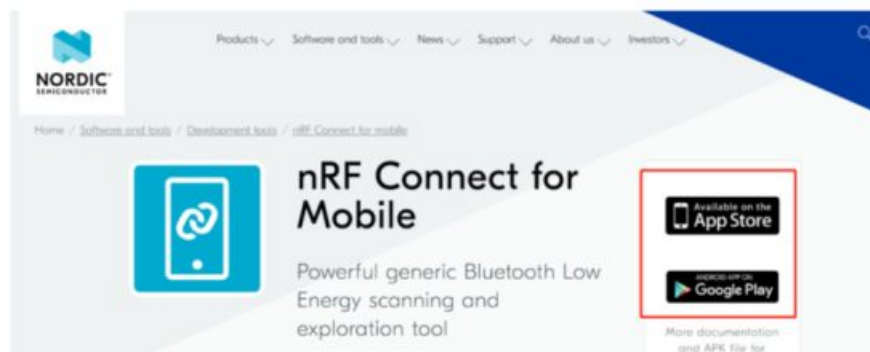

6. Click on this option to start debugging.

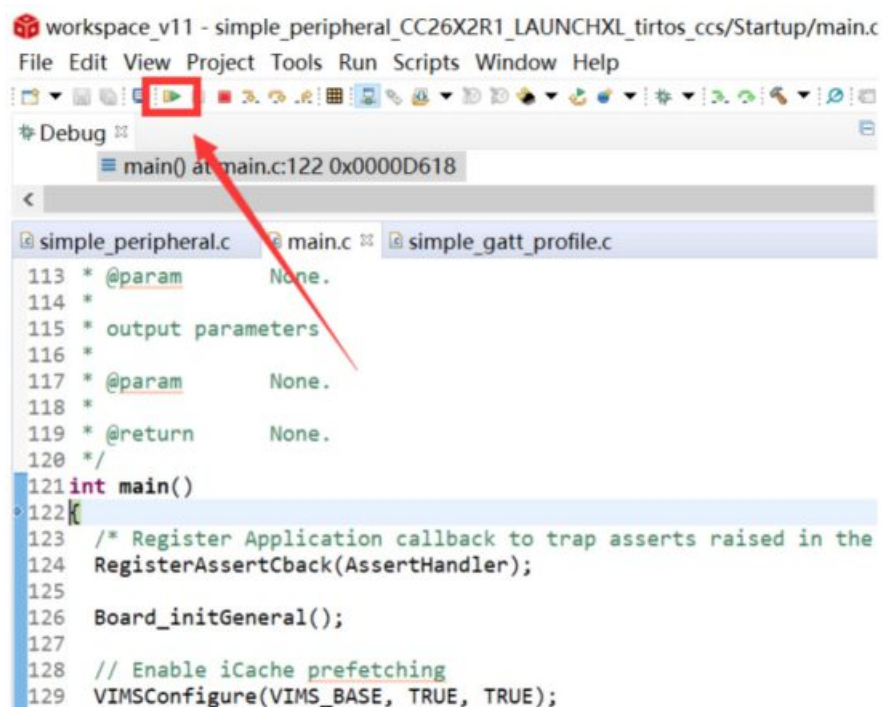

7. BDE-RFM207-IN is advertising, you can receive the signal on nRF Connect, then click "connect" to connect the mobile phone and the BDE-RFM207-IN

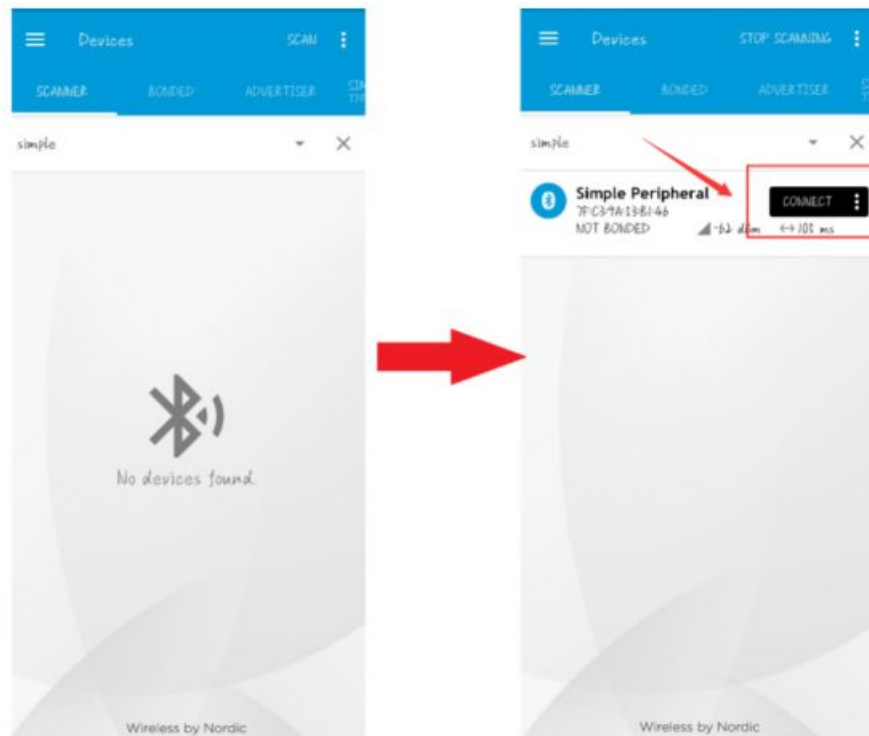

8. Find the file which is named “simple_gatt_profile.c” and the function which is named “simpleProfile_WriteAttrCB”

```

workspace_v11 - simple_peripheral_CC26X2R1_LAUNCHXL_tirtos_ccs/Profiles/simple_gatt_p
File Edit View Project Tools Run Scripts Window Help
Debug
Texas Instruments XDS110 USB Debug Probe/Cortex_M4_0 (Running)
simple_peripheral.c main.c simple_gatt_profile.c
660 *AA
661 * @return SUCCESS, blePending or Failure
662 */
663 bStatus_ simpleProfile_WriteAttrCB( int16_t connHandle,
664                                     gattAttribute_t *pAttr,
665                                     uint8_t *pValue, uint16_t len,
666                                     uint16_t offset, uint8_t method)
667 {
668     bStatus_t status = SUCCESS;
669     uint8 notifyApp = 0xFF;
670
671     if ( pAttr->type.len == ATT_BT_UUID_SIZE )
672     {
673         // 16-bit UUID
674         uint16 uuid = BUILD_UINT16( pAttr->type.uuid[0], pAttr->type.uuid[1] )
675         switch ( uuid )
676         {
677             case SIMPLEPROFILE_CHAR1_UUID:
678             case SIMPLEPROFILE_CHAR3_UUID:
679
680             //Validate the value

```


9. Find “pValue” in the function and set a breakpoint at the same line

```

689     else
690     {
691         status = ATT_ERR_ATTR_NOT_LONG;
692     }
693
694     //Write the value
695     if ( status == SUCCESS )
696     {
697         uint8 *pCurValue = (uint8 *)pAttr->pValue;
698         *pCurValue = pValue[0];
699
700     if( pAttr->pValue == &simpleProfileChar1 )
701     {
702         notifyApp = SIMPLEPROFILE_CHAR1;
703     }
704     else
705     {
706         notifyApp = SIMPLEPROFILE_CHAR3;
707     }
708 }

```


10. Click the up arrow to send a message to the BDE-RFM207-IN

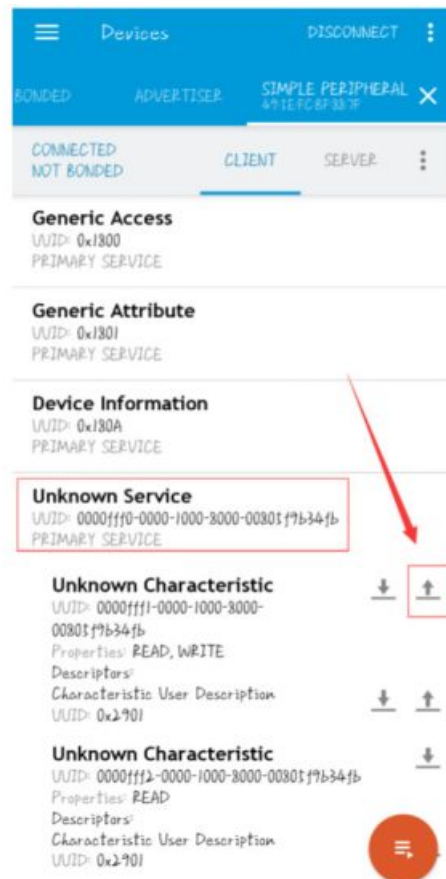

11. Send 0x11 to the BDE-RFM207-IN



12. The program stops at the breakpoint, the value received is 0x11

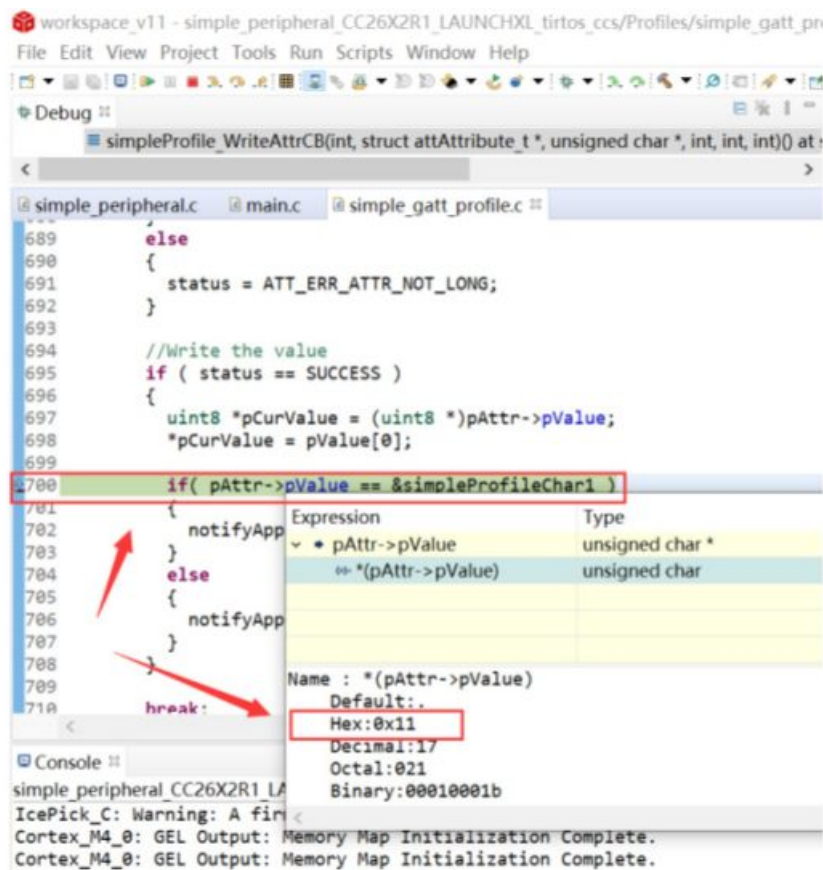

By far you should've built your first application successfully.

For further development, please check out the CC2652R data sheet, product information and support | TI.com page and download the User guide (<https://www.ti.com/lit/pdf/swcu185>)

Other Resources

[Mac OS Installer for SimpleLink CC13X2 26X2 SDK](#)

[Linux Installer for SimpleLink CC13X2 26X2 SDK](#)
[Mac OS Installer for Code Composer Studio IDE](#)
[Linux Installer for Code Composer Studio IDE](#)
[CC2652R SimpleLink™ Multiprotocol 2.4 GHz Wireless MCU](#)
[Windows Installer for SmartRF Flash Programmer 2](#)

Revision History

Revision	Date	Description
V1.0	05-Jun-19	Initial Release
V1.1	10-Jun-19	Editorial Correction
V2.0	14-Apr-21	Replacement of template

More Questions:

Please search existing answers on TI E2E support forums Contact your local TI sales representative.

Or

Contact BDE Technology, Inc.

China:

B2-403, 162 Science Ave, Huangpu District, Guangzhou, 510663

Tel: +86-020-28065335

Website: <http://www.bdecomm.com/cn/>

Email: shu@bdecomm.com

USA:

67 E Madison St, #1603A, Chicago, IL 60603

Tel: +1-312-379-9589

Website: <http://www.bdecomm.com/>

Email: info@bdecomm.com

Documents / Resources

	BDE BDE-RFM207-IN Multiprotocol 2.4G Wireless Module [pdf] User Guide BDE-RFM207-IN, Multiprotocol 2.4G Wireless Module
---	--