

behringer DeepMind 12D 2 Voice Analog Desktop Synthesizer **User Guide**

Home » Behringer » behringer DeepMind 12D 2 Voice Analog Desktop Synthesizer User Guide 🖺



Contents

- 1 behringer DeepMind 12D 2 Voice Analog Desktop
- **Synthesizer**
- 2 FAQs
- 3 Hook-Up
- **4 Controls**
- 5 Getting started
- **6 Specifications**
- 7 Important Safety Instructions
- **8 LIMITED WARRANTY**
- 9 FCC
- **10 CONTACT INFORMATION**
- 11 Documents / Resources
 - 11.1 References
- 12 Related Posts



behringer DeepMind 12D 2 Voice Analog Desktop Synthesizer



FAQs

Q: Can I service the product myself?


A: No, to ensure safety and proper functioning, servicing should only be performed by qualified personnel.

Q: What should I do in case of a damaged power cord?


A: Unplug the device immediately and refer to qualified service personnel for repair or replacement of the power cord.

Hook-Up


Live System

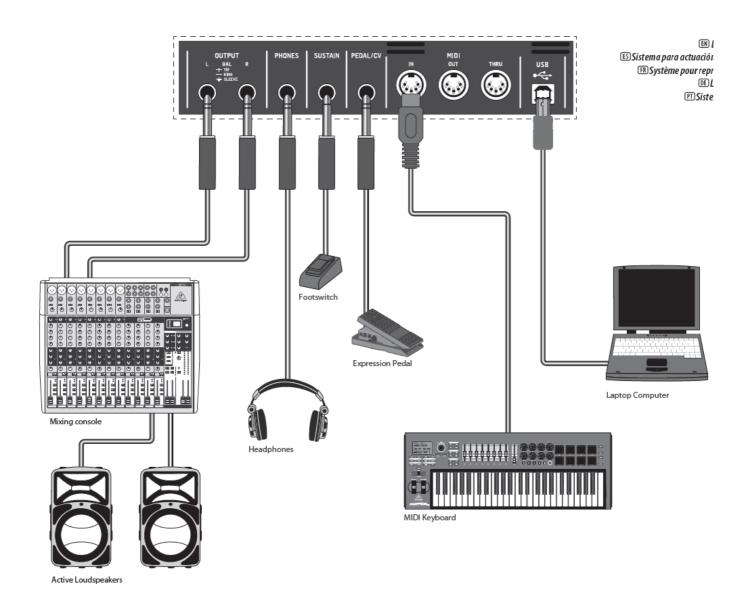

Studio System

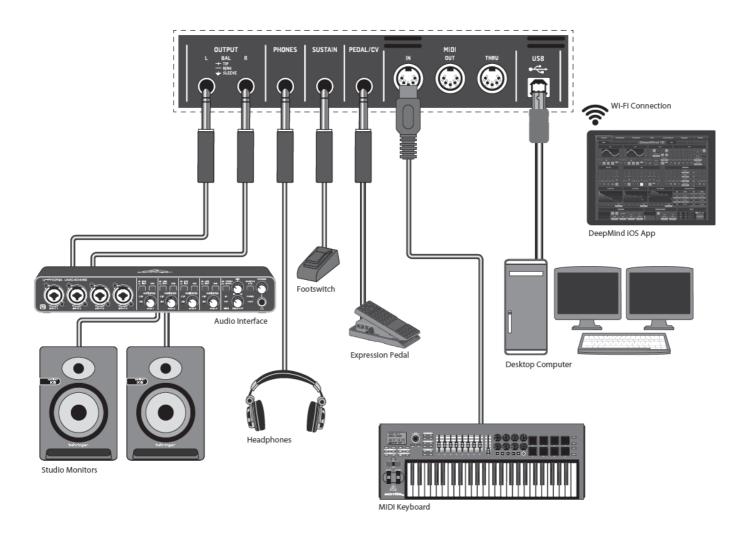

Band / Practice System

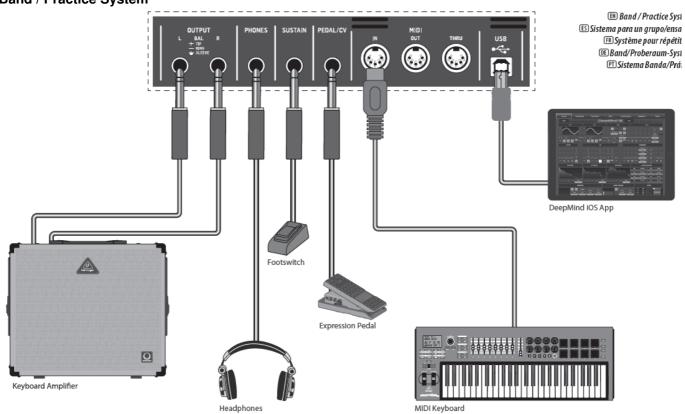


Controls

1. **DISPLAY** – this large backlit LCD screen shows the synthesizer status, parameters, and the five main menus.

The contrast and brightness are adjustable on the PANEL SETTINGS page of the GLOBAL menu.

- 2. **NAVIGATION** navigate within the display menus using the UP, DOWN, +/YES, and -/NO buttons.
- 3. **MENUS** these switches allow access to the display menus.
 - PROG MENU- the main display of the synthesizer. Shows the current program, the currently adjusted parameter, and a visual representation of the parameter and the three envelopes.
 - FX MENU add up to four effects from the list available. Change the effects routing by selecting one of the ten MODEs available. Each of the effects has individual controls for all parameters.
 - GLOBAL MENU view and adjust settings for the synthesizer. There are five pages, CONNECTIVITY, KEYBOARD, PEDAL, PANEL, and SYSTEM.
 - COMPARE MENU in this menu, you can compare the current program with the stored program and see the difference in physical fader positions.
 - WRITE MENU in this menu, you can write the current program settings to the program library. You can also rename the program and set its category type.
- 4. **DATA ENTRY** selected parameters on the display are adjusted using the rotary knob or the fader. The rotary knob has a click which allows very accurate control. The fader allows rapid adjustment across the full range.
 - MOD- this switch opens the modulation matrix on the display and allows up to 8 modulations to be created from the list of sources and destinations.
- 5. **ARP/SEQ** this area controls the arpeggiator and the control sequencer.
 - ON/OFF when activated, this generates an arpeggio based on pressed keys. Note the control sequencer is turned on from its edit page only.
 - RATE adjusts the rate of the arpeggiator /sequencer in beats per minute (BPM).
 - GATE TIME adjusts the duration of the note played based on a percentage of the time between triggered notes.
 - CHORD allows you to play any chord with a single key. The chord is given a root note and mapped across the keyboard.
 - POLY CHORD allows you to play multiple chords from multiple keys. The chords are mapped to individual keys.
 - TAP/HOLD tap this button in time with your performance to set the rate/BPM, or press and hold to engage the HOLD function.
 - EDIT this allows additional arpeggiator/ control sequencer parameters to be edited from the main display.
- 6. LFO 1 and 2- low-frequency oscillators used to modulate or control other parameters.
 - RATE- this sets the rate or speed of the LFO.
 - DELAY TIME the duration of time that will elapse before the LFO starts.
 - EDIT this allows additional LFO parameters to be edited from the main display.
 - LFO WAVEFORMs these LEDs indicate the type and status of the waveforms produced by each LFO.
- 7. **OSC 1 & 2** These analog full-range oscillators create waveforms that are the sound source of the synthesizer.
 - OSC 1 & 2 PITCH MOD the amount of pitch modulation applied to respective OSC.
 - OSC 1 SQUAREWAVE- this switch turns the square wave output for OSC 1 on/off.
 - OSC 1 PWM the amount of pulse width modulation applied to the OSC 1 square wave.
 - OSC 1 SAWTOOTH- this switch turns the sawtooth output for OSC 1 on/off.
 - OSC 2 TONE MOD- the amount of tone modulation applied to OSC 2.
 - OSC 2 PITCH- controls the base pitch of OSC 2.

- OSC 2 LEVEL- controls the level of OSC 2.
- NOISE LEVEL- controls the amount of white noise added to the oscillators.
- EDIT- this allows additional OSC parameters to be edited from the main display.
- 8. **POLY** this area is used to control the polyphony of the synthesizer.
 - UNISON DETUNE when voices are playing in unison, this adjusts the amount of detuning between the voices.
 - EDIT- this allows additional POLY parameters to be edited from the main display.
- 9. **VCF** the voltage-controlled low pass filter used to filter high frequencies from the sound of the synthesizer.
 - FREQ adjusts the cut-off frequency of the filter.
 - 2-POLE changes the roll-off slope of the filter from the default 4-POLE mode to a 2-POLE mode. RES adjusts the resonance of the filter cut-off point.
 - EDIT allows additional VCF parameters to be edited from the main display.
 - ENV adjusts the level of the VCF ENVELOPEwhich controls the filter cut-off frequency.
 - INVERT used to invert the polarity of the VCF envelope applied to the filter cut-off frequency.
 - LFO adjusts the depth of the selected LFO waveform applied to the filter cut-off frequency.
 - KYBD adjusts the amount of keyboard tracking to be applied to the filter cut-off frequency.
- 10. **VCA** the voltage-controlled amplifier used to control the output level.
 - LEVEL controls the output level of the VCA.
 - EDIT this allows additional VCA parameters to be edited from the main display.
- 11. **HPF** the voltage-controlled high pass filter used to filter low frequencies from the sound of the synthesizer.
 - REQ used to adjust the frequency of the high pass filter.
 - BOOST this switch applies a +12 dB bass boost to the signal path
- 12. **ENVELOPE** these are the three envelopes used to modulate other parameters.
 - A [ATTACK]- controls the attack time of the envelope.
 - D [DECAY] controls the decay time of the envelope.
 - S [SUSTAIN] controls the sustain level of the envelope.
 - R [RELEASE] controls the release time of the envelope.
 - VCA selects the envelope used to control the voltage-controlled amplifier.
 - VCF selects the envelope used to control the voltage-controlled filter.
 - MOD selects the envelope used for user-specific modulation.
 - CURVES changes the ADSR controls to affect the associated curves for each stage of the envelope.
- 13. VOICES these LEDs show which voices are active as keys are played.

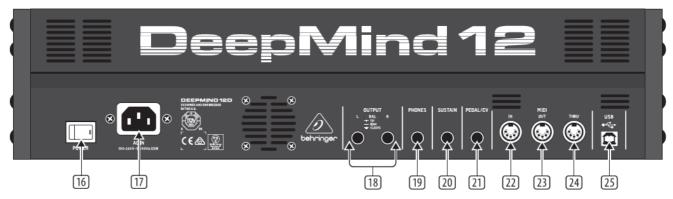

- 14. **PORTAMENTO** changes the slide time between played notes.
- 15. **VOLUME** controls the output level of the synthesizer.
- 16. **POWER SWITCH** use this to turn the synthesizer on and off. Only turn it on after all connections have been

made.

- 17. **POWER INPUT** connect using the supplied power cable only.
- 18. **OUTPUT L** / **R** this is the main output of the synthesizer. It should be connected to your audio interface or sound system. Remember to turn your monitors/loudspeakers on last when turning on your system and turn your monitors/loudspeakers off first when turning your system off.
- 19. **PHONES** the headphone output of the synthesizer follows the main output. Connect your headphones here. Ensure the volume control is at a minimum when putting on headphones or when turning the synthesizer on or off.
- 20. **SUSTAIN** this ¼" TS jack allows you to connect a sustain pedal, such as a normally open switch. The operation of this pedal can be customized using the GLOBAL ∧ PEDAL SETTINGS menu.
- 21. **PEDAL/CV** this ¼" TRS jack allows you to connect an expression pedal. The operation of this pedal can be customized using the GLOBAL / PEDAL SETTINGS menu.
- 22. **MIDI IN** this 5-pin DIN jack receives MIDI data from an external source. This will commonly be an external hardware sequencer, a computer equipped with a MIDI interface, etc.
- 23. **MIDI OUT** this 5-pin DIN jack sends MIDI data to an external source. This will commonly be an external hardware sequencer, a computer equipped with a MIDI interface, etc.
- 24. **MIDI THRU** this 5-pin DIN jack is used to pass through MIDI data received at the MIDI INPUT. This will commonly be sent to another synthesizer or drum machine assigned to a different DEVICE ID, or MIDI Channel.
- 25. **USB PORT** this USB type B jack allows connection to a computer. The DeepMind 12D will show up as a class-compliant USB MIDI device, capable of supporting MIDI in and out. The DeepMind 12D does not require any additional drivers to work with Windows, Android, MacOS, and iOS devices.
 - USB MIDI IN accepts incoming MIDI data from an application.
 - USB MIDI OUT sends MIDI data to an application.

Getting started

OVERVIEW

 This 'Getting Started Guide' will help you set up the DeepMind 12D analog polyphonic synthesizer and briefly introduce its capabilities.

CONNECTION

 To connect the DeepMind 12D to your system please consult the connection guide earlier in this document.

BROWSING PROGRAMS

 To change programs, use the -NO and +/YES switches. To access the program browser press and hold the PROG switch, then press the GLOBAL switch, or move the rotary knob. For more information on program management please consult the product manual.

PROGRAMMING

The DeepMind 12D programming techniques are described in detail in the product manual.

• RECORD, EDIT, and PLAYBACK AUTOMATION

When using the analog engine of the synthesizer with a Digital Audio Workstation (DAW) you can record
and playback any automatable parameter. This allows you to record expressive automation and playback
or edit that automation in your DAW.

USING AS A CONTROLLER

 When using the synthesizer features as a controller you can control your virtual instruments and Digital Audio Workstation (DAW). For mapping please consult the product manual.

• SOFTWARE SET-UP

 The DeepMind 12D is a USB Class Compliant MIDI device, and so no driver installation is required. The DeepMind 12D does not require any additional drivers to work with Windows, Android, MacOS, and iOS devices.

• HARDWARE SETUP

 Make all the connections in your system. Apply power to the DeepMind 12D using the supplied power cable only. Ensure your sound system is turned down. Turn on the power switch.

DAW SETTINGS

- In your DAW, create a new channel and select your master keyboard as the MIDI input device. On the same channel ensure that recorded MIDI is also sent back by making the DeepMind 12D the same channel's MIDI output device.
- If you can't see the DeepMind 12D in your DAW channel options please consult your DAW documentation to ensure you have enabled the DeepMind 12D as a MIDI device.

GLOBAL SETTINGS

 The GLOBAL menus allow you to customize the DeepMind 12D analog polyphonic synthesizer to your specific workflow/requirements. For more information on the GLOBAL settings, please consult the product manual.

• FIRMWARE UPDATE

- Check that the latest firmware in your unit is up to date (see the GLOBAL/SYSTEM SETTINGS menu of the display).
- If not, then updating the firmware will give you the latest enhancements. Visit our website
 <u>behringer.com</u>, and download the latest firmware from the DeepMind 12D analog polyphonic synthesizer product.

IMPORTANT NOTE: Updating the firmware may affect your programs, please ensure you make a full backup. For detailed instructions, please

Specifications

lobal	
Display	Backlit LCD
Main Menus	PROG, FX, GLOBAL, COMPARE, WRITE
Edit Menus	ARP/SEQ, LFOs, OSCs, POLY, VCF, VCA, VCA ENV, VCF ENV, MOD ENV, MOD MATRIX
Presets	8 banks each with 128 programs
Fader Modes	MIDI CC, NRPN, OFF
ontrols	
Encoders	1 rotary knob
Faders	26 slide faders (35 mm)
Switches	31 backlit switches
onnectivity	
MIDI In/Out/Thru	5-pin DIN / 16 channels
Pedal/CV	1⁄4" TRS
Sustain	1⁄4" TS
USB	USB 2.0, type B
Output L/R	1/4" TRS, balanced, max. +18 dBu
Headphones	1/4" TRS, unbalanced, max. +21 dBu
nthesizer Architecture	
Number of voices	12 analog
OSC	2 per voice
LF0	2 per voice
VCF	2-pole / 4-pole
HPF (Common to all voices)	6 dB per octave
Envelopes	VCA, VCF, MOD
Mod Matrix	22 sources / 130 destinations
gital Effects	
FX Slots	4 per Program
FX Types	34 Algorithms
Internal effects engines	1 true stereo SHARC DSP
Effects signal processing	32/40-bit floating point @ 48 kHz
A/D-D/A performance	24-bit 48 kHz, 114 dB dynamic range
Bypass	True hard bypass
T. Carlotte and T. Carlotte an	

В	
Туре	Class compliant USB 2.0, type B
Supported	Windows 7 or higher**
operating systems	Mac OS X 10.6.8 or higher
	iOS 8 or higher (iPad) Android 6.0 or higher
i-Fi	Android 0.0 of Higher
Antenna	Internal
Access Point, number of clients	Max. 1
IEEE 802.11 b/g standard	2.4 GHz
Frequency Range	2,412 - 2,462 MHz
WLAN channels	11
Max Output Power	16 dBm (802.11 b) / 20 dBm (802.11 g) / 20 dBm (802.11 n)
wer Requirements	
Mains connector	Standard IEC receptacle
Power consumption	55 W max.
Internal Switch-mode PSU	Autorange 100-240 V, (50/60 Hz)
vironmental	
Operating	5°C – 40°C (41°F – 104°F)
temperature range	3 (
ysical (Packaged)	
Dimensions (H x W x D)	116 x 461 x 224 mm
Weight	5.0 kg
Shipping Weight	5.9 kg

DeepMind 12D

True Analog 12-Voice Polyphonic Desktop Synthesizer with 4 FX Engines, 2 OSCs and LFOs per Voice, 3 ADSR Generators, 8-Channel Modulation Matrix, 32-Step Control Sequencer, Tablet Remote Control and Built-In Wifi

Important Safety Instructions

CAUTION

RISK OF ELECTRIC SHOCK! DO NOT OPEN!

ATTENTION

• Terminals marked with this symbol carry an electrical current of sufficient magnitude to constitute a risk of electric shock. Use only high-quality professional speaker cables with 1/4" TS or twist-locking plugs preinstalled. All other installations or modifications should be performed only by qualified personnel.

- This symbol, wherever it appears, alerts you to the presence of uninsulated dangerous voltage inside the enclosure voltage that may be sufficient to constitute a risk of shock.
- This symbol, wherever it appears, alerts you to important operating and maintenance instructions in the accompanying literature. Please read the manual.

Caution

• To reduce the risk of electric shock, do not remove the top cover (or the rear section). No user-serviceable parts inside. Refer servicing to qualified personnel.

Caution

• To reduce the risk of fire or electric shock, do not expose this appliance to rain and moisture. The apparatus shall not be exposed to dripping or splashing liquids and no objects filled with liquids, such as vases, shall be placed on the apparatus.

Caution

- These service instructions are for use by qualified service personnel only. To reduce the risk of electric shock do not perform any servicing other than that contained in the operation instructions. Repairs have to be performed by qualified service personnel.
 - 1. Read these instructions.
 - 2. Keep these instructions.
 - 3. Heed all warnings.
 - 4. Follow all instructions.
 - 5. Do not use this apparatus near water.
 - 6. Clean only with a dry cloth.
 - 7. Do not block any ventilation openings. Install by the manufacturer's instructions.
 - 8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
 - 9. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades one wider than the other. A grounding-type plug has two blades and a third grounding prong. The wide blade or the third prong is provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for the replacement of the obsolete outlet.
 - 10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
 - 11. Use only attachments/accessories specified by the manufacturer.
 - 12. Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
 - 13. Unplug this apparatus during lightning storms or when unused for long periods.

- 14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as a power supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
- 15. The apparatus shall be connected to a MAINS socket outlet with a protective earthing connection.
- 16. Where the MAINS plug or an appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.
- 17. Correct disposal of this product: This symbol indicates that this product must not be disposed of with household waste, according to the WEEE Directive(2012/19/EU) and your national law. This product should be taken to a collection center licensed for the recycling of waste electrical and electronic equipment (EEE). The mishandling of this type of waste could have a possible negative impact on the environment and human health due to potentially hazardous substances that are generally associated with EEE. At the same time, your cooperation in the correct disposal of this product will contribute to the efficient use of natural resources. For more information about where you can take your waste equipment for recycling, please contact your local city office or your household waste collection service.
- 18. Do not install in a confined space, such as a bookcase or similar unit.
- 19. Do not place naked flame sources, such as lighted candles, on the apparatus.
- 20. Please keep the environmental aspects of battery disposal in mind. Batteries must be disposed of at a battery collection point.
- 21. Use this apparatus in tropical and/or moderate climates.

LEGAL DISCLAIMER

MUSIC Group accepts no liability for any loss that may be suffered by any person who relies either wholly or in part upon any description, photograph, or statement contained herein. Technical specifications, appearances, and other information are subject to change without notice. All trademarks are the property of their respective owners. MIDAS, KLARK TEKNIK, LAB GRUPPEN, LAKE, TANNOY, TURBOSOUND, TC ELECTRONIC, TC HELICON, BEHRINGER, BUGERA, and DDA are trademarks or registered trademarks of MUSIC Group IP Ltd. © MUSIC Group IP Ltd. 2017 All rights reserved.

LIMITED WARRANTY

• For the applicable warranty terms and conditions and additional information regarding MUSIC Group's Limited Warranty, please see complete details online at music-group.com/warranty.

FCC

complies with the FCC rules as mentioned in the following paragraph: This equipment has been tested and found to comply with the limits for a Class B digital device, under part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used by the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- · Reorient or relocate the receiving antenna
- · Increase the separation between the equipment and the receiver
- Connect the equipment to an outlet on a circuit diff erent from that to which the receiver is connected
- Consult the dealer or an experienced radio/TV technician for help

This device complies with Part 15 of the FCC rules.

Operation is subject to the following two conditions:

- 1. this device may not cause harmful interference, and
- 2. this device must accept any interference received, including interference that may cause undesired operation.

Important information:

Changes or modifications to the equipment not expressly approved by MUSIC Group can void the user's authority to use the equipment.

FCC RF Radiation Exposure Statement:

- 1. This Transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.
- This equipment complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 50 mm between the radiator and your body.

CONTACT INFORMATION

- Responsible Party Name: MUSIC Group Services NV Inc.
- Address: 5270 Procyon Street
- Las Vegas, NV 89118
- USA
- Phone Number: +1 702 800 8290
- https://muzcentre.ru
- http://behringer.com

Documents / Resources



behringer DeepMind 12D 2 Voice Analog Desktop Synthesizer [pdf] User Guide DeepMind 12D 2 Voice Analog Desktop Synthesizer, DeepMind 12D, 2 Voice Analog Desktop Synthesizer, Analog Desktop Synthesizer, Desktop Synthesizer, Synthesizer

References

• Behringer | Home

- ΣП профессиональная акустика Активные акустические системы.
- User Manual

Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.