



BERG BIM-350F Modular Ice Machines Instruction Manual

[Home](#) » [BERG](#) » BERG BIM-350F Modular Ice Machines Instruction Manual 



INSTRUCTION MANUAL
Modular Ice Machines
BIM-350F
BERG MOD HD 350 LB ICE MACH FC
BIM-350H
BERG MOD HD 350 LB ICE MACH HC
BIM-500F
BERG MOD HD 500 LB ICE MACH FC
BIM-500H
BERG MOD HD 500 LB ICE MACH HC

This manual contains important information regarding your unit. Please read this manual thoroughly prior to equipment set-up, operation and maintenance. Failure to comply with regular maintenance guidelines outlines in this manual may void the warranty.

WARNINGS

- This appliance is equipped with a three prong grounding plug for your protection against shock.
- Do not immerse unit, cord or plug in liquid at any time.
- Unplug cord from outlet when not in use and before cleaning.
- Do not use this unit for anything other than its intended use.
- Do not use outdoors.
- Always use on a firm, dry and level surface.
- Do not use if unit has a damaged cord or plug, in the event the appliance malfunctions, or if the appliance has been damaged in any manner.
- Keep children and animals away from unit.
- All repairs should be done by authorized professionals only.
- Ensure that the designated power supply is adequate for continual usage and the voltage is correct.

*Improper installation, adjustment, alteration, service or maintenance can cause property damage, injury or death. Read the installation, operation and maintenance instructions thoroughly before installing or servicing this equipment.

Contents

- 1 UNPACKING THE UNIT**
- 2 INSTALLATION**
- 3 CONTROL PANEL**
- 4 OPERATION**
- 5 MAINTENANCE**
- 6 TROUBLESHOOTING**
- 7 WHAT IS NOT COVERED BY THIS WARRANTY**
- 8 Documents / Resources**
 - 8.1 References**
- 9 Related Posts**

UNPACKING THE UNIT

- Check to ensure the shipping carton is not damaged.
- Remove all packing material and make sure all accessories and components are included in the box.

INSTALLATION

1. The unit should be placed in a clean and flat area that has a drain. Minimum clearance for the back of the unit should be at least 8" and 6" on each side. Clearance in front should be at least 12". This is to allow for proper air discharge from the unit while it's running. If the minimal clearance on all sides is reduced, ice capacity will be reduced. For best results, do not install next to heat producing appliances.
2. The ambient temperature where this unit is going to be installed should have a minimum of 40°F and a

maximum of 100°F.

3. Check the connection, voltage and safety grounding after installation.
4. Installation should be performed by a professional technician only.

ELECTRIC CONNECTION:

1. This unit has a 115 volt NEMA 5-20P electrical connection. Please ensure proper voltage where installed.

WATER PIPE CONNECTION:

This unit comes with all of the hoses and external water filter needed for your connection.


1. Connect your main water line to the external water filter.
2. Using the hose supplied, connect it to the 3/8" FPT water inlet connection at the top of the unit and then connect to external water filter.
3. Using other supplied hose, connect to the 5/8" FPT drain pipe connection and route that hose to the your floor drain.
4. For ice bin, attach drain hose to rear bin connection and route the hose to your floor drain.

Please note: Cube ice machines use more water than what will end up in the bin as ice. Some water will be drained out every cycle to reduce the amount of hard water scale in the machine. This process is known as a water purge and having an effective purge can increase the time between needed cleaning.



	Minimum	Maximum
Air Temperature	40°F	100°F
Water Temperature	33°F	90°F
Water Pressure	19 psi	80 psi

CONTROL PANEL

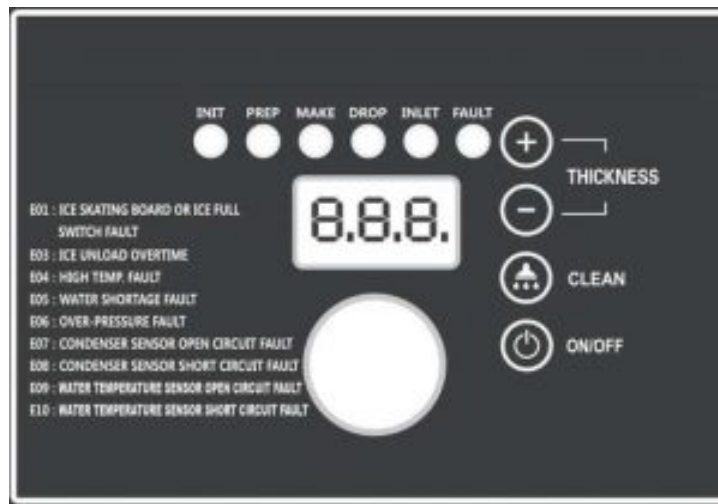

OPERATION

- **STARTING** – After the power and water supply have been properly connected, switch the machine on by pressing the ON/OFF button on the display panel
- **PRE- COOLING** – The inlet valve will automatically open once the machine is turned on. The evaporator will pre-cool for 30 seconds before water pumping will start. The compressor will start, and the water pump will stop running. The inlet valve will remain open until reaching the specified level.
- **ICE-MAKING** – The water pump will begin working after the machine has pre-cooled for 30 seconds. The water will flow continuously through the evaporator and will form ice cubes in the ice tray.
- **ICE FALL** – When the machine has reached its capacity the pump will shut down and the frost valve will open allowing hot air into the evaporator. In approximately 1-2 minutes, the ice from the evaporator will fall into the ice bin. In order to avoid injury, do not put your hands into the ice bin during this process.
- **SHUTDOWN** – If the machine is running and needs to be shutdown, click the ON/OFF button on the control panel
- **FULL ICE BIN** – The machine will automatically stop when the ice bin is full. The machine will automatically restart when the ice bin has been emptied.

THE MACHINE WILL STOP WORKING WHEN THE FOLLOWING OCCURS:

- The ice does not fall after 3 attempts
- The ambient temperature exceeds the maximum temperature allowed (100°F)
- The machine runs out of water

MAINTENANCE

This ice machine requires the following types of maintenance:

- Remove the build up of mineral scale from the ice machine's water and internal sensor system
- Sanitize all parts of the ice machine's water system and storage bin
- Clean or replace the air filter and condenser

It is the user's responsibility to maintain the ice machine and storage bin in a sanitary condition. Without doing this regularly, the machine will become unsanitary. Ice machines also require occasional cleaning of their water

systems with specific chemicals used to dissolve the mineral build up that occurs over time.

EXTERIOR CLEANING

To properly clean the exterior of the unit, wipe all surfaces with a damp washcloth to remove dirt and dust. It is recommended to use a mild soap and warm water solution to help remove heavier buildup of grease and dirt. To prevent damage to the exterior never use steel wool or abrasive pads for cleaning. Never use bleach or citrus based cleaners on the outside of the unit.

DESCALING AND SANITIZING

It is important to descale and sanitize the ice machine every six months. This process removes lime, scale and mineral deposits throughout the entire water system and keeps the unit in line with health code requirements. It is recommended to have this cleaning process performed by a authorized professional to ensure its done correctly. You will need descaler and sanitizing solutions to properly perform this cleaning process.

1. Remove the front panel by unscrewing the four screws located in each corner
2. Remove the evaporator cover.
3. Remove all ice from the storage bin and dispenser.
4. On the control panel push the "CLEAN" button to start the cycle.
5. Pour descaler into the reservoir. The unit will circulate the descaler, drain and flush it through the internal water system. This process will take about 20-30 minutes. Once completed, the machine will stop circulating.
6. To clean the internal components, in a pail mix together 1 oz of descaler to 12 ounces of water. The components that need to be sanitized are the water distributor, ice thickness sensor, adjustment screw, water level sensor and evaporator cover. These components need to be removed from the machine and sanitized individually. Once sanitized, return the components to their places inside the machine and run the "CLEAN" cycle again to fully flush away all of the sanitizing solution. Once the initial harvest cycle has run, the reservoir will fill up again. Pour sanitizing solution into the reservoir to begin the next sanitizing cycle. This cycle will take about 20-30 minutes to run. Once completed, the machine will stop circulating.
7. Once unit has completed the "CLEAN" cycle, replace evaporator cover and re-attach the front panel.


ICE STORAGE BIN

1. To clean the ice storage bin, first remove and discard all ice.
2. Mix together a solution of descaler and water following the instructions on the descaler bottle.
3. Wash all interior surfaces of the ice storage bin to remove any mineral scale build up. Flush excess cleaning solution through the bin's drain.
4. Mix a solution of sanitizer and water following the instructions on the bottle.
5. Wash all interior surfaces of the ice storage bin and flush out excess sanitizer solution through the bin's drain.

AIR FILTERS

It is important to clean the air filters regularly and prevent them from getting dirty. If not properly cleaned, the machine will not run efficiently.

1. Pull all of the air filters out.
2. Wash off dust and grease on the filter with warm water.
3. Return filter to its original position. Do not operate unit without the air filters in place.

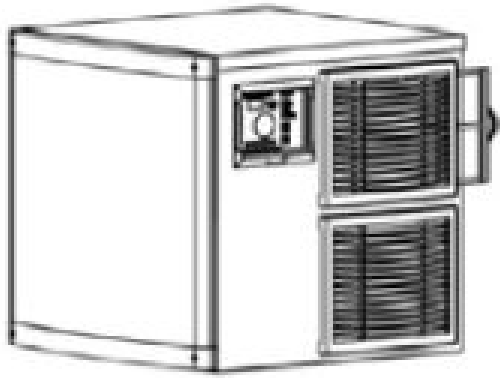

To remove air filter,
pull out from side.

EXTERNAL WATER FILTER

The external water filter must be checked regularly to ensure proper filtration and water pressure. Change cartridges every 6 months or if water pressure drops low when the ice machine is filling with water.


TROUBLESHOOTING

Problem	Symptoms	Solutions
Ice machine not starting up	No power supply	Check if unit is plugged in
Machine stops running after 3 minutes	High pressure protection	Lower the ambient temperature
Ice isn't falling into bin	Ice machine is dirty Ambient temperature is low	Clean the machine Raise ambient temperature
Ice is too thin	Water level is low Inlet valve isn't working Low water pressure Blockage in the water line	Check the water level Make sure inlet valve is working Check water pressure Clear pipeline if needed
Slow ice production	Condenser is dirty Ambient temperature is too high Not enough airflow clearance around the unit	Clean the air filter and condenser Lower the ambient temperature Check to make sure there is adequate space for airflow around the unit

ERROR CODES

Code	Comments	Work Mode
E01	Ice Skating Board or Ice Full Switch Fault	Sleeping mode and recover after the baf fle is reset
E03	Ice Unload Overtime	Sleeping mode
E04	High Temp. Fault	Sleeping mode
E05	Water Shortage Fault	Sleeping mode and retry every 30 mins
E06	Over-Pressure Fault	Sleeping mode
E07	Condenser Sensor Open Circuit Fault	Keep working
E08	Condenser Sensor Short Circuit Fault	Keep working
E09	Water Temperature Sensor Open Circuit Fault	Keep working
E10	Water Temperature Sensor Short Circuit Fault	Keep working
E13	Water Level Control Fault	Sleeping mode

Exploded Diagram for BIM-350F/BIM-350H

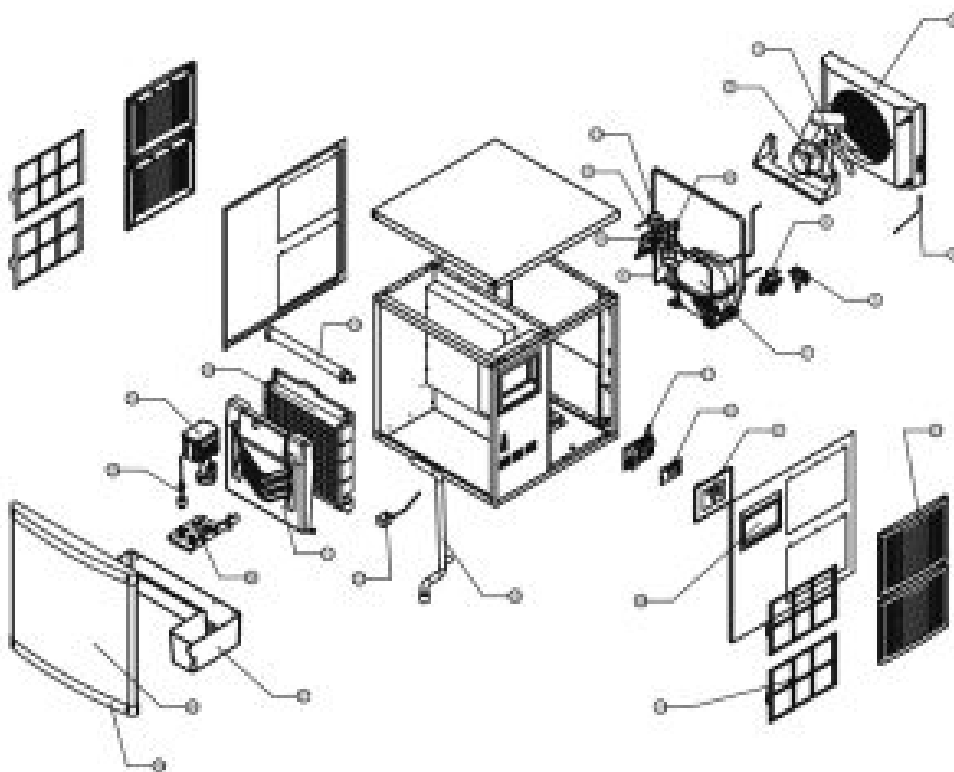


Ref.	Part No.	Name	Specification	Number
------	----------	------	---------------	--------

1	03.005.041	microchannel condenser-3 29A	HX-L116-99-SHCL005	1
2	03.006.028	fan-EBM	EBMPAPST M4Q045-DA11-04 70/18W 115V AC	1
3	03.007.008	Fan blades	Φ254 34°, hair dryer, aluminum	1
4	04.010.008	Condensation sensor	Stainless steel probe 1000mm	1
5	04.003.008	inlet valve	110~120V 4W 50/60HZ Blue 1266220 1.2L	1
6	04.002.006	drain valve	DSVP12N-2LSX-120A 110V 60HZ 12W 740 17-82	1
7	03.001.091	compressor-R290	SECOP, NLE11MN,115V,60Hz	1
8	02.006.002	dry filter	φ19*150*3.1*6.5	1
9	04.004.017	expansion valve	R290 NO.3 pool TUB	1
10	03.017.018	high-voltage switch	2.4~1.9Mpa R290	1
11	04.005.003	Defrost valve body	6A	1
12	04.007.006	Defrost valve coil	115V 6A 800MM	1
13	05.015.003	Plastic ventilation window	Injection molding Square M1075	1
14	05.016.005	Ventilation window filter	Split machine M1035	1
15	03.011.038	PC board	Split machine, switch power supply, temperature control, with cleaning, with voice	1
16	03.012.043	display board	No voice, with cleaning button	1
17	05.006.004	Electrical control fixing plate	Injection molding White voice M1109	1
18	05.005.002	Control panel cover – splitter	Injection Colorless transparent M1027	1
19	SL.FB.3248 0657.	Spray pipe	13 columns	1
20	03.003.010	evaporator	12 rows * 13 columns	1
21	SL.FB.3247 9801.	Skateboard	ABS Injection molding White	1
22	03.013.009	Ice full sensor – Hall type	750mm-3 line with Chuangli Logo	1
23	09.001.001	upper water pipe	Square tube spray pipe to water pump	1
24	03.010.001	water pump motor	YJF61/20 110~115VAC 50/60Hz	4
25	04.010.016	Water level water temperature	4P 2M	1
26	05.002.003	Sink pump fixing plate	Injection molding ABS white M1077	1
27	05.001.001	Sink	350 Injection molding M5004	1

28	BJ.FB.7563 0051.	Front panel	SUS304-Drawing film-T0.6*613.94*555	1
29	05.018.001	Door plastic end cap	Injection molding black main machine	1

Exploded Diagram for BIM-500F/BIM-500H

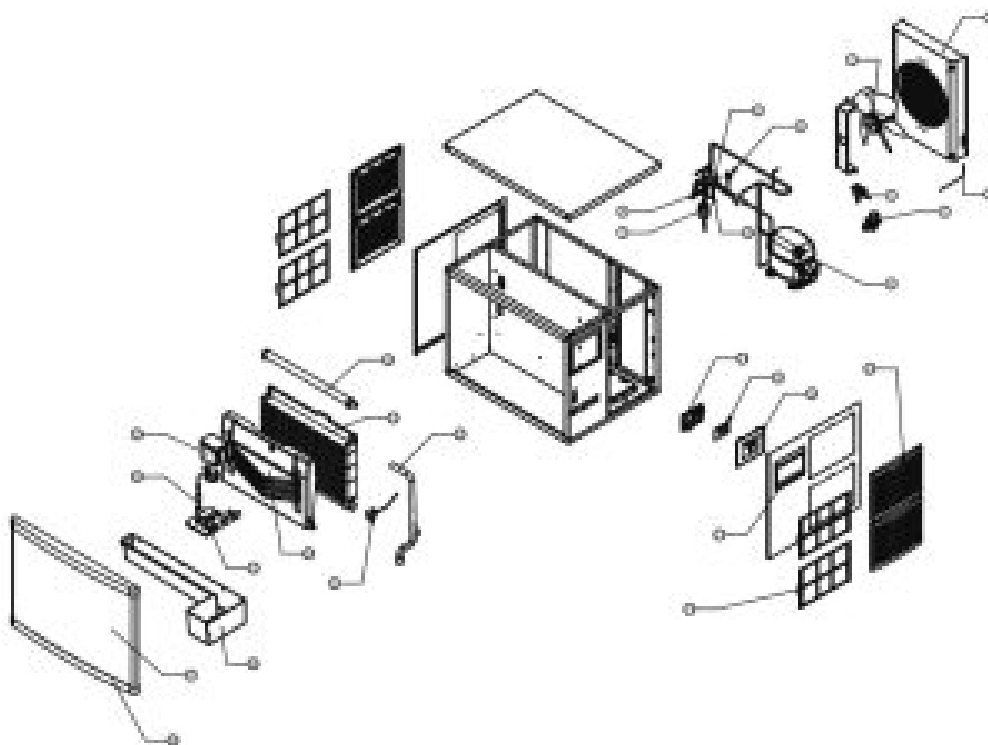

Ref.	Part No.	Name	Specification	Number
1	03.005.042	microchannel condenser-529A	HX-L116-99-SHCL006	1
2	03.006.021	Axial Fan	YWF-4E-300B hair dryer, 110V~120V 60 HZ	1
3	04.010.008	Condensation sensor	Stainless steel probe 1000mm	1
4	04.003.008	inlet valve	110~120V 4W 50/60HZ Blue 1266220 1. 2L	1
5	04.002.006	drain valve	DSVP12N-2LSX-120A 110V 60HZ 12W 7 4017-82	1
6	03.001.092	compressor-R290	115V / 60HZ / R290	1
7	02.006.002	dry filter	φ19*150*3.1*6.5	1
8	04.004.018	expansion valve	R290 NO.4 pool TUB	1
9	03.017.018	high-voltage switch	2.4~1.9Mpa R290	1
10	04.005.003	Defrost valve body	6A	1
11	04.007.006	Defrost valve coil	115V 6A 800MM	1
12	05.015.003	Plastic ventilation window	Injection molding Square M1075	1
13	05.016.005	Ventilation window filter	Split machine M1035	1

14	03.011.038	PC board	Split machine, switch power supply, temperature control, with cleaning, with voice	1
15	03.012.043	display board	No voice, with cleaning button	1
16	05.006.004	Electrical control fixing plate	Injection molding White voice M1109	1
17	05.005.002	Control panel cover – splitter machine	Injection Colorless transparent M1027	1
18	SL.FB.3248 0661.00	Spray pipe	20 columns	1
19	03.003.013	evaporator	12 rows * 20columns	1
20	SL.FB.3247 9807.00	Skateboard	ABS Injection molding white	1
21	03.013.009	Ice full sensor – Hall type	750mm-3 line with Chuangli Logo	1
22	09.001.002	upper water pipe	Square tube spray pipe to water pump	1
23	03.010.001	water pump	YJF61/20 110~115VAC 50/60Hz	1
24	04.010.016	Water level water temperature sensor	4P 2M	4
25	05.002.001	Sink pump fixing plate	Injection molding ABS white M1074	1
26	05.001.002	Sink	500 Injection molding M5005	1
27	05.018.002	Front panel	SUS304-Drawing film-T0.6*814.7*555	1
28	BJ.FB.7563 0052.00	Door plastic end cap	Injection molding black main machine	1



ICE MACHINE WARRANTY

ONE YEAR WARRANTY – PARTS AND LABOR

BERG warrants to the original purchaser of this unit, the cabinet and all parts thereof, to be free from defects in material or workmanship, under normal use and service, for a period of one (1) year from the date of original installation or 1 year after shipment date, whichever occurs first.

Any parts covered by this warranty that are examined and determined to have been defective within one (1) year of original installation or 1 year after shipment date from manufacturer, whichever occurs first, shall be repaired or replaced as stated below. Shall be deemed to have fully complied with its obligation under the foregoing warranties by electing either one of the following procedures:

1. Furnishing a replacement part, freight collect, in even exchange for the returned part, freight collect.
2. Receiving the defective part, freight collect; repairing it; and returning it, freight collect.

ADDITIONAL FOUR YEAR COMPRESSOR/EVAPORATOR PLATE PART WARRANTY

In addition to the (1) one year warranty stated above, warrants its hermetically and semi-hermetically sealed compressor and evaporator plate to be free from defects in both material and workmanship under normal use and service for a period of four (4) additional years from the date of original installation but not to exceed five (5) years and three (3) months after shipment from manufacturer.

Compressors determined to have been defective within this extended time period will be either repaired or replaced with a compressor or compressor parts of similar design and capacity.

The four (4) year extended compressor warranty applies only to hermetically and semi-hermetically sealed parts of the compressor and does not apply to any other parts or components, including, but not limited to, cabinet, paint finish, temperature control, refrigerant, metering device, driers, motor starting equipment, fan assembly any other electrical component, etc.

134A (404A) AND R290 COMPRESSOR WARRANTY

The four year compressor warranty detailed above will be voided if the following procedure is not carefully adhered to:

1. This system contains R134A (R404A) and R290 refrigerant and polyol ester lubricant. The Polyester lubricant has rapid moisture absorbing qualities. If long exposure to the ambient conditions occur, the lubricant must be removed and replaced with new. Failure to comply with recommended lubricant specification will void the compressor warranty.
2. Dryer replacement is very important and must be changed when a system is opened for servicing. Dryer must be used with XH-9 desiccant.
3. Micron level vacuums must be achieved to insure low moisture levels in the system. 500 microns or lower must be obtained.

WHAT IS NOT COVERED BY THIS WARRANTY

WHAT IS NOT COVERED BY THIS WARRANTY

This warranty covers products shipped into the 48 contiguous United States. Warranty coverage on products used outside the 48 contiguous United States, Hawaii, Alaska, Puerto Rico, and Canada, cover parts only.

Obligation under warranty is limited to either repair or replacement of parts, subject to the additional limitations below. This warranty neither assumes nor authorizes any person to assume obligations other than expressly covered by this warranty.

1. **WARRANTY IS NOT TRANSFERABLE.** This warranty is not assignable and applies in favor of the original purchaser/user to whom delivered. Any such assignment or transfer shall void the warranties herein made and shall void all warranties, express or implied, including any warranty of merchantability or fitness for a particular purpose.
2. **NO CONSEQUENTIAL DAMAGES.** Not responsible for economic loss: profit loss or special, indirect, or consequential damages, including without limitation, losses or damages arising from food or product spoilage claims whether or not on account of refrigeration failure.
3. **ALTERATION, NEGLECT, ABUSE, MISUSE, ACCIDENT, DAMAGE DURING TRANSIT OR INSTALLATION, FIRE, FLOOD, ACTS OF GOD.** Not responsible for the repair or replacement of any parts that have been subjected after the date of manufacture to alteration, neglect, abuse, misuse, accident, damage during transit or installation, fire, flood, or an Act of God.
4. **NO IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE.** There are no other warranties, express, implied or statutory, except the one(1) year warranty and the additional four(4)

year compressor warranty as described above. These warranties are exclusive and in lieu of all other warranties, including implied warranty and merchantability or fitness for a particular purpose. There are no warranties which extend beyond the description on the face hereof.

5. **TRANSPORTATION COSTS.** Will accept parts covered under this warranty freight collect, provided that shipment has received prior approval. Not responsible for any other transportation costs, but will ship freight collect parts either repaired or replaced under these warranties.
6. **WARRANTY CLAIMS.** All claims should include: model number of the cooler, the serial number of the cabinet, proof of purchase, date of installation, and all pertinent information supporting the existence of the alleged defect. Any action or breach of these warranty provisions must be commenced within one (1) year after that cause of action has occurred. For warranty issues and technical support please call 888-585-9440.
7. This equipment is intended for commercial use only and this warranty is void if equipment is used in other than a commercial application. The manufacturer does not recommend or authorize the use of any product in a non-commercial application, including but not limited to residential use. The use or installation of any product in non-commercial applications renders all warranties, expressed or implied, including the warranties of merchantability and fitness for a particular purpose, null and void, including any responsibility for damage, costs and legal actions resulting from the use or installation of products in any non-commercial setting.





WARRANTY REGISTRATION CARD MAIL CARD IMMEDIATELY

This card must be mailed immediately after installation date for warranty to be in effect.

_____ (Name of Business)		_____ (Dealer Purchased From)	
_____ (Address)		_____ (City)	_____ (State)
		_____ (Zip Code)	
_____ (Model Number)		_____ (Serial Number)	
This is to inform that I, _____ (Please print name of individual who owns business)			
have had the above installed in my place of business _____ (Date of Purchase)			
_____ (Contact Phone Number)	_____ (Contact E-mail)	_____ (Signature of Individual Who Owns Business)	

The above warranties are in effect from this installation date, or 90 days, whichever comes first.

Documents / Resources

 <p>INSTRUCTION MANUAL Modular Ice Machines</p> <p>BIM-350F BIM-350H BIM-500F BIM-500H BIM-350F BIM-350H BIM-500F BIM-500H</p> <p><small>This is a general instruction manual for the BERG BIM-350F Modular Ice Machine. It contains information on the operation, maintenance, and safety of the machine. Please read this manual carefully before using the machine. The information in this manual is subject to change without notice. BERG Equipment Corporation, 10000 13th Avenue, North, Minneapolis, MN 55441, USA. © 2010 BERG Equipment Corporation.</small></p>	<p>BERG BIM-350F Modular Ice Machines [pdf] Instruction Manual BIM-350F, BIM-350H, BIM-500F, BIM-500H, Modular Ice Machines</p>
 <p>INSTRUCTION MANUAL Modular Ice Machines</p> <p>BIM-350F BIM-350H BIM-500F BIM-500H BIM-350F BIM-350H BIM-500F BIM-500H</p> <p><small>This is a general instruction manual for the BERG BIM-350F Modular Ice Machine. It contains information on the operation, maintenance, and safety of the machine. Please read this manual carefully before using the machine. The information in this manual is subject to change without notice. BERG Equipment Corporation, 10000 13th Avenue, North, Minneapolis, MN 55441, USA. © 2010 BERG Equipment Corporation.</small></p>	<p>BERG BIM-350F Modular Ice Machines [pdf] Instruction Manual BIM-350F, BIM-350H, BIM-500F, BIM-500H, Modular Ice Machines</p>
 <p>INSTRUCTION MANUAL Modular Ice Machines</p> <p>BIM-350F BIM-350H BIM-500F BIM-500H BIM-350F BIM-350H BIM-500F BIM-500H</p> <p><small>This is a general instruction manual for the BERG BIM-350F Modular Ice Machine. It contains information on the operation, maintenance, and safety of the machine. Please read this manual carefully before using the machine. The information in this manual is subject to change without notice. BERG Equipment Corporation, 10000 13th Avenue, North, Minneapolis, MN 55441, USA. © 2010 BERG Equipment Corporation.</small></p>	<p>BERG BIM-350F Modular Ice Machine [pdf] Instruction Manual BIM-350F, BIM-350H, BIM-500F, BIM-500H, BIM-350F Modular Ice Machine, BIM-350F, Modular Ice Machine, Ice Machine, Machine</p>
 <p>INSTRUCTION MANUAL Modular Ice Machines</p> <p>BIM-350F BIM-350H BIM-500F BIM-500H BIM-350F BIM-350H BIM-500F BIM-500H</p> <p><small>This is a general instruction manual for the BERG BIM-350F Modular Ice Machine. It contains information on the operation, maintenance, and safety of the machine. Please read this manual carefully before using the machine. The information in this manual is subject to change without notice. BERG Equipment Corporation, 10000 13th Avenue, North, Minneapolis, MN 55441, USA. © 2010 BERG Equipment Corporation.</small></p>	<p>BERG BIM-350F Modular Ice Machines [pdf] Instruction Manual BIM-350F, BIM-350H, BIM-500F, BIM-500H, BIM-350F Modular Ice Machines, BIM-350F, Modular Ice Machines, Ice Machines, Machines</p>

References

-  [Admiral Craft Admiral Craft Equipment Corporation Equipment Corp.](#)