



BROAN VTTOUCHW Advanced Touchscreen Control User Guide


[Home](#) » [Broan](#) » **BROAN VTTOUCHW Advanced Touchscreen Control User Guide** 

Contents

- [1 BROAN VTTOUCHW Advanced Touchscreen Control](#)
- [2 INSTRUCTIONS](#)
- [3 INSTALLATION](#)
- [4 PRELIMINARY SETTINGS](#)
- [5 AVAILABLE MODES](#)
- [6 TROUBLESHOOTING](#)
- [7 Documents / Resources](#)
- [8 Related Posts](#)



BROAN VTTOUCHW Advanced Touchscreen Control

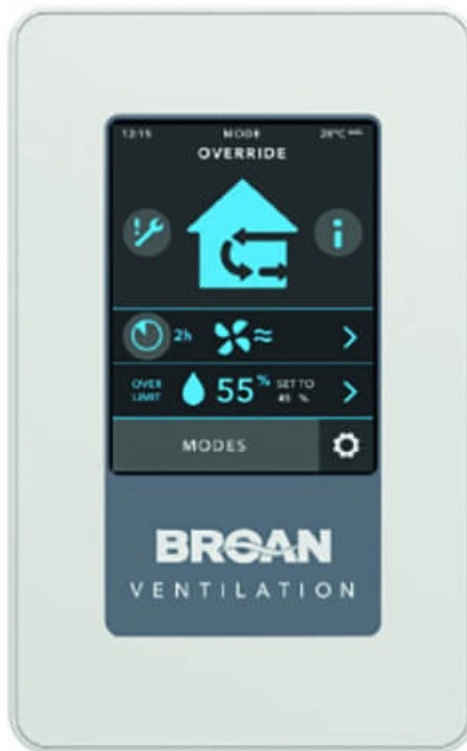

INSTRUCTIONS

READ AND SAVE THESE INSTRUCTIONS

The illustrations in this document are generic; your control appearance may be slightly different from the ones shown.

WARNING

Electrical wiring must be done by qualified personnel in accordance with all applicable codes and standards. Before connecting wires, unplug the unit or switch power off at service panel and lock service disconnecting means to prevent power from being switched on accidentally. Always wear safety glasses and gloves while performing these instructions.

CAUTION

Failure to comply with the following can cause erratic operation of the control and/or unit:

- Never install more than one main wall control per ventilation unit.
- Keep control low voltage wiring at least 1 foot (305 mm) away from motors, lighting balast, light dimming circuit and power distribution panel. Do not route control wiring alongside house power wiring.
- Ensure the wires are securely connected.


CAUTION

If ducts have to go through an unconditioned space (e.g.: attic), always use insulated ducts to prevent condensation formation inside and outside ducts, which could cause material damage and/or mold growth. Moreover, if fresh air to building duct and/or stale air from building duct goes/go through an unconditioned space, the unit must be set to operate continuously in cold conditions (below 10°C/50°F). Continuous air movement inside ducts will prevent condensation formation. The unit can be stopped temporarily for maintenance and/or repair purposes in such conditions. (Refer to section 2.2 from unit User and Installer Manual for more details.)

INSTALLATION


This control is compatible with all AI series units.

1. Unplug the ventilation unit.

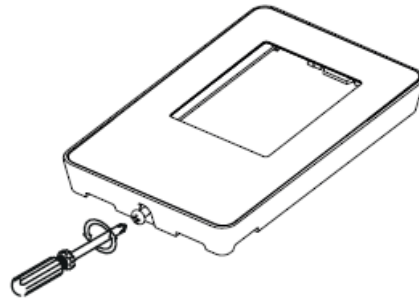

VC0217


2. Unscrew the screw located on the underside of the wall control. Separate the front module from the mounting plate by lifting its bottom part.

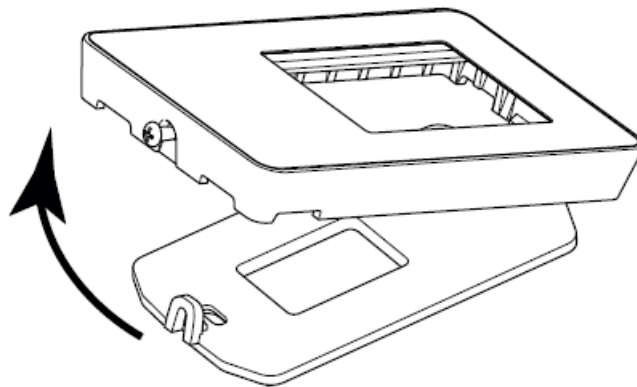

VC0219


NOTE: If the control is to be installed in an electric box, do not perform steps 3 and 4.

3. Using the mounting plate, mark the hole opening and screw locations at the desired height on the wall.

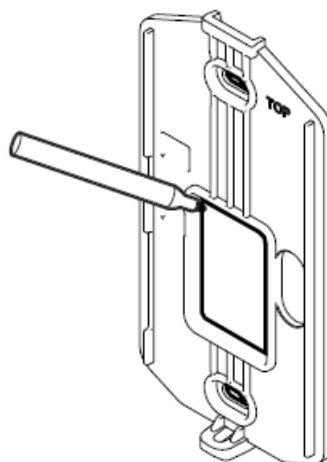


VC0255

4. Cut the hole opening using the mark previously drawn (1/8" outside the mark is recommended). Drill both screw holes (3/16" Ø) in wall and insert the wall anchors (included).

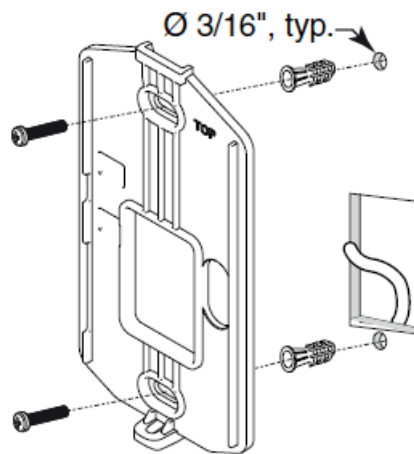

VC0244A


5. Fix the mounting plate to the wall using the screws provided
6. Strip the end of the cable to access the 4 wires (about 3"). Strip the end of each wire (about 1/4"). Connect the wires to the terminals, regardless of the wire color. Note which wire color has been chosen for each terminal.

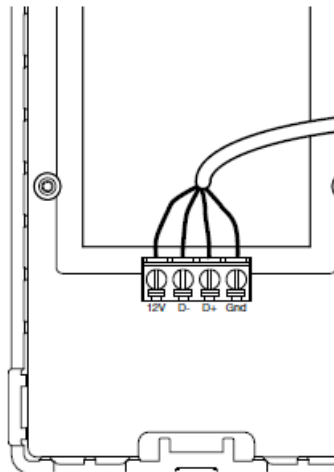

CAUTION


Be careful not to pinch wires when reinstalling the front module on the mounting plate.

7. Install the front module on the mounting plate. Fix both parts by screwing the screw on the underside of the wall control.

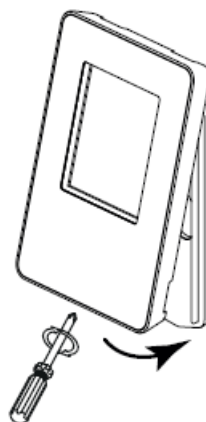

VC0218


8. Perform the electrical connection to the terminal connector of the unit, as shown below. For more details, refer to the installation manual of the ventilation unit.

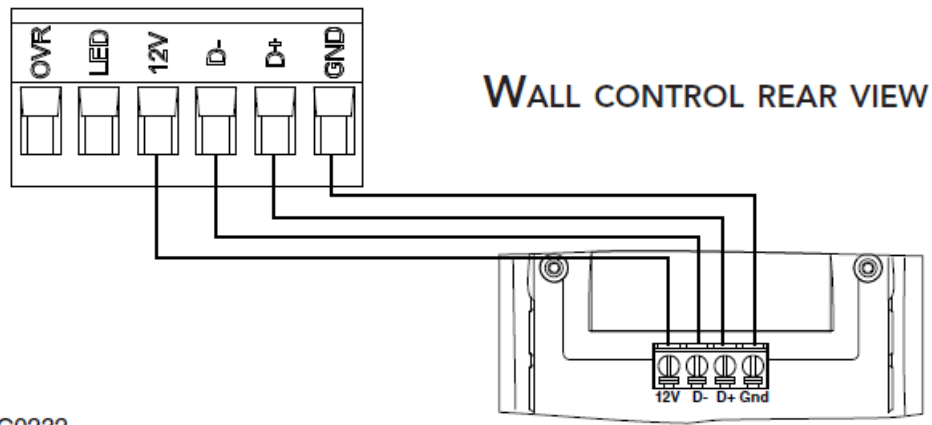


9. **NOTE:** To avoid miswiring, refer to the notes taken at step to match the wire color with the right terminal.
Plug the ventilation unit in power source.

PRELIMINARY SETTINGS

Set the Language and the Day and time screens following your preferences.

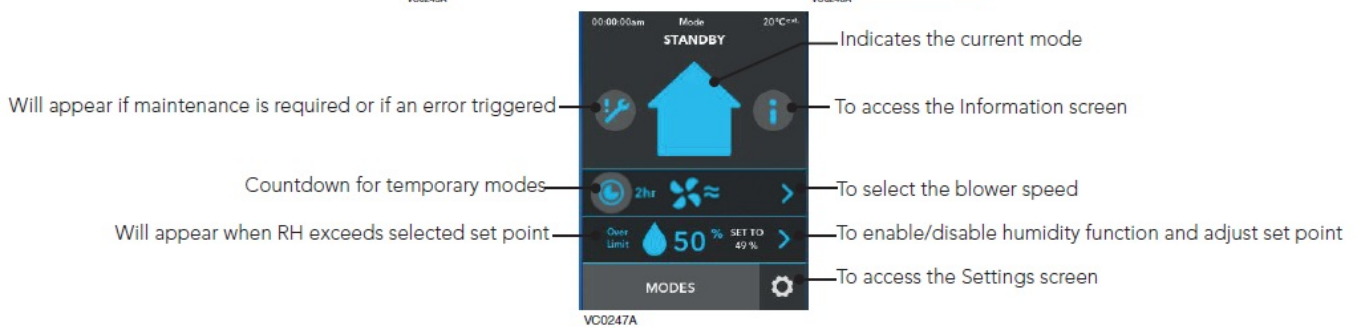

AVAILABLE MODES

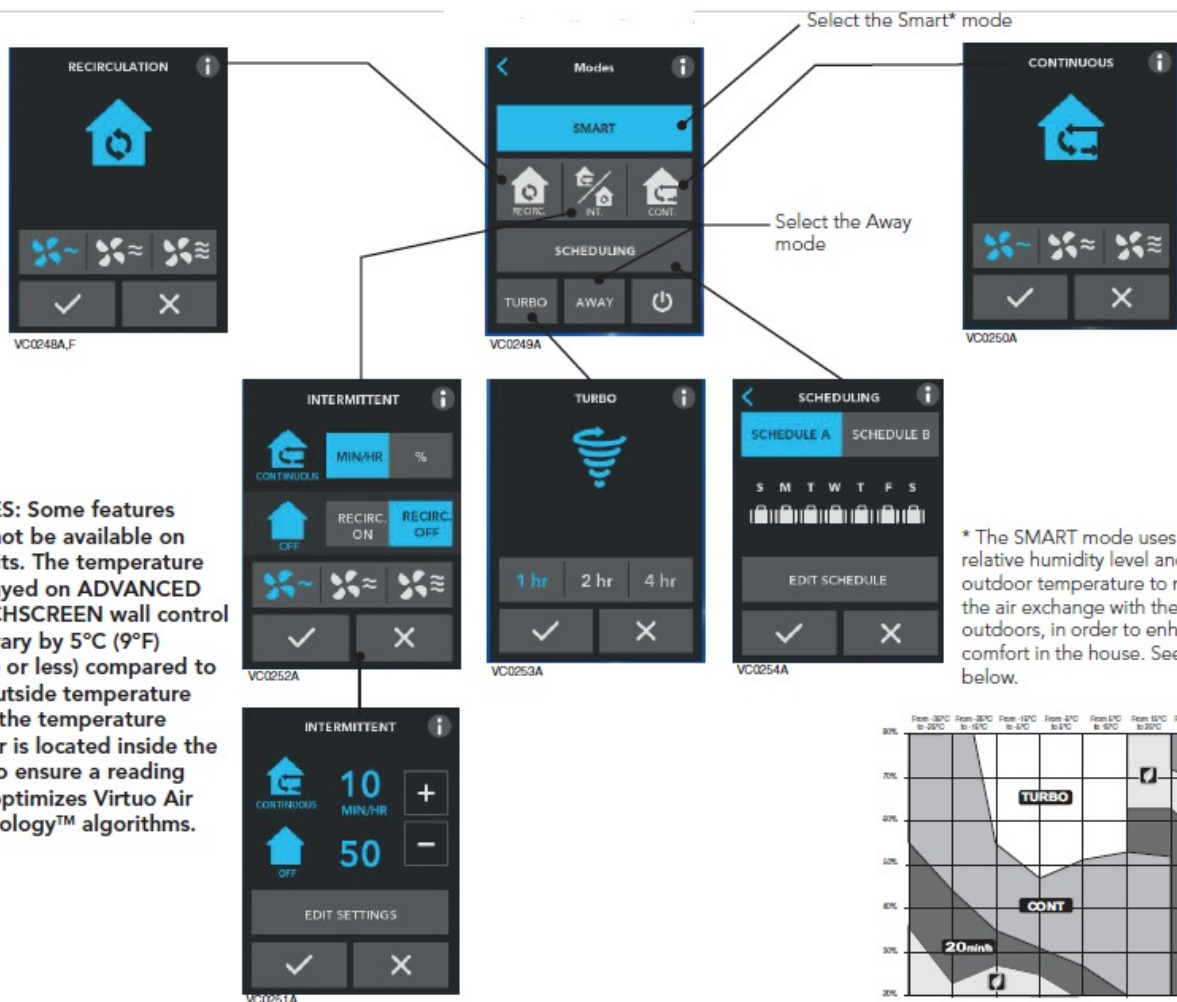

* The SMART mode uses indoor relative humidity level and outdoor temperature to manage the air exchange with the outdoors, in order to enhance comfort in the house. See graph below.

NOTES: Some features may not be available on all units. The temperature displayed on ADVANCED TOUCHSCREEN wall control may vary by 5°C (9°F) (more or less) compared to the outside temperature since the temperature sensor is located inside the unit to ensure a reading that optimizes Virtuo Air Technology™ algorithms.


NAVIGATION KEYS

NAVIGATION KEYS	
	To access next screen
	To access previous screen
	To confirm
	To exit screen without saving
	To get more information on the action(s) to perform on the corresponding screen

TROUBLESHOOTING

PROBLEM	POSSIBLE CAUSE(S)	SOLUTION(S)
The screen is not powered	The ventilation unit is not powered	Plug the ventilation unit
	Miswiring/Damaged wire/Contact between wires	Check wall control wiring
	The connector J15a is not connected properly	Check J15a connector connection
	The wall control is not operational or defective	Check if it uses the same isolated power circuit as the unit on the electronic board Replace the electronic assembly
The screen is powered but displays error E50	Miswiring/Broken wire	Check wall control wiring
The touch screen does not work for all the keys	Defective control	Replace the electronic assembly

Documents / Resources

	<p>BROAN VTTTOUCHW Advanced Touchscreen Control [pdf] User Guide VTTTOUCHW Advanced Touchscreen Control, VTTTOUCHW, Advanced Touchscreen Control</p>
--	--