


---

[Home](#) » [CALYPSO instruments](#) » **CALYPSO instruments ULP Ultra Low Power Ultrasonic Summit Heated Wind Meter User Manual** 

## **CALYPSO instruments ULP Ultra Low Power Ultrasonic Summit Heated Wind Meter User Manual**



## Contents [ [hide](#) ]

- 1 [Product Overview](#)
- 2 [Package content](#)
- 3 [Communication Protocols](#)
- 4 [MODBUS RTU](#)
- 5 [Modbus Configuration Setup \(ULP\)](#)
- 6 [Modbus Registers](#)
- 7 [RS485 Configuration](#)
- 8 [RS485 Configuration Setup for ULP \(just wind meter, NO HEATING\)](#)
- 9 [RS485 Registers](#)
- 10 [Technical specifications](#)
- 11 [Technical specifications \(II\)](#)
- 12 [Mounting accessories](#)
- 13 [Firmware Upgrade](#)
- 14 [General information](#)
- 15 [General recommendations](#)
- 16 [Maintenance and repair](#)
- 17 [Warranty](#)
- 18 [Documents / Resources](#)
  - 18.1 [References](#)

## Product Overview

Thank you for choosing the ULP SUMMIT HEATED wind meter from Calypso Instruments. This is the first model of our generation II, representing an important technology breakthrough condensing an extensive R+D investment:

- Both shape and firmware have been enhanced for an improved rain performance. This is key for static applications such as weather stations.
- Mechanical design has been revamped making the unit more robust and dependable.
- We feel very proud to release a unit that requires under 2A of power at 12V, sampling at 1Hz.

We recommend using power supply of higher power (more than 24W)

- Different output options available: RS485, MODBUS RT, UART/I2C (Under Demand)

## **Applications for the ULP SUMMIT HEATED are the following:**

- Weather Stations | Drones
- Temporary Scaffolding and construction | Infrastructures and building | Cranes
- Spraying | Irrigation | Fertilizing | Precision Agriculture
- Smart Cities | Shooting | Scientific
- Sailing in Artic Places.
- For uses in below Freezing Temperatures



## **Package content**

### **The package contains the following:**

- Ultrasonic ULP SUMMIT HEATED Wind Instrument plus 2 meter (6.5 ft) cable for connection\*
- Serial number reference on the side of the packaging.
- A quick user guide on the back of the packaging and some more useful information for the customer.
- M4 headless screw (x6)

## **Communication Protocols**

### **MODBUS RTU**

#### **Modbus Wiring**

## MODBUS Output:

White GND (Power -)	Yellow DATA RX / SDA
Brown VCC (Power +)	Green DATA TX/ SCL

## Modbus Configuration

The ULP SUMMIT HEATED can be set up by using a special configuration app made by Calypso Instruments.

In order to use the app, you should download the configurator from our website at [www.calypsoinstruments.com](http://www.calypsoinstruments.com).

### The following can be changed with the configurator:

**Data Protocol:** RS485 to Modbus (or vice versa)

**Baudrate:** The number of signal units per second that the wind sensor sends. A baud can contain several bits.

**Data rate:** The number of bits that are transmitted per unit time through a digital transmission system or between two digital devices.

**Wind Filter:** You can choose between the sensibility of the wind filter.

***baudrate:*** 1200 to 115200 (8n1) bauds

***output rate:*** 0.1 to 10 Hertz (Depends on the filter you select)

***output units:*** m/s, knots or km/h

**Power consumption:** Ultra-Low-Power (MODBUS) : 0.25 mA @5V, 1 Hz. (NO HEATING) 2A, @12V, 1Hz (HEATING)

Power Consumption will vary depending on the baudrate & output rate chosen

## Modbus Configuration Setup (ULP)

The ULP SUMMIT HEATED can be set up by using a special configuration app made by Calypso Instruments. In order to use the app, you should download the configurator from our website at [www.calypsoinstruments.com](http://www.calypsoinstruments.com).

For more information, please watch the following video.

<https://bit.ly/3DuA7IM>


\*USB converter cables available on [calypsosinstruments.com](http://calypsosinstruments.com).

### This are the STEPS to FOLLOW to Configure your DEVICE Successfully:

1. Use a USB to RS485 Converter cable to connect your wind sensor to your computer.
2. Connect all the cables to the USB converter cable EXCEPT for the BROWN cable.



3. Open the Configuration app, select your COM port and Click on Connect button

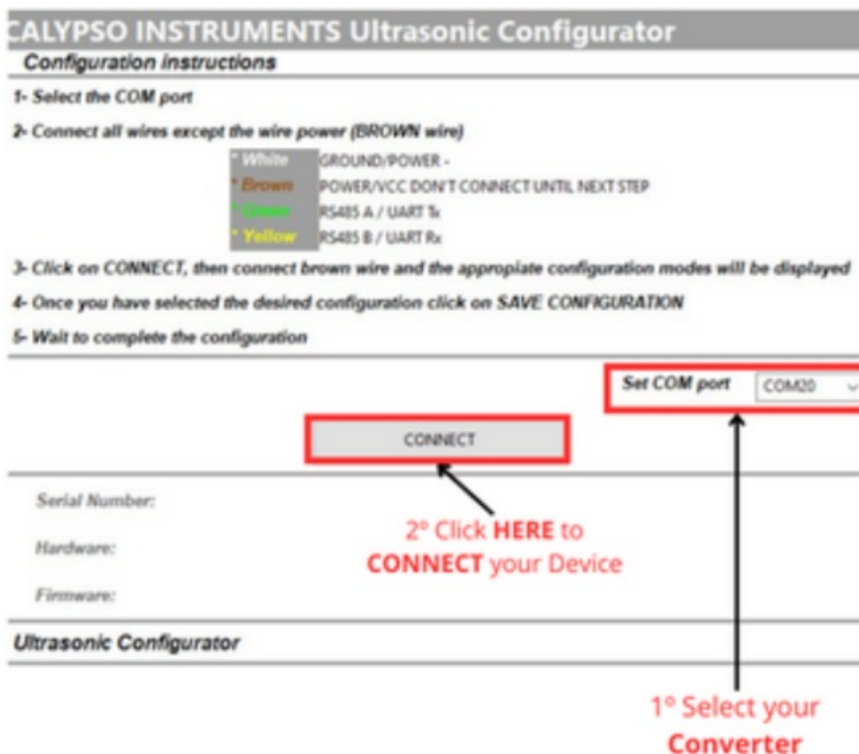

4. Connect the brown cable when the configurator tells you to.
5. Wait a few seconds and Configure your Anemometer. In this case, select Stream and configure your anemometer. When you ve finished the configuration click on Start Configuration ( SAVE Configuration in the image)

### Modbus Configuration Setup (II)

## CALYPSO INSTRUMENTS Ultrasonic Configurator

### Configuration instructions

1- Select the COM port

2- Connect all wires except the wire power (BROWN wire)

* White	GROUND/POWER -
* Brown	POWER/VCC DON'T CONNECT UNTIL NEXT STEP
* Green	RS485 A / UART Tx
* Yellow	RS485 B / UART Rx

3- Click on CONNECT, then connect brown wire and the appropriate configuration modes will be displayed

4- Once you have selected the desired configuration click on SAVE CONFIGURATION

5- Wait to complete the configuration

4° Click HERE to **SAVE**  
your Configuration

Set COM port

COM20

SAVE CONFIGURATION

Serial Number: 001e00274e30501020303747

Hardware: UAM\_3.10

Firmware: 1.43

3° Configure **HERE**  
your Anemometer

### Ultrasonic Configurator

☒ Stream

☐ Demand

☐ I2C

Baudrate	38400 bauds
Wind Filter	Medium
Data Rate	1Hz ---> 1 per second
Wind Units	m/s

DEVICE CONNECTED

More info [www.calypsoinstruments.com](http://www.calypsoinstruments.com)

- Wait to complete configuration and when the system advises that it is finished, disconnect the USB and cables.
- Your unit is now configured.

CALYPSO INSTRUMENTS Ultrasonic Configurator

Configuration instructions

1- Select the COM port

2- Connect all wires except the wire power (BROWN wire)

White

Brown

Green

Yellow

GROUND/POWER -

POWER/VCC DON'T CONNECT UNTIL NEXT STEP

RS485 A / UART Tx

RS485 B / UART Rx

3- Click on CONNECT, then connect brown wire and the appropriate configuration modes will be displayed

4- Once you have selected the desired configuration click on SAVE CONFIGURATION

5- Wait to complete the configuration

Set COM port

COM20

CONNECT

Serial Number: 003b003d3830500720333658

Hardware: UAR\_3.10

Firmware: 1.42

Ultrasonic Configurator

CONFIGURATION COMPLETE

More info [www.calypsoinstruments.com](http://www.calypsoinstruments.com)

## Modbus Registers

DIR\_BASE\_LA1 30001

SYSTEM\_STATUS DIR\_BASE\_LA1 + 200

WIND\_SPEED DIR\_BASE\_LA1 + 201

WIND\_DIRECTION DIR\_BASE\_LA1 + 202

TWO\_MIN\_AVG\_WS DIR\_BASE\_LA1 + 203

TWO\_MIN\_AVG\_WD DIR\_BASE\_LA1 + 204

TEN\_MIN\_AVG\_WS DIR\_BASE\_LA1 + 205

TEN\_MIN\_AVG\_WD DIR\_BASE\_LA1 + 206

WIND\_GUST\_SPEED DIR\_BASE\_LA1 + 207

WIND\_GUST\_DIR DIR\_BASE\_LA1 + 208

FIVE\_MIN\_AVG\_WS DIR\_BASE\_LA1 + 210

FIVE\_MIN\_AVG\_WD DIR\_BASE\_LA1 + 211

FIVE\_WIND\_GUST\_SPEED DIR\_BASE\_LA1 + 212

FIVE\_WIND\_GUST\_DIR DIR\_BASE\_LA1 + 213

See the MODBUS sensor data request table at the end of the document

## RS485

### RS485 Wiring

#### RS485 (NMEA 0183) Output:

White GND (Power -)	Yellow DATA RX / SDA
Brown VCC (Power +)	Green DATA TX/ SCL

#### Heating Wiring:

Grounding cable (Power -)	VCC (Power +)
------------------------------	---------------

### RS485 Configuration

The ULP SUMMIT HEATED can be set up by using a special configuration app made by Calypso Instruments.

In order to use the app, you should download the configurator from our website at [www.calypsoinstruments.com](http://www.calypsoinstruments.com).

#### The following can be changed with the configurator:

**Data Protocol:** RS485 to Modbus (or viceversa)

**Baudrate:** The number of signal units per second that the wind sensor sends. A baud can contain several bits.

**Data rate:** The number of bits that are transmitted per unit time through a digital transmission system or between two digital devices.

**Wind Filter:** You can choose between the sensibility of the wind filter.

**baudrate:** 1200 to 115200 (8n1) bauds

**output rate:** 0.1 to 10 Hertz (Depends on the filter you select)

**output units:** m/s, knots or km/h



## Power consumption:

**Ultra-Low-Power (RS485 NMEA0183) :** 0,25mA @5V, 1Hz (No heating) 2A, @12V, 1HZ (HEATING)

Power Consumption will vary depending on the baudrate & output rate chosen

## RS485 Configuration Setup for ULP (just wind meter, NO HEATING)

The ULP SUMMIT HEATED can be set up by using a special configuration app made by Calypso Instruments. In order to use the app, you should download the configurator from our website at [www.calypsoinstruments.com](http://www.calypsoinstruments.com).

For more information, please watch the following video.

<https://bit.ly/3DuA7IM>


\*USB converter cables available on [calypsoinstruments.com](http://calypsoinstruments.com).

## This are the STEPS to FOLLOW to Configure your DEVICE Successfully:

1. Use a USB to RS485 Converter cable to connect your wind sensor to your computer.
2. Connect all the cables to the USB converter cable EXCEPT for the BROWN cable.



3. Open the Configuration app, select your COM port and Click on Connect button

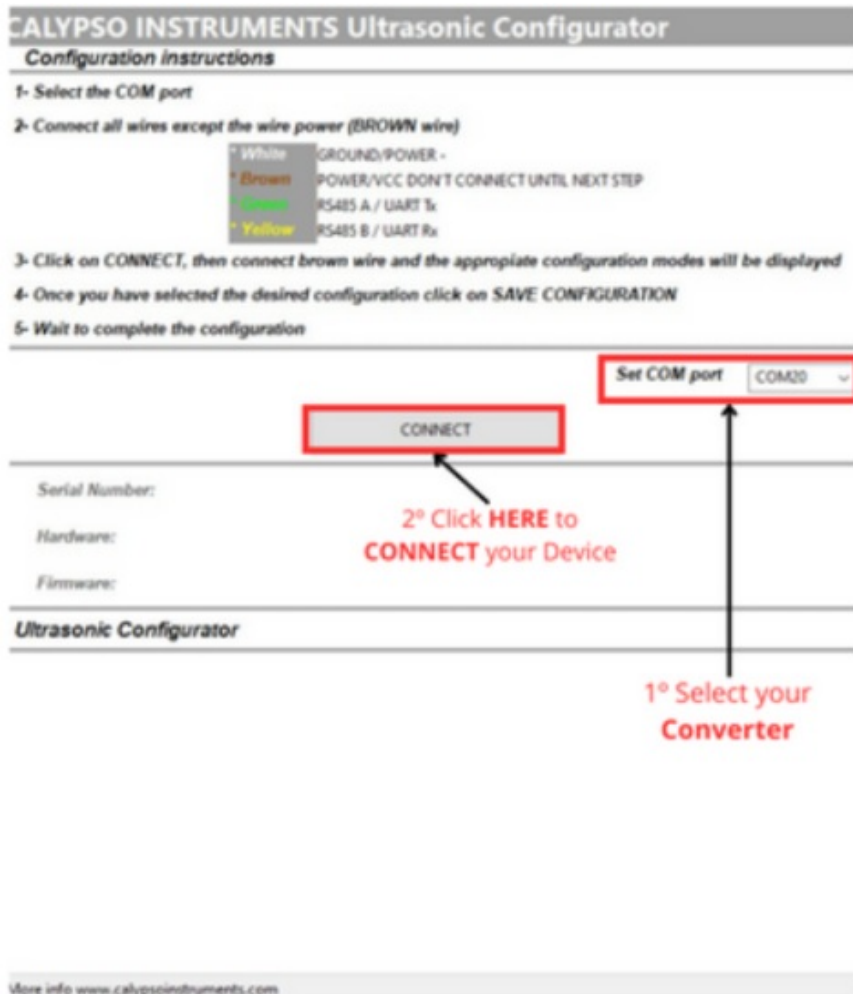

4. Connect the brown cable when the configurator tells you to.
5. Wait a few seconds and Configure your Anemometer. In this case, select Stream and configure your anemometer. When you've finished the configuration click on Start Configuration (SAVE Configuration in the image).

## RS485 Configuration Setup (II)

## CALYPSO INSTRUMENTS Ultrasonic Configurator

### Configuration instructions

1- Select the COM port

2- Connect all wires except the wire power (BROWN wire)

White	GROUND/POWER -
Brown	POWER/VCC DON'T CONNECT UNTIL NEXT STEP
Green	RS485 A / UART Tx
Yellow	RS485 B / UART Rx

3- Click on CONNECT, then connect brown wire and the appropriate configuration modes will be displayed

4- Once you have selected the desired configuration click on SAVE CONFIGURATION

5- Wait to complete the configuration

4° Click HERE to **SAVE**  
your Configuration

Set COM port COM20

SAVE CONFIGURATION

Serial Number: 001e00274e30501020303747

Hardware: UAM\_3.10

Firmware: 1.43

3° Configure **HERE**  
your Anemometer

### Ultrasonic Configurator

☒ Stream

☐ Demand

☐ I2C

Baudrate	38400 bauds
Wind Filter	Medium
Data Rate	1Hz ---> 1 per second
Wind Units	m/s

DEVICE CONNECTED

More info [www.calypsoinstruments.com](http://www.calypsoinstruments.com)

- Wait to complete configuration and when the system advises that it is finished, disconnect the USB and cables.
- Your unit is now configured.

CALYPSO INSTRUMENTS Ultrasonic Configurator
Configuration instructions

1- Select the COM port  
2- Connect all wires except the wire power (BROWN wire)  

White
Brown
Green
Yellow

GROUND/POWER -  
POWER/VCC DON'T CONNECT UNTIL NEXT STEP  
RS485 A / UART Tx  
RS485 B / UART Rx

3- Click on CONNECT, then connect brown wire and the appropriate configuration modes will be displayed  
4- Once you have selected the desired configuration click on SAVE CONFIGURATION  
5- Wait to complete the configuration

Set COM port
COM20

CONNECT

Serial Number: 003b003d3830500720333658  
Hardware: UAR\_3.10  
Firmware: 1.42

Ultrasonic Configurator

CONFIGURATION COMPLETE

More info [www.calypsoinstruments.com](http://www.calypsoinstruments.com)

## RS485 Registers

MWV Wind Speed and Angle

1 2 3 4 5

||| |\$-MWV,x.x,a,x.x,a\*hh

1. Wind Angle, 0 to 360 degrees
2. Reference, R = Relative, T = True
3. Wind Speed
4. Wind Speed Units, K/M/N
5. Status, A = Data Valid
6. Checksum

By default, the communication parameters are 38400bps, 8N1.

**Some examples of sentences are:**

\$IIMWV,316,R,06.9,N,A\*18

\$IIMWV,316,R,06.8,N,A\*19

The connection is straightforward with no configuration required in RAW mode configuration.

**In case of ON DEMAND configuration mode, the sentence received is almost the same, but there is a need of this sentence for requesting data every time you ask for data:**

\$ULPI\*00\r\n //I=id node by default.

\$ULPA\*08\r\n

\$ULPB\*0B\r\n

P1\*78\r\n

**The received sentence has this structure, slightly modified:**

\$liMWV,x.x,a,x.x,a\*hh, being i the node (I,A,B,C,...) configured.

## Technical specifications

**The ULP has the following technical specifications:**

### Dimensions



- **Diameter:** 70 mm (2.76 in.)
- **Height:** 83 mm (3.27 in.)

### Weight:

418 grams (14.7 ounces)

### Power:

3.3 – 18 VDC (Wind Meter)

12 VDC (Heating)



## Sensors

Ultrasonic transducers (4x)

**Sample rate:** 0.1 Hz to 10 Hz

## Wind Information

- Wind speed
- Wind direction

**Sample rate:** 0.1 Hz to 10 Hz (Configurable)

## Wind Speed

**Range:** 0.5 to 45 m/s (1.12 to 100 mph) or 0.5 to 25m/s (1.12 to 56 mph)

**Accuracy:**  $\pm 0.1$  m/s at 10m/s (0.22 at 22.4 mph)

**Threshold:** 0.5 m/s (1.12 mph)

## Wind direction

**Range:** 0 – 359°

**Accuracy:**  $\pm 1^\circ$

Heated ON-> Temperature  $< 5^\circ\text{C}/41^\circ\text{F}$

Heated OFF -> Temperature  $\geq 15^\circ\text{C}/59^\circ\text{F}$


After turning ON it will only be switched OFF when reaches  $15^\circ\text{C}/59^\circ\text{F}$

## Technical specifications (II)

### Easy mount

- 3 x M4 lateral female tripod thread
- 3 x M4 base female tripod thread UNC 1/4" – 20

It can be mounted either on a plate (inferior screws) or on a tube (lateral screws).

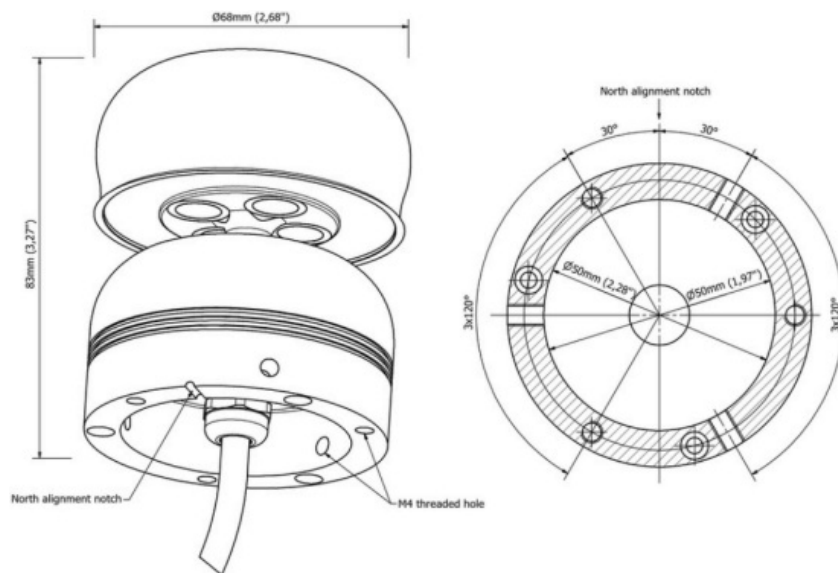

### Mounting accessories

A wide range of accessories can be used with the device. The ULP SUMMIT HEATED can be mounted on a flat surface and screwed on to different sizes of poles. It can also be used with an adaptor for poles of 39 mm.

\* Please, visit our website and check all the accessories available and their possible combinations at [www.calypsoinstruments.com](http://www.calypsoinstruments.com).

- 39mm Adapter



- Adapter to Aluminum & Carbon Pole



- Mast Mount



**Firmware:** Up gradable via RS485, MODBUS



## **Product Material**

The ULP SUMMIT HEATED is engineered to be a robust device with a minimal downtime. This new shape has been designed for optimum water spillage which implies lower probability of ice formation. The heating system prevents ice from forming on the anemometer.

The input wires are protected by Transient Voltage Suppression (TVS) diodes. The instrument body is built with Poly amide.

## **Quality Control**

Every single unit is calibrated with accuracy, following the same calibration standards for each one in a wind tunnel.

A Q/C report for both wind speed and direction is generated and kept in our files. Standard deviation is checked to guarantee that each unit has been calibrated to the highest standards.

## **Firmware Upgrade**

Firmware up gradable and configurable via cable using the configurator (<https://calypsoinstruments.com/technical-information>). A USB converter cable is available as an accessory on [calypsoinstruments.com](https://calypsoinstruments.com).

### **Link to Firmware upgrader:**

<https://drive.google.com/drive/folders/1jg5BcCEpkXBLXEEYmGXeLNyOimmEb3Sm>

## **General information**

### **General recommendations**

Wind Speed Gust is that value that measures abrupt and sudden change in wind speed. Regarding mounting the unit, align the north mark of the ULP towards the natural north, bow of a boat, or the marker used as a reference.

Regarding mounting the unit, the mast head has to be prepared for the mechanical installation. Align the

North mark of the Ultrasonic Ultra-Low-Power to the north.

Make sure to install the sensor in a location free from wind perturbation, usually on the mast head.

Make sure to install the sensor in a location **free from anything that obstructs the flow of wind to the sensors within a 2 meter radius**, for example, the mast head on a boat.

### **Other important aspects:**

- Do not attempt to access the transducers area with your fingers;
- Do not attempt any modification to the unit;
- Never paint any part of the unit or alter its surface in any way.
- NOT allow to be submerged fully or partially in water.

If you have any questions or doubts, please contact us directly.

### **Maintenance and repair**

The ULP SUMMIT HEATED does not require great maintenance thanks to the lack of the moving parts in this new design.

Transducers must be kept clean and aligned. Impacts or incorrect impulsive handling may lead to transducers misalignment.

The space around the transducers must be empty and clean. Dust, frost, water, etc... will make the unit stop working.

The ULP SUMMIT HEATED can be wiped clean with a damp cloth being careful to not touch the transducers.

### **Warranty**

This warranty covers the defects resulting from defective parts, materials and manufacturing, if made known to the manufacturer within 24 months after the purchase date.

Warranty is void in case of non-following the instructions of use, repair or maintenance without written authorisation.

Any wrongful use by the user will not incur any responsibility on part of Calypso Instruments; therefore, any harm caused to the ULP by a mistake will not be covered by the warranty. Using assembly elements different from those delivered with the product will void the warranty.

Changes on transducers position/alignment will void any warranty.

For further information please contact Calypso Technical Support through [sales@calypsoinstruments.com](mailto:sales@calypsoinstruments.com) or visit [www.calypsoinstruments.com](http://www.calypsoinstruments.com).

### MODBUS Sensor Data Requests

Measurements all have a resolution of 0.1 but are reported as 10\*.

8.2 m/s is returned as a value 82. The user must /10 in order to reinsert the decimal precision.

Address	Register	Access Type	Response Range	Data Type	Description
200	201	Read	0 to 15t	16-bit Signed Int	System Status
201	202	Read	0 to 500*	16-bit Signed Int	Wind speed (m/s) (3 second moving average)
202	203	Read	0 to 3599*	16-bit Signed Int	Wind direction (°) (3 second moving average)
203	204	Read	0 to 500*	16-bit Signed Int	2 min avg wind speed
204	205	Read	0 to 3599*	16-bit Signed Int	2 min avg wind direction
205	206	Read	0 to 500*	16-bit Signed Int	10 min avg wind speed

206	207	Read	0 to 3599*	16-bit Signed Int	10 min avg wind direction
207	208	Read	0 to 500*	16-bit Signed Int	Wind gust Speed
208	209	Read	0 to 3599*	16-bit Signed Int	Wind gust direction
210	11	Read	0 to 500*	16-bit Signed Int	5 min avg wind speed
211	12	Read	0 to 3599*	16-bit Signed Int	5 min avg wind direction
212	13	Read	0 to 500*	16-bit Signed Int	5 min Wind gust speed
213	14	Read	0 to 3599*	16-bit Signed Int	5 min Wind gust direction

† If not applicable to ULP-M, the register should report a value of zero (0).

\* See Data Format section for numeric conversions.


Ultra-Low-Power Ultrasonic wind meter SUMMIT HEATED

(ULP SUMMIT HEATED)

User manual English version 3.0



## Documents / Resources

	<p><a href="#">CALYPSO instruments ULP Ultra Low Power Ultrasonic Summit Heated Wind Meter [pdf]</a> User Manual</p> <p>ULP Ultra Low Power Ultrasonic Summit Heated Wind Meter, ULP, Ultra Low Power Ultrasonic Summit Heated Wind Meter, Ultrasonic Summit Heated Wind Meter, Summit Heated Wind Meter, Heated Wind Meter, Wind Meter</p>
---	---

## References

- [User Manual](#)

- CALYPSO instruments
- ◆ CALYPSO instruments, Heated Wind Meter, Summit Heated Wind Meter, ULP, ULP Ultra Low Power Ultrasonic Summit Heated Wind Meter, Ultra Low Power Ultrasonic Summit Heated Wind Meter, Ultrasonic Summit Heated Wind Meter, Wind Meter

---

## Leave a comment

Your email address will not be published. Required fields are marked \*

Comment \*

Name

Email

Website

☐ Save my name, email, and website in this browser for the next time I comment.

**Post Comment**

**Search:**

e.g. whirlpool wrf535swhz

**Search**

[Manuals+](#) | [Upload](#) | [Deep Search](#) | [Privacy Policy](#) | [@manuals.plus](#) | [YouTube](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.