

Casio A168 Digital Wrist Watch User Manual


[Home](#) » [Casio](#) » Casio A168 Digital Wrist Watch User Manual 

Contents

- [1 Casio A168 Digital Wrist Watch User Manual](#)
- [2 GENERAL GUIDE](#)
- [3 TIMEKEEPING MODE](#)
- [4 About the backlight](#)
- [5 ALARM MODE](#)
- [6 STOPWATCH MODE](#)
 - [6.1 TIME SETTING MODE](#)
- [7 Casio A168 Digital Wrist Watch User Manual](#)
- [8 References](#)
- [9 Related Posts](#)

CASIO


Casio A168 Digital Wrist Watch User Manual

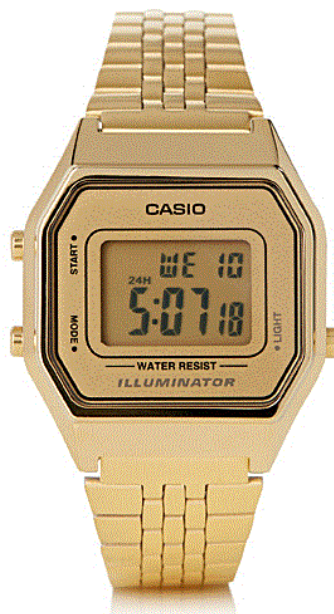

OPERATION CHART: MODULE QW-1275

GENERAL GUIDE

- Press a to change from mode to mode.
- After you perform an operation in any mode, pressing 8 returns to the Timekeeping Mode

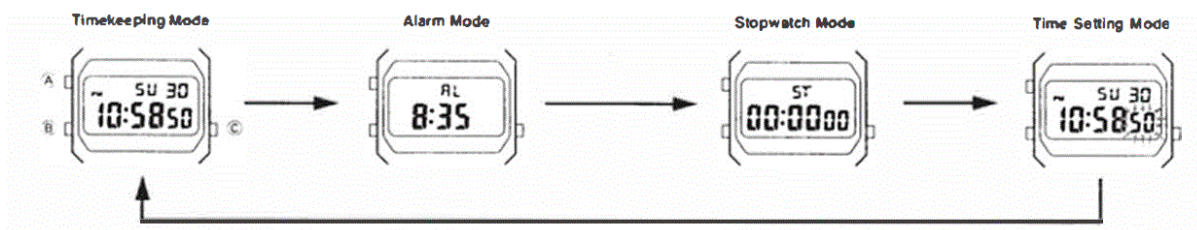


TIMEKEEPING MODE

- In the Timekeeping Mode, press (C) to switch between the 12-hour and 24-hour formats.
- Day of the week is displayed as follows.
 - **SU**: Sunday
 - **MO**: Monday
 - **TU**: Tuesday
 - **WE**: Wednesday
 - **TH**: Thursday
 - **FA**: Friday
 - **SA**: Saturday


About the backlight

- Holding down A briefly illuminates the display.
- The backlight of this watch employs an electro luminescent (EL) light, which loses its illuminating power after very long time use.
- Frequent use of the backlight shortens the battery life.

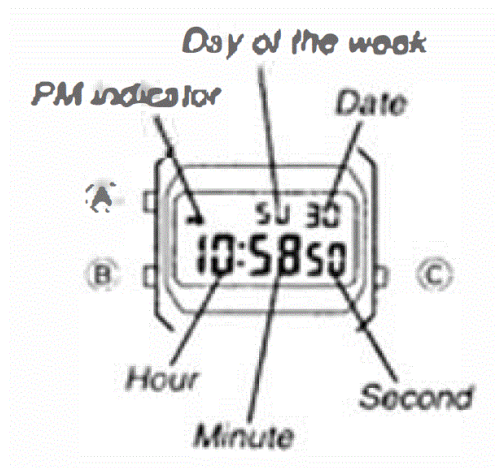


ALARM MODE

When the Daily Alarm is switched on, the alarm sounds for 20 seconds at the preset time each day. When the Hourly Time Signal is switched on, the watch beeps every hour on the hour.

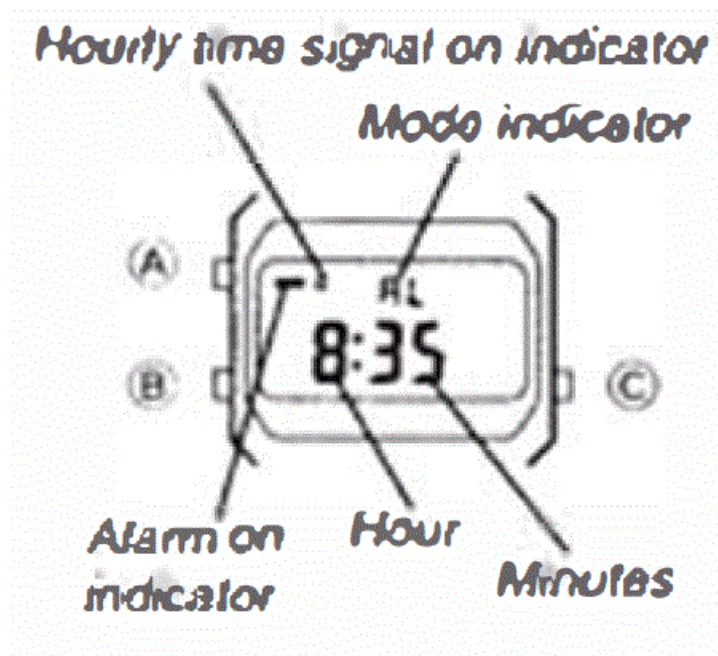

To set the alarm time

1. Hold down @ while in the darts start la Mash on the lash because they are sek
2. Press (1) to chango the Orice you reach the normal Alarm Mode, you have to hold down again und the hour diges stan to hash

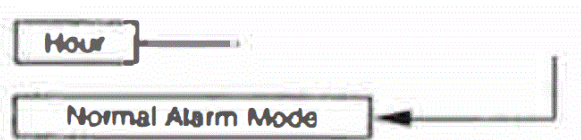

3. Press /C lo incozase the selected digita. Hokting down) changes tire number al high spood.
 - The lormal (12-hour and 24-hour) o the alarm limo maiches the format you seteci for normal timok oeping.
 - When seting the alarm time using tho 12-hour formal, lake care to set the lime correcty as morning or aflemoon (PM).
4. Aller you sel the alarm time, press @ to retum lo the Alarm Mode. Al tias lime me Dany Alarm is swached on

automatically.


To stop the alarm

Press A to stop the alarm after it starts to sound.

To switch the Daily Alarm and Mourly Time Signal on and off

Press iS while in the Alarm Mode to change the status of the Daily Alarm and Mourly Time Signal in the following sequences.

(Alarm on indicator/Mourly Time Signal on Indicator)

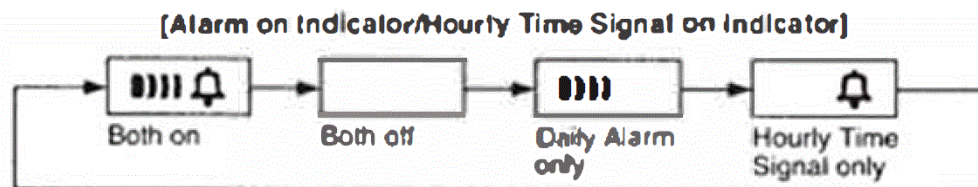


To test the alarm

Hold down € while in the Alarm Mode to sound the alarm.

STOPWATCH MODE

The Stopwatch Mode lets you measure elapsed time, split times, and two finishes. The range of the stopwatch is 59 minutes, 59.99 seconds.

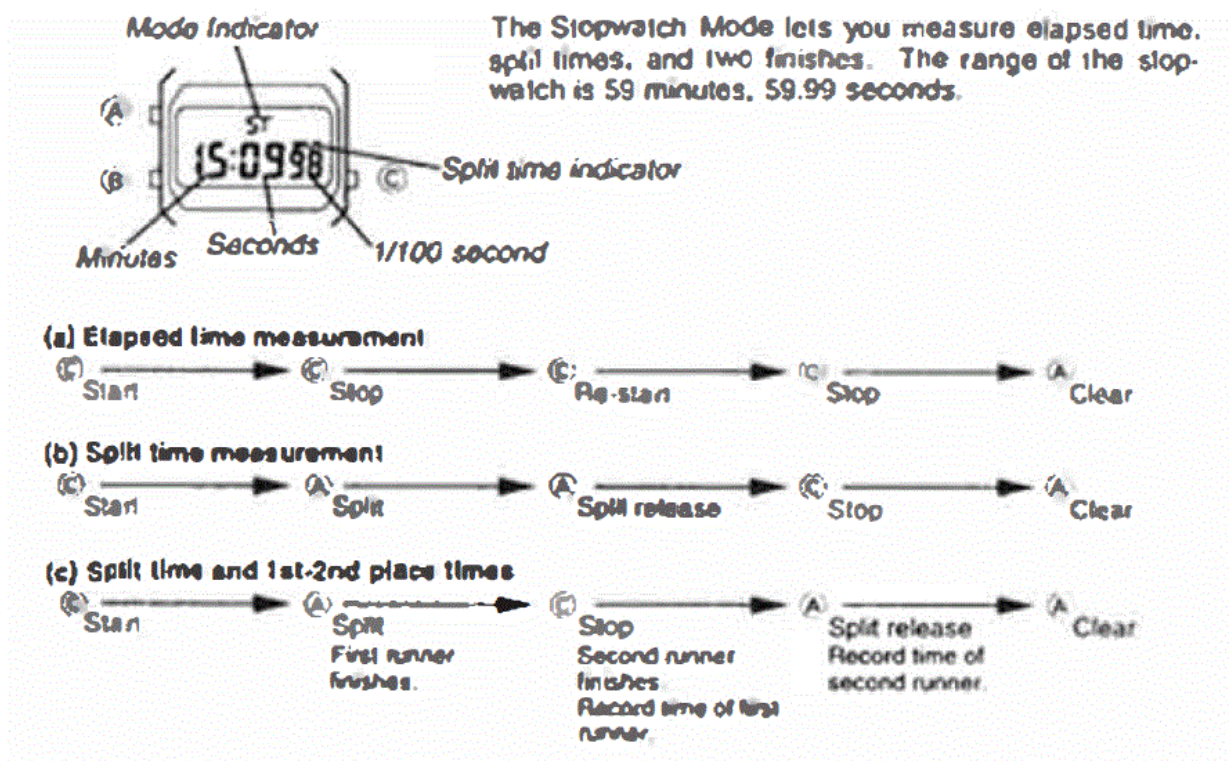


TIME SETTING MODE

To set the time and date

1. Use ® to enter the Time Setting Mode.
 - The seconds digits flash because they are selected.
2. Press W to change the selection in the following sequence.

3. While the seconds digits are selected (flashing), press (S) to reset the seconds to 00°. If you press (C) while the seconds count is i

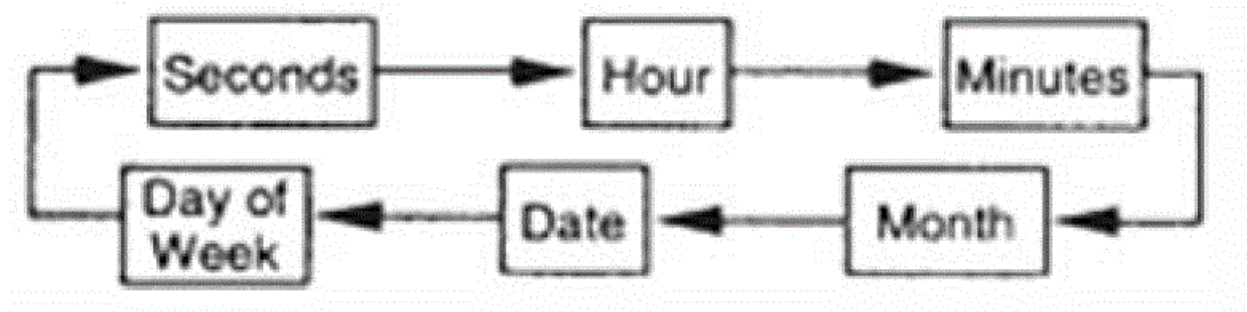

in the range of 30 to 59, the seconds are reset to 00 and 1 is added to the minutes. If the seconds count is in the range of 00 to 29, the minutes count is unchanged.

4. While any other digits (besides seconds) are selected (flashing), press (C) to increase the number. While the day of the week is selected, pressing (C) advances to the next day. Holding down (C) changes the current selection at high speed.
- After you set the time and date, press (C) to return to the Timekeeping Mode.
 - If you do not operate any button for a few minutes while a selection is flashing, the flashing stops and the watch goes back to the Timekeeping Mode automatically.

Casio A168 Digital Wrist Watch User Manual

Download PDF: [Casio A168 Digital Wrist Watch User Manual](#)

References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.