

# **CASIO PQ-32 Digital Alarm Clock User Guide**

Home » Casio » CASIO PQ-32 Digital Alarm Clock User Guide 🖺





CASIO PQ-32 Digital Alarm Clock User Guide

#### **Contents**

- **1 PRODUCT ANSTRUCTION**
- **2 SETTING THE TIME**
- **3 USING THE ALARM**
- **4 ILLUMINATING THE**
- **DISPLAY**
- **5 BATTERY REPLACEMENT**
- 6 Documents / Resources
  - **6.1 References**
- **7 Related Posts**

# **PRODUCT ANSTRUCTION**

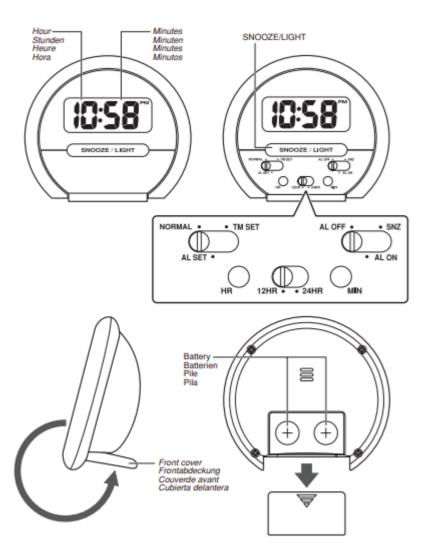

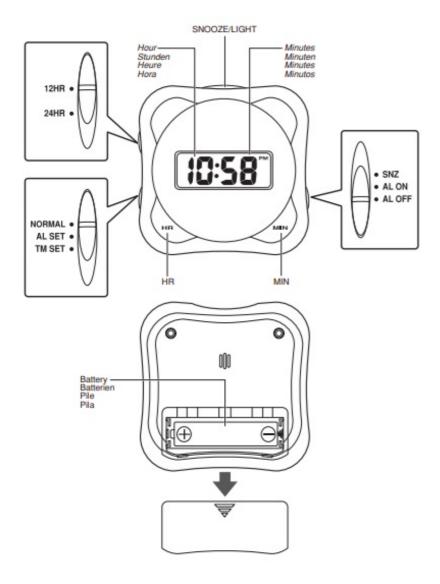

- A sticker is affixed to the glass of this clock when you purchase it. Be sure to remove the sticker before using the clock.
- Depending on the clock model, its configuration may differ somewhat from that shown in the illustration.

## **SETTING THE TIME**

- 1. Slide the selector to TM SET.
- 2. Press HR to increase the hour digits and MIN to increase the minutes digits. Holding down either button changes its setting at high speed.
  - Though the seconds are not displayed, they reset to 00 when you press MIN.
- 3. After you set the time, change the selector to NORMAL.

## **USING THE ALARM**

The alarm of this clock features a Snooze Function, which lets you catch a few more minutes sleep in the morning.

# To set the alarm time

- 1. Slide the selector to AL SET.
- 2. Press HR to increase the hour digits and MIN to increase the minutes digits. Holding down either button

- changes its setting at high speed.
- 3. After you set the alarm time, change the selector to NORMAL.

### To turn the alarm on and off

Slide the selector to SNZ or AL ON position to switch the alarm on, or to AL OFF position to switch it off.

#### To use the alarm

- 1. Set the alarm time and switch the alarm on.
- When the alarm time you set is reached, the alarm starts to sound. When alarm is sounding, press the SNOOZE/LIGHT button to stop it. When the snooze feature is turned on, the alarm will sound again in about 8 minutes.
  - You can stop the repeating alarm at any time by sliding the selector to AL OFF position.

## To view the current alarm time setting

- 1. Slide the selector to NORMAL.
- 2. Press HR or MIN to display the currently alarm time setting.

#### To test the alarm

- 1. Slide the selector to SNZ or AL ON.
- 2. Press HR and MIN at the same time to sound the alarm.

## **ILLUMINATING THE DISPLAY**

Hold down the SNOOZE/LIGHT button to illuminate the display. The light will go out automatically after about two seconds, even if you keep the button depressed

### **BATTERY REPLACEMENT**

Replace batteries whenever the display of the clock becomes dim and difficult to read.

- 1. Pressing down lightly on the battery compartment cover, slide it in the direction indicated by the arrow and remove it.
- 2. Remove both old batteries.
- 3. Load new batteries. Make sure that their positive (+) and negative (-) ends face in the correct directions. If you load batteries incorrectly they can burst and damage the clock.
- 4. Replace the battery compartment cove

# **Battery precautions**

- Keep batteries out of the reach of small children. If a battery is accidentally swallowed, contact your physician immediately.
- Be sure to load the batteries with their positive (+) and negative (-) ends facing correctly.
- Replace the batteries at least once a year, even if the current batteries are working properly.

- Never charge the batteries that come with the clock.
- Should the batteries ever leak while in the clock, wipe out the fluid with a cloth, taking care not to let any get onto your skin.
- The batteries that come with the clock lose some of their power during transport and storage.
- Never mix old and new batteries, or batteries of different brands.



# **Documents / Resources**



CASIO PQ-32 Digital Alarm Clock [pdf] User Guide PQ-32 Digital Alarm Clock, PQ-32, Digital Alarm Clock, Alarm Clock, Clock

## References

• User Manual

Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.