


CISCO 60079011 Wi Fi 6 E Access Point User Manual

[Home](#) » [Cisco](#) » CISCO 60079011 Wi Fi 6 E Access Point User Manual 

CISCO 60079011 Wi Fi 6 E Access Point

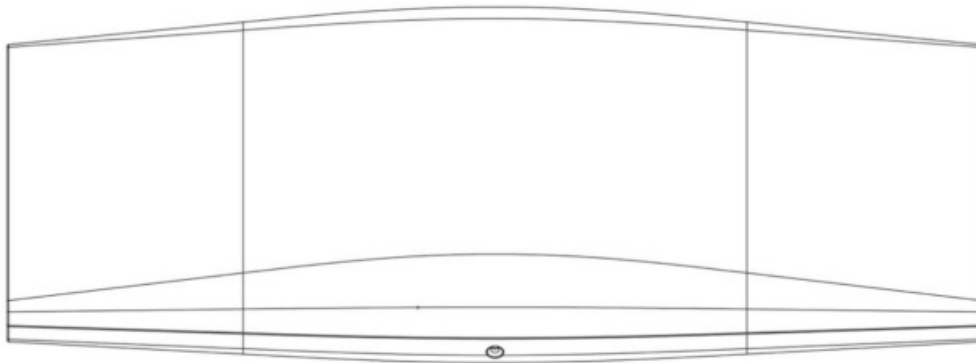

Contents

- [1 Trademarks](#)
- [2 Statement of Conditions](#)
- [3 Warranty](#)
- [4 Scope of Document and Related Publications](#)
- [5 MR46-HW Overview](#)
- [6 Pre-Install Preparation](#)
- [7 Installation Instructions](#)
- [8 Troubleshooting](#)
- [9 Regulatory](#)
- [10 Documents / Resources](#)
 - [10.1 References](#)

Trademarks

Meraki, Meraki MR46-HW, Meraki Cloud Controller, and Meraki Mesh are trademarks of Cisco Systems, Inc. Other

brand and product names are registered trademarks or trademarks of their respective holders.

Statement of Conditions

In the interest of improving internal design, operational function, and/or reliability, Cisco Systems reserves the right to make changes to the products described in this document without notice. Cisco Systems does not assume any liability that may occur due to the use or application of the product(s) or circuit layout(s) described herein.

Warranty

Meraki, Inc. provides a life time warranty on this product. Warranty details may be found at www.meraki.com/legal.

Scope of Document and Related Publications

The MR46-HW Hardware installation Guide describes the installation procedure for the MR46-HW indoor access point. Additional reference documents are available online at www.meraki.com/library/product.

MR46-HW Overview

The Meraki MR46-HW is an enterprise-class, dual-concurrent 4x4 MIMO 802.11ax indoor access point designed for high-density deployments in offices, schools, hospitals and hotels. When connected to the Meraki Cloud Controller, the MR46-HW enables the creation of ultra-high speed, reliable indoor wireless networks quickly, easily and cost- effectively.

Package Contents

The MR46-HW package contains the following:

- MR46-HW access point
- Mounting plate
- Drop ceiling mounting
- kit Wall screws
- Security screws
- Mounting Template

Understanding the MR46-HW

MR46-HW Operation Temperature: 32° F to 104°F (0°C to 40° C)

Your Meraki MR46-HW has the following features: Kensington lock hard point

- Mount plate attachment slots (2x)
- Cable access bay
- Desk mount feet (4x)
- MR46-HW cable access bay
- Factory Reset Button

Ethernet port Power supplied by PoE: 50-57Vdc 0.6A

AC Adapter plug (sold separately) Power supplied by adapter: 12Vdc, 2.5A

Your MR46-HW mount plate has the following features: Access point mounting posts (2x)

Security Features

The MR46-HW features multiple options for physically securing the access point after installation:

1. **Security screw** — The accessory kit includes screws that can be used to secure the access point to the mount plate. Engaging the security screw prevents accidental dislodging and theft.
2. **Kensington lock** — The access point contains a hard point that allows it to be secured to any nearby permanent structure using a standard Kensington lock.

Ethernet Ports

The MR46-HW features an Ethernet RJ45 port that accepts 802.3at power (labeled “PoE”). This port should be used for uplink to your WAN connection.

Power Source Options

The MR46-HW access point can be powered using either the Meraki AC Adapter or 802.3at PoE Injector (both sold separately) or a third-party 802.3at PoE switch.

Factory Reset Button

If the button is pressed and held for at least five seconds and then released, the MR46-HW will reboot and be restored to its original factory settings by deleting all configuration information stored on the unit.

Pre-Install Preparation

You should complete the following steps before going on-site to perform an installation.

Configure Your Network in Dashboard

The following is a brief overview only of the steps required to add an MR46-HW to your network. For detailed instructions about creating, configuring and managing Meraki wireless networks, refer to the Meraki Cloud Controller Manual (meraki.com/library/product).

1. Login to <http://dashboard.meraki.com>. If this is your first time, create a new account.
2. Find the network to which you plan to add your APs or create a new network.
3. Add your APs to your network. You will need your Meraki order number (found on your invoice if you ordered directly from Meraki) or the serial number of each AP, which looks like Qoxx-x0x-xxxx, and is found on the bottom of the unit. You will also need your Enterprise Cloud Controller license key, which you should have received via email from shipping@meraki.com.
4. Go to the map / floor plan view and place each AP on the map by clicking and dragging it to the location where you plan to mount it.

Check and Upgrade Firmware

To ensure your MR46-HW performs optimally immediately following installation, Meraki recommends that you facilitate a firmware upgrade prior to mounting your MR46-HW.

1. Attach your MR46-HW to power and a wired Internet connection. See p. 19 of this Hardware Installation Guide for details.
2. The MR46-HW will turn on and the Power LED will glow solid orange. If the unit does not require a firmware upgrade, the Power LED will turn white within thirty seconds.
 - * If the unit requires an upgrade, the Power LED will begin blinking orange until the upgrade is complete, at which point the Power LED will turn solid white. You should allow about an hour for the firmware upgrade to complete, depending on the speed of your internet connection.

Check and Configure Firewall Settings

If a firewall is in place, it must allow outgoing connections on particular ports to particular IP addresses. The most current list of outbound ports and IP addresses can be found here: <http://tinyurl.com/y79une3>

Assigning IP Addresses to MR46-HW

All gateway MR46-HW (MR46-HW with Ethernet connections to the LAN) must be assigned routable IP addresses. These IP addresses can be dynamically assigned via DHCP or statically assigned.

1. Dynamic Assignment

When using DHCP, the DHCP server should be configured to assign a static IP address for each MAC address belonging to a Meraki AP. Other features of the wireless network such as 802.1x authentication, may rely on the property that the APs have static IP addresses.

2. Static Assignment

Static IPs are assigned using the local web server on each AP. The following procedure describes how to set the static IP:

1. Using a client machine (e.g. a laptop), connect to the AP either wirelessly (by associating to any SSID broadcast by the AP) or over a wired connection.

If using a wired connection, connect the client machine to the MR46-HW either through a PoE switch or a Meraki PoE Injector. If using a PoE switch, plug an Ethernet cable into the MR46-HW's Ethernet jack, and the other end into a PoE switch. Then connect the client machine over Ethernet cable to the PoE switch. If using a Meraki PoE Injector, connect the MR46-HW to the "PoE" port of the Injector, and the client machine to the "LAN" port.
2. Using a web browser on the client machine, access the AP's built-in web server by browsing to <http://my.meraki.com>. Alternatively, browse to <http://10.128.128.128>.
3. Click on the "Static IP Configuration" tab. Log in. The default user name is "admin". The default password is the AP's serial number, with hyphens included
4. Configure the static IP address, net mask, gateway IP address and DNS servers that this AP will use on its wired connection.
5. If necessary, reconnect the AP to the LAN.

3. Static IP via DHCP Reservations

Instead of associating to each Meraki AP individually to configure static IP addresses, an administrator can assign static IP addresses on the upstream DHCP server. Through "DHCP reservations", IP addresses are "reserved" for the MAC addresses of the Meraki APs. Please consult the documentation for the DHCP server to configure DHCP reservations.

Collect Tools

You will need the following tools to perform an installation:


- Phillips screwdriver



- Hammer



- Drill with screwdriver 1/4" (6.3mm) bits

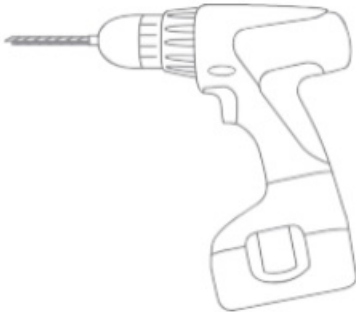


Collect Additional Hardware for Installation

- 802.3at PoE power source (either PoE switch or Meraki 802.3at PoE Injector)



- AC Adapter

or

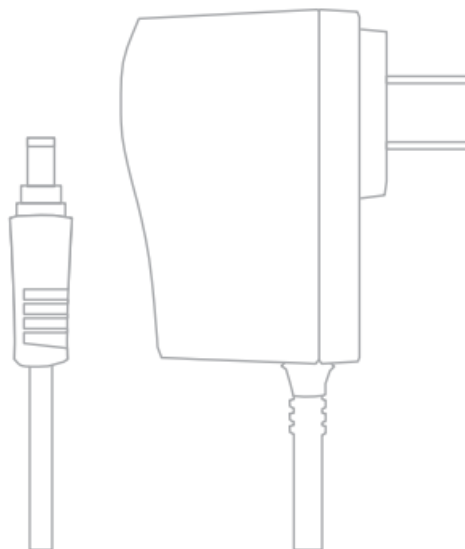

- Network cables with RJ45 connectors long enough for your particular mounting



Installation Instructions

Choose Your Mounting Location

A good mounting location is important to getting the best performance out of your MR46-HW access

point. Keep the following in mind:

1. The device should have unobstructed line of sight to most coverage areas. For example, if installing in an office filled with workspaces divided by mid-height cubicle walls, installing on the ceiling or high on a wall would be ideal.
2. Power over Ethernet supports a maximum cable length of 300 ft (100 m).
3. If being used in a mesh deployment, the MR46-HW should have line of sight to at least two other Meraki devices. For more detailed instructions regarding access point location selection, reference the Meraki Network Design Guide (meraki.com/library/product).

Install the MR46-HW

For most mounting scenarios, the MR46-HW mount plate provides a quick, simple, and flexible means of mounting your device. The installation should be done in two steps. First, install the mount plate to your selected location. Then, attach the MR46-HW to the mount plate.

!!! This equipment is only suitable for mounting at heights < 2 m !!!

1. Attach the Mount Plate

The MR46-HW mount plate can be used to install your access point in a wide range of scenarios: wall or solid ceiling, below a drop ceiling, on various electrical junction boxes, or above a drop ceiling (in the plenum).


The mount plate contains a variety of hole patterns that are customized for each installation scenario.

The mounting template (included in box with mount plate) should be used to drill holes for wall mounts and also to identify the correct hole patterns in the mount plate that should be used for each type of mount.

The following images also show the hole patterns that should be used for each type of mount:

2. Wall or Solid Ceiling Mount Using Mount Plate

Using included screws, attach the mount plate to your mounting wall or ceiling.

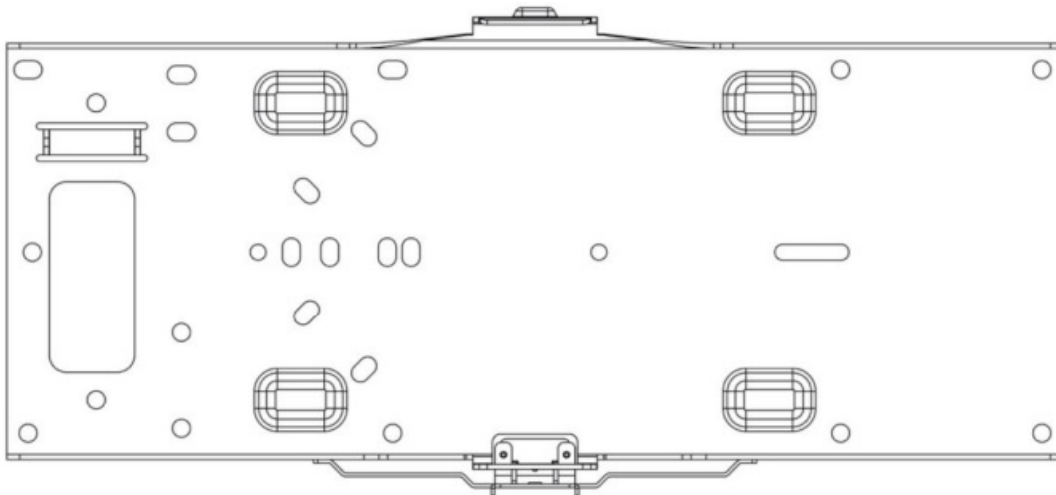

It is recommended that the MR46-HW be mounted to a wall or solid ceiling using the mount plate for physical security reasons.

! If mounting your MR46-HW to a wall, skip to “Power the MR46-HW* on P. 20


1. Drop Ceiling Mount Using Mount Plate

To mount your MR46-HW on a drop ceiling T-rail, use the included drop ceiling mounting accessory kit. The


accessory kit can be used to mount to most 9/16" 15/16" or 1 2" Trails.

The kit contains:

- Dropped ceiling mounting clips with set screws

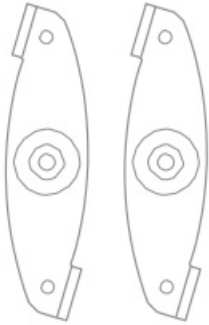


- 6-32×4 mm screws

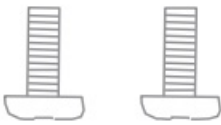

- 6-32×7 mm

Only used for recessed rail mount (uncommon)

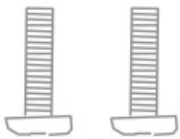


- **2 rubber** spacers


Only used for recessed rail mount (uncommon)



1. Attach the T-rail clips to the T-rail by rotating them and snapping them into place as shown. The black foam pads should be compressed slightly after installation.

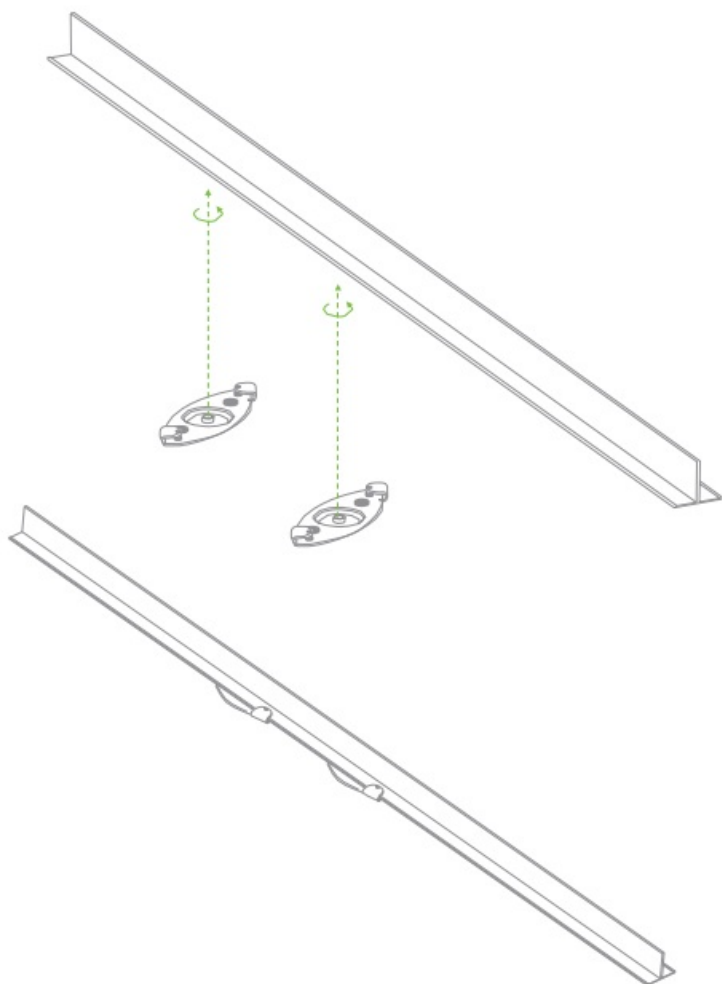


2. Using the dashed lines on the mount plate template as a guide, set the proper spacing of the T-rail clips on the T-rail
3. Tighten the set screws on the T-rail clips to secure the clips using a 5/64" (2 mm) hex key.

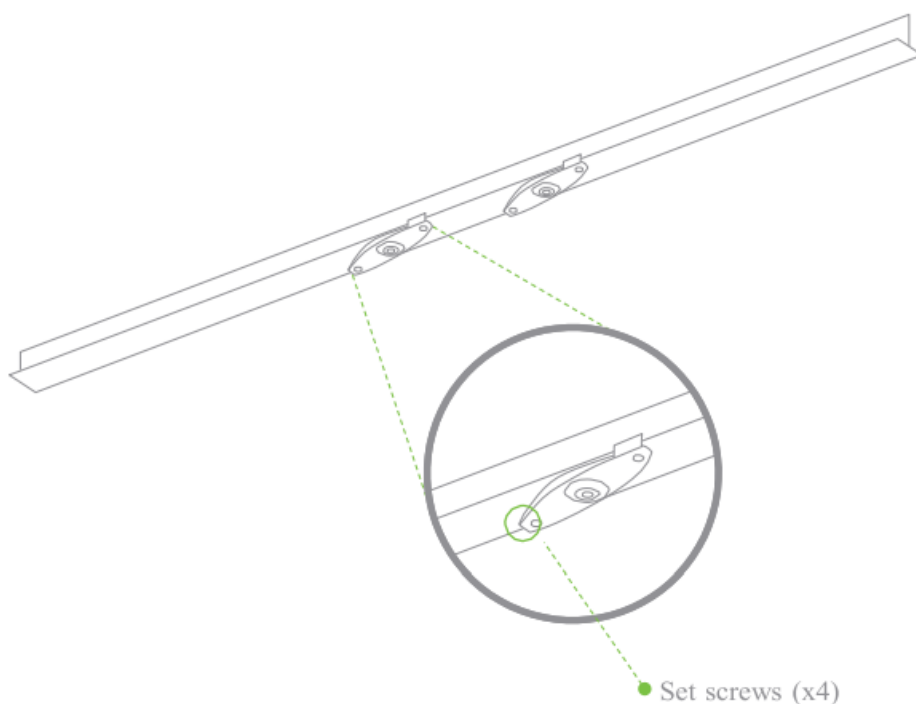

4. Attach the mount plate to the T-rail clips using the mount plate holes (marked with a "T").


⚠ To select the correct set of mounting hardware to use, first determine whether you are mounting to a "flush" or "recessed rail. (See below images for clarification)

Flush T-rail

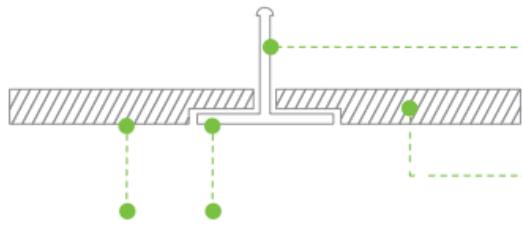

T-rail flush with tiles

Recessed T-rail

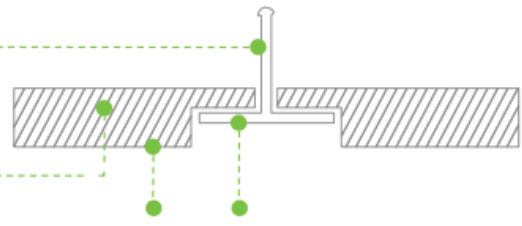

T-rail recessed from tiles

Electrical Junction Box Mount Using Mount Plate

The MR46-HW can be mounted to a 4" square cable junction box, a 3.5 or 4" round cable junction box, or various U.S. and European outlet boxes (mounting screws are not included).

Using appropriate mounting hardware for your specific type of junction box, attach the mount.

1. Power the MR46-HW

If mounting to an electrical junction box, feed the Ethernet cable through the cable access hole in the Mount Plate.

If mounting to a wall or ceiling, the Ethernet cable will feed through the cable slot on bottom of the MR46- HW.

Powering the MR46-HW with the Meraki AC Adapter (sold Separately)

1. Plug the power cord into the MR46-HW and the other end into a wall outlet.
2. Plug an Ethernet cable that is connected to an active Ethernet connection into the EthO port on the MR46-HW.


Power in the MR46-HW with the Meraki 802.3at Power over Ethernet injector (sold separately)

1. Plug the power cord into the PoE Injector and the other end into wall power.
2. Plug an Ethernet cable that is connected to an active Ethernet connection into the "IN" port on the injector.
3. Route Ethernet cable from the "OUT" port on the injector to the Eth0 port in the cable bay of the MR46-HW.

Powering the MR46-HW with an 802.3at Power over Ethernet Switch Route Ethernet cable from a port on an active 802.3at PoE switch to the EthO port in the bay of the MR46-HW.

! The MR46-HW is Gigabit Ethernet-capable. To maximize device performance, a Gigabit- % capable switch should be used.


1. Mount the MR46-HW

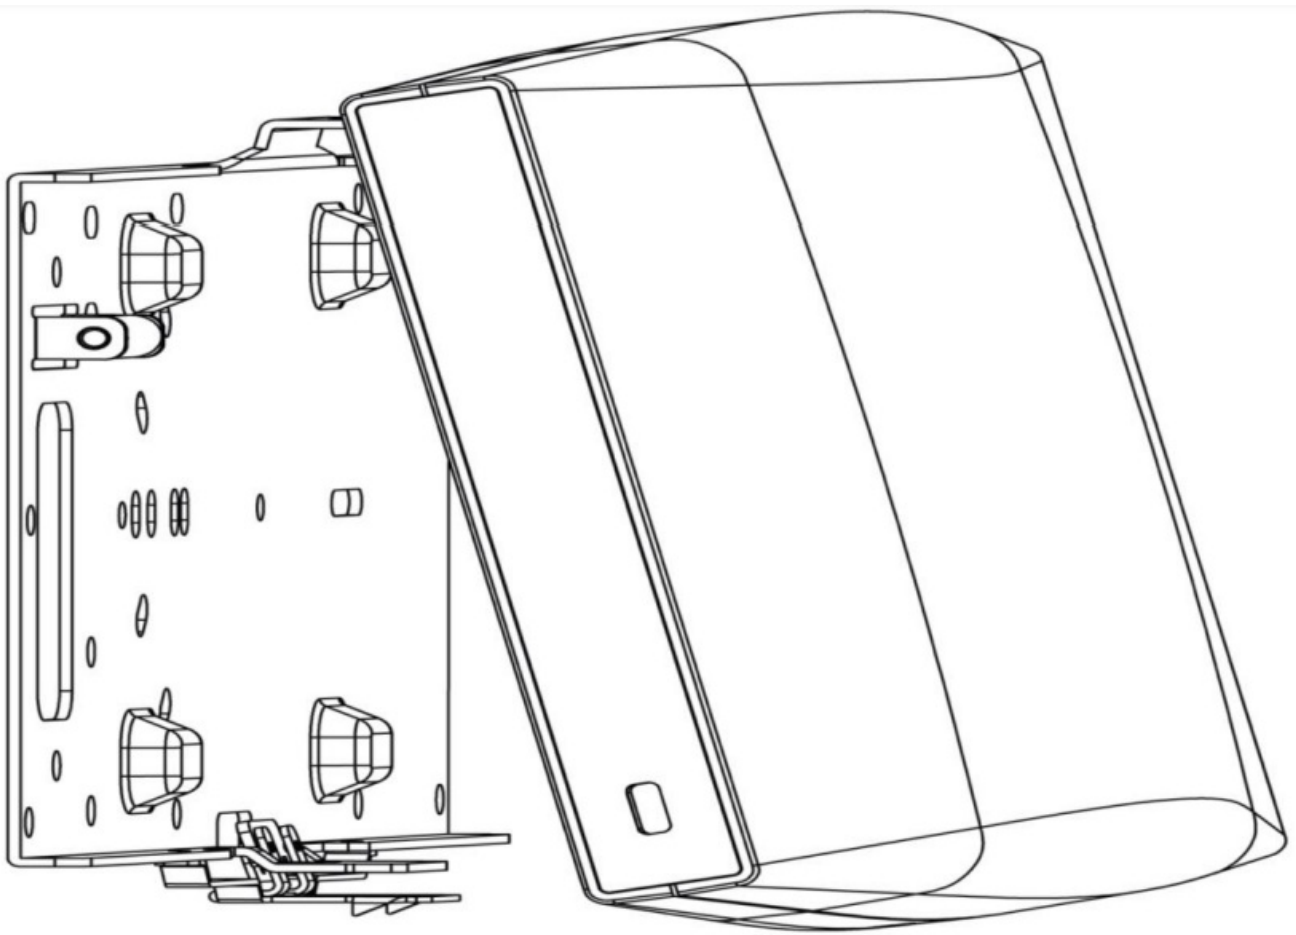

Assemble MR46-HW to the Mount Plate

(This section applies to wall and/or solid ceiling, drop ceiling or electrical junction box mount where you have already installed the mount plate.)

Insert the top latch on the mount plate into the top mount plate attachment slots on the back of the device. Rotate the bottom of the unit into the bottom mount plate attachment slot. The unit will click into place.

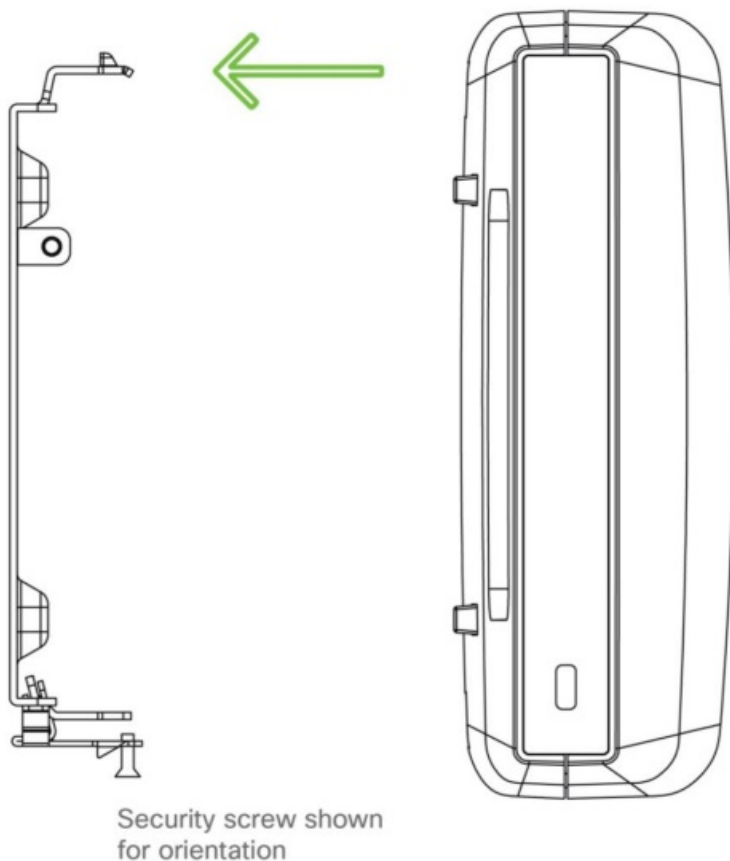

Security screw shown
for orientation

1. Desk or Shelf Mount

The MR46-HW can be placed on a desk or shelf resting on the non-scratch rubber feet. The mount plate is not necessary for a desk or shelf mounting.

Secure the MR46-HW

Depending on your mounting environment, you may want to secure the MR46-HW to its mount location. Your MR46-HW can be secured in several ways. If the MR46-HW has been installed using the mount plate, it can be secured via security screw (Torx and phillips head security screws are included; choose one), and/or Kensington lock. If the mount plate was not used, the MR46-HW can still be secured using a Kensington lock.

1. Security Screw

Install the security screw in the lower mount plate tab.

2. Kensington Lock

Attach a Kensington lock cable to the access point at the hard point on the side of the device. Attach the other end of the cable to a secure location, such as a pipe or building fixture.

Verify Device Functionality and Test Network Coverage

1. Check LEDs

The LED should be solid white. If it is flashing orange, the firmware is automatically upgrading and the LED should turn green when the upgrade is completed (normally in under thirty minutes).

Note: Your MR46-HW must have an active route to the Internet to check and upgrade its firmware.

2. Verify access point connectivity

Use any 802.11 client device to connect to the MR46-HW and verify proper connectivity using the client's web

browser.

3. Check network coverage

Confirm that you have good signal strength throughout your coverage area. You can use the signal strength meter on a laptop, smart phone, or other wireless device.

Troubleshooting

Reference the Meraki knowledge base at http://meraki.com/support/knowledge_base for additional information and troubleshooting tips.

Regulatory

FCC Compliance Statement

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. this device must accept any interference received, including interference that may cause undesired operation.

FCC Interference Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Caution

Any changes or modifications not expressly approved by Meraki could void the user's authority to operate this equipment. This Transmitter must not be co-located or operation in conjunction with any other antenna or transmitter.

FCC Radiation Exposure Statement

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 33 cm between the radiator and your body. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

IEEE 802.11b or 802.11g operation of this product in the USA is firmware-limited to channels 1 through 11.

If the device is going to be operated in the 5.15 – 5.25 frequency range, then it is restricted to indoor environment

only.

This device meets all other requirements specified in Part 15E, Section 15.407 of the FCC Rules.

Industry Canada Statement

This device complies with RSS-247 of the Industry Canada Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. this device must accept any interference received, including interference that may cause undesired operation.

Industry Canada Caution

(i) the device for operation in the band 5150-5250 MHz is only for indoor use to reduce the potential for harmful interference to co-channel mobile satellite systems;

(ii) high-power radars are allocated as primary users (i.e. priority users) of the bands 5250-5350 MHz and 5650-5850 MHz and that these radars could cause interference and/or damage to LELAN devices. Avertissement:

Industry Canada Radiation Exposure Statement


This equipment complies with IC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 39 cm between the radiator & your body.

www.ciscosystems.com

Cisco Systems, Inc. 170 West Tasman Drive San Jose, CA 95134 UsA



Documents / Resources

 <p>Meraki MR46-HW</p>	<p>CISCO 60079011 Wi Fi 6 E Access Point [pdf] User Manual</p> <p>60079011 Wi Fi 6 E Access Point, 60079011, Wi Fi 6 E Access Point, 6 E Access Point, Access Point</p>
---	---

References

- [Meraki Dashboard Login](#)
- [Meraki Dashboard Login](#)
- [Meraki Collateral | Cisco Meraki](#)
- [Document](#)
- [Cisco Meraki](#)
- [Cisco Meraki](#)

- [M Document](#)
- [M Meraki Collateral | Cisco Meraki](#)
- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.