



# COLSUR S29 Bluetooth Speaker with Digital Alarm Clock User Guide

[Home](#) » [COLSUR](#) » COLSUR S29 Bluetooth Speaker with Digital Alarm Clock User Guide 

## Contents

- [1 COLSUR S29 Bluetooth Speaker with Digital Alarm Clock](#)
- [2 Product Information](#)
- [3 Product Usage Instructions](#)
- [4 USING THE ALARM CLOCK METHOD](#)
- [5 FAQ's](#)
- [6 Documents / Resources](#)
  - [6.1 References](#)
- [7 Related Posts](#)

## COLSUR

**COLSUR S29 Bluetooth Speaker with Digital Alarm Clock**



## Product Information

### Specifications

- **Alarm clock method:** Digital
- **Number of alarm volume levels:** 16
- **Snooze interval:** 5 minutes

### Product Usage Instructions

#### Setting the Time

1. Press the **MODE** button. The hour number starts flashing.
2. Adjust the hour number by pressing the **-** or **+** button.
3. Press the **switch** button to jump to set the minute.
4. Adjust the minute number by pressing the **-** or **+** button.
5. Long press the **MODE** button to finish setting the time.

#### Setting the Alarm Clock

1. Press the **MODE** button twice. The hour number starts flashing.
2. Adjust the hour number by pressing the **-** or **+** button.
3. Press the **switch** button to jump to set the minute.
4. Adjust the minute number by pressing the **-** or **+** button.
5. Long press the **MODE** button to save your alarm time setting.
6. Long press the **+** button to turn on/off your alarm.

## Snooze Mode

- To enter snooze mode, the screen will keep flashing. Long touch on the light pole (2 seconds or more) or short press the – button to turn off snooze.
- When snooze is canceled, the light pole will always be on.
- When the alarm is turned off, the light pole will be off.
- When the alarm clock rings, touch the light pole to turn on snooze mode. Long touch on the light pole (2 seconds or more) to turn off snooze.
- The snooze interval is 5 minutes for a total of three times.
- Long press the + button to turn off the alarm clock directly.
- If no instructions are given when the alarm sounds, the snooze mode is automatically turned on. It sounds again every 10 minutes and repeats three times. Short press the + button to exit snooze mode.

## Setting 12/24 Time Display







1. Press the **MODE** button three times to jump to the time display setting.
2. Press the – or + button to change between 12-hour and 24-hour format.
3. Long press the **MODE** button to finish setting.
4. When the 12-hour clock is set, the afternoon time will show “PM” on the screen.

## Setting Year and Date









1. Press the **MODE** button four times to set the year.
2. Press the **MODE** button five times to set the date.
3. The date and year cannot be displayed on the screen at the same time.
4. To see the date, press the **switch** button. The screen will display the alarm time-12/24H-year-date in sequence from the original clock time.









## USING THE ALARM CLOCK METHOD

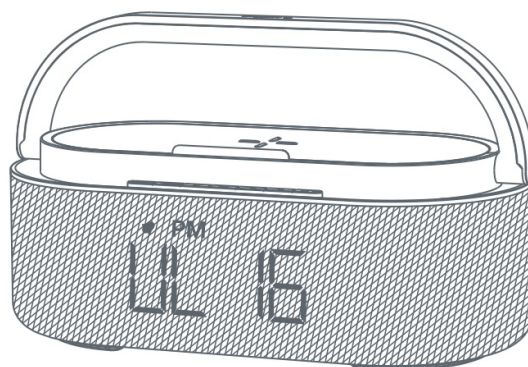
### How to set the time

First press  MODE, and the number representing the hour starts to flash, adjust to the number you want by pressing  or , then press switch to jump to set the minute, press  or  to adjust the number you want. Long press  MODE to finish setting. The time-colon is always flashing.





### How to set the alarm clock

1. Press  MODE 2 times, and the number representing the hour starts to flash, adjust to the number you want by pressing  or , then press switch to jump to set the minute, press  or  adjust to the number you want. Long press  MODE to save your alarm time setting. And then long press  to turn on/off your alarm. If the alarm setting is successful, the screen will display the alarm icon .



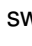
2. Enter the snooze mode , on the screen will keep flashing, and a long touch on the light pole (2 seconds or more) or short press  will turn off the snooze. When the snooze is canceled , will always be on; When the alarm is turned off , will be off.
3. When the alarm clock rings, a short touch on the light pole will turn on snooze mode, and a long touch on the light pole (2 seconds or more) will turn off snooze. The snooze interval is 5 minutes for a total of three times. Long press  to turn off the alarm clock directly.
4. If you don't give any instructions when the alarm sounds then the snooze mode is automatically turned on. It sounds again every 10 minutes and repeats three times. Short press  Exit snooze mode
5. To set the alarm volume:  
Press  or  when the alarm clock rings to adjust the volume in a total of 16 levels. The alarm volume has a memory function and is controlled independently of the radio volume.



### How to set the 12/24 time display

Press  MODE 3 times, jump to the time display setting, and press  or  to change 12H/24H. Long press  MODE to finish setting. When you set the 12H clock, the afternoon time will show PM on the screen.

### How to set the year and date

Press  MODE 4 times to set the year. Press  MODE 5 times to set the date. The date and year cannot be displayed on the screen at the same time. When you want to see the date, you can press  switch, so the screen will display the alarm time-12/24H-year-date in sequence from the original clock time.

### FAQ's


How many levels of alarm volume are there?

There are a total of 16 levels of alarm volume.

Is the alarm volume controlled independently of the radio volume?

Yes, the alarm volume has a memory function and is controlled independently of the radio volume.

Documents / Resources

	<a href="#">COLSUR S29 Bluetooth Speaker with Digital Alarm Clock</a> [pdf] User Guide S29 Bluetooth Speaker with Digital Alarm Clock, S29, Bluetooth Speaker with Digital Alarm Clo ck, Speaker with Digital Alarm Clock, Digital Alarm Clock, Alarm Clock, Clock
-----------------------------------------------------------------------------------	--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

References

- [User Manual](#)