



# COMET SYSTEM T0110 Programmable Temperature Transmitter Instruction Manual

[Home](#) » [COMET SYSTEM](#) » COMET SYSTEM T0110 Programmable Temperature Transmitter Instruction Manual



# COMET

## Contents

- 1 COMET SYSTEM T0110 Programmable Temperature Transmitter
- 2 Product Information: T0110 Transmitter
- 3 Product Usage Instructions: T0110 Transmitter
- 4 Installation of the transmitter
- 5 Dimensions
- 6 LCD Info mode
- 7 Technical parameters
  - 7.1 Procedure of modification of transmitter adjustment
- 8 Error states of the device
- 9 Technical support and service
- 10 Documents / Resources
  - 10.1 References
- 11 Related Posts

**COMET SYSTEM T0110 Programmable Temperature Transmitter**



## Product Information: T0110 Transmitter

The T0110 Transmitter is a programmable temperature transmitter that provides a 4-20 mA output. All transmitter settings can be adjusted using a PC connected via the optional SP003 communication cable (not included in delivery). The Tsensor program for transmitter setting is available for free download at [www.cometsystem.com](http://www.cometsystem.com) and enables users to set the measured range and turn on/off the LCD display. The program also supports device adjustment, which is described in the Calibration manual.pdf file installed with the software. The TxxxxL version of the transmitter comes with a watertight male connector RSFM4 instead of a cable gland for easy connection/disconnection of the output cable. The T0110 Transmitter is designed to be installed using shielded twisted copper cable, with a maximum length of 1200m. The cable should be located indoors and not be led in parallel along power cable should be from 3.5 to 8 mm (e.g. SYKFY) for the T0110 device and for device T0110L with respect to the female connector. Shielding should not be connected at the connector side. It is essential to read the instruction manual before connecting the device, as modifications to the settings can only be made by means of a PC using the procedure described at the end of the document. Models marked TxxxxZ are non-standard versions of the transmitters, and their descriptions are not included in this manual.

## Product Usage Instructions: T0110 Transmitter

1. Connect a PC to the T0110 Transmitter using the optional SP003 communication cable.
2. Download and install the Tsensor program for transmitter setting from [www.cometsystem.com](http://www.cometsystem.com).
3. Adjust the transmitter settings using the Tsensor program to set the measured range, turn on/off the LCD display, and adjust the device.
4. For TxxxxL version of the transmitter, connect the output cable to the watertight male connector RSFM4.
5. Install the T0110 Transmitter using shielded twisted copper cable indoors, with a maximum length of 1200m. Do not lead the cable in parallel along power cabling to avoid interference signals.
6. Do not connect shielding at the connector side.
7. Read the instruction manual before connecting the device, as modifications to the settings can only be made by means of a PC using the procedure described at the end of the document
8. To verify several settings of installed transmitter, connect at least power of current loop I1 and unscrew the transmitter lid. Shortly press the button between display and interconnection terminals by means of a tool (e.g. screwdriver). During info mode no measurement and no output current generation proceed. The transmitter stays at info mode 15 s and then automatically goes back to measuring cycle.

## Instruction manual for use of T0110 transmitter

Transmitter is designed for measurement of ambient air temperature at °C or °F. Measuring temperature sensor is non-removable instrument part. Measured temperature is displayed on LCD display. It is possible to switch OFF the LCD display. Transmitter is connected to circuitry by current loop. All transmitter setting is performed by means of the PC connected via the optional SP003 communication cable (not included in delivery). Program Tsensor for transmitter setting is available to download free at [www.cometsystem.com](http://www.cometsystem.com). Program enables to set measured range and on/off the LCD display. It supports make the adjustment of the device too. This procedure is described at file „Calibration manual.pdf“ which is installed commonly with the software. Transmitter version TxxxxL with watertight male connector instead of a cable gland is designed for easy connection/disconnection of the output cable. The protection of male Lumberg connector RSFM4 is IP67. Models marked TxxxxZ are non-standard versions of the transmitters. Description is not included in this manual. Please read instruction manual before the first device connection.

### Device setting from the manufacturer

Transmitter is set from the manufacturer to the following parameters: value at output I1: temperature, range 4 – 20 mA corresponds to -30 to +80 °C display: switched ON Modification of the setting is possible to do by means of the PC using procedure described at the end of this document.

### Installation of the transmitter



The transmitter is designed for wall mounting. There are two mounting holes at the sides of the case. Don't connect transmitter while power supply voltage is on. Interconnection terminals of T0110 are accessible after unscrewing four screws and removing the lid. Lace the cable through a gland at the case wall. Connect the cable to terminals with respecting the signal polarity (see figure). Terminals are self-clamping and can be opened by a suitable screwdriver. For the opening, insert the screwdriver to the upper terminal hole and lever by him. Do not remember to tighten glands and case lid with inserted packing after cables connecting. It is necessary for warranting of protection IP65. Connect the complementary female connector for T0110L transmitter in accordance with the table in Appendix A of this manual. It is recommended to use shielded twisted copper cable, a maximal length 1200m. The cable must be located at indoor rooms. The cable should not be led in parallel along power cabling. Safety distance is up to 0.5 m, otherwise undesirable induction of interference signals can appear. Outside diameter of the cable for T0110 device must be from 3,5 to 8 mm (e.g. SYKFY), for device T0110L with respect to the female connector. Do NOT connect shielding at connector side

In the application where air flow is too low it is possible that measurement accuracy may be a bit lower (in decimals of °C) due to undesirable warm influence which develops in transmitter electronics because of its own power dissipation. Mechanical construction of the transmitter and working position is minimizing this effect, but in critical applications we recommend to use optimal value of load resistor  $R_z$  (see “Typical application wiring”). It minimizes power dissipation to minimal value. If  $U_{ss}$  and  $R_z$  are set, it is possible to do it by inserting of suitable serial resistor into current loop at estimation device side. Electrical system (wiring) may do only worker with required qualification by rules in operation

### Dimensions


#### T0110

**Connection:**

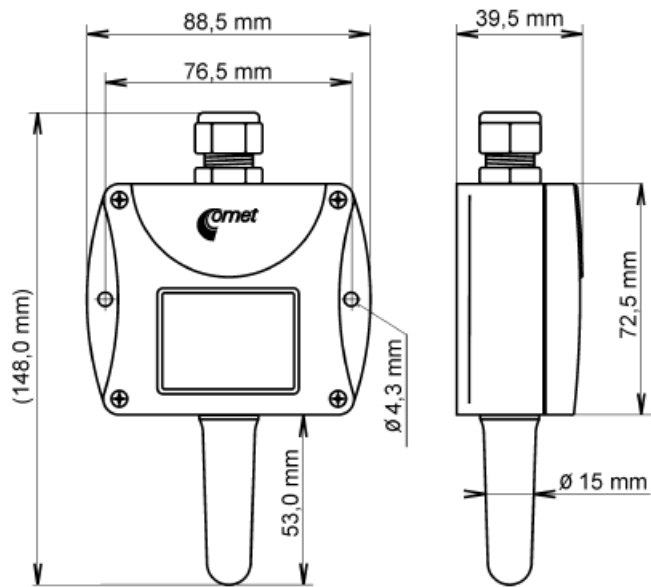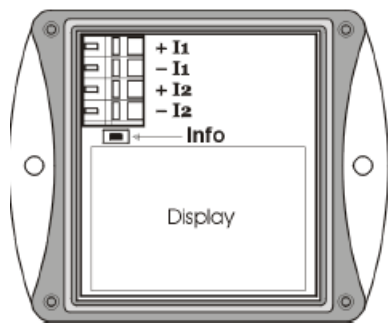

**T0110L**

**Connection:** see Appendix A

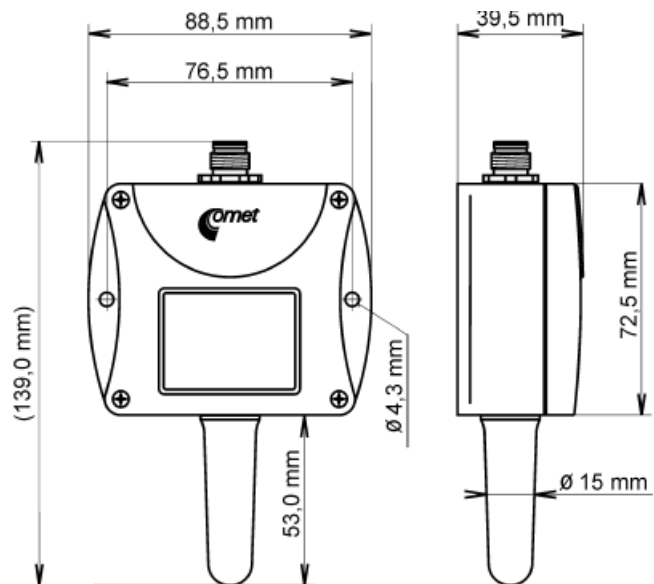


**Typical application wiring**

Calculation of minimum power voltage  $U_{ss}$  for proper operation:  $U_{ss} \min > U_o \min + I_{max} \cdot R_z$ ,


**where:**

- $U_o \min = 9 \text{ V}$
- $I_{max}$ ... approximately 20 mA
- $R_z$ ... sensing resistor (shunt)

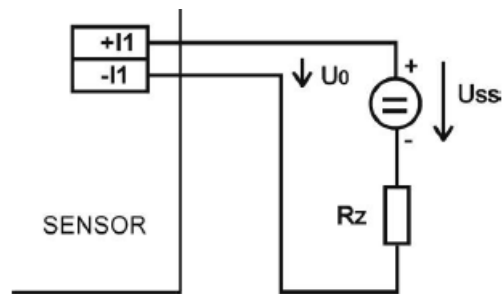

### Choice of optimal power voltage and load resistor for current loop.

- area no 1 ..... transmitter doesn't work correctly
- area no 2 ..... optimal  $U_{ss}$  and  $R_z$
- area no 3 ..... transmitter is working but it is possible to see undesirable warm influence.

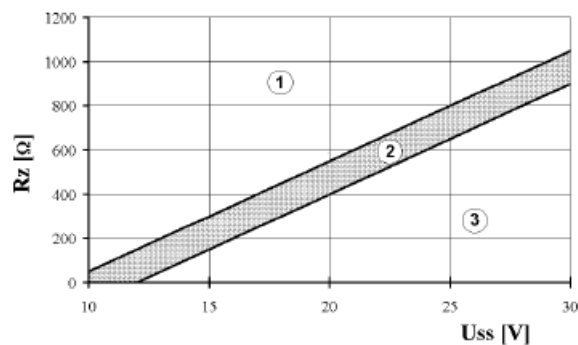

### LCD Info mode

- Several settings of installed transmitter are possible to verify without using computer. It is necessary to connect at least power of current loop I1.
- Unscrew the transmitter lid and shortly press button between display and interconnection terminals by means of a tool (e.g. screwdriver).
- Range and type of value for output 1 (current loop I1 = symbol „1“ on display).
- Type of value, assigned to output 1, is indicated by displayed unit (here  $^{\circ}\text{C}$  = temperature).
- Upper line displays current value corresponding to measured value (lower line).
- Here 4 mA corresponds to  $-30^{\circ}\text{C}$ . Press button again to get value for upper point (same output, same value) similarly as at previous point.
- Here 20 mA corresponds to  $80^{\circ}\text{C}$ . Press button again to end info mode and display actual measured values.



### Readings on LCD display $^{\circ}\text{C}$ , $^{\circ}\text{F}$

Reading next to this symbol is measured temperature or error state of value.

## Technical parameters

- Analog output:
- Current loop with range from 4 to 20 mA
- Current output in case of error: <3.8 mA or >24 mA
- Measuring parameters: Ambient temperature (internal RTD sensor Pt1000/3850ppm):
- Measuring range: -30 to +80 °C
- Display resolution: 0.1 °C
- Accuracy:  $\pm 0.4$  °C (For values on LCD display. For values on analog output too, if selected output range is set inside measuring range).
- Power: 9 to 30 V dc, maximum ripple 0.5 %
- Response time (air flow approximately 1 m/s): temperature:  $t_{90} < 4$  min (temperature step 20 °C)
- Recommended interval of calibration: 2 years
- Measuring interval and LCD display refresh: 0.5 s
- Communication with computer: via USB port by means of USB communication cable SP003
- Protection: IP65
- Operating conditions:
- Operating temperature range: -30 to +80 °C, over +70°C switch LCD display OFF
- Operating humidity range: 0 to 100 %RH
- Outer characteristics in accordance with Czech National Standard 33-2000-3: normal environment with the specifications: AE1, AN1, BE1
- Working position: the stem downwards
- Electromagnetic compatibility: complies EN 61326-1
- Not allowed manipulations: It is not allowed to operate the device under other than specified conditions in technical parameters. Devices are not designed for locations in chemically aggressive environment.
- Storing conditions: temperature -30 to +80 °C humidity 0 to 100 %RH without condensation
- Dimensions: see dimensional drawings
- Weight: approximately 140 g
- Material of the case: ASA

## Procedure of modification of transmitter adjustment

- device adjustment is performed by means of the optional SP003 communication cable, connected to USB port of the PC.
- It is necessary to have installed configuration program Tsensor on the PC. It is free to download at [www.cometsystem.com](http://www.cometsystem.com). During installation please take care about installation of driver for USB communication cable.
- Connect SP003 communication cable to the PC. Installed USB driver detect connected cable and create virtual COM port inside the PC.
- Unscrew four screws of the device lid and remove the lid. If device is already installed to measuring system, disconnect leads from terminals.
- Connect SP003 communication cable to the device. Display must light up, or at least must light up all symbols for one second (if LCD was switched OFF by program before).
- Run installed Tsensor program and select corresponding communication COM port (as described above).

- When new setting is saved and finished, disconnect the cable from the device, connect leads into its terminals and place the lid back to the device

## Error states of the device

The device continuously checks its state during operation. In case error is found LCD displays corresponding error code:

### Error 0

First line displays „Err0“. Check sum error of stored setting inside device's memory. Output value is  $< 3.8 \text{ mA}$ . This error appears if incorrect writing procedure to device's memory occurred or if damage of calibration data appeared. At this state device does not measure and calculate values. It is a serious error, contact distributor of the instrument to fix.

### Error 1

Measured value is over upper limit of allowed full scale range. There is a reading „Err1“ on LCD display. Output value is about  $24.5 \text{ mA}$ . This state appears if measured temperature is higher than approximately  $600^{\circ}\text{C}$  (i.e. high non-measurable resistance of temperature sensor, probably opened circuit).

### Error 2

There is a reading „Err2“ on LCD display. Output value is about  $3.8 \text{ mA}$ . Measured value is below lower limit of allowed full scale range. This state appears if measured temperature is lower than approximately  $-210^{\circ}\text{C}$  (i.e. low resistance of temperature sensor, probably short circuit).

### Error 3

There is a reading „Err3“ on LCD display upper line. Error of internal A/D converter appeared (converter does not respond, probably damage of A/D converter). No measurements proceed. Output value is about  $3.8 \text{ mA}$ . It is a serious error, contact distributor of the instrument.


## End of operation

Device itself (after its life) is necessary to liquidate ecologically!

## Technical support and service

Technical support and service is provided by distributor. For contact see warranty certificate

## Appendix A

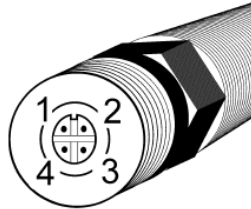

Female Lumberg connector	Transmitter Tx1xxL with 4-20mA outputs	Transmitter Tx2xxL with 0-10V outputs	Transmitter Tx3xxL with RS232 output	Transmitter Tx4xxL with RS485 output
1	+I1	Udd	RTS	+U
2	+I2	Uout1	Rx	A
3	-I2	Uout2	Tx	B
4	-I1	GND	GND	GND

## Documents / Resources

<p><b>T0110 TRANSMITTER</b></p> <p>Programmable temperature transmitter with 4-20 mA output</p> <p>Instruction Manual</p> <p><small>© 2005 COMET SYSTEM S.p.A. Tutti i diritti sono riservati. È vietata espressamente la ristampa o l'uso non autorizzato senza permesso scritto dalla COMET SYSTEM S.p.A. Tous droits réservés. Toute réimpression ou utilisation non autorisée sans la permission écrite de la COMET SYSTEM S.p.A. est formellement interdite.</small></p>	<p><b><a href="#">COMET SYSTEM T0110 Programmable Temperature Transmitter</a></b> [pdf] Instruction Manual TxxxxL, TxxxxZ, T0110 Programmable Temperature Transmitter, T0110, T0110 Temperature Transmitter, Programmable Temperature Transmitter, Temperature Transmitter, Transmitter</p>
---	---

References

-  [Manufacturer of Dataloggers, Thermometers, Hygrometers,CO2 meters](#)
-  [Manufacturer of Dataloggers, Thermometers, Hygrometers,CO2 meters](#)