

COMET T5540 CO2 Transmitters Web Sensor



Contents [[hide](#)]

- [1 PRODUCT DESCRIPTION](#)
- [2 INSTALATION AND OPERATION](#)
- [3 DEVICE SETUP](#)
- [4 ERROR STATES](#)
- [5 SAFETY INSTRUCTIONS](#)
- [6 TECHNICAL SPECIFICATIONS](#)
- [7 Documents / Resources](#)
 - [7.1 References](#)

PRODUCT DESCRIPTION

CO2 transmitters Web Sensor T554x and T654x with Ethernet interface are designed for measurement of temperature and relative humidity of air and for measurement of CO2 concentration in air. Transmitters can be used in a chemically non-aggressive environment.

The CO2 concentration is measured using the dual wavelength NDIR sensor with the multipoint calibration. This principle compensates aging of the sensing elements and offers maintenance free operation and outstanding long term stability.

Relative humidity transmitters allows to determine other calculated humidity variables like dew point temperature, absolute humidity, specific humidity, mixing ratio and specific enthalpy.

Measured and calculated values are displayed on a two-line LCD display or can be read and then processed via Ethernet interface. The device is also equipped with three-color LED for visual indication of the CO2 concentration. The following formats of Ethernet communication are supported: www pages and protocols Modbus TCP, SNMPv1, SOAP, XML and JSON. The transmitter may send also a warning message if the measured value exceeds adjusted limit. The messages can be sent up to 3 e-mail addresses or to Syslog server and can be sent by SNMP Trap too. The alarm states are also displayed on the websites. The device setup can be made by the Tensor software (free of charge at www.cometsystem.com) or using the www interface.

type *	measured values	construction	mounting
T5540	CO2	ambient air	wall
T6540	T + RH + CO2 + C V	ambient air	wall
T5541	CO2	probe on cable	wall
T6541	T + RH + CO2 + C V	probes on cable	wall
T5545	CO2	duct mount	fix by means of the cable gland

T6545	T + RH + CO2 + C V	duct mount	fix by means of the cable gland
-------	-----------------------	------------	------------------------------------

* models marked TxxxxZ are custom – specified devices.


T...temperature, RH...relative humidity, CO2...concentration CO2 in air, CV...computed values.

INSTALLATION AND OPERATION

The transmitters T5540 (T6540) and T5541 (T6541) fasten on a flat surface with two screws or bolts. The external CO2 probe unpack and connect to the T5541 (T6541) device. Place the external probes into the measured area. The T5545 (T6545) transmitter install by inserting the metal stem into the Pg21 cable gland so that the measured air was fed into the head of device (see Technical specification). To fasten the stem it is also possible to use the flange PP4 (optional accessory). Pay attention to the location of the device and probes. Incorrect selection of working position could adversely affect accuracy and long-term stability of measured value. Devices don't require special maintenance. We recommend that you regularly verify the accuracy of the measurement with calibration.

DEVICE SETUP

For network device connection it is necessary to know new suitable IP address. The device can obtain this address automatically from a DHCP server or you can use the static IP address, which you can get from your network administrator. Install the latest version of Tensor software to your PC and according to the "Device connection procedure" (see next page) you connect the Ethernet cable and power supply adapter. Then you run Tensor program, set the new IP address, configure the device in accordance with your requirements (alarm conditions, limits of CO2 LED indication, sending of e-mail) and finally store the settings. The device setup can be made by the web interface too (see manual for devices at www.cometsystem.com).

After device switching on starts internal test. During this time (about 20 s) LCD display shows  instead value of CO2 concentration.

The IP address of each device is set by the manufacturer to 192.168.1.213.

ERROR STATES

Device continuously checks its state during operation and if an error appears, it is displayed relevant code: Err 1 – measured value (except of CO₂ concentration) or calculated value is over the upper limit, Err 2 – measured or calculated value is below the lower limit or concentration CO₂ measurement error occurred, Err 0, Err 3 and Err 4 – it is a serious error, please contact distributor of the device (for devices with an external probe CO₂G-10 the Err 4 indicates that the probe is not connected).

SAFETY INSTRUCTIONS



- Don't use and don't store the devices without the cover of the temperature and humidity sensors.
- It is not recommended to use the humidity transmitters for long time under condensation conditions.
- Take care when unscrewing the filter cap as the sensor element could be damaged.
- Use only the power adapter according to technical specifications and approved according to relevant standards.
- Don't connect or disconnect transmitters while power supply voltage is on.
- Installation, electrical connection and commissioning should be performed by qualified personnel only.
- Devices contain electronic components, it needs to liquidate them according to legal requirements.
- To complement the information in this data sheet read the manuals and other documentation, which are available in the Download section for a particular device at www.cometsystem.com.


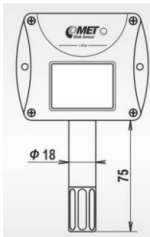
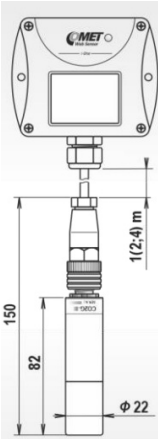
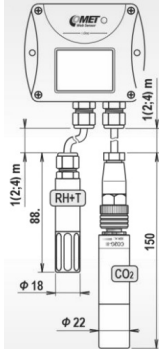
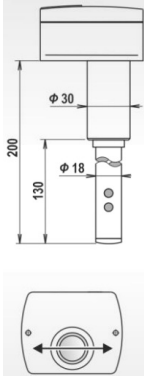
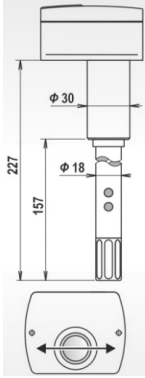
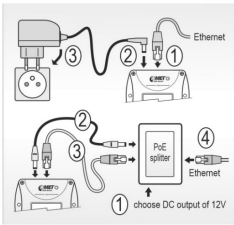
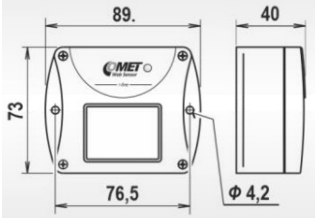
TECHNICAL SPECIFICATIONS

Device type	T5540	T6540	T5541	T6541	T5545	T6545
-------------	-------	-------	-------	-------	-------	-------

Supply voltage – coaxial connector, diameter 5.1 * 2.1mm	9-30Vdc	9-30Vdc	9-30Vdc	9-30Vdc	9-30Vdc	9-30Vdc
Power consumption	1W	1W	1W	1W	1W	1W
Max. power consumption (for 50 MS with 15 s period)	4W	4W	4W	4W	4W	4W
Temperature measuring range	–	– 30 to + 80 °C	–	-30 to +105 °C	–	-30 to +60 °C
Accuracy of temperature measurement	–	± 0.6 °C	–	± 0.4°C	–	±0.4°C
Relative humidity (RH) measuring range (no condensation) *	–	0 to 100 %RH	–	0 to 100 %RH	–	0 to 100 %RH
Accuracy of humidity measurement from 5 to 95%RH at 23 °C	–	± 2.5%RH	–	± 2.5 %RH	–	± 2.5%RH
CO2 concentration measuring range **	0 to 5000 ppm	0 to 5000 ppm	0 to 10000 ppm	0 to 10000 ppm	0 to 5000 ppm	0 to 5000 ppm

Accuracy of CO ₂ measurement at 25 °C and 1013 hPa	± (50ppm ±3% of measured value)	± (50ppm+3% of measured value)	± (100ppm+5% of measured value)	± (100ppm+5% of measured value)	± (50ppm+3% of measured value)	± (50ppm+3% of measured value)
Calculated humidity variables – dew point temperature,....	–	yes	–	yes	–	yes
Recommended calibration interval of the device ***	5 years	1 year	5 years	1 year	5 years	1 year
Protection class – case with electronics	IP30	IP30	IP30	IP30	IP30	IP30
Protection class – measuring end of stem / CO ₂ probe / RH probe	-/-/-	IP40/-/-	-/IP65/-	-/IP65/IP40	IP20/-/-	IP20 /-/-
Temperature operating range of the case with electronics **	– 30to + 60 °C	-30 to 60 °C	-30 to+80 °C	-30 +80 °C	-30 to +60 °C	-30 to +60 °C

Temperature operating range of the measuring end of stem	—	-30 to 80 °C	—	—	—	-30 to +60 °C
Temperature operating range of the C*O_{2} ext. probe (moving less cable)	—	—	-25 +60°C	-25 to +60 °C	—	—
Temperature operating range of the RH + T external probe	—	—	—	-30 to +105°C	—	—
Humidity operating range	5 to 95 %RH	5 to 95% RH	0 to 100% RH	0 to 100% RH	5 to 95% RH	5 to 95% RH
Mounting position	connectors upwards	sensor cover downwards	any position	any position	any position #	any position #
Storage temperature range (5 to 95%RH no condensation)	-40 to +60 °C	-40 to +60 °C	-40 to +60 °C	-40 to +60 °C	-40 to +60 °C	-40 to +60 °C
Electromagnetic compatibility according to	EN 61326-1 EN 55011	EN 61326-1 EN 55011	EN 61326-1 EN 55011	EN 61326-1 EN 55011	EN 61326-1 EN 55011	EN 61326-1 EN 55011
Weight	140 g	160 g	240 (270, 330) g	320 (300, 530) g	280 g	280 g

Dimensions [m m]	 			 #air flow direction	 # air flow direction
Device connec tion procedure					

- The relative humidity measuring range is limited at temperatures above 85°C, see manuals for devices.
- **LED indication (preset by manufacturer):** green (0 to 1000 ppm), yellow (1000 to 1200 ppm), red (1200 to 5000/10000 ppm).
- **Recommended calibration intervals:** relative humidity – 1 year, temperature – 2 years, CO2-5 years.
- It is recommended to switch off the LCD display at ambient temperature above 70°C.

COMET SYSTEM, s.r.o., Bezrucova 2901.

756 61 Roznov pod Radhostem, Czech Republic.

Specifications are subject to change without notice.

February 2025 / ie-snc-n-t5(6)5xx-09.



Documents / Resources



[COMET T5540 CO2 Transmitters Web Sensor \[pdf\]](#) User Guide

T5540, T6540, T5541, T6541, T5545, T6545, T5540 CO2 Transmitters Web Sensor, T5540, CO2 Transmitters Web Sensor, Transmitters Web Sensor, Web Sensor, Sensor

References

- [User Manual](#)

COMET

CO2 Transmitters Web Sensor, COMET, Sensor, T5540, T5540 CO2 Transmitters Web Sensor, T5541, T5545, T6540, T6541, T6545, Transmitters Web Sensor, Web Sensor

Leave a comment

Your email address will not be published. Required fields are marked *

Comment *

Name

Email

Website

☐ Save my name, email, and website in this browser for the next time I comment.

Post Comment

Search:

e.g. whirlpool wrf535swhz

Search

[Manuals+](#) | [Upload](#) | [Deep Search](#) | [Privacy Policy](#) | [@manuals.plus](#) | [YouTube](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.