



concept SM 3410 Blender Instruction Manual

[Home](#) » [concept](#) » concept SM 3410 Blender Instruction Manual 

Contents

- 1 [concept SM 3410 Blender](#)
- [ACKNOWLEDGMENT](#)
- [2 IMPORTANT SAFETY INSTRUCTIONS](#)
- [3 PRODUCT DESCRIPTION](#)
- [4 Intelligent switch](#)
- [5 OPERATING INSTRUCTIONS](#)
- [6 CLEANING AND MAINTENANCE](#)
- [7 SERVICING](#)
- [8 ENVIRONMENTAL PROTECTION](#)
- [9 WARRANTY TERMS](#)
- [10 Documents / Resources](#)
 - [10.1 References](#)
- [11 Related Posts](#)

concept


concept SM 3410 Blender



ACKNOWLEDGMENT

Thank you for purchasing a Concept product. We hope you will be satisfied with our product throughout its service life.

Please study the entire Operating Manual carefully before you start using the product. Keep the manual in a safe place for future reference. Make sure other people using the product are familiar with these instructions.

Technical parameters	
Voltage	220 – 240 V~ 50/60 Hz
Input	1000 W
Noise level	max. 88 dB(A)
Time of continuous operation (KB)	max. 120 sec.
	Double or reinforced insulation


IMPORTANT SAFETY INSTRUCTIONS

- Use the unit only as described in this operating manual.
- Remove all the covering and marketing materials from the unit before the first use.
- Make sure the mains voltage matches the value marked on the rating plate.
- Close supervision is necessary when the unit is on or plugged into the socket.
- Put the appliance on a flat, steady surface; do not put it on other appliances.
- Do not place the appliance close to flammable substances, fire, heating bodies or a hot oven.
- Do not cover the appliance. There is a risk of overheating.
- Do not put anything on the unit during operation.
- Never carry the unit during operation.
- Keep the unit clean; prevent debris or other foreign bodies from entering the openings of the unit body .
Contaminants may short out the unit, causing damage or fire.

- Never pull the cord to disconnect the plug from the socket; hold the plug instead.
- Do not allow children or unskilled people to handle the unit. Use the unit out of the reach of these individuals.
- The appliance is not intended for use by people with reduced physical, sensory or mental capabilities or lack of knowledge, unless under the supervision of an acquainted person responsible for their safety.
- Pay the utmost attention when using the unit close to children.
- Do not use the appliance as a toy.
- Make sure the power cord does not hang over the working area, to prevent children from reaching it.
- The appliance is intended for interior use only; do not expose it to moisture. Otherwise, a risk of electrical shock may occur.
- Use manufacturer-recommended accessories only.
- Never use the appliance if the supply cord or plug is damaged. Immediately refer to an authorised service centre for repair.
- Never pull the supply cord or use it to carry the unit.
- Keep the appliance away from any other heat sources such as radiators, ovens etc. Do not expose the unit to direct sunlight or moisture.
- Never operate the appliance with wet hands.
- Turn off the product and disconnect the plug from the mains outlet before installing accessories, performing maintenance, or in the case of any failure.
- Do not touch the moving parts during operation of the unit. Wait until it stops completely.
- The appliance is intended for domestic use only, not for commercial use.
- Do not immerse the power cord, plug, or appliance in water or any other liquid.
- Check the appliance and power cord for damage regularly. Never switch on a damaged appliance.
- Prevent loose hair and garments from hanging close to the openings and moving parts of the appliance.
- Before plugging the unit in or unplugging it from the wall outlet, make sure the switch is OFF.
- Always take extra care when handling the blades and slicers. They are very sharp and could cause an injury.
- Turn the unit off, disconnect the power cord from the wall outlet, and allow the unit to cool before cleaning.
- The unit contains sharp parts. Extra care should be taken while cleaning the unit.
- Do not let the power cord hang loosely over the edge of the work area. Make sure the power cord does not touch hot surfaces.
- Do not let the unit hang loosely on the power cord.
- Do not use the unit without correctly mounted accessories.
- Do not let the appliance run when empty.
- Do not repair the appliance yourself. Refer to an authorised service centre instead.
- This appliance may be used by children 8 years of age and older and by persons with physical or mental impairments or by inexperienced persons if they are properly supervised or have been informed about how to use of the product in a safe manner and understand the potential dangers. Children must not play with the appliance. This appliance may be cleaned by children 8 years of age and older if they are properly supervised. Keep this appliance and the power cord out of reach of children younger than 8 years of age

Failure to follow the manufacturer's instructions may lead to refusal of warranty repair.

PRODUCT DESCRIPTION

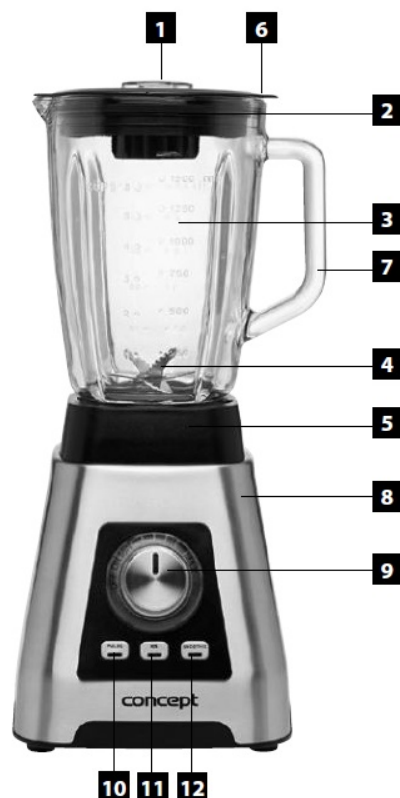

1. Small cup
2. Seal belt of lid
3. Jar
4. Blades
5. Jar base
6. Jar lid with handle
7. Soft touch Jar handle
8. Blender Motor Base
9. Stepless Speed control knob
(ON control button)
10. "P" ON
11. "Crusher" ON
12. "Smooth blending" ON

Intelligent switch

This blender owns "ON", "0/Off", "Stepless Speed" 3 type SWITCH controls. You could choose one of them for your drink / food processing.

"0/Off" switch controls

This speed control is to stop the blender or reset the blender speed.

Important: Machine only could be work when the switch knob is started from "O/off" position.

"ON" switch controls

Turn to this switch control position.

Press "Ice Crusher" ON or "Smooth blending" ON, the chosen button will be under long light. The machine will working as setting.

Press the same button again, this button function will be canceled.
“P” ON will stop at once when your finger leave from button

“P” ON – Pulse function

Need to press it during blending, once your finger leave from button, this function will stop.

“Crusher” ON – Crusher function

Blender under this mode will automatically work: few seconds on and stop, and repeat processing for several time. Ice crushed under this mode will not spray and stick onto the glass jar wall

“Smooth blending” ON – Crusher function

Blender under this mode will automatically work: speed moves faster and faster till to max speed.

“Stepless Speed”

If you want the blender moving slowly, turn the adjustment from “Min”.

If you need the blender moving fast, turn the adjustment till to “Max”.

OPERATING INSTRUCTIONS

CAUTION

Prior to using a new unit, wipe the surface with a wet cloth and wash the removable accessories in warm water due to hygienic reasons.

The unit has a built-in safety catch. The motor can be switched on only if the accessories are properly mounted.

Do not bypass the safety mechanism!

Never leave the appliance unattended while it is running or connected to the mains.

Some parts may keep moving for a while immediately after the motor has been switched off and the power cord disconnected from the socket. Wait until the accessories stop completely and only then open the lid.

Using your blender

1. Place the Jar onto Blender Motor Base. Before operation, recheck the Jar base is fixed well on the blender Motor Base or not. If not, adjust a little bit direction of driving shaft of Blade under Jar base for a easy insert into Motor Driver Gear of Blender Motor Base.
2. Put the ingredient into Jar and then cover the lid back
3. Plug into the power source
4. Settle “ON” or “Stepless Speed” SWITCH controls to start the processing.
5. Ingredient could be added into Jar through Small cup in the lid
6. Take away the Jar from Blender Motor Base only when the motor is stop.

WARNING

Hot food mixes at the lowest speed, if necessary, add speed. Do not use smoothies, there is a risk of splashing hot liquid from the container and scalding.

CLEANING AND MAINTENANCE

1. Before cleaning remove the power cord from the socket.
2. Never immerse the housing with motor in water!
3. Do not use any sharp or abrasive detergents.
4. Only a damp rinsing cloth should be used to clean the outside of the housing.
5. Components that have come into contact with food can be cleaned in soapy water.

6. Allow the parts to dry thoroughly before reassembling the device.

SERVICING

Any extensive maintenance or repair that requires access to the inner parts of the product must be performed by an expert service centre.

ENVIRONMENTAL PROTECTION

- Packaging materials and obsolete appliances should be recycled.
- The transport box may be disposed of as sorted waste.
- Polyethylene bags shall be handed over for recycling.

Appliance recycling at the end of its service life:



■ A symbol on the product or its packaging indicates that this product should not go into household waste. It must be taken to the collection point of an electric and electronic equipment recycling facility. By making sure this product is disposed of properly, you will help prevent the negative effects on the environment and human health that would otherwise result from inappropriate disposal of this product. You can learn more about recycling this product from your local authorities, a household waste disposal service or in the shop where you bought this product.

WARRANTY TERMS

Warranty

The manufacturer (or importer) is responsible for ensuring the product complies with the requirements of applicable legal regulations as well as those of the relevant technical standards. Moreover, they are responsible for ensuring the product has the properties the manufacturer described in documents related to the goods or those reasonably expected by the customer with regard to the nature of the goods or based on advertising produced by the manufacturer, and further they are responsible for ensuring the product is fit for the purpose proposed by the manufacturer or that a product of the same type is normally used for.

The quality warranty term is 24 months from product takeover by the customer.

The warranty does not apply to wear and tear caused by regular use. The customer shall not be entitled to any warranty claims if, prior to taking the product over, they knew the product contained a defect or if the defect is attributable to the customer.

The warranty specifically does not apply:

- if the product installation, operation and service conditions stipulated in the product operating manual have not been adhered to,
- to malfunctions caused due to mechanical, heat or chemical damage, short circuit, over voltage or incorrect installation,
- to malfunctions caused by an inexperienced third-party intervention,
- to malfunctions caused by natural disaster,
- to malfunctions caused by insufficient or inappropriate maintenance in violation of the operating manual, including malfunctions caused by water and other sediments,
- to changes in colour of the heating surface or to scratching of the surface caused as a result of using the products in an unusual manner,

- to appearance and functional changes caused by exposure to sunlight, thermal radiation of water and other sediments,
- if the service life of certain product parts expires,
e. g. for accumulators, bulbs, etc.

The warranty does not apply to any products and services provided along with the product (gifts, promotional articles, etc.).

Filing a complaint

A complaint against a product defect must be filed as soon as identified, yet no later than before the end of the warranty term.

The customer must file a product complaint with the dealer from which they have purchased the product, or with any authorized service centre, a list of which is included in the product package, or available at www.my-concept.com.

While filing a product complaint, the product must be duly cleaned and securely packed so as to prevent any damage during its transport to an authorized service center, where relevant, unless the product is delivered in person.

The customer must submit proof of having concluded a purchase contract for the product by producing the receipt. While filing their complaint, the customer must indicate the noted defect and identify the preferred complaint application method.

Complaints processing

As long as the noted defect may be removed, the user has the right to have the defect duly removed free of charge on a timely basis.

Where such a procedure is not reasonable with re-gard to the nature of the defect, the user may require to be supplied a new defect-free product (re-place-ment), or, where the defect applies to a part of the product only, replacement of the part concerned. However, if replacement of the product or any part thereof is not proportionate with regard to the nature of the defect, especially if the defect can be removed without undue delay, the customer has the right to have the defect removed free of charge.

If the noted defect is not removable, or if the custom-er becomes entitled to replacement of the product or a part thereof, yet the replacement is not possible, for example due to the product having been sold out, the customer has the right to return the product (withdrawal from the contract).

The customer shall have the right to a new product (re-placement) or to replacement of a part of the product even if the defect can be removed, provided they can-not properly use the product due to repeated occur-rence of the defect or due to a high number of such de-fects. In such a case, the customer also has the right to return the product (by withdrawing from the contract).

If the product is not returned (the customer does not withdraw from the contract), or if the customer does not apply the right to a new defect-free product (replacement), to replacement of a part thereof or to repair of the product, they may request a reasonable discount. The customer also has a right to a reason-able discount if a new defect-free product cannot be supplied to them, or if a product part cannot be replaced or the product repaired unless the situation is remedied within a reasonable time limit, or if remedying the situation would create major discomfort on the part of the customer.

The seller, authorized service center or a staff member authorized by them must decide about each complaint immediately or within three business days in complicated cases. This term does not include a reasonable period of time, depending on the type of product concerned, required for the defect to be assessed by an expert. A complaint, including defect removal, must be dealt with without any undue delay, yet no later than within 30 calendar days of the complaint fi ling date, unless the seller and the customer agree on a later deadline.

On returning the product (withdrawing from the contract) the customer must return any accessories and documents supplied along with the product.

The customer does not have the right to keep the defective parts and components of the product replaced as part of a repair of the product.

This shall be without prejudice to any other rights the customer may have in relation to the purchase of the product.

Remark: Complaints against products damaged in transport are governed by the carrier's complaints procedure.

Product data

Model:

Production number:

Date of purchase:

Seal and signature of vendor:

Manufacturer

Jindřich Valenta – ELKO Valenta

Vysokomýtská 1800, 565 01 Choceň

Czech Republic

tel.: +420 465 471 433


fax +420 465 473 304

Company ID No. 13216660

email: servis@my-concept.cz

www: [www: www.my-concept.com](http://www.my-concept.com)

Documents / Resources

	<p>concept SM 3410 Blender [pdf] Instruction Manual SM 3410 Blender, SM 3410, Blender</p>
---	---

References

-  [Concept – chytře vymyšleno pro život](#)
-  [Domena Concept.pl jest na sprzedaż - SklepDomeny.pl](#)
-  [Luxury Architecture, Concept Architects, Bratislava](#)
-  [Concept](#)
-  [Online software pre autoservis | servis.sk](#)
-  [Tech.sk | Všetko o informačných technológiáchTech.sk | Magazín o internete a technológiách](#)
-  [Concept](#)
-  [Concept – chytře vymyšleno pro život](#)
-  [Concept innowacje w Twoim życiu!](#)
-  [www.my-concept.sk | vymyslené pre život](#)
-  [Verners](#)