

D R Version 1.06 Camcon Visual Radio Control



D R Version 1.06 Camcon Visual Radio Control Instruction Manual


[Home](#) » [D R](#) » D R Version 1.06 Camcon Visual Radio Control Instruction Manual 

Contents

- 1 D R Version 1.06 Camcon Visual Radio Control
- 2 Product Information
- 3 Product Usage Instructions
- 4 CAMCON
- 5 NECESSARY DOWNLOADS
- 6 RENAMING CHANNELS EASILY
- 7 IDENTIFYING DEVICE/CHANNELS
- 8 CONFIGURING THE WEBSOCKET PLUG IN
- 9 INSTALLING VISUAL RADIO CONTROL
- 10 CONFIGURE NDI CAMERA
- 11 Configuration menu
- 12 Let the _Visual Radio Control_ direct
- 13 GOOD TO KNOW, TIPS and Hints
- 14 Troubleshooting
- 15 DIMENSIONS Camcon frame
- 16 ELECTROMAGNETIC COMPATIBILITY
- 17 PRODUCT SAFETY
- 18 Documents / Resources
 - 18.1 References
- 19 Related Posts



D R Version 1.06 Camcon Visual Radio Control

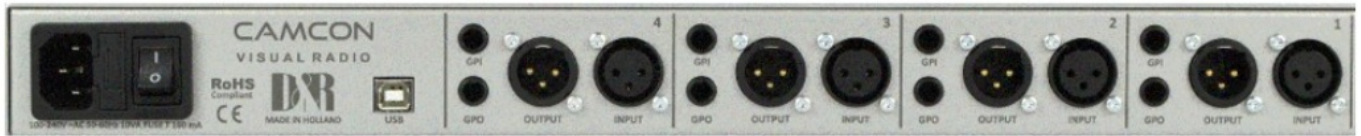

Product Information

Specifications:

- Product Name: CAMCON Visual Radio Control
- Version: 1.06
- Power Source: 100-240V AC
- Connection: USB to PC
- Front Panel Controls: Mic level adjustment, LED indicators

Product Usage Instructions

Connecting the CAMCON:

1. Connect the CAMCON to a power source between 100 and 240 volts AC.
2. Connect the USB cable from the CAMCON to your PC where the visual radio software runs.
3. Connect microphone cables directly to the CamCon XLR input.

Adjusting Mic Levels:

- Use the pushbuttons on the front panel to adjust incoming Mic levels.
- Mic level adjustment can also be done in the software.

Identifying Devices/Channels:

- To identify devices or channels, click on the 'Camcon' word on screen or the 'D&R' logo.
- Right-click on the left side of the device and select 'Identify' from the menu.

Renaming Channels:

Double-click on the Channel name or right-click and select 'Change channel name' to rename channels for easy recognition.

Frequently Asked Questions (FAQ)

• Q: How do I know if my CAMCON device is connected correctly?

A: Make sure the device is connected over USB to your PC and turned on. A green 'ON' LED should be visible on the Camcon Device status.

• Q: What should I do if there is no picture on the screen?

A: Refresh your screen (F5 or fn+F5 in Windows 11) or close and re


- start the Camcon application. Ensure proper connection between the PC and Camcon Device.

Dear Client,


- Thank you for choosing the D&R CAMCON (CAMera CONtroller).
- The Camcon hardware was designed by Radio Broadcast professionals along with the D&R design team and is intended to be used as the control unit for Visual Radio Control (VRC) software Scene controller together with OBS in the most demanding production room.
- We are confident that you will be using the Camcon hardware and VCR software for many years to come, and wish you lots of success.
- We value suggestions from our clients and would be grateful if you could email us with your comments when you are familiar with the Camcon unit and its VRC software.
- We learn from the ideas and suggestions of customers like you and appreciate your time taken to eventually do this.
- And... we always appreciate nice studio pictures with the Camcon in use to include on our website. Please mail them to sales@d-r.nl
- With kind regards,
- Duco de Rijk
- md

CAMCON

- The “CAMCON (CAMera CONtrol Triggerbox)” measures microphone levels and sends these over a USB link to a PC where visual radio software runs.
- The Triggerbox/CAMCON is very simple to use. The unit is placed in series with the microphone and the mixing console. This is a direct straight wire from input to output XLR and has no influence on your sound. Do NOT insert a mic processor in between your Microphone and the CamCon!
- Therefore each channel will have an XLR input and an XLR output that acts as a thru connector.
- In order to support multiple microphones, the gain for the level measurement to switch camera's can be done on the front panel with one single push switch. NOTE, This has no influence on the Mic XLR signal and is only for internal measurement. This product needs to be used with the following software CAMCON server software (included), Visual Radio Control (VRC) (included) and OBS version 28 and up.

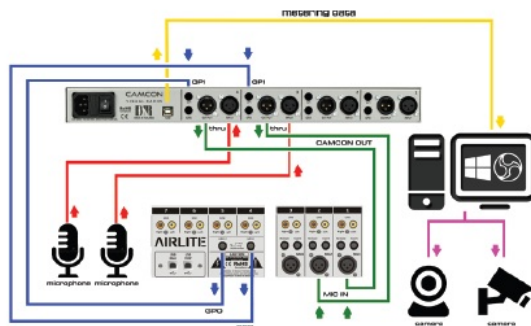

Wiring diagram for AIRLITE mixer

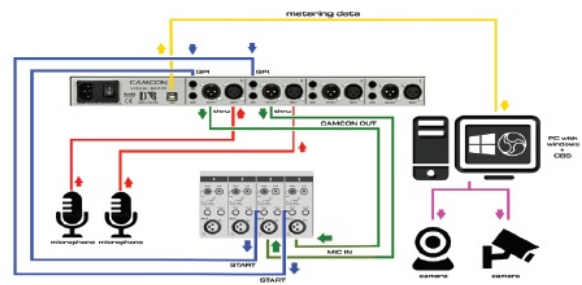


Wiring diagram for AIRENCE mixer



- The CAMCON needs to be connected to a power source between 100 and 240 volt AC .
- The USB cable (part of the delivery) needs to be connected from the USB plug at the back of the CAMCON to

your PC where the software runs. Mic cables go in and out hardwired.

- The GPI and GPO jacks are wired on tip and ring, so stereo cables will work here.

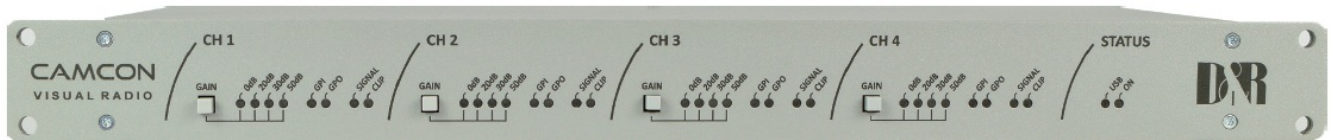




- On the front panel you can adjust the incoming Mic level with the pushbuttons, this can also be done in the software. Leds show the level settings and signal level. If GPI or GPO is active these corresponding leds will light. The Status leds on the right side of the front panel will indicate the unit is on and the USB connection is active. Please connect the microphone directly to the CamCon XLR input and not through a processor.


NECESSARY DOWNLOADS

- Before you install the Visual Radio Control (VRC) software it is important to install the Camcom application software first and then the OBS freeware.
- Only then the VRC software can find the links to both applications and then it will work as intended.
- Let's start with the CAMCON software.
- Go to the www.dnrbroadcast.com website and click on the tab "Your Support" and then choose tab "Service information / FAQ"
- The D&R WIKI page will be shown. Select the Camcon device which brings you to the product page of the CamCon .
- Now choose CamCon Control where the green arrow below points to, to start your download. Note: You can ignore pop up screens warning you for malware.
- In case you have malware protection that pops up. Choose "more info" and accept/continue.

FAQ - Camcon

Model:	
Camcon Control	
	
	
Needed Software	
	
<p>1. Install the Camcon Control software from the CD-ROM.</p> <p>2. Install the Camcon Control software from the CD-ROM.</p> <p>3. Install the Camcon Control software from the CD-ROM.</p> <p>4. Install the Camcon Control software from the CD-ROM.</p> <p>5. Install the Camcon Control software from the CD-ROM.</p> <p>6. Install the Camcon Control software from the CD-ROM.</p> <p>7. Install the Camcon Control software from the CD-ROM.</p> <p>8. Install the Camcon Control software from the CD-ROM.</p>	
Optional Software	
<p>Visual IR Audio</p> <p>Control</p>	

- After going through the usual installation steps the control software will be installed and can be launched from the desktop icon or shows itself right away on Screen as a replica of the frontpanel of the CamCon.
- After installation, you will see in your websbrowser: <http://localhost:8519/Animage> like below picture will now be seen on your screen.

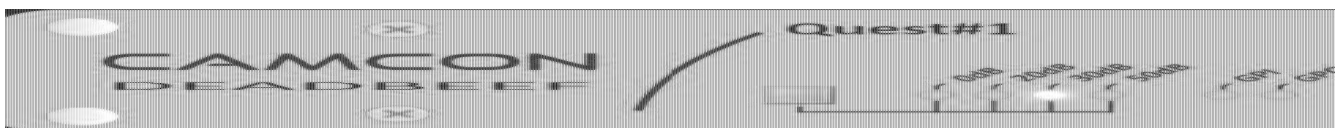


- Make sure that your Camcon Device is connected over USB to your PC and that it is turned on.
 - A blank screen will show when there is no Camcon connection.
 - You can refresh your screen (F5, or fn+F5 in Windows 11) if there is no picture, or even better close the existing application and restart the Camcon application.
 - Your Camcon Device should appear on screen with the 'ON' LED (below 'STATUS') turned on green.
- REMARK: Camcon Control + VCR open as a program, (don't close them in the taskbar)

RENAMING CHANNELS EASILY

- To make the channels easy recognizable in the software later, you can give it names like DJ-1, other than "Ch #1" for instance.
- Simply left double-click the Channel name to see a picture as on the right side or right-click on the channel and


select `Change channel name` from the menu. Then enter a new name in the Dialog Box and click OK.

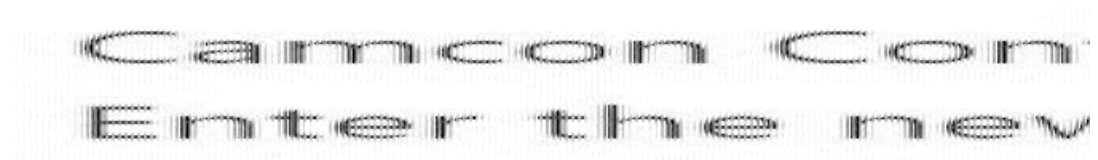

- You can also see that there are a number of changes that can be made by right clicking the mouse pointed at the label.

Settings like

- Gain 0|20|30|50dB This can also be activated directly on the frontpanel, (20 is the default to start with)
- GPO triggered by (None, GPI, Remote)
- Identify channel(the CamCon leds on the hardware will blink a few times)

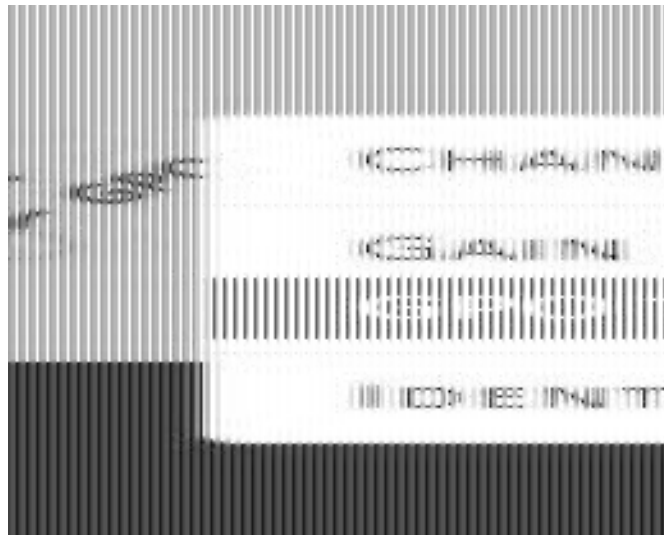

IDENTIFYING DEVICE/CHANNELS

- When you are not sure your device is connected, or when you have multiple Camcon Devices connected to the PC, you want to make sure that you are working with a specific device.
- **You can identify the device by either:**
 - click the `Camcon` word on screen
 - click the `D&R` logo
 - right-click on the left side of the device and select `Identify` from the menu.
- When any of the these actions are performed, the connected hardware Camcon Device should respond by blinking with all of the `Gain` LEDs. When nothing happens, the connection between the PC and the Camcon Device fails.
- **It is also possible to let just only one channel blink its LEDs by:**
 - clicking the separator bar of the channel, or
 - right-click on the channel and select `Identify channel` from the menu.
- This could be helpful when wiring up the hardware Camcon Device and you want to make sure you have the


right channel.


- INSTALLING OBS STUDIO version 28 and up
- Now it is time to download OBS from this link: <https://obsproject.com/download>
- On the middle-right of the page, click on `Download Installer`.



CONFIGURING THE WEBSOCKET PLUG IN

- When the Websocket plugin is properly installed, after (re)starting OBS Studio, it should be present in the Dropdown `Tools` menu. Click `Tools` > `OBS-Websocket Settings`.
- Please make sure that the `Websockets server` is `Enabled` and has the same number (port 4456 is default) as in the VRC software. (look where the arrow points to) if desired a `Password` can be set to control access to your `OBS Studio`. The password must then also be configured in the VRC settings.
- See also next page.

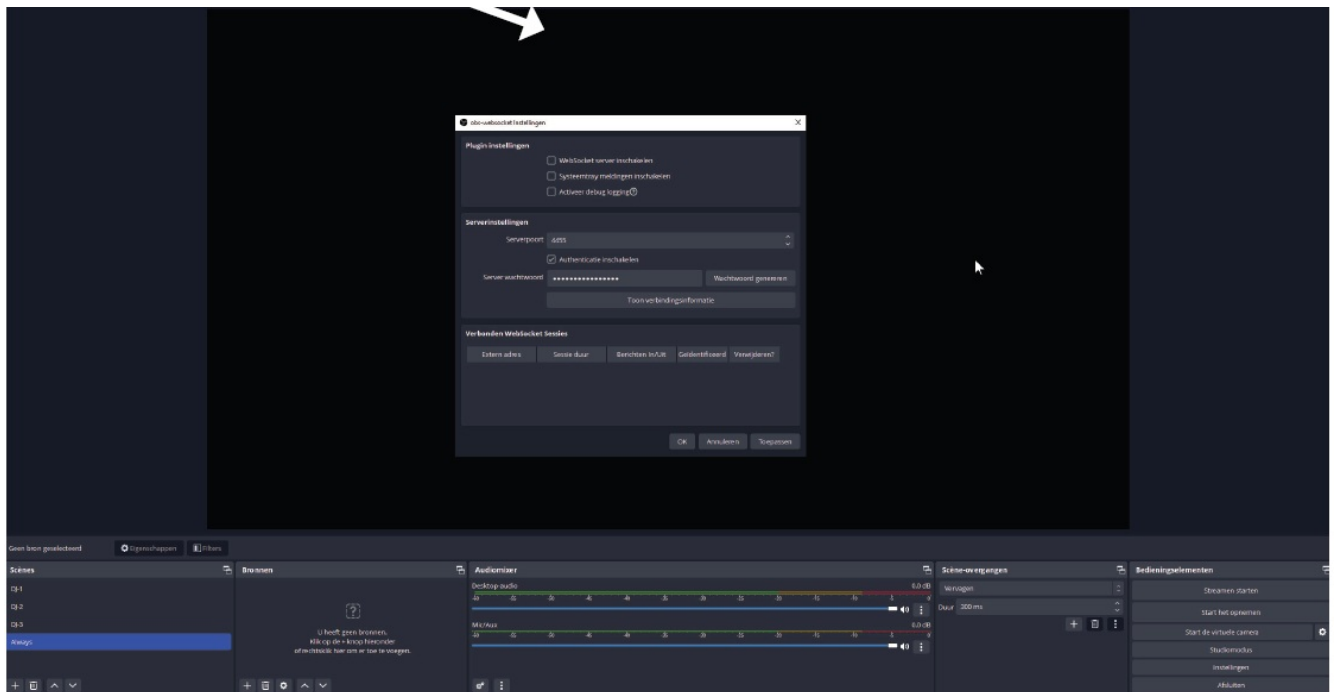

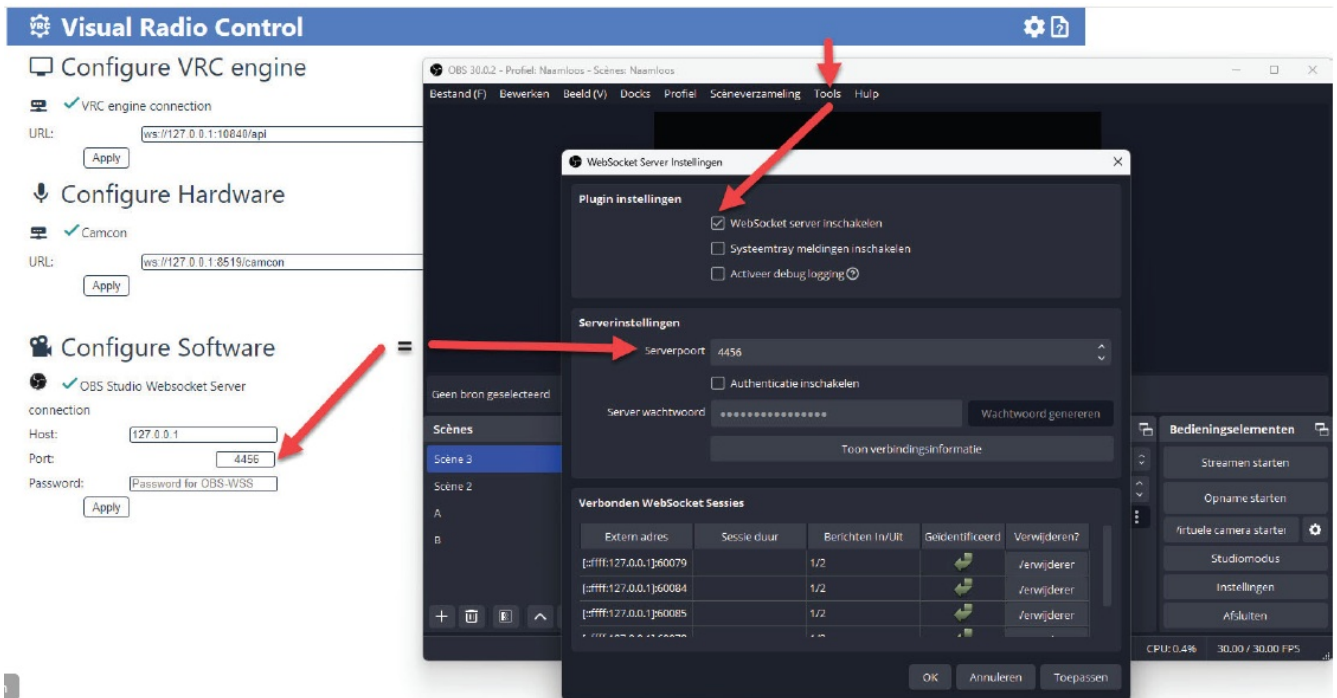

- Here you can see how to activate the WebSocket server by clicking the Tools drop down menu in OBS. Then select Webserver and activate the Webserver Socket.
Check at the same moment if the Serverport 4456 (default) is the same number as in the VRC engine. Then all three software packages work together in harmony.

INSTALLING VISUAL RADIO CONTROL


- This section describes where you can download _Visual Radio Control_ (VRC) from and what the installation options are. Also the first time the software is used, some initial settings must be checked to ensure proper operation of the software.
- Go to www.dnrbroadcast.com website and click on the tab “Your Support” and then choose tab “Service information / FAQ”
- The D&R WIKI page will be shown. Select the Camcon device which brings you to the product page of the CamCon .
- Now choose Visual Radio Control where the green arrow below points to, to start your download. Note: You can ignore pop up screens warning your for malware.
- In case you have malware protection that pops up. Choose “more info” and accept/continue.

Model:	Production year
Visual Radio Control	2022
Brochure	Manual

Needed Software	Windows 7	Windows 8	Windows 10	Windows 11	MAC OS X	Linux	Manual & Info
Visual Radio Control			v1.1.0 (22-09-2022)		N/A	N/A	Manual

- Choose Install for all users (recommended)

- Select Destination Location
- Select additional Tasks
- Create a desktop shortcut if you like
- Then you see Ready to Install, click Install and Finish.

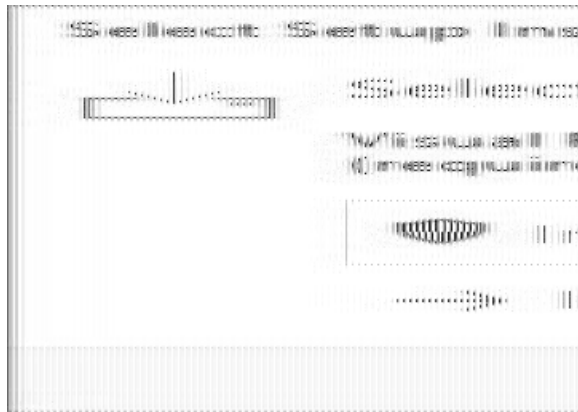

If you have done right you will see below startscreen on your PC.



- As you can see the software tells you that there are no scenes in OBS defined yet.
- But before doing that we will explain some more about the VRC software and how to install your camera's.

CONFIGURE NDI CAMERA

These steps describe the configuration of the MiniPro Video PTZ Camera (model PUS-HD520SEN) connection to OBS via ethernet. This is a tested LAN camera sold by D&R and can be part of the delivery if chosen. Also simple USB camera's will work, but they have a latency problem, where you cannot achieve lipsync images, but for testing this could be used of course.

Configure IP settings (for the “ D&R” Camera)

1. The accompanying documentation of the camera indicates which IP number has been configured by the supplier. For instance, 192.168.2.58.
2. Connect the camera to the Ethernet and power supply and connect a PC that has been configured in the same IP range, for instance 192.168.2.22.
3. Open a web browser and go to the IP number of the camera.
4. Login with admin, password admin (unless stated otherwise on the documentation).
5. It now opens the web interface and the camera picture should be shown on the screen.
6. In the menu, you can change the IP address if desired.

Remark: the camera can be set to DHCP (in that case, it will receive an IP address automatically) In case a connection cannot be established, check the following.

- Open a command screen (in Windows, press start and type 'cmd')
- Type 'ping 192.168.2.58' enter (use the address supplied with the camera) and check if the camera sends a reply. If it doesn't, check all connections or router settings.
- It might be necessary to set the PC ethernet connection to 'Private' (not 'public')


- <https://ndi.video/tools/ndi-core-suite/> offers a free download of the NDI tools to help discovering the camera on the network.

Prepare OBS for NDI


- Please follow the instructions below (this is about a different camera model, but the procedure is the same), describing the installation of the NDI plugin for OBS.
- Source of next pages are from BZBgear (thank you) and very helpful.
- <https://bzbgear.com/knowledge-base/how-to-add-your-ndi-camera-to-obs-studio/>
- We will review the process of creating an NDI source in OBS Studio for your BZBGEAR camera.
- We will begin this guide under the assumption that you have already established a connection to your camera on your local network. If you have not please refer to this guide <https://bzbgear.com/knowledge-base/72295/> for Windows, or this guide <https://bzbgear.com/knowledge-base/how-to-connect-your-bzbgear-camera-to-the-network-mac/> for Mac. First you will need to download and install in the following order;

1. OBS Studio <https://obsproject.com/download>
2. NDI Tools, <https://ndi.video/tools/ndi-core-suite/>
3. NDI Plugin for OBS Studio. <https://obsproject.com/forum/resources/obs-ndi-newtek-ndi%E2%84%A2-integration-into-obs-studio.528/>


- *Be sure to install all components of the NDI Tools package*
- Once everything is downloaded and installed you need to log in to your cameras web browser interface to enable the NDI stream.
- Navigate to Configuration -> NDI and check the box for NDI Enable.
- Choose a NDI Name that will be easily recognizable and set your NDI Group, if desired.
- Click Save and reboot the camera. *The camera MUST be rebooted for these settings to apply!*
- Open OBS Studio. Click + to add a new source in the Sources window.

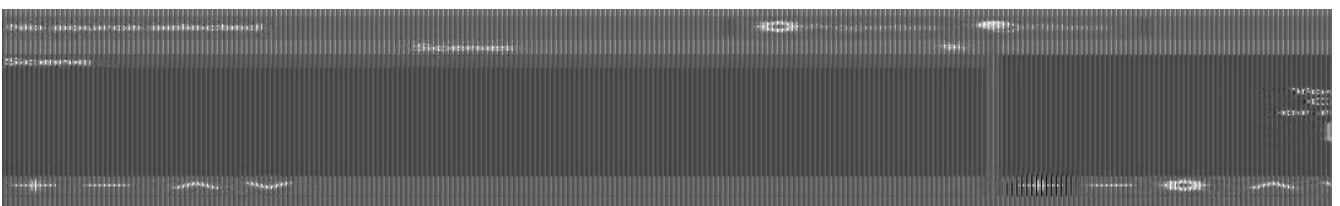


- Name your NDI source , make sure the "Make source visible box is checked and click OK.

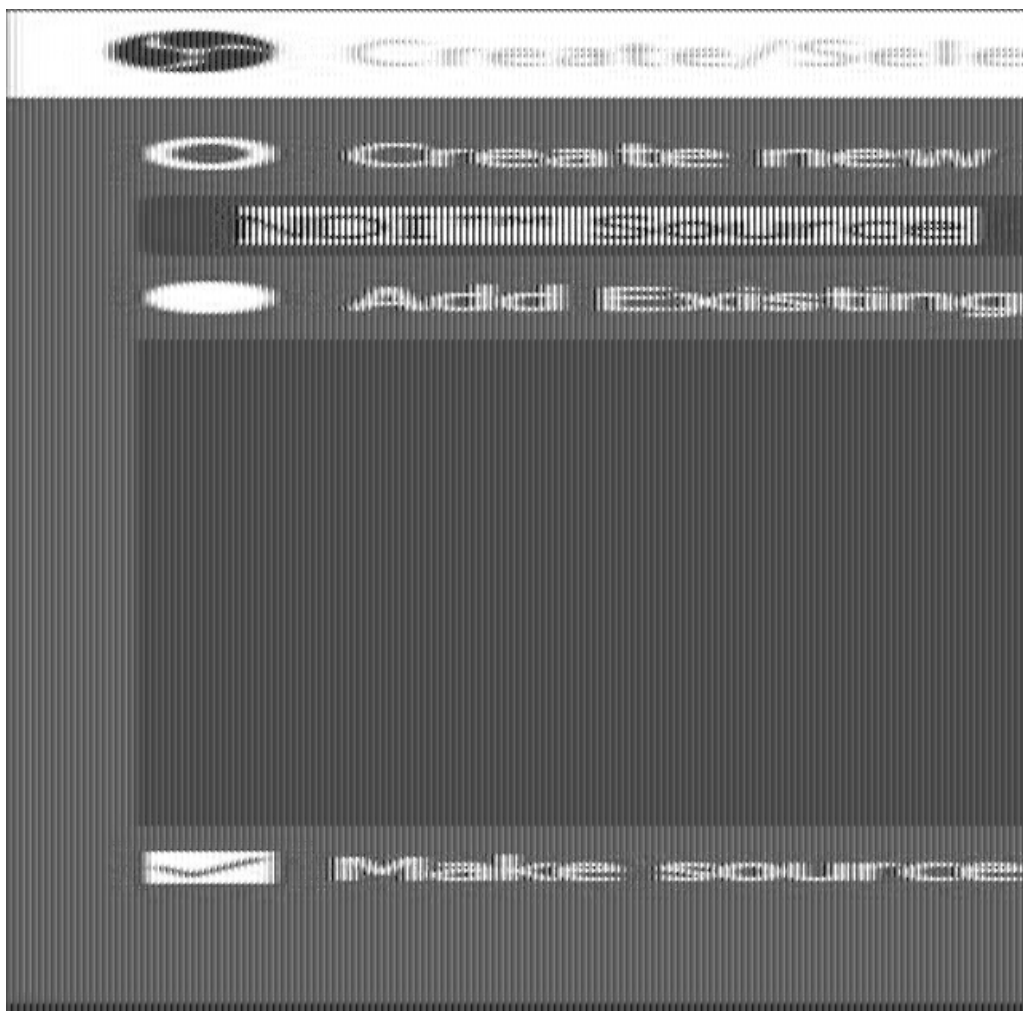

- When the Properties screen appears select the pull-down menu for Source name and select your NDI camera.
- The name should appear as NDI_HX (Your camera name). Click OK to close the Properties.

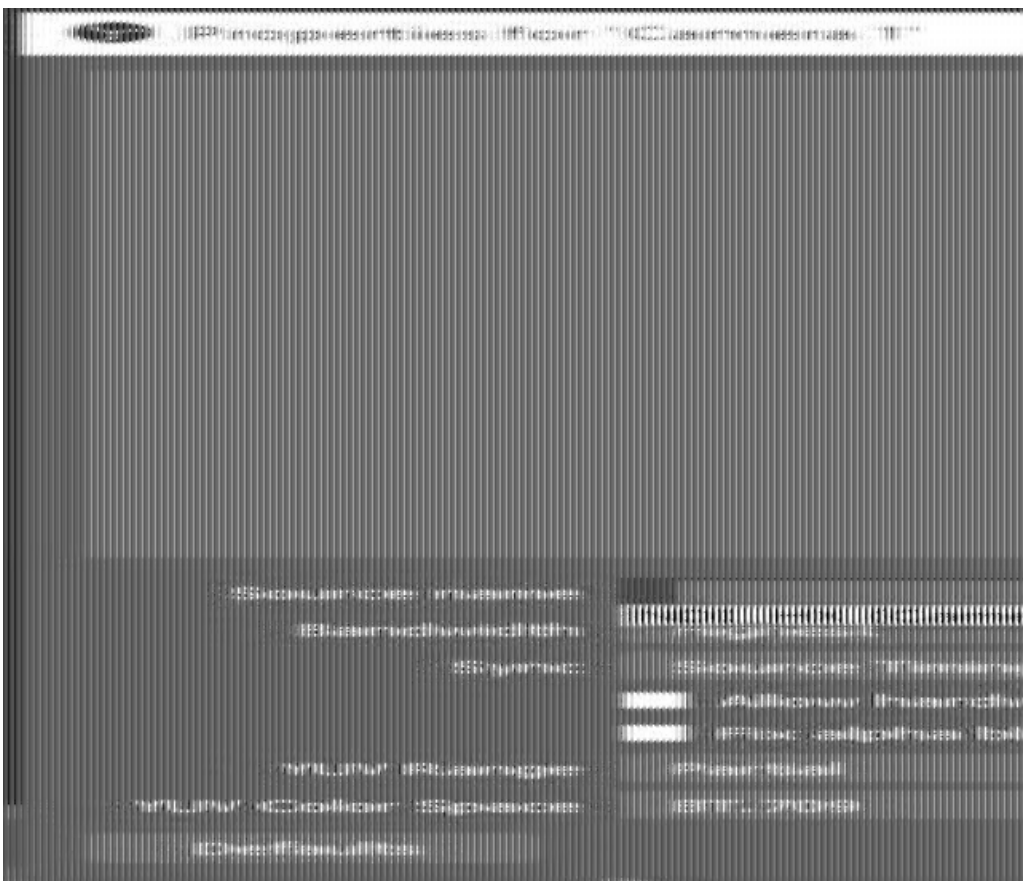

- Highlight your camera in the sources window and your NDI feed should appear.

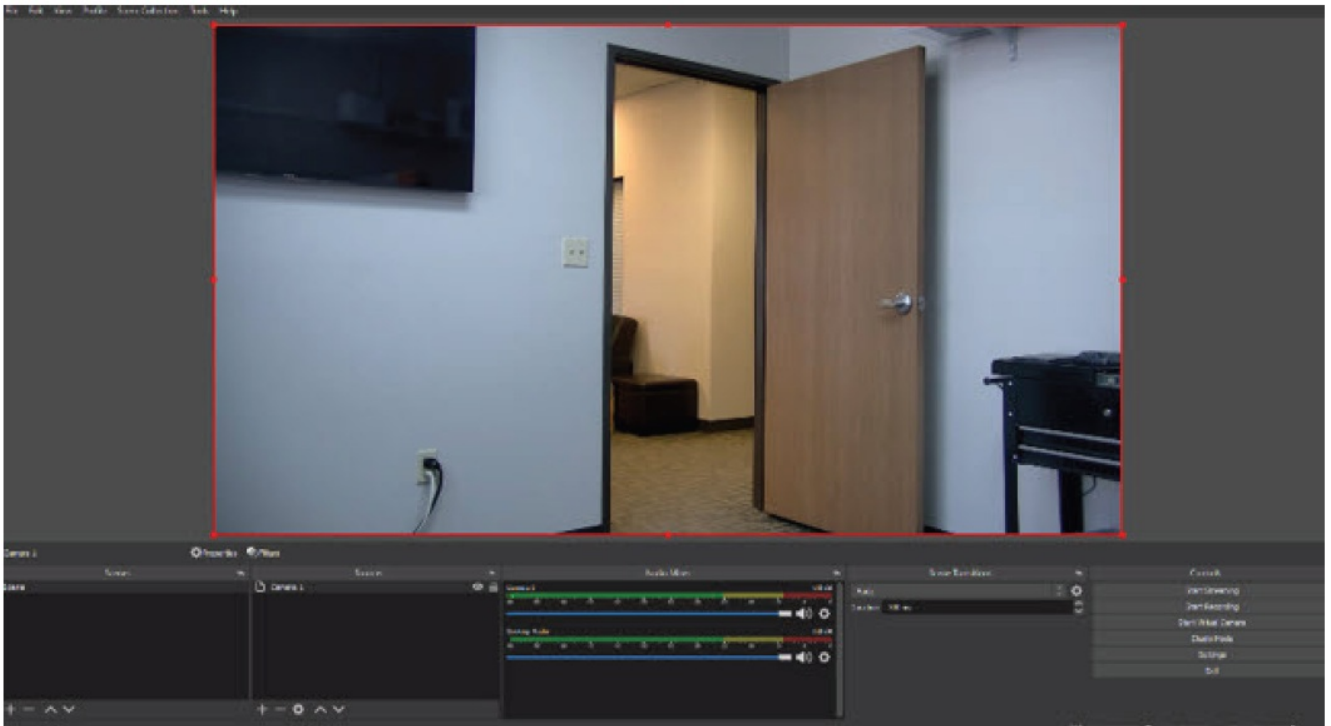

Using it for the first time

- By default the software is configured and all other software is installed on the PC.
- It is however quite possible to have different parts of the whole switching system running on different PCs. Or just configure the _Visual Radio Control engine_ from a mobile device.
- To check if the current configuration is working, let's start with Visual Radio Control.
- Make sure that CAMCON CONTROL and OBS Studio is already running.

Click on the 'Cogwheel' icon labelled 'Configuration'.

Below screen will be shown. Check if the CamCon unit is connected and switched on then start


1. Camcon application
2. Start OBS
3. Start VRC



- You are now presented with a list of connections that are made by VRC.
- The first connection is that of the Web browser (VRC engine connection)
- The second connection is to the CamCon hardware.
- The third connection is to the OBS software. (OBS Studio Websockets Server)
- When you are using a PC where all this software is installed on, this should show a green 'check-mark' indicating that there is a live connection.
- If not go to the "Trouble Shooting Section" of try F5 to refresh all the connections.



- Now close this screen by hitting the Close button

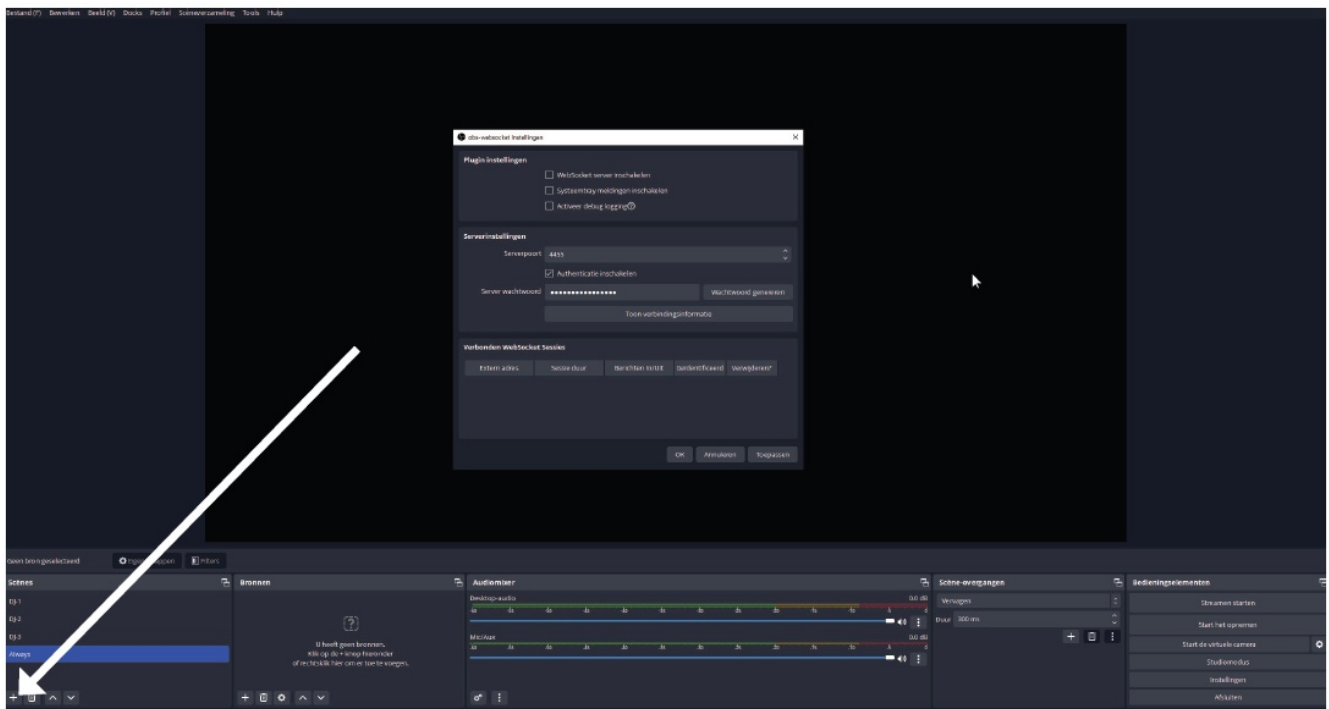

A quick glance

- What is inside this software, let's go through the menus.
- The manual of OBS (freeware) has to be downloaded to get more understanding how it works.
- Here is a simple start, go to the main screen of OBS and create a scene where the white arrow points to and give it a name.
- Now go back to the VRC software screen and hit the "+ Add scene" button.
- The menu on the left will be shown
- Under the scenes menu is the main action of the VRC software.
- Here the scenes from the Broadcasting software will be connected to audio sources, so the VRC software will know which scene to activate when an audio source becomes active.
- Also other parameters can be set to influence the director's decisions.
- Try to begin with low Activation delay and low Hold time to more easily follow the response of the camera switching.
- The VRC software will also indicate which scene is currently active.
- This will continuously be updated from the VRC software.

Scene: <new scene> ▼

Audio source: <pick one> ▼

MicOn source: <pick one> ▼

Metering threshold: -20

Scheduling priority: 0

Hold time: 2 sec

Activation delay: 0,5 sec

X Cancel ✓ Ok

- When a scene is active in the VRC software that is not under control of the Visual Radio Control, then no scene in the users interface will appear to be active.

Configuration menu

- The configuration menu holds the hard- and software connection configuration information to the outside world. Here the connection information to the VRC software and monitoring hardware need to be entered. Please refer to the documentation of the respective hard- and software for the connection details.
- Please do note that this information is sent to the engine, so all connection information must be relative the this engine. This is only important when you use the term `localhost`, which refers to the local PC, relative to the engine. Below is a practical filled in set up for one mic (scene 1) and overview camera (scene 2)
- **NOTE:** Start with low values for Hold time and Activation delay to more easily understand the response of the camera switching.



Visual Radio Control

Scene 1	
Audio source:	<input type="text" value="Mic 1"/>
MicOn source:	<input type="text" value="Mic 1"/>
Metering threshold:	<input type="text" value="-20"/> dB
Scheduling priority:	<input type="text" value="1"/>
Hold time:	<input type="text" value="1"/> sec
Activation delay:	<input type="text" value="0,3"/> sec
<input type="button" value="Delete"/>	

Scene 2	
Audio source:	<input type="text" value="Always active"/>
MicOn source:	<input type="text" value="Always on"/>
Metering threshold:	<input type="text" value="-20"/> dB
Scheduling priority:	<input type="text" value="10"/>
Hold time:	<input type="text" value="3"/> sec
Activation delay:	<input type="text" value="0,3"/> sec
<input type="button" value="Delete"/>	

Scene:

If you click on the <new scene> button you will see the scene with the label you have made in OBS, choose that label to control that scene.

Audio (metering) source: (this shows the scenes created in OBS)

- If you click on the Audio source label which says <pick one> you can select one out of the created scenes in OBS. The audio and MicOn sources will be retrieved from the connected hardware.
- Based on this information, the software can decide if there is activity on a channel (someone is talking) and this channel (and corresponding scene) should be considered to be activated (e.g. receives the focus).
- The metering information is not the only parameter that is considered in this decision. It might even be completely ignored. The channel also has a `MicOn source`, which must be active before the metering information is even monitored.

MicOn source:

- If you click on the MicOn source label drop down menu you can select one out of the sources in OBS to control the scene.
- A `mic on source` is usually the combination of a mixer channel that is turned `On` and the fader of that channel set to anything other than minus infinity.
- In some cases, for instance when using a Camcon Device, this could be the `GPI` signal on the channel that is also used as `Audio source`.
- In such case the audio mixer device will generate the appropriate Mic-on signal and should be physically connected to the Camcon Devices' GPI input port.
- The `MicOn source` *must* be active before a scene's `Audio source` is monitored and considered to have its scene be activated. + if no connection to "Fader on" of the mixer to GPI is made, select always on.

Metering threshold

- When a `Mic on` is active and metering information is available on the `audio source`, the threshold level comes into play.
- The metering level (ranging from -50dB to +5dB) must be above the level that is indicated here.
- Do note that this is a metered level and the channel's `Gain` settings do apply to these measured values.

Scheduling priority

- When two or more sources are active and have metering levels above their threshold (two or more speakers interrupting each other), the `Scheduling priority` helps deciding who will actually receive the focus. A higher value for the priority means that it will be more likely to be picked.
- When two, or more, sources are active and have equal priorities, the first scene as it is configured and appears in the list will be activated. The range can be set between 1 (highest priority) and 10 (lowest priority)

Hold time

- To prevent flickering and too frequent scene switching, a hold time can be set between zero and 10 Sec. This holds the scene active for at least the given time, even if the metering level drops below its threshold or even if the `mic on` gets deactivated within that time.
- **Note**, that choosing longer hold times, some side effects might occur.
- For instance, when the `hold time` is long enough, an other channel can become active and inactive during the hold time of this channel and therefore the other channel's scene will not receive the focus.

Activation delay

- It can be useful to wait to activate a scene, even though the channel is active.
- This can have various reasons, like coughing or enthusiastic agreeing noises and to suppress spurious activation of the scenes due to coughs etc. Or maybe even intermittent noise static or occasional sound plops. For this an `activation delay` can be set.
- This results into a period of time that a channel needs to be active before its scene gets the focus.
- Do note that the `activation delay` time and the `hold time` can run concurrent. Start with low settings! This means that a channel's `activation delay` time can already have passed, while the current scene's `hold time` is still preventing the actual activation of the scene.
- **Note:** When creating new scenes in the VRC software you sometimes need to refresh the connection by hitting F5 and get the latest data from OBS.

Modifying scenes

- Go to edit mode by clicking the `Edit scenes` button.
- In the edit mode, each configured scene can be changed on all its properties except for the scene it is attached to. When you want to change the scene for the given sources, you will have to remove this configuration to free up the sources and create a new scene.

Removing scenes

- Go to edit mode by clicking the `Edit scenes` button.
- In the edit mode, under each configured scene, a `Delete` button will appear.
- Be careful, clicking the `Delete` button will remove the configured scene, immediately and without the possibility to undo this action.


Let the Visual Radio Control direct

- When done, click the `Edit scenes` button. All configured scenes are now under control of the engine and will automatically be activated in the broadcasting software.

The screenshot shows the 'Visual Radio Control' interface. At the top is a blue header bar with the 'VRC' logo, the text 'Visual Radio Control', and a settings icon. Below the header is a blue button labeled 'Edit scenes'. The main area contains four scene configuration panels, each with a title, several settings, and a 'Delete' button at the bottom.

Scene Name	Audio source	MicOn source	Metering threshold	Scheduling priority	Hold time	Activation delay
DJ-1	DJ-1	DJ-1	-20 dB	0	2 sec	0.5 sec
DJ-2	DJ-2	DJ-2	-20 dB	-5	2 sec	0.5 sec
DJ-3	Quest-3	Quest-3	-20 dB	-6	2 sec	0.5 sec
Always	Always active	Always on	-20 dB	-26	2 sec	0.5 sec

- A set up with 4 camera's can look like the settings shown above.
- Here below you see the settings we got from one of our customers, that work satisfactorily.
- They first set the Camcon to 0 dB and the threshold in the VRC to -30dB, if it does not work go to -22dB, then maybe to -24dB and so on. If this is not working, then set the Camcon to 20dB gain and repeat the above process.

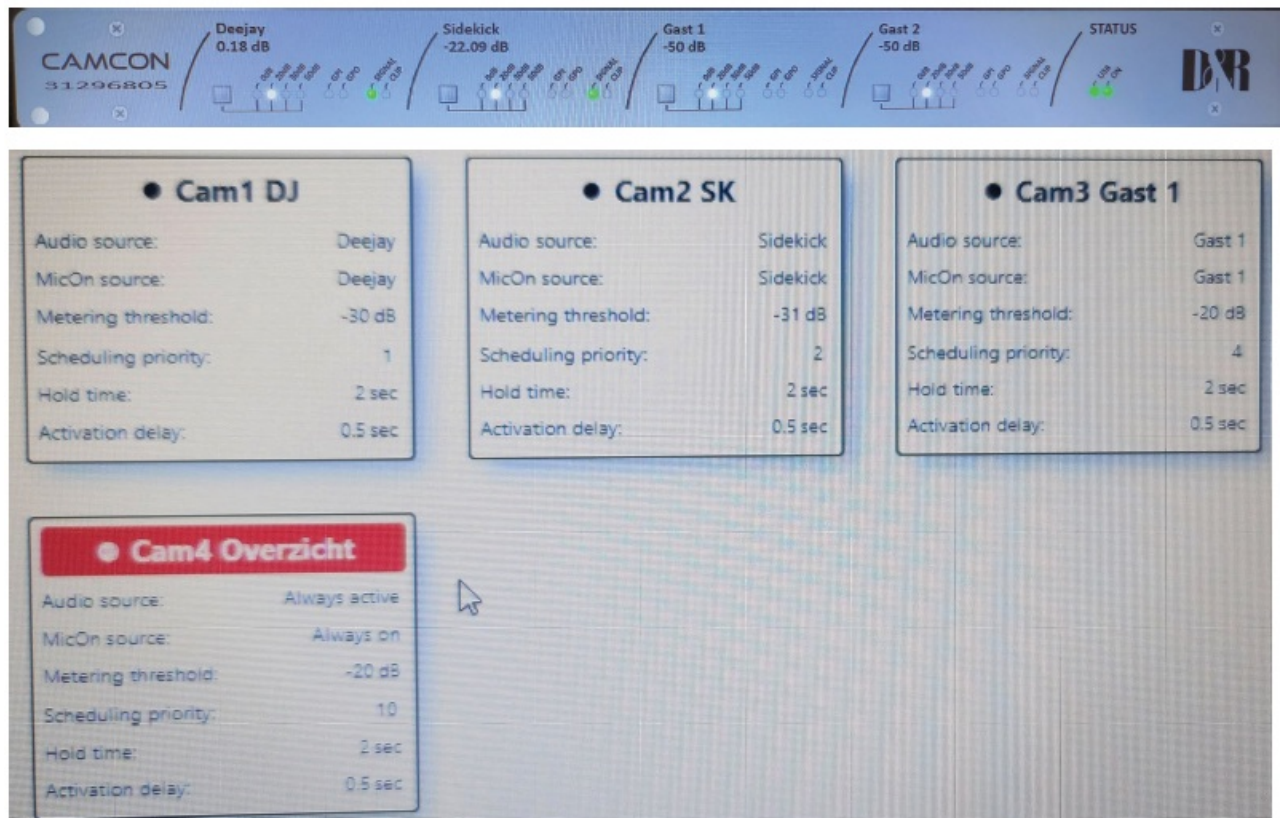

GOOD TO KNOW, TIPS and Hints

- The _Visual Radio Control engine_ can and will do its thing in the background. It does not need a web browser to be opened.
- As long as there are configured scenes available, the engine will try and direct your configured broad-casting software.
- However the engine will connect and update the web browser UI when it is open (or actually the other way around).
- So it will be possible to monitor the engine from the browser and even influence it.
- It is possible to bypass all algorithms and activate a (configured) scene by hand, simply by clicking on it. You will see that the scene that currently has the focus, will have a different recording indicator in front of the scene's name and that it will have a colored band as well. Clicking a different scene, will eventually lead to receiving the focus, as it will be visible by the recording indicators.
- Please do note that closing the web browser ****will not**** stop the engine. As indicated before, the engine holds the connections to both hardware and software. The engine will continue to try and direct the broadcasting software. The engine must be stopped separately to prevent further (unwanted) scene switching.
- When some devices or software are running on other PCs, this will become more of a hassle. In that case, make sure that you enter the correct hostnames or ip-addresses of the individual PCs. Followed by clicking the `Apply` button directly underneath the field that was changed. Then every connection box should end up with a green checkbox next to it.
- When you have this, you're good to go.
- When you are using a PC where all this software is installed on, this should show a green 'check-mark' indicating that there is a live connection. If not try F5 to refresh all the connections
- When you are using an other PC or a mobile device and pointed the web browser to the actual PC, you will most likely have a yellowish round pointing arrow figure. This indicates that there is no active connection, but

the software is trying. In this case change the contents of the `URL` field from `ws://127.0.0.1:10840` into `ws://<ip-address-of-pc>:10840` Then click the `Apply` button directly underneath this box. This should establish the connection. Then the other connection boxes become relevant. The connection information in these boxes are seen from the `_engine_` perspective. When everything is installed on a single PC, there will be no problems and all connections can lead to "localhost"

Scene properties

Lets explain the properties that can be configured and how they might affect the Visual Radio Control software.

- **Scene name**

- The list of scene names is retrieved from the VRC software automatically.
- When the VCR software is properly configured. This list should be the same as in OBS your broadcasting software. From this list, you can select the scene that you want to have the Visual Radio Control software under its control. In order to have proper control, also the `Audio source` and the `MicOn source` must be assigned.

- **Audio source**

- The audio source will provide metering information to the Visual Radio Control.
- Based on this information, the software can decide if there is activity on a channel (someone is talking) and this channel (and corresponding scene) should be considered to be activated (e.g. receive the focus).
- The metering information is not the only parameter that is considered in this decision.
- It might even be completely ignored.
- The channel also has a `MicOn source`, which must be active before the metering information is even monitored.

- **MicOn source**

- A `mic on source` is usually the combination of a mixer channel that is turned `On` and the fader of that channel set to anything other than minus infinity.
- In some cases, for instance when using a Camcon Device, this could be the `GPI` signal on the channel that is also used as `Audio source`.
- In such case the audio mixer device will generate the appropriate Mic-on signal and should be physically connected to the Camcon Devices' GPI input port.
- The `MicOn source` *must* be active before a scene's `Audio source` is monitored and considered to have its scene be activated.

- **NOTE:**

- In case there is no GPO signal available from your mixer, just patch the GPI to the same channel's GPO and activate the GPO output in the 'Camcon Configuration Manager' to "solve" this problem.
- Or Choose " always" on as mic on source.
- The disadvantage is that scenes are switched by mic signals only even when a fader is down (this fader down information lacks now for the Camcon to respond properly).

Troubleshooting

1. In case you still have OBS version 27 the D&R VRC software will probably not work

You have to download version 28 or a later version, see links below. <https://obsproject.com/download>

2. USB Device not recognized, refresh with F5 or unplug and replug the USB cable.

3. Cannot connect, check your USB cable and refresh with F5
4. "Windows Defender" reports virus during/after upgrading.
 1. Uninstall software and install, rather than upgrade.
 2. Download and install the software from: <<http://www.mambanet.org/wiki/dokuwiki/doku.php?id=XXX>>
 3. After installation, point your web browser to: <http://localhost:8519/>
 4. This exact image will shortly be replaced with the actual Camcon information as it is attached to your computer, or a blank screen when there is no Camcon connection.
 5. Make sure that your Camcon Device is connected over USB to your PC and that it is turned on.
 6. Your Camcon Device should appear on the screen with the `ON` LED (under Status) turned on green.

DIMENSIONS Camcon frame

- Front Left-Right : 482 mm
- Frame left right : 430mm
- Front-Back : 175 mm
- Height : 44 mm. (1HE)
- Front panel thickness : 2 mm
- Radius Corners : 20 mm
- Weight : 5 kg.

We wish you many creative years of productivity using this quality product from:

- **Company** : D&R Electronica B.V.
- **Address** : Rijnkade 15B
- **Zip Code** : 1382 GS
- **City** : WEESP
- **Country** : Netherlands
- **Phone** : 0031 (0)294-418 014
- **Website** : <https://www.dnrbroadcast.com>
- **E-mail** : sales@d-r.nl

SUMMARY

- We hope this manual has given you sufficient information to use this new CamCon triggerunit in your studio.
- If you require more info please contact your local dealer or send us an email at support@d-r.nl and we will answer your email within 24 hours during weekdays.
- In case you have bought this unit from a previous owner, check out the dealer in your area on our website www.dnrbroadcast.com in case you need assistance.

ELECTROMAGNETIC COMPATIBILITY

- This unit conforms to the Product Specifications noted on the Declaration of Conformity.
- **Operation is subject to the following two conditions:**

- This device may not cause harmful interference
- This device must accept any interference received, including interference that may cause undesired operation
- Operation of this unit within significant electromagnetic fields should be avoided
- Use only shielded interconnecting cables.

DECLARATION OF CONFORMITY

- Name Manufacturer : D&R Electronica b.v.
- Address manufacturer : Rijnkade 15B,
 - : 1382 GS Weesp,
 - : The Netherlands
- declares that this product
 - Name product : CamCon
 - Model number : n.a.
 - Product options installed : none
- **passed the following product specifications:**
 - Safety : IEC 60065 (7th ed. 2001)
 - EMC : EN 55013 (2001+A1)
 - : EN 55020 (1998)
- **Supplementary Information:**

The product passed the specifications of the following regulations;

 - : Low voltage 72 / 23 / EEC
 - : EMC-Directive 89 / 336 / EEC. as amended by Directive 93/68/EEC
 - (*) The product is tested in a normal user environment.

PRODUCT SAFETY


This product is manufactured with the highest standards and is double checked in our quality control department for reliability in the "HIGH VOLTAGE" section.

CAUTION









- Never remove any panels, or open this equipment. No user serviceable parts inside. Equipment power supply must be grounded at all times. Only use this product as described in the user manual or brochure. Do not operate this equipment in high humidity or expose it to water or other liquids. Check the AC power supply cable to assure secure contact. Have your equipment checked yearly by a qualified dealer service center. Hazardous electrical shock can be avoided by carefully following the above rules.
- Ground all equipment using the ground pin in the AC power supply cable. Never remove this pin. Ground loops should be eliminated only by use of isolation transformers for all inputs and outputs. Replace any blown fuse with the same type and rating only after equipment has been disconnected from AC power. If problem persists, return equipment to qualified service technician
- Always earth all your equipment by the grounding pin in your mains plug.
- Hum loops should be only cured by proper wiring and isolation input/output transformers.

- Replace fuses always with the same type and rating after the equipment has been turned off and unplugged.
 - If the fuse blows again you have an equipment failure, do not use it again and return it to your dealer for repair.
 - Always keep the above information in mind when using electrically powered equipment.
-

Documents / Resources

	<p>D R Version 1.06 Camcon Visual Radio Control [pdf] Instruction Manual Version 1.06 Camcon Visual Radio Control, Version 1.06, Camcon Visual Radio Control, Visual Radio Control, Radio Control</p>
---	---

References

-  [D&R Broadcast Mixing Consoles | radio console](#)
-  [xxx \[D&R Wiki\]](#)
-  [How to Connect your BZBGEAR Camera to the Network \(Windows\)](#)
-  [How do I add an NDI Camera to OBS Studio?](#)
-  [How to Connect your BZBGEAR Camera to the Network \(Mac\)](#)
-  [NDI Core Suite: Improve your workflow with our Tools Pack](#)
-  [Download | OBS](#)
-  [D&R Broadcast Mixing Consoles | radio console](#)
- [User Manual](#)

Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.