

Danfoss 084B8080 Optyma Plus Control Unit



Danfoss 084B8080 Optyma Plus Control Unit Instruction Manual

[Home](#) » [Danfoss](#) » Danfoss 084B8080 Optyma Plus Control Unit Instruction Manual 

Contents

- [1 Danfoss 084B8080 Optyma Plus Control Unit](#)
- [2 Instructions](#)
- [3 Step 1 – Removing the DI1 terminal block](#)
- [4 Step 2 – Settings mode](#)
- [5 Step 3 – Deactivating the control unit functionalities](#)
- [6 Step 4 – Selecting the refrigerant](#)
- [7 Step 5 – Set condensing unit type](#)
- [8 Step 6 – Activating the control unit functionalities](#)
- [9 Documents / Resources](#)
 - [9.1 References](#)
- [10 Related Posts](#)



Danfoss 084B8080 Optyma Plus Control Unit



Quick starting procedure


Optyma™ Plus

Control unit (mounted code 084B8080)

Caution

The information contained herein is a summary of the instructions available in the Danfoss documentation. For further information, please consult the user guide or other documents provided with the condensing unit

Instructions

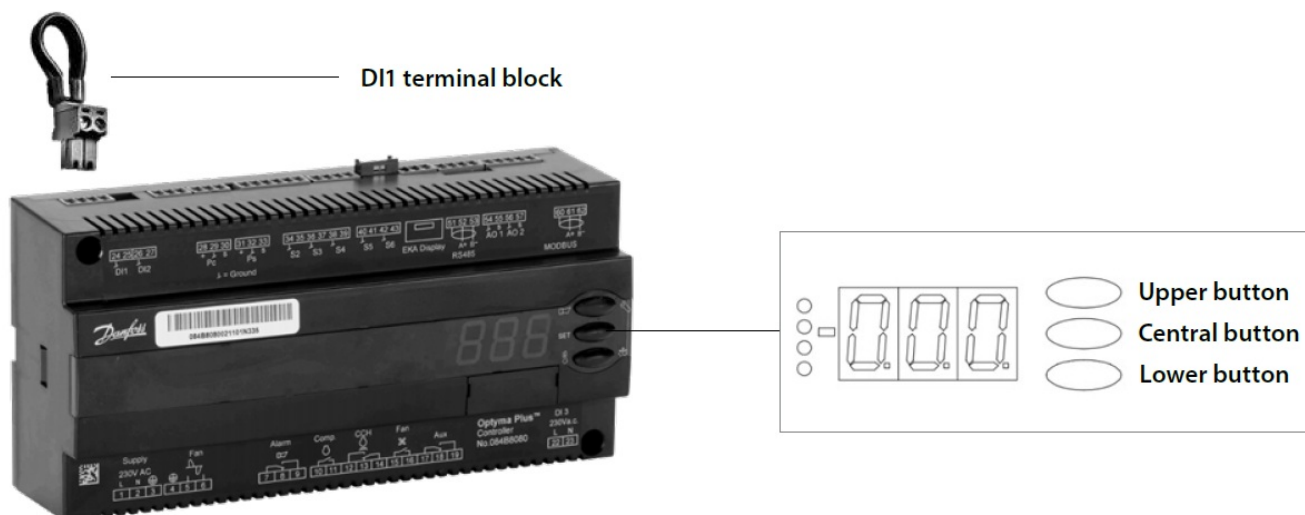

The upper and lower buttons are used to navigate the menu and change the values, while the central button lets you access the parameters and confirm the value




Step 1 – Removing the DI1 terminal block

- If the condensing unit is powered up, cut off the power supply using the switch.
- Remove the DI1 terminal block.

This is the external stop start hard wired link for the controller & will stop the compressor from running. You can


access the controller by opening the hinged door of the unit & then removing two screws on the cover plate that covers the controller terminals.

- Power the unit back on by turning the switch.

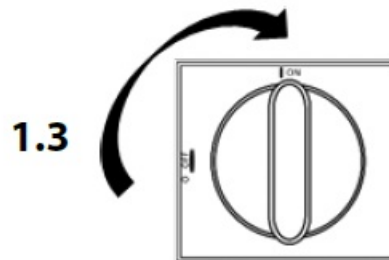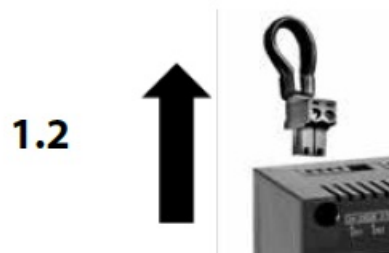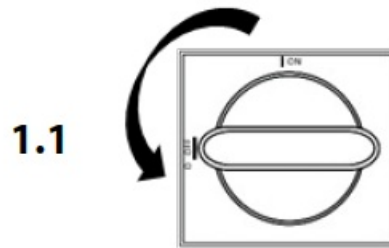

Step 2 – Settings mode

1. Press the upper button for 5 seconds: r05 will appear.

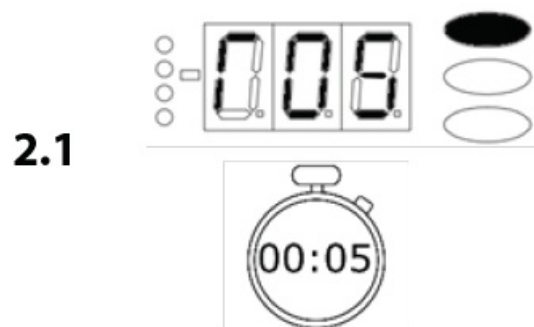


Step 3 – Deactivating the control unit functionalities

1. Use the upper and lower buttons to scroll through the parameters. Select the parameter r12 and press the central button to confirm.
2. Set the value to 0: the control unit is then deactivated. Confirm your selection using the central button.

3.1



3.2

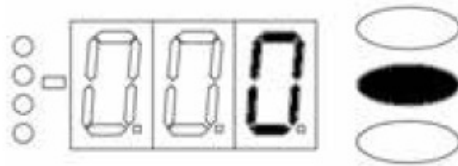

Step 4 – Selecting the refrigerant

1. Scroll through parameters and select parameter o30, press the central button to confirm.
- 2.

4.1




Enter the value corresponding to your refrigerant and confirm your selection using the central button.

Fluid Parameter		Fluid Parameter	
R134a	3	R513A	36
R507A	17	R448A	40
R404A	19	R449A	41
R407A	21	R452A	42
R407F	37		


Step 5 – Set condensing unit type

1. Scroll through parameters and select parameter c33.
2. Set the Pump Down cut-out value. The Average for R513A is 0.9 bar for scroll compressors. This value depends on the type of application and refrigerant. Confirm your selection with the central button.

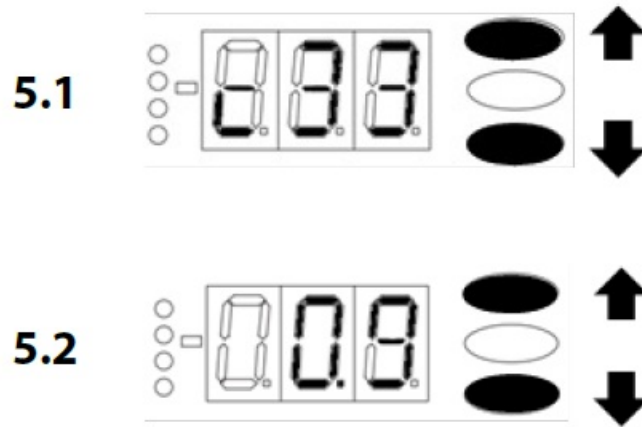


If you have an Optyma™ Plus INVERTER

1. If you have an Optyma™ Plus INVERTER, set the evaporating pressure setting with parameter r23.
2. This parameter is based on the evaporation temperature (dew point). For example, if the evaporation temperature is -10°C, set this value to -10.

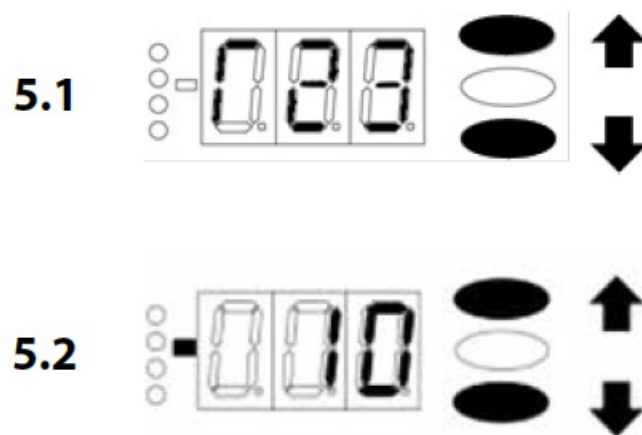

Step 6 – Activating the control unit functionalities

1. Cut off the power supply using the switch.
2. Connect the terminal block DI1.
3. Power the unit back on via the switch.

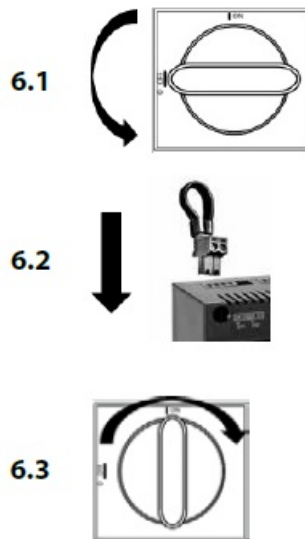

4. Press the upper button for 5 seconds: r05 will appear.
5. Use the upper and lower buttons to scroll through the parameters. Select the parameter r12 and press the central button to confirm.
6. Set the value to 1: the control unit is then activated. Confirm your selection using the central button. The condensing unit is ready to start.



Danfoss can accept no responsibility for possible errors in catalogues, brochures and other printed material. Danfoss reserves the right to alter its products without notice. This also applies to products already on order provided that such alterations can be made without subsequential changes being necessary in specifications already agreed. All trademarks in this material are property of the respective companies. Danfoss and the Danfoss logotype are trademarks of Danfoss A/S. All rights reserved.

© Danfoss | Produced by DCS | 2019.12

	Danfoss 084B8080 Optyma Plus Control Unit [pdf] Instruction Manual 084B8080 Optyma Plus Control Unit, 084B8080, Optyma Plus Control Unit, Plus Control Unit, C ontrol Unit, Unit
--	---

References

- [User Manual](#)

Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.