



# Danfoss 134B5223 Series Frequency Converter Installation Guide

[Home](#) » [Danfoss](#) » Danfoss 134B5223 Series Frequency Converter Installation Guide 



Installation Instructions  
Remote Mounting of LCP  
VLT® HVAC Drive FC 102

## Contents

- [1 Items Supplied](#)
- [2 Safety Instructions](#)
- [3 Mechanical Installation](#)
- [4 Mounting the remote LCP](#)
- [5 Electrical Installation](#)
- [6 Drilling Template](#)
- [7 Documents / Resources](#)
  - [7.1 References](#)

## Items Supplied

- LCP cables with 2 M12 connectors (90° male connector and straight female connector). Cable lengths: 3 m, 5 m, and 10 m (10 ft, 16 ft, 33 ft). See also Table 1.1.
- Blind cover with M12 female connector.
- Base plate with D-sub connector and M12 male connector.
- Two gaskets and 1 nut for the D-sub connector.
- Intermediate cover with the front cover.

- Disassembly tool.

Length [m (ft)]	Ordering number
3 (10)	134B5223
5 (16)	134B5224
10 (33)	134B5225

**Table 1.1 Cable Ordering Numbers**

### More Items Required

- Local control panel (LCP).
- Four M4 self-tapping screws for mounting.

### NOTICE

This instruction is valid for frequency converters that were ordered with the LCP. Front covers of frequency converters that were ordered without LCPs do not have holes for mounting the blind covers.

### Safety Instructions

For important information about safety precautions for installation, refer to the product-specific operating guide.

#### **WARNING** **DISCHARGE TIME**

The frequency converter contains DC-link capacitors, which can remain charged even when the frequency converter is not powered. High voltage can be present even when the warning LED indicator lights are off. Failure to wait the specified time after power has been removed before performing service or repair work can result in death or serious injury.

- Stop the motor.
- Disconnect AC mains and remote DC-link power supplies, including battery back-ups, UPS, and DC-link connections to other frequency converters.
- Disconnect or lock PM motor.
- Wait for the capacitors to discharge fully. The minimum duration of waiting time is specified in .
- Before performing any service or repair work, use an appropriate voltage measuring device to make sure that the capacitors are fully discharged.

Voltage [V]	Minimum waiting time (minutes)					
	4	7	15	20	30	40
200-240	1.1-3.7 kW (1.50-5 hp)	–	5.5-45 kW (7.5-60 hp)	–	–	–
380-480	1.1-7.5 kW (1.50-10 hp)	–	11-90 kW (15-121 hp)	–	–	315-1000 kW (450-1350 hp)
400	–	–	–	90-315 kW (121-450 hp)	–	–
500	–	–	–	110-355 kW (150-500 hp)	–	–
525	–	–	–	75-315 kW (100-450 hp)	–	–
525-600	1.1-7.5 kW (1.50-10 hp)	–	11-90 kW (15-121 hp)	–	–	–
690	–	–	–	90-315 kW (100- 350 hp)	–	–
525-690	–	1.1-7.5 kW (1.50-10 hp)	11-90 kW (15-121 hp)	–	400-1400 kW (500-1550 hp) 450-1400 kW (600-1550 hp)	–

**Table 1.2 Discharge Time, VLT® HVAC Drive FC 102**

## Mechanical Installation

### NOTICE

The guidelines in this instruction are applicable for a frequency converter in a standard configuration without any modifications.

### Installing the blind cover

1. Remove the front cover from the frequency converter and then remove the LCP, see Illustration 1.1.

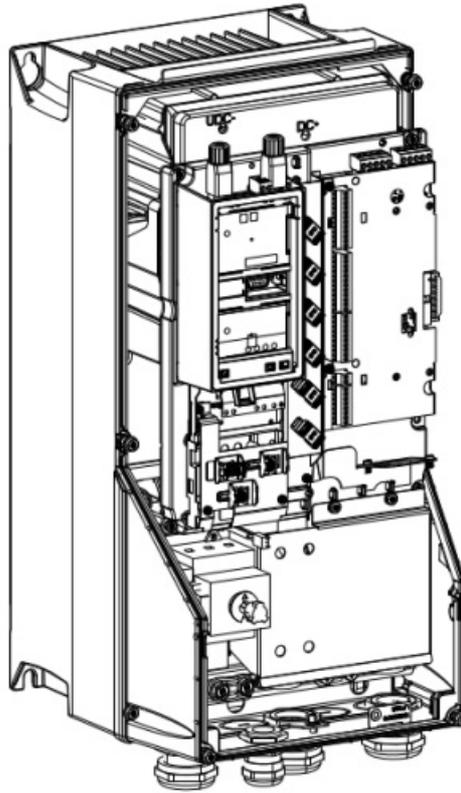


Illustration 1.1 Frequency Converter with the LCP Removed

2. Install the blind cover with the gasket and the M12 connector.
3. Install the front cover on the frequency converter, see Illustration 1.2.

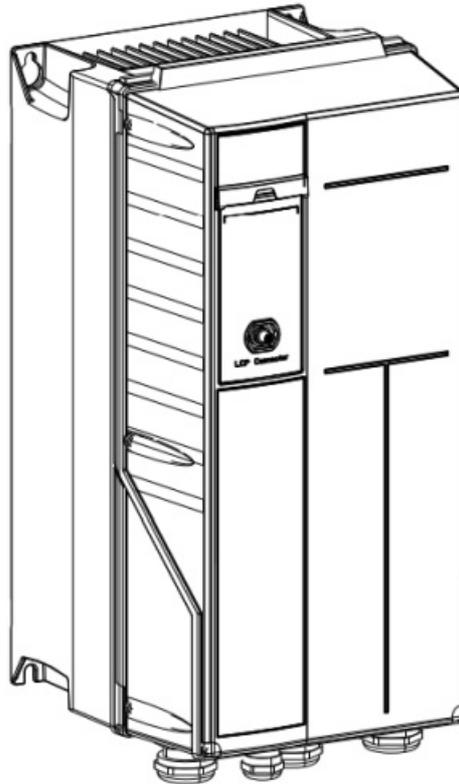



Illustration 1.2 Frequency Converter with the Blind Cover

## Mounting the remote LCP

1. Drill the hole in the wall that holds the LCP. The hole diameter: 24 mm  $\pm$ 1 mm (1 in  $\pm$ 0.04 in). To ensure that the base plate adjoins the wall, drill the hole perpendicular to the wall ( $\pm$ 1°). The kit is suitable for insulated walls

30–90 mm (1.2–3.5 in) thick and solid walls 1–20 mm (0.04–0.8 in) thick.


2. Install the base plate with the D-sub connector. Use the gasket and 4 self-tapping screws to secure the plate. See Illustration 1.3.

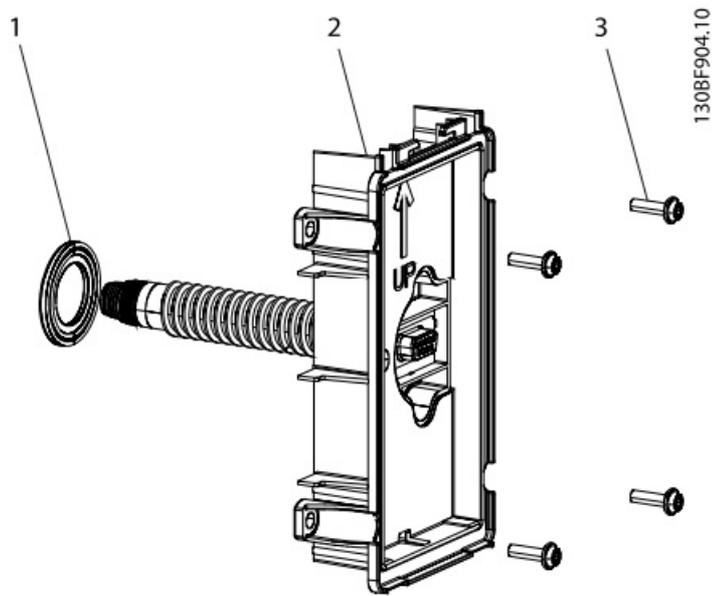

1	Gasket
2	Base plate
3	Screws

**Illustration 1.3 Base Plate with D-sub Connector**

3. Put the nut on the D-sub connector and tighten it with torque of 1.5 Nm (13 in-lb). Ensure that the base plate and the nut are tight on both sides of the wall. For very thin walls, the nut can also be turned 180°. See Illustration 1.4 and Illustration 1.5.

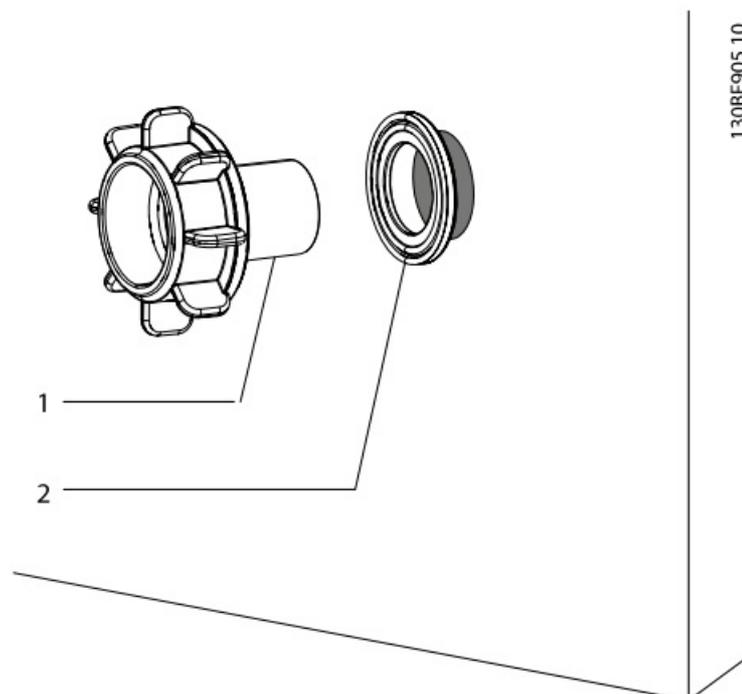

1	Nut
2	Gasket

**Illustration 1.4 The Nut, Standard Position, for Thick/Insulated Walls**

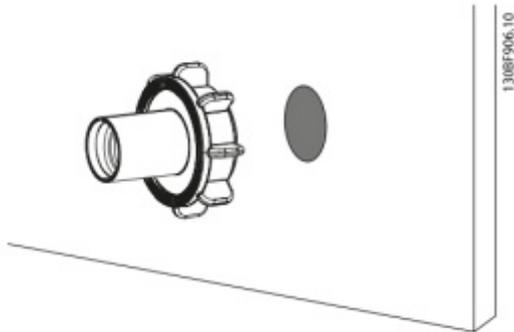


Illustration 1.5 The Nut, Turned 180°, for Thin Walls

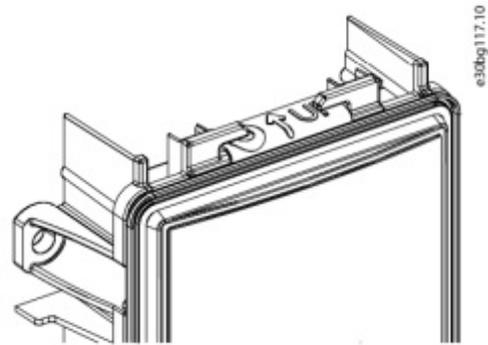


Illustration 1.7 Rubber Flap in the Opening

4. Mount the LCP with the gasket on the base plate.  
 Insert the rubber flap in the opening at the top of the cradle, see Illustration 1.6 and Illustration 1.7.  
 Illustration 1.8 shows the base plate with the LCP.

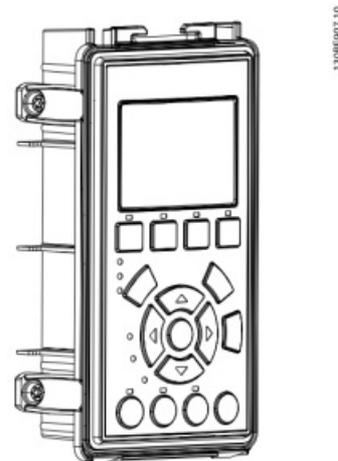
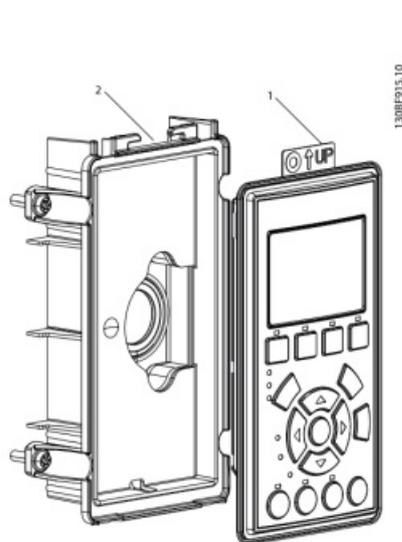


Illustration 1.8 Base Plate with LCP

1	Rubber flap
2	Opening at the top of the cradle

**Illustration 1.6 Insert the Rubber Flap into the Opening**

5. Mount the intermediate cover and lid on the base plate. The cover has a click-on type connection. Connect the top of the lid to the cradle and then push it until it clicks. The unit with this cover has rating IP54. See Illustration 1.9, and Illustration 1.10.

130BF908.10

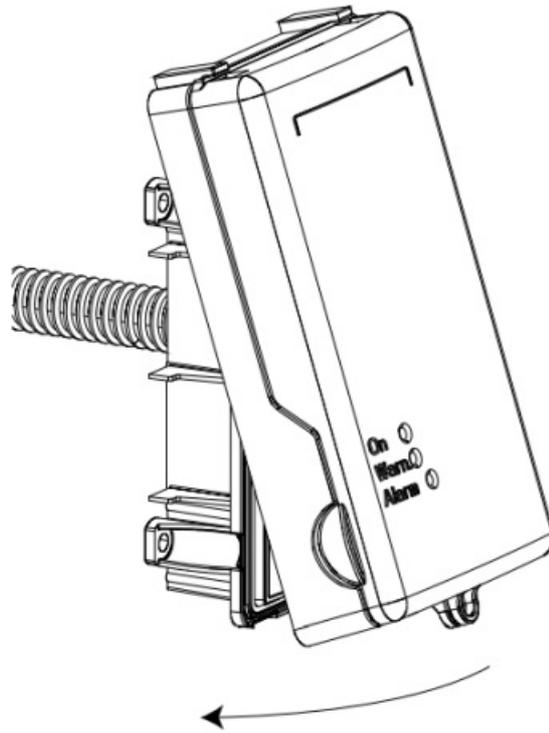


Illustration 1.9 Connect the Lid with the Front Cover

130BF909.10

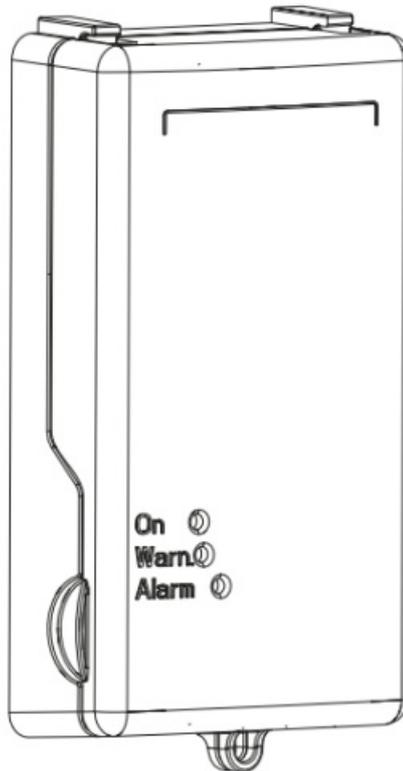


Illustration 1.10 Base Plate with the Covers

## Electrical Installation

Connect the M12 connectors on the blind cover and the LCP with the supplied cable. See Illustration 1.11.


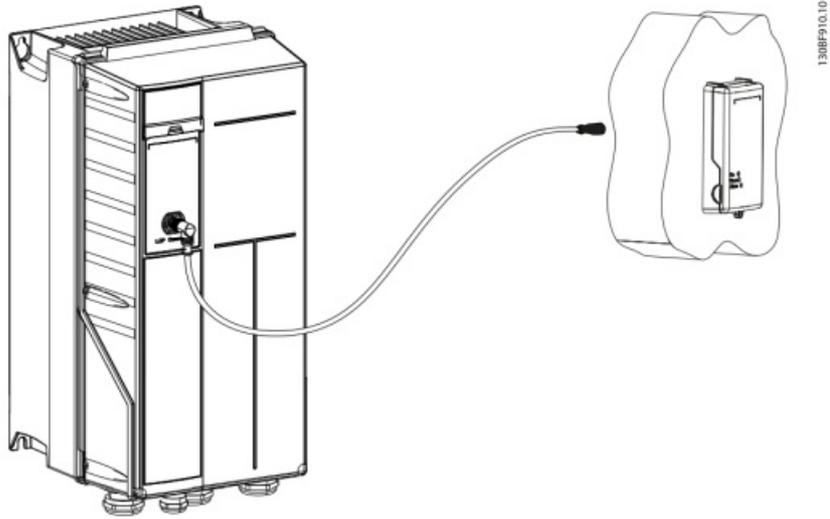


Illustration 1.11 Remote Connection of the LCP

130BF910.10

### Areas with Gaskets on the Remote Unit

To make the remote unit more secure, the following areas are tightened with gaskets:

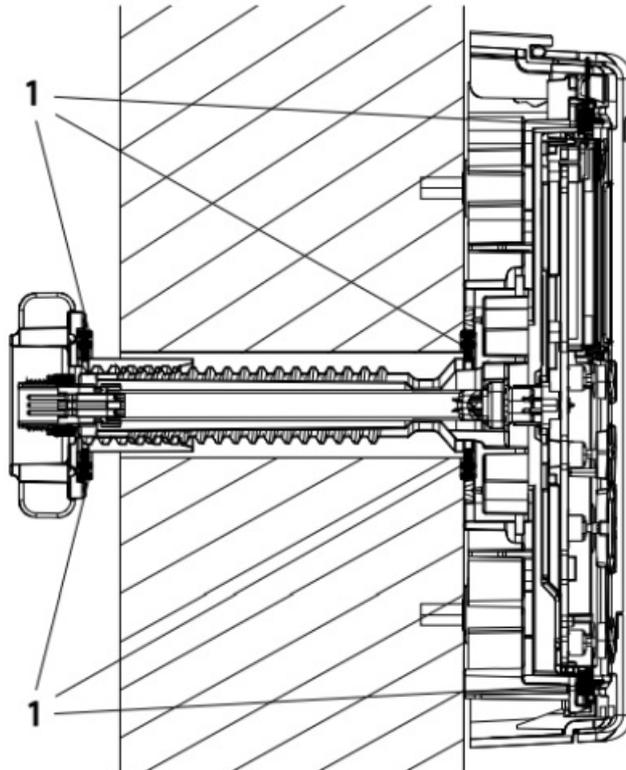


130BF911.10

1	Gasket
---	--------

Illustration 1.12 Remote Unit with Gaskets

### Using the Remote LCP


The cover on the remote LCP has the following features:

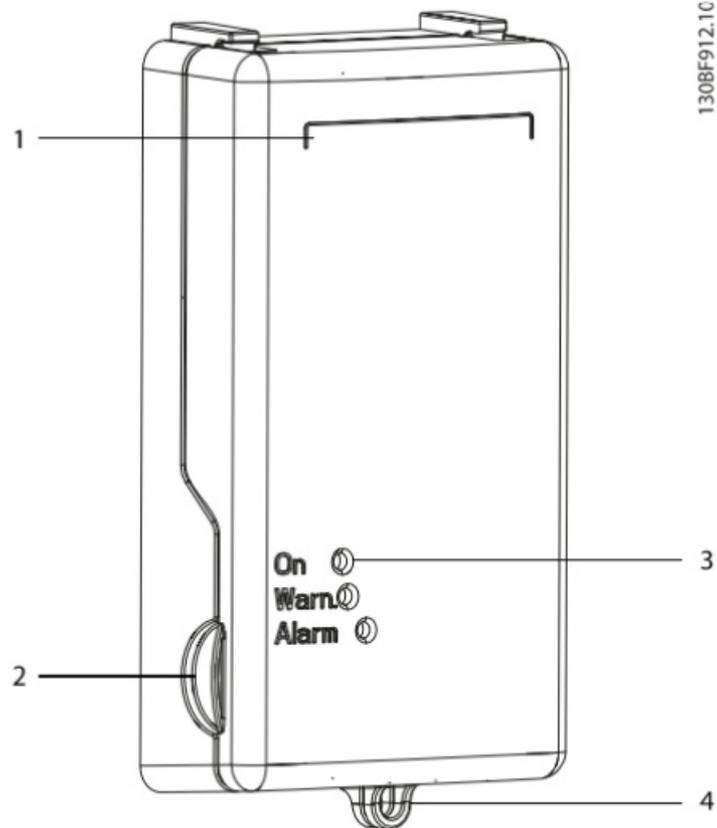

1	Place for a label
2	Groove for opening the cover
3	Openings for the indicator lights
4	Rings for locking the cover


### Illustration 1.13 Remote LCP with the Cover

- The On, Warn., and Alarm indicator lights are visible with the closed front cover. Lights are visible at an angle up to 45°.
- Lock the front cover using the rings at the bottom of the cover. See Illustration 1.15.
- Open the front cover using the groove at the side of the cover. See Illustration 1.14.
- The cover has a place for a label.

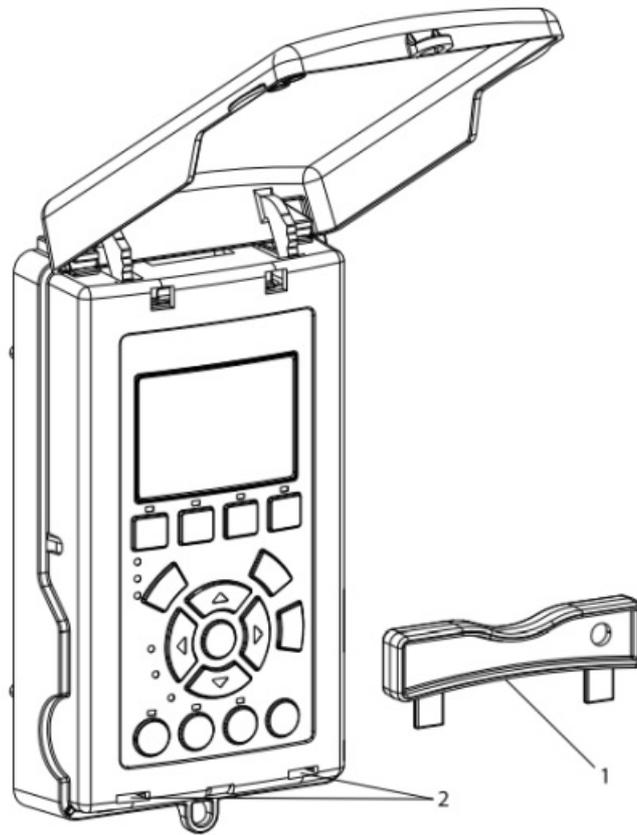

1	Disassembly tool
2	Holes for the disassembly tool

**Illustration 1.14 Front Cover and Disassembly Tool**

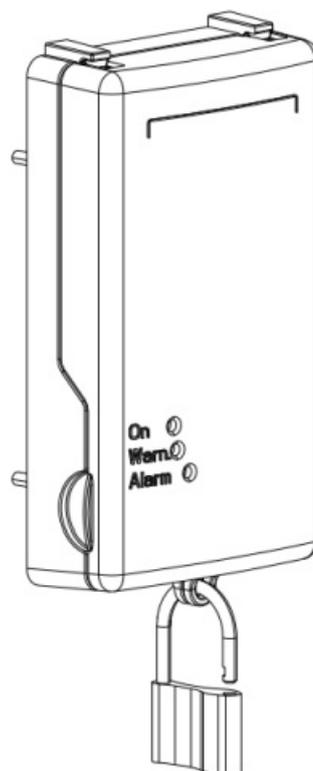

**Illustration 1.15 Front Cover with Padlock**

## Drilling Template

Place the drilling template against the wall to mark the hole locations. The scale of the template is 1:1.

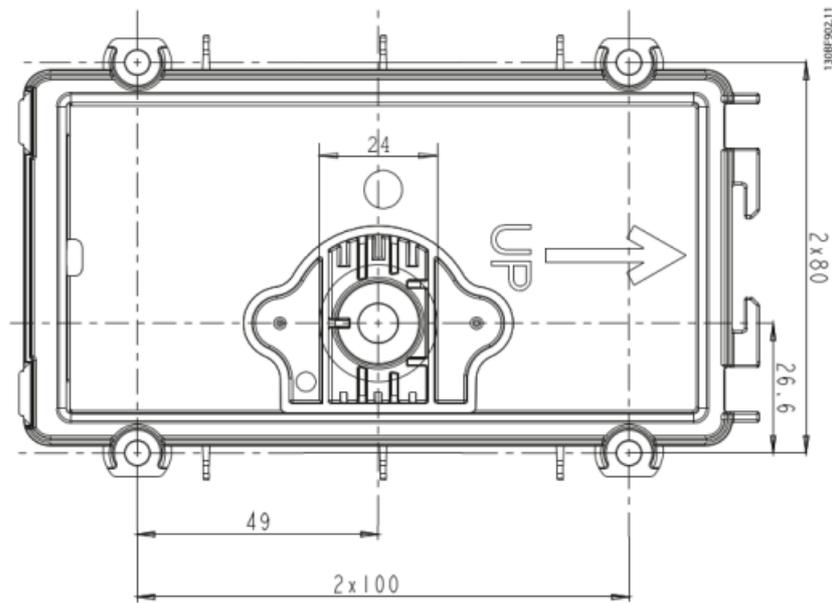


Illustration 1.16 Drilling Template, Scale of 1:1

*Danfoss*

MI05A202

Danfoss A/S © 11/2017 All rights reserved.

Danfoss can accept no responsibility for possible errors in catalogues, brochures and other printed material. Danfoss reserves the right to alter its products without notice. This also applies to products already on order provided that such alterations can be made without subsequential changes being necessary in specifications already agreed. All trademarks in this material are property of the respective companies. Danfoss and the Danfoss logotype are trademarks of Danfoss A/S. All rights reserved.

Danfoss A/S  
Ulsnaes 1  
DK-6300 Graasten

[vlt-drives.danfoss.com](http://vlt-drives.danfoss.com)


130R0796

MI05A202



11/2017

**Documents / Resources**

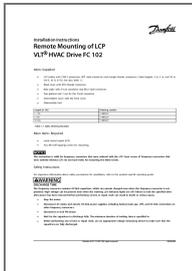

[Danfoss 134B5223 Series Frequency Converter \[pdf\] Installation Guide](#)  
134B5223, 134B5224, 134B5225, 134B5223 Series Frequency Converter, 134B5223 Series, Frequency Converter, Converter

**References**

- [Danfoss Drives: World-leading drive manufacturer | Danfoss](#)
- [User Manual](#)

**Manuals+, Privacy Policy**

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.