

Danfoss AK-RC 111 Optyma Coolroom Controller



# Danfoss AK-RC 111 Optyma Coolroom Controller User Guide

[Home](#) » [Danfoss](#) » Danfoss AK-RC 111 Optyma Coolroom Controller User Guide 

## Contents

- [1 Danfoss AK-RC 111 Optyma Coolroom Controller](#)
- [2 Product Information](#)
- [3 Product Usage Instructions](#)
- [4 Introduction](#)
- [5 Installation](#)
- [6 Technical characteristics](#)
- [7 Parameter programming](#)
- [8 Modbus connection](#)
- [9 Troubleshooting](#)
- [10 Appendices](#)
- [11 Documents / Resources](#)
  - [11.1 References](#)



**Danfoss AK-RC 111 Optyma Coolroom Controller**



## Product Information

### Specifications

- Type: AK-RC 111
- No: 080Z3220
- OPTYMATM Control
- Power supply: 230VAC
- MADE IN ITALY
- S/N: 080R0100
- Date: 09/01/18

### Description

The AK-RC 111 is a new control panel for cold rooms with a single-phase compressor up to 2HP, specially designed to provide the user with safety, protection, control, and ease of installation. It allows the user to control all the components on a refrigerating system including the compressor, evaporator fans, defrosting elements, room light, and thermostat-holder demisting element.

### Main Characteristics

- Controls and manages compressor, defrosting elements, evaporator fans, and room light.
- 2 Aux configurable relays
- Differential magnetothermic circuit breaker 16A Id=300 mA (Id=30 mA on request)

### Overall Dimensions

- Width: 180 mm
- Height: 96 mm
- Depth: 263 mm

### Product Usage Instructions

## Installation

### Important Information for the Installer

1. Install the device in places where the protection rating is observed and try not to damage the box when drilling holes for wire/pipe seats.
2. Do not use multi-polar cables in which there are wires connected to inductive/power loads or signaling wires (e.g. probes/sensors and digital inputs).
3. Do not fit power supply wiring and signal wiring (probes/sensors and digital inputs) in the same raceways or ducts.
4. Minimize the length of connector wires so that wiring does not twist into a spiral shape as this could have negative effects on the electronics.
5. Fit a general protection fuse upstream from the electronic controller.
6. All wiring must be of a cross-section suitable for relevant power levels.
7. When it is necessary to make a probe/sensor extension, the wires must have a cross-section of at least 1mm<sup>2</sup>. Probes extension or shortening could alter their factory calibration; therefore, check and calibrate the probes through an external thermometer.

### Optional Kit

The optional kit allows for net configuration with modbus-RTU protocol. Refer to section 5.1 in the user manual for detailed instructions on configuring the net with modbus-RTU protocol.

### Troubleshooting

If you encounter any issues with the AK-RC 111 control panel, refer to section 6.0 in the user manual for troubleshooting steps and solutions.

### Ordering

To order additional AK-RC 111 control panels or inquire about replacement parts, refer to section 8.0 in the user manual for ordering information.

### FAQ

**Q:** What is the power supply voltage for the AK-RC 111 control panel?

**A:** The AK-RC 111 control panel operates on a power supply voltage of 230VAC.

**Q:** Can the AK-RC 111 control panel manage multiple evaporator fans?

**A:** Yes, the AK-RC 111 control panel can control and manage multiple evaporator fans.

**Q:** Is the AK-RC 111 control panel compatible with a single-phase compressor up to 2HP?

**A:** Yes, the AK-RC 111 control panel is designed to work with a single-phase compressor up to 2HP.

## Introduction

### General

#### Description:

The AK-RC 111 is a new control panel for cold rooms with a single-phase compressor up to 2HP, specially designed to provide the user with safety, protection, control and ease of installation.

It allows the user to control all the components on a refrigerating system: compressor, evaporator fans, defrosting

elements, room light and thermostat-holder demisting element.

### **Applications:**

- Complete management of single-phase static or ventilated refrigeration systems up to 2 HP, with off-cycle or electrical defrosting and with direct or pump-down compressor stop.
- Control of single-phase evaporator unit only with refrigerant solenoid enable signal or remote condensing unit enable signal.

### **Main characteristics:**

- Cold room temperature displaying and regulation with decimal point.
- Evaporator temperature with decimal point displaying from parameter.
- Plant control activation/deactivation.
- Plant alarms signaling (probe error, minimum and maximum temperature alarm, compressor protection, door alarm).
- LED indicators and large display illustrate system status.
- User-friendly keypad.
- Evaporator fans management.
- Manual and automatic defrost (static, through heaters, through heaters with temperature control, through cycle reversal).
- Direct or pump-down management and control of condensing unit up to 2HP.
- Cold room light activation through key on the panel or through door-switch.
- Direct control of compressor, defrosting elements, evaporator fans, room light with outputs directly connectable to the various units.
- Air recirculation management.
- 2 auxiliary relays with parameter-configured.
- Integrated RS-485 Modbus connection for Danfoss System Manager or standard Modbus-RTU network
- Emergency operation in the event of a faulty probe environment.
- Smart defrost (energy saving).
- Reduced set (night set) from digital input.
- Can be configured for hot or cold applications.
- Configurable digital inputs.

### **Product ID codes**

Controls and manages compressor, defrosting elements, evaporator fans and room light.

2 Aux configurable relays

Differential magnetothermal circuit breaker 16A

Id=300 mA (Id=30 mA on request)

### **Overall dimension**



## Identification data

The unit described in this manual has an ID plate on the side showing all the relevant identification data:

- Name of Manufacturer
- Code of electrical board
- Serial number
- Date
- Power supply
- Rated current
- IP protection rating

## Installation

Important information for the installer


1. Install the device in places where the protection rating is observed and try not to damage the box when drilling holes for wire/ pipe seats.
2. Do not use multi-polar cables in which there are wires connected to inductive/power loads or signalling wires (e.g. probes/sensors and digital inputs).
3. Do not fit power supply wiring and signal wiring (probes/sensors and digital inputs) in the same raceways or ducts.
4. Minimise the length of connector wires so that wiring does not twist into a spiral shape as this could have negative effects on the electronics.
5. Fit a general protection fuse upstream from the electronic controller.
6. All wiring must be of a cross-section suitable for relevant power levels.
7. When it is necessary to make a probe/sensor extension, the wires must have a crosssection of at least 1mm<sup>2</sup>. Probes extension or shortening could alter their factory calibration; therefore to check and calibrate the probes through an external thermometer.

## Standard assembly kit

For the purposes of assembly and use, the electronic AK-RC 111 control unit comes with:

- 3 seals, to be fitted between the fixing screws and the box back panel;
- 1 user's manual.

### Installing the unit

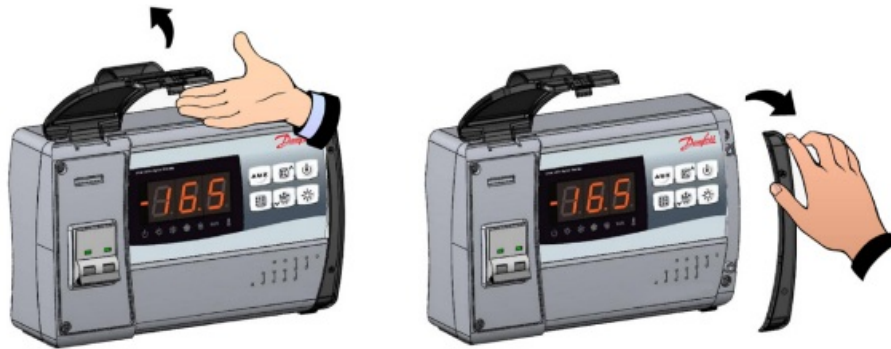

**Fig 1.** Raise the transparent cover that shields the magneto-thermal cut-out switch and remove the screw cover on the right-hand side.




**Fig 2.** Undo the 4 fixing screws at the front of the box




**Fig 3.** To close the magnetothermal circuit breaker transparent protection.




**Fig 4.** Open the front of the box, lift it and slide the two hinges out as far as they will go.

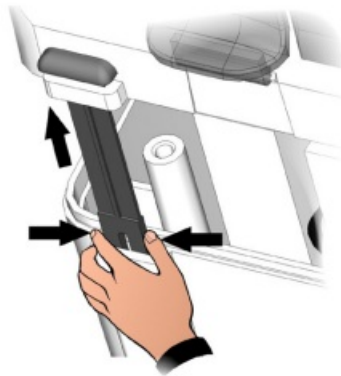

**Fig 5.** Press on the sides of the hinges to remove them from their seats and so remove the front panel completely.

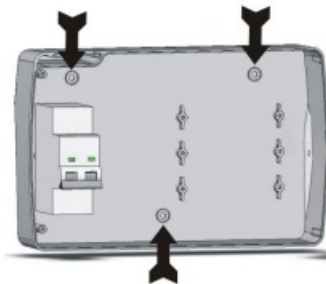

**Fig 6.** Use the three existing holes to fix the box back panel to the wall: use three screws of a length suitable for the thickness of the wall to which the panel will be attached. Fit a rubber washer (supplied) between each screw and the box backing.

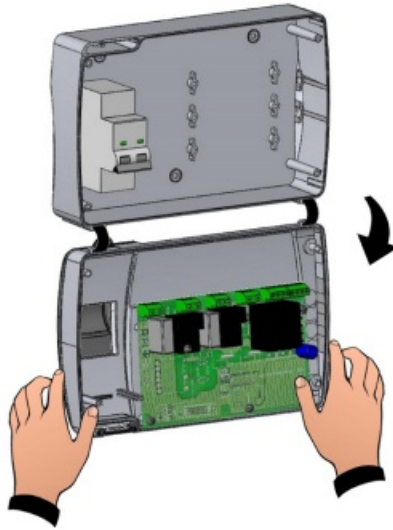

**Fig 7.** Hook the frontal panel back up to the lower part of the box by inserting the two hinges in their seats and, bending them, rotate downwards 180° to gain access to the electronic board.

**Note:** Make all the electrical connections as illustrated in the diagram for the corresponding model (see relative table in appendices). To make electrical connections reliably and maintain the protection rating, use appropriate cable glands and pipepresses to ensure a good seal. It is advisable to distribute the passage of the conductors inside the panel as far as possible, in particular to keep the power leads away from the cables of the signal. Use clips to hold wires in place.



**Fig 8.** Close the front panel, making sure that all the wires are inside the box and that the box seal sits in its seat properly. Tighten the front panel using the 4 screws. Power up the panel and carry out thorough reading/programming of all the parameters.

**Note:** Be careful not to over-tighten the closure screws as this could warp the box and compromise proper operation of the membrane-type keypad. Install short-circuit overload safety devices on all the power cables connected to the AK-RC 111 so as to prevent damage to the device. Work and/or maintenance must **ONLY** be carried out on the unit after disconnecting the panel from the power supply and from any inductive/power loads: doing so allows the worker to do his job safely.

## Technical characteristics









Power supply			
Voltage		230 V~ ± 10% 50/60 Hz	
Max power (only electronics)		~ 7 VA	
Rated current (with all loads connected)		16 A	
Climatic conditions			
Working temperature		-5 – 50 °C	
Storage temperature		-10 – 70 °C	
Relative ambient humidity		Lower than 90% Hr	
General characteristics			
Type of sensors that can be connected		NTC 10K 1%	
Resolution		0.1 °C	
Sensor read precision		± 0.5 °C	
Read range		-45 – 99 °C	
Output characteristics			
Description	Installed relay	Card output characterstics	Note
Compressor	(Relay 30A AC1)	10 A 250 V~ (AC3) (2HP) (100000 cicli)	The sum of contemporary absorptions of these outputs has not to exceed 16 A
Defrost	(Relay 30A AC1)	16A 250 V~ (AC1)	
Fans	(Relay 16A AC1)	2.7 A 250 V~ (AC3)	
Room light	(Relay 16A AC1)	16 A 250 V~ (AC1)	
Aux 1 (free voltage contact)	(Relay 5A AC1)	5(3) A 250 V~	
Aux 2 (free voltage contact)	(Relay 5A AC1)	5(3) A 250 V~	
General electrical protection		Differential magnetothermic circuit breaker 16A Id=300 mA  (Id=30 mA on request)  Disconnecting power 4.5 kA	
Dimension characteristics			
Dimensions		18.0 cm x 9.6 cm x 26.3 cm (HxPxL)	
Insulation and mechanical characteristics			
Box protection rating		IP65	
Box material		ABS self-extinguishing	
Type of insulation		Class II	

## Parameter programming










### Control panel



### Front keypad

- |   |   |  |
|---|---|--|
| 1 |  | <b>Auxiliary relay control</b><br>(controls the relays manual if parameter AU1/AU2 = 2/-2) |
| 2 |  | <b>Up/Mute buzzer alarm</b>  |
| 3 |  | <b>Stand by</b> (if the system shuts down the LED flashes)                                 |
| 4 |  | <b>Room temperature Setting</b>  |
| 5 |  | <b>Down/Manual defrost</b>   |
| 6 |  | <b>Room light</b>  |

### LED display


7		<b>Cold room temperature / parameters</b>
8		<b>Stand-by</b> (flashes on stand-by, outputs are deactivated)
9		<b>Room light</b> (flashes if door switch activated)
10		<b>Cold</b> (indicates activation of compressor)
11		<b>Fans</b>
12		<b>Defrosting</b>
13		<b>Auxiliary</b> (indicates AUX relay calling if AU1/AU2=+/-2 or +/-3)
14		<b>Alarm/warning</b>
15		<b>Decimal point</b> (flashing in night mode)
16		<b>Hot mode</b> (resistance call signaling)


## General

To enhance safety and simplify the operator's work, the AK-RC 111 has two programming levels; the first level (Level 1) is used to configure the frequently-modified SETPOINT parameters. The second programming level (Level 2) is for general parameter programming of the various controller work modes. It is not possible to access the Level 2 programming directly from Level 1: you must exit the programming mode first.

## Key to symbols

For purposes of practicality the following symbols are used:

(▲) the UP key  is used to increase values and mute the alarm.

(▼) the DOWN key  is used to decrease values and force defrosting.



## Setting and displaying the set points



1. Press the SET key to display the current SETPOINT (temperature).
2. Hold down the SET key and press the (▲) or (▼) keys to modify the SETPOINT.  
Release the SET key to return to cold room temperature display: the new setting will be saved automatically.

### Level 1 programming (user level)

To gain access to the Level 1 configuration menu proceed as follows:

1. Press the (▲) and (▼) keys simultaneously and keep them pressed for a few seconds until the first programming variable appears on the display.
2. Release the (▲) and (▼) keys.
3. Select the variable to be modified using the (▲) or (▼) key.
4. When the variable has been selected it is possible:

- to display the setting by pressing SET key.
- to modify the setting by pressing the SET key together with the (  ) or (  ) key.

When configuration values have been set you can exit the menu by pressing the (  ) or (  ) keys simultaneously for a few seconds until the cold room temperature reappears.

5. The new settings are saved automatically when you exit the configuration menu.

#### **List of Level 1 variables (user level)**

Variables	Meaning	Value	Default
<i>r0</i>	<b>Temperature difference</b> compared to main SETPOINT	0.2 – 10 °C	2 °C
<i>d0</i>	<b>Defrost interval</b> (hours) If <i>d0</i> = 0 cyclical defrosts Off	0 – 24 hours	4 hours
<i>d2</i>	<b>End-of-defrost setpoint</b> Defrost is not executed if the temperature read by the defrost sensor is greater than <i>d2</i> . (If the sensor is faulty defrost is stopped on time set by the <i>d3</i> parameter)	-35 – 45 °C	15 °C
<i>d3</i>	<b>Max defrost duration</b> (minutes)	1 – 240 min	25 min
<i>d7</i>	<b>Drip duration</b> (minutes) At the end of defrost the compressor and fans remain at standstill for time <i>d7</i> , the defrost LED on the front panel flashes.	0 – 10 min	0 min
<i>F5</i>	<b>Fan pause</b> after defrost (minutes) Allows fans to be kept at standstill for a time <i>F5</i> after dripping. This time begins at the end of dripping. If no dripping has been set the fan pause starts directly at the end of defrost.	0 – 10 min	0 min
<i>A1</i>	<b>Minimum temperature alarm</b> Allows user to define a minimum temperature for the room being refrigerated. Below value <i>A1</i> an alarm trips: the alarm LED flashes, displayed temperature flashes and the buzzer sounds to indicate the problem.	-45 – ( <i>A2</i> -1) °C	-45 °C
<i>A2</i>	<b>Maximum temperature alarm</b> Allows user to define a maximum temperature for the room being refrigerated. Above value <i>A2</i> an alarm trips: the alarm LED flashes, displayed temperature flashes and the buzzer sounds to indicate the problem.	( <i>A1</i> +1) – 99 °C	99 °C
<i>tEu</i>	<b>Evaporator sensor temperature display</b> (displays nothing if <i>dE</i> = 1)	evaporator temperature	read only

## Level 2 programming (installer level)

To access the second programming level press the UP ( ▲ ) and DOWN ( ▼ ) keys and the LIGHT key simultaneously for a few seconds.

When the first programming variable appears the system automatically goes to stand-by.

1. Select the variable to be modified by pressing the UP ( ▲ ) and DOWN ( ▼ ) keys.

When the parameter has been selected it is possible to:

2. View the setting by pressing the SET key.
3. Modify the setting by holding the SET key down and pressing the ( ▲ ) or ( ▼ ) key.
4. When configuration settings have been completed you can exit the menu by pressing the ( ▲ ) and ( ▼ ) keys simultaneously and keeping them pressed until the room temperature reappears.
5. Changes are saved automatically when you exit the configuration menu.
6. Press the STAND-BY key to enable electronic control.

#### List of Level 2 variables (installer level)

Variable s	Meaning	Value	Default
<i>F3</i>	<b>Fan status with compressor off</b>	0 = Fans run continuously 1 = Fans only run when compressor is working 2 = Fans disabled	1
<i>F4</i>	<b>Fan pause during defrost</b>	0 = Fans run during defrost 1 = Fans do not run during defrost	1
<i>F6</i>	<b>Evaporator fans activation for air recirculation.</b> The fans activate for a time defined by F7 if they have not started working for the F6 time. If activation time coincides with the defrosting time, end of defrosting is awaited.	0 – 240 min 0 = (function not activated)	0 min
<i>F7</i>	<b>Evaporator fans duration for air recirculation.</b> Fans working time for F6	0 – 240 sec	10 sec
<i>dE</i>	<b>Sensor presence</b> If the evaporator sensor is disabled defrosts are carried out cyclically with period d0: defrosting ends when an external device trips and closes the remote defrost contact or when time d3 expires.	0 = evaporator sensor present 1 = no evaporator sensor	0
<i>d1</i>	<b>Defrost type</b> , cycle inversion (hot gas) or with heater elements	0 = heating element 1 = hot gas 2 = heater with temperature control	0
<i>dPo</i>	<b>Defrost at Power On</b>	0 = disabled 1 = defrost at power-on (if possible)	0

<i>dSE</i>	<b>Smart defrost</b>	0 = disabled 1 = enabled	0
<i>dSt</i>	<b>Smart defrost Setpoint (if dSE=1)</b>  The counting of the time between the defrost is incremented only if the compressor is ON and the evaporator temperature is less than dSt.	-30 – 30 °C	1 °C
<i>dFd</i>	<b>Display viewing during Defrost</b>	0 = current temperature 1 = temperature at the start of the defrost 2 = “DEF”	1
<i>Ad</i>	<b>Modbus Network address</b>	0 – 247	0
<i>Bdr</i>	<b>Modbus baudrate</b>	0 = 300 baud 1 = 600 baud 2 = 1200 baud 3 = 2400 baud 4 = 4800 baud 5 = 9600 baud 6 = 14400 baud 7 = 19200 baud 8 = 38400 baud	8
<i>Prt</i>	<b>Modbus parity check</b>	0 = none 1 = even 2 = odd	1
<i>Ald</i>	<b>Minimum and maximum temperature</b> signalling and alarm display delay	0 – 240 min	120 min
<i>C1</i>	Minimum time between shutdown and <b>subsequent switching on of the compressor.</b>	0 – 15 min	0 min
<i>CAL</i>	<b>Cold room sensor value correction</b>	-10 – 10 °C	0 °C

<i>CE1</i>	<b>Duration of compressor ON time in the case of faulty ambient probe</b>  (emergency mode).  If CE1=0 the emergency mode in the presence of error E0 remains disabled, the compressor remains off and defrosting is prevented in order to conserve the remaining cold.	0 – 240 min  0 = disabled	0 min
<i>CE2</i>	<b>Duration of compressor OFF time in the case of faulty ambient probe</b> (emergency mode).	5 – 240 min	5 min
<i>doC</i>	<b>Compressor safety time for door switch:</b>  when the door is opened the evaporator fans shut down and the compressor will continue working for time <b>doC</b> , after which it will shut down.	0 – 5 min	0 min
<i>tdo</i>	<b>Compressor restart time after door opening.</b> when the door is opened and after tdo time, it's set back the normal functioning giving door open alarm (Ed) ) If the door switch is closed and the light stays on for a longer time than tdo light cell alarm is signaled (E9). With tdo=0 the parameter is disabled.	0 – 240 min  0 = disabled	0 min
<i>Fst</i>	<b>FAN shutdown TEMPERATURE</b>  The fans will stop if the temperature value read by the evaporator sensor is higher than this value.	-45 – 99 °C	99 °C
<i>Fd</i>	<b>Fst differential</b>	1 – 10 °C	2 °C
<i>LSE</i>	<b>Minimum value attributable to setpoint.</b>	-45 – (HSE-1) °C	-45 °C
<i>HSE</i>	<b>Maximum value attributable to setpoint.</b>	(LSE+1) – 99 °C	99 °C



<i>AU1</i>	<b>Auxiliary/alarm relay 1 control</b>	<p>-6 (NC) = relay de-energised during stand-by</p> <p>-5 (NC) = Contact for casing element control (AUX relay closed with compressor output inactive).</p> <p>-4 (NC) = pump down function (NC, see CHAP 5.16)</p> <p>-3 (NC) = automatic auxiliary relay managed by StA temp. setting with 2°C differential (NC)</p> <p>-2 (NC) = manual auxiliary relay controlled via AUX key (NC)</p> <p>-1 (NC) = alarm relay (NC) 0 = relay deactivated</p> <p>1 (NO) = alarm relay (NO)</p> <p>2 (NO) = manual auxiliary relay controlled via AUX key (NO)</p> <p>3 (NO) = automatic auxiliary relay managed by StA temp. setting with 2°C differential (NO)</p> <p>4 (NO) = pump down function (NO, see CHAP 5.16)</p> <p>5 (NO) = free voltage contact for condensing unit (AUX relay and compressor relay in parallel)</p> <p>6 (NO) = relay excited during stand-by</p>	-1
<i>AU2</i>	<b>Auxiliary/alarm relay 2 control</b>	(like AU1 )	5
<i>StA</i>	<b>Temperature setting for auxiliary relay</b>	-45 – 99 °C	0 °C
<i>nSC</i>	<p><b>Correction factor for the SET button during night operation</b> (energy saving)</p> <p>(with In1 or In2 = 8 or -8)</p> <p>During night operation the control set is: Set Control = Set + nSC</p> <p>In night mode decimal point flashes.</p>	-20 – 20 °C	0 °C

<i>In1</i>	<b>INP-1 input setting</b>	<p>8 = Night mode digital input (energy saving, N.O.)</p> <p>7 = Stop defrosting remotely (N.O.) (reads rising edge of impulse)</p> <p>6 = Start defrosting remotely (N.O.) (reads rising edge of impulse)</p> <p>5 = Stand-by remotely (N.O.) (In order to indicate Stand-By mode, the display shows 'In5' alternating with the current view)</p> <p>4 = Pump-down pressure switch (N.O.)</p> <p>3 = Man-in-room alarm (N.O.)</p> <p>2 = Compressor protection (N.O.)</p> <p>1 = Door switch (N.O.)</p> <p>0 = disabled</p> <p>-1 = Door switch (N.C.)</p> <p>-2 = Compressor protection (N.C.)</p> <p>-3 = Man-in-room alarm (N.C.)</p> <p>-4 = Pump-down pressure switch (N.C.)</p> <p>-5 = Stand-by remotely (N.C.) (In order to indicate Stand-By mode, the display shows 'In5' alternating with the current view)</p> <p>-6 = Start defrosting remotely (N.C.) (reads falling edge of impulse)</p> <p>-7 = Stop defrosting remotely (N.C.) (reads falling edge of impulse)</p> <p>-8 = Night mode digital input (energy saving, N.C.)</p>	2
<i>In2</i>	<b>INP-2 input setting</b>	(like In1)	1
<i>bEE</i>	<b>Buzzer enable</b>	<p>0 = disabled</p> <p>1 = enabled</p>	1
<i>mOd</i>	Thermostat functioning mode	<p>0 = Cold function 1 = Hot function</p> <p>(in this mode defrosting and fan disable Fst are excluded)</p>	0

P1	<b>Password type of protection</b> (active when PA is not equal 0)	0 = only display set point 1 = display set point, AUX, light access  2 = access in programming not permitted  3 = access in second level programming not permitted	3
PA	<b>Password</b> (see P1 for the type of protection)	0...999  0 = not active	0
reL	<b>Release software</b>	indicates software version	2 (read only)

### Switching on the AK-RC 111 electronic controller

- After wiring the electronic controller correctly, power up at 230 V AC; the display panel will immediately emit a beep and all the LEDs will come on simultaneously for a few seconds.

### Cold/hot activation/deactivation conditions

- In cold mode (mOd=0), the AK-RC 111 controller activates the compressor when cold room temperature exceeds setting + differential (r0); it deactivates the compressor when cold room temperature is lower than the setting.

If Pump-Down function is selected (parameter AU1/AU2 = 4/-4), see chapter 4.16 for compressor activation/deactivation conditions.

In hot mode (mOd=1), the AK-RC 111 controller activates the heat output (COMPR output) when cold room temperature drops below setting-differential (r0); it deactivates the heat output (COMPR output) when cold room temperature is higher than the setting.

### Manual defrosting activation/deactivation

To defrost just press the dedicated key (see section 5.2) to activate the elements relay. Defrosting will not take place if the end-of-defrost temperature setting (d2) is lower than the temperature detected by the evaporator sensor. Defrosting ends when the end-of-defrost temperature (d2) or maximum defrost time (d3) is reached, or due to forced manual defrost termination (end of defrost button or digital input).

### Defrost with heater and temperature control

Set the parameter d1=2 for the management of heater defrost by time with temperature control. During the defrost the output is activated when the evaporator's temperatures are lower than d2. Defrost stops after d3 minutes. It allows energy saving and a better defrost process.

### Hot gas defrosting

Set parameter d1=1 to defrost in cycle inversion mode.

The compressor relay and defrost relay are activated throughout the defrost phase.

To ensure proper control of the system the installer must use the defrost output: this must allow opening of the

cycle inversion solenoid valve and closure of the liquid solenoid valve.

For capillary systems (without thermostat valve) it is only necessary to control the cycle inversion solenoid valve via the defrost relay control.

### Pump down function

Pump down function is activated when parameter AU1/AU2 = 4 / -4.

Connect pump down pressostat on the digital input configured as pump down (In1 or In2 = 4 / -4). The compressor is directly controlled by pressostat. Connect evaporator solenoid valve on the AUX1 (or AUX2) relay. The solenoid is controlled directly by thermostat.

### Password function

When parameter PA is setting with value different to 0 the protection function is activated.

See parameter P1 for the different protection.


When PA is setting the protection start after two minutes of inactivity. On display appear 000. With up/down modify the number, with set key confirm it.

Use universal number 100 if you don't remember the password.

### Modbus connection

Net configuration with modbus-RTU protocol

For RS-485 connections with Modbus-RTU protocol follow the scheme below.

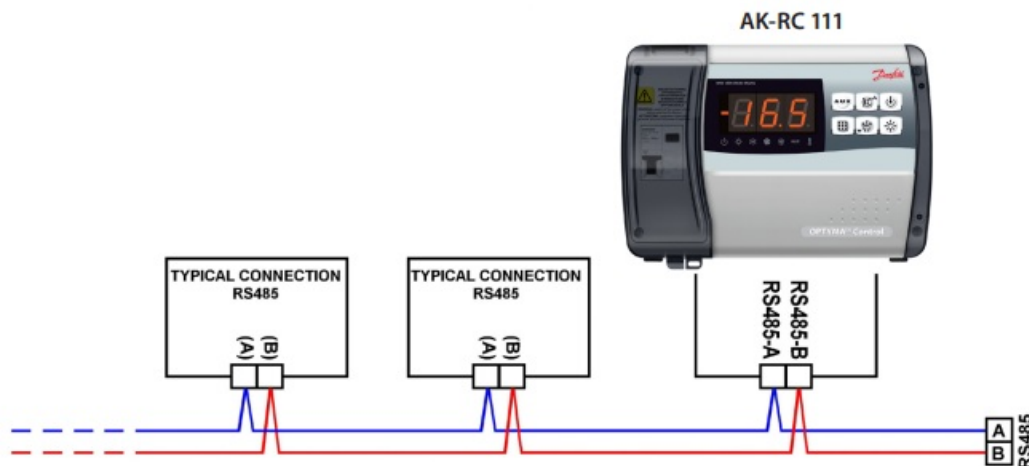

### Troubleshooting


In the event of any anomalies of the AK-RC 111, it notifies the operator by means of the alarm codes displayed on the display and an audible signal emitted by a buzzer inside the control panel. The EL and EH temperature alarms remain visible even after their return (alarm icon lights on) until their acknowledgment (by pressing the key). If an alarm condition occurs, one of the following messages will be displayed on the display:

Alarm code	Possible cause	Solution
E0	Cold room temperature sensor not working properly	<ul style="list-style-type: none"><li>Check that cold room temperature sensor is working properly</li><li>If the problem persists, replace the sensor</li></ul>


<i>E1</i>	<i>Defrost sensor not working properly</i> (In this case defrosts will last time d3)	<ul style="list-style-type: none"> <li>• Check that defrost sensor is working properly</li> <li>• If the problems persists, replace the sensor</li> </ul>
<i>E2</i>	<i>Eeprom alarm</i> An EEPROM memory alarm has been detected (All outputs except the alarm one are deactivated)	<ul style="list-style-type: none"> <li>• Switch unit off and back on</li> </ul>
<i>E8</i>	<i>Man in cold room alarm</i>	<ul style="list-style-type: none"> <li>• Reset the alarm input inside the cold room</li> </ul>
<i>Ec</i>	<i>Compressor protection tripped</i> (e.g. thermal protection or max pressure switch) (All outputs except the alarm one – where applicable – are deactivated)	<ul style="list-style-type: none"> <li>• Check that compressor is working properly</li> <li>• Check compressor absorption</li> <li>• If the problem persists, contact the technical assistance service</li> </ul>
<i>Ed</i>	<i>Open door Alarm.</i> When the door is opened and after tdo time, it's settled back the normal functioning giving door open alarm (Ed).	<ul style="list-style-type: none"> <li>• Check door switch status</li> <li>• Check door switch connections</li> <li>• If the problem persists contact the technical assistance service</li> </ul>
<i>E9</i>	<i>Cell light alarm.</i> The light of the cell has been on for a time greater than tdo.	<ul style="list-style-type: none"> <li>• Turn off the light</li> </ul>
<i>EH</i>	<i>Maximum temperature alarm.</i> The temperature inside the cold room has exceeded the max. temperature alarm setting (see variables A2, <i>user programming level</i> )	<ul style="list-style-type: none"> <li>• Check that the compressor is working properly.</li> <li>• Sensor not reading temperature properly or compressor start/stop control not working.</li> </ul>
<i>EL</i>	<i>Minimum temperature alarm.</i> The temperature inside the cold room has exceeded the min. temperature alarm setting (see variables A1, <i>user programming level</i> ).	<ul style="list-style-type: none"> <li>• Check that the compressor is working properly.</li> <li>• Sensor not reading temperature properly or compressor start/stop control not working.</li> </ul>

## Appendices

### AK-RC 111 wiring diagram

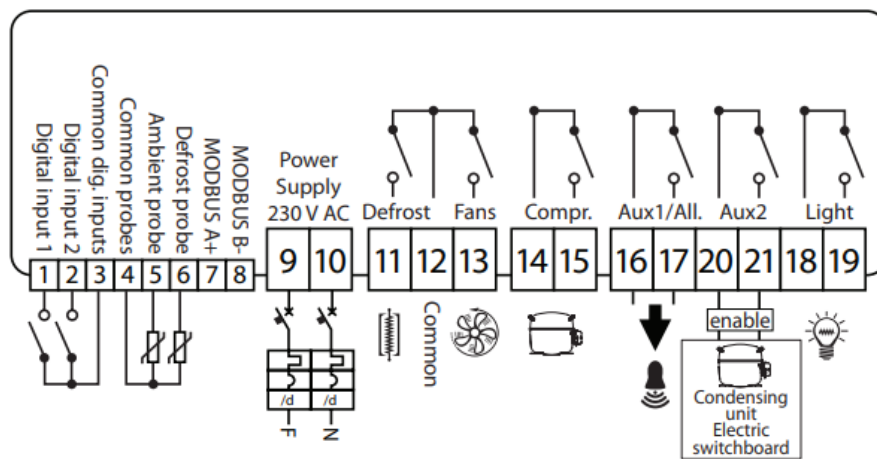

## Part List

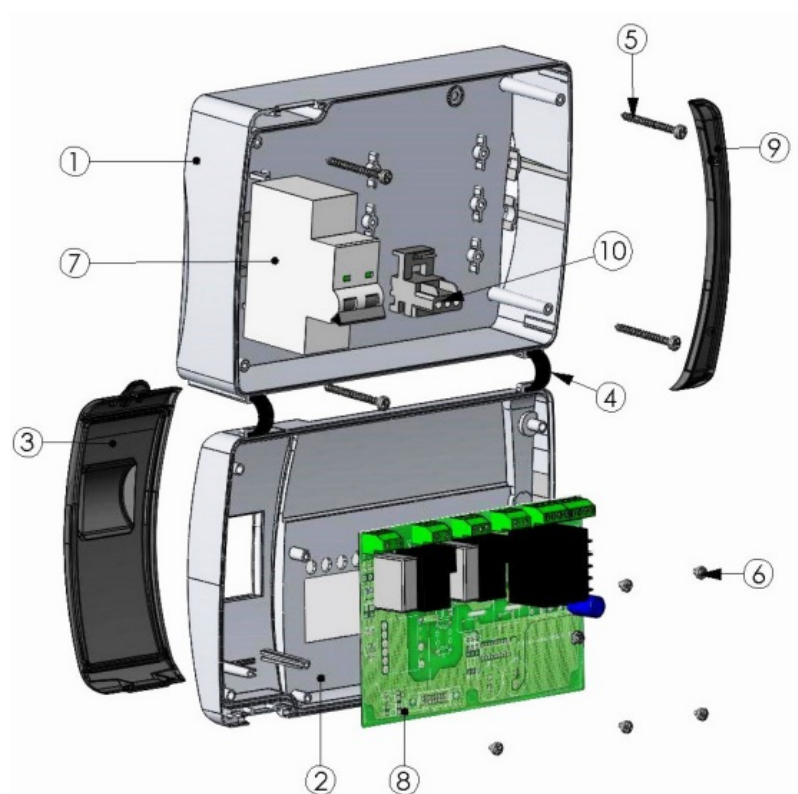


Key	
Ref.	Description
1.	Box rear in Abs
2.	Box front in Abs
3.	Front cover in transparent polycarbonate
4.	Box front opening hinge
5.	Box closure screws
6.	Board fixing screws
7.	Magneto-thermal cut-out/power breaker
8.	CPU board
9.	Polycarbonate screw cover
10.	Terminal for earth connections

## Ordering



Type	Code no.
OPTYMATM Control single-phase (2 HP) including two sensors	080Z3220

Danfoss can accept no responsibility for possible errors in catalogues, brochures and other printed material. Danfoss reserves the right to alter its products without notice. This also applies to products already on order provided that such alterations can be made without subsequential changes being necessary eady agreed. All trademarks in this material are property of the respective companies. Danfoss and the Danfoss logotype are trademarks of Danfoss A/S. All rights reserved.

## Documents / Resources

	<p><a href="#">Danfoss AK-RC 111 Optyma Coolroom Controller</a> [pdf] User Guide  AK-RC 111 Optyma Coolroom Controller, AK-RC 111, Optyma Coolroom Controller, Coolroom Controller, Controller</p>
---	--

## References

-  [Manual-Hub.com - Free PDF manuals!](#)
-  [Manual-Hub.com - Free PDF manuals!](#)
- [User Manual](#)

## **Manuals+, Privacy Policy**

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.