



  
MMIGRS2 X-Gate  
2 Over CANbus  
controller



## Contents [ [hide](#) ]

- [1 Danfoss MMIGRS2 X-Gate AK2 Over CANbus Controller](#)
- [2 What is needed](#)
- [3 General overview](#)
- [4 Settings in X-Gate](#)
- [5 Glossary of terms](#)
- [6 FAQ](#)
- [7 Documents / Resources](#)
  - [7.1 References](#)



## Danfoss MMIGRS2 X-Gate AK2 Over CANbus Controller



This guide focuses at the current moment on the integration of the AK2 controller via

CAN bus to the X-Gate. For the integration of the X-Gate with a BMS, PLC, SCADA, etc., please refer to the User Guide. This guide also does not cover how to obtain ED3/ED4 or CDF files.

## What is needed

### Equipment

X-Gate + power supply 24V AC/DC



AK-PC 78x family (080Z0192) + power supply 24 AC/DC




Display MMIGRS2 (080G0294) + ACCCB I Cable Telephone (080G0076)




Cables for the wiring

### General overview

### Wiring with the MMIGRS2

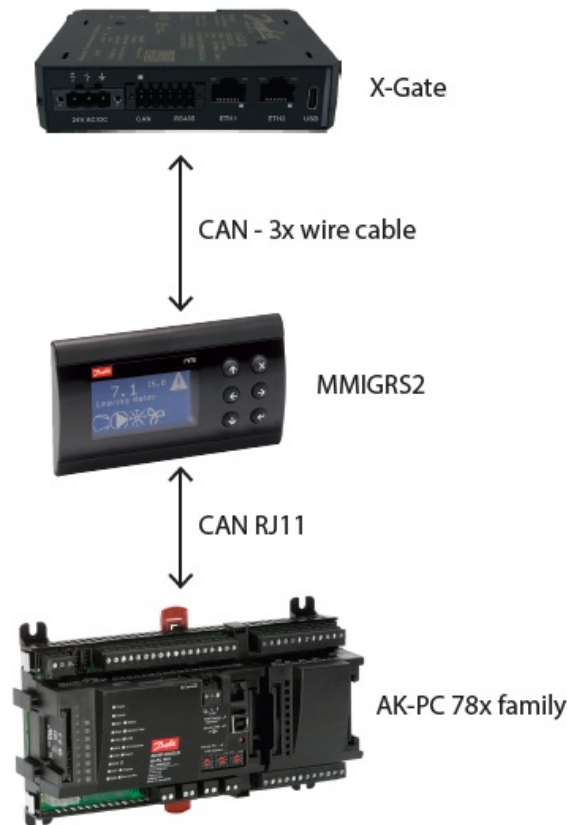


### Connection between AK-PC 78x family and MMIGRS2

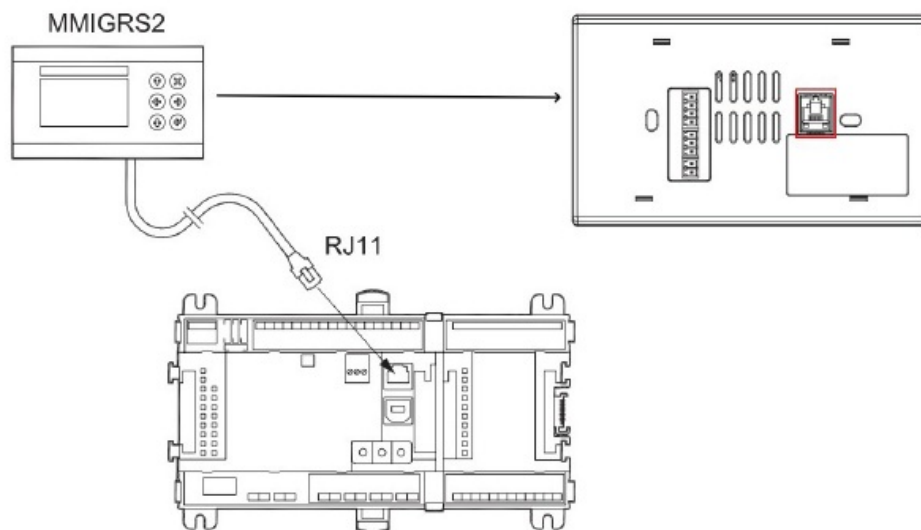

CANH-R connection should be done only on the first and last element of the network. AK-PC 78x is terminated internally and the last element of the network will be the X-Gate therefore do not terminate the display. Also do not connect a separate power supply for the display. Supply comes directly from the controller via cable.


### Connection between MMIGRS2 and X-Gate

Terminate the CANH-R on the X-Gate. Do not connect a separate power supply for the display.

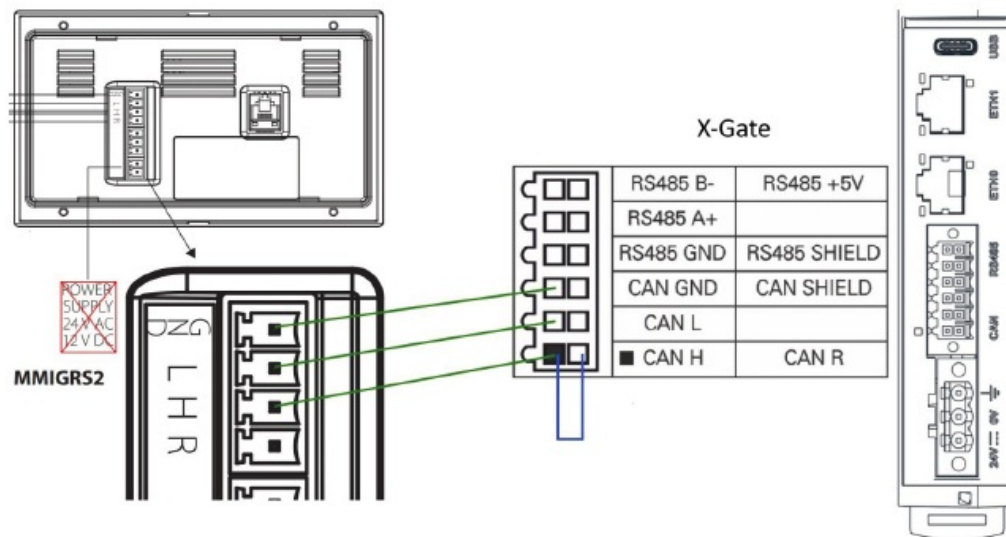

### Wiring without the MMIGRS2 (direct)

Terminate the CANH-R on the X-Gate. Do not connect a separate power supply for the display.

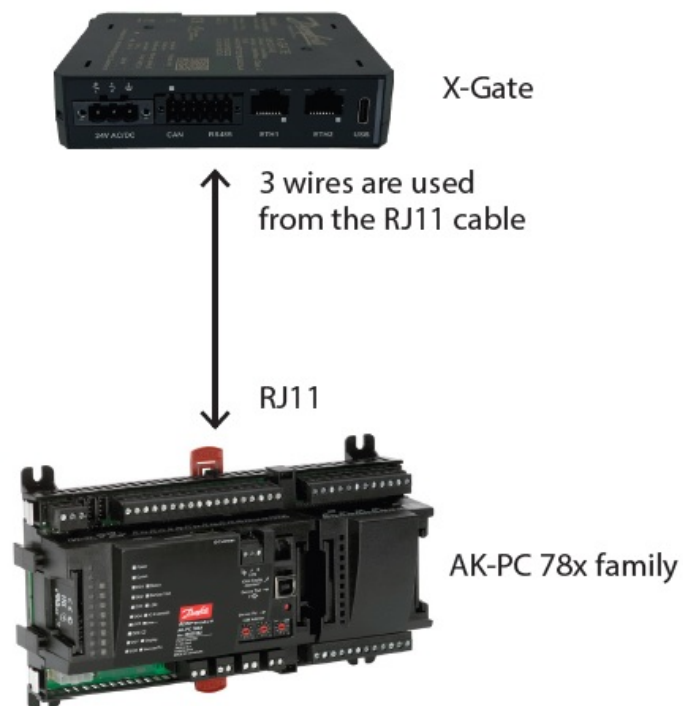









If for some reason you are seeing something different you can check the following settings:

- under “COM Selection,” choose “CAN” from the available options: CAN, RS232, and RS485

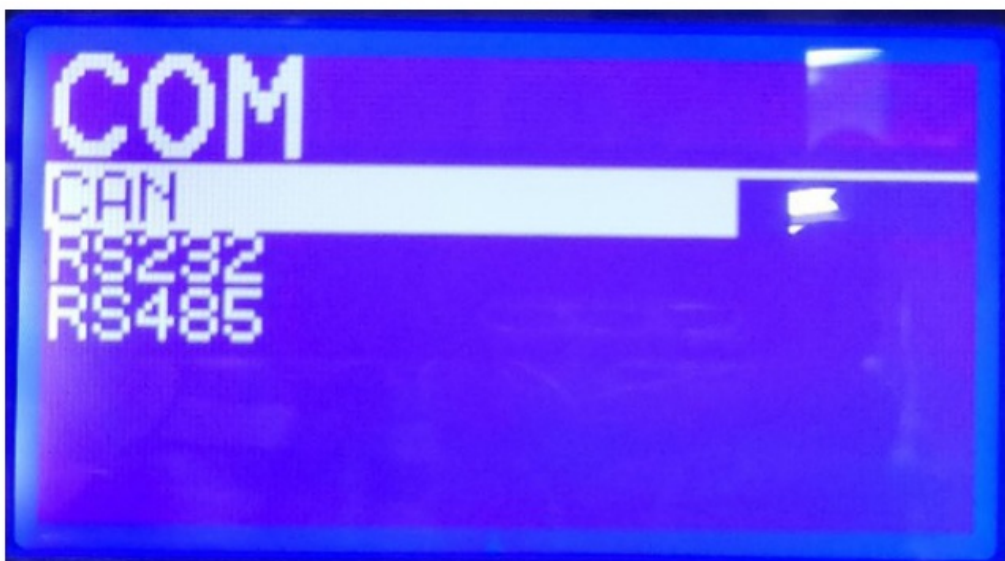

- Back in the BIOS menu: Press the down arrow to access the CAN settings. These settings control various aspects of CAN communication: Node ID, Baud Rate, Active Nodes, Diagnostics, and LSS.

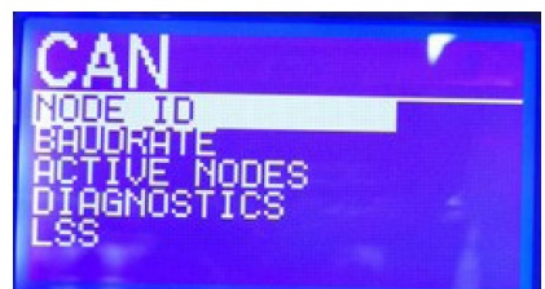

- In Node ID you can select the CAN address for the display itself which is as default 126. In Baudrate we need to select 50K:




- under “Active Nodes,” you can see the connected devices:

Before the X-Gate configuration




After the X-Gate configuration

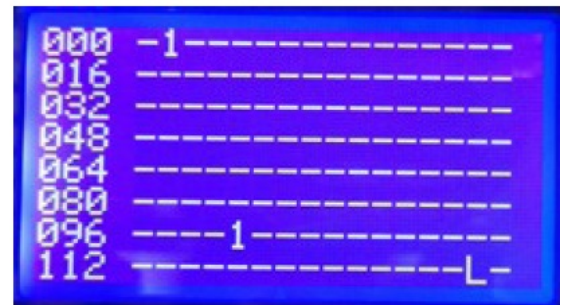


## Settings in X-Gate

Access you X-Gate and log in using your credentials (default user: admin; password: PASS).

1. Ensure that you have version 5.22 or higher:

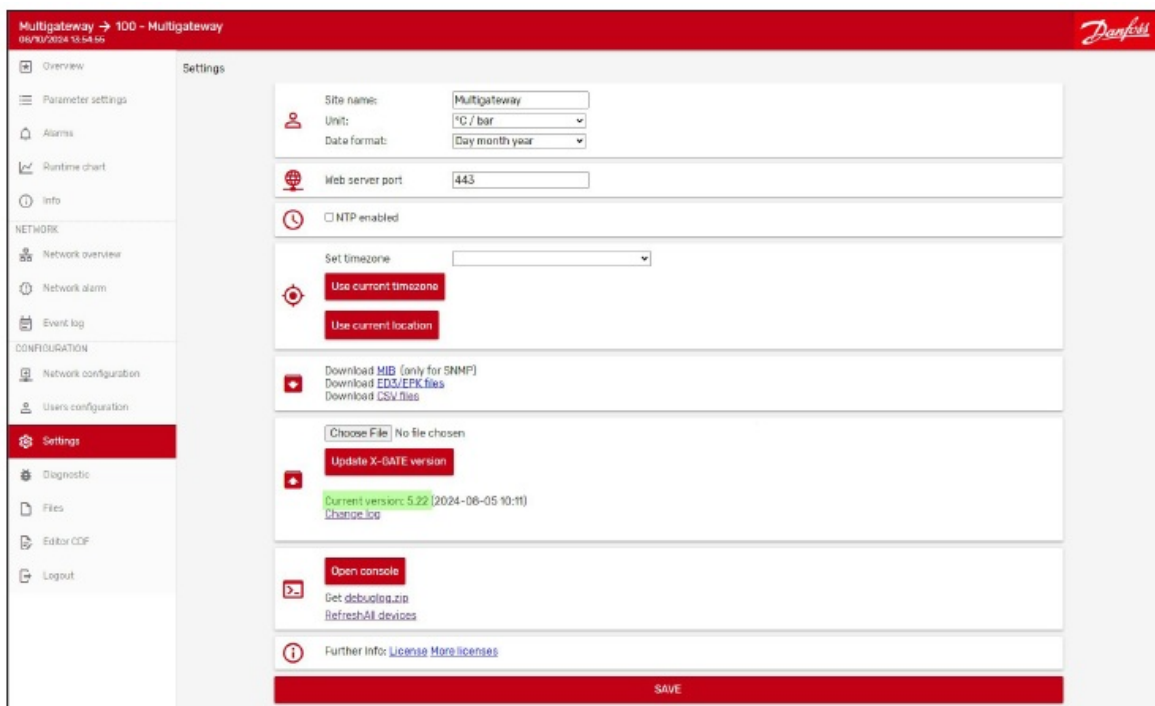


2. Go to Files and upload the CDF file (or ED3/ED4) for the pack controller:

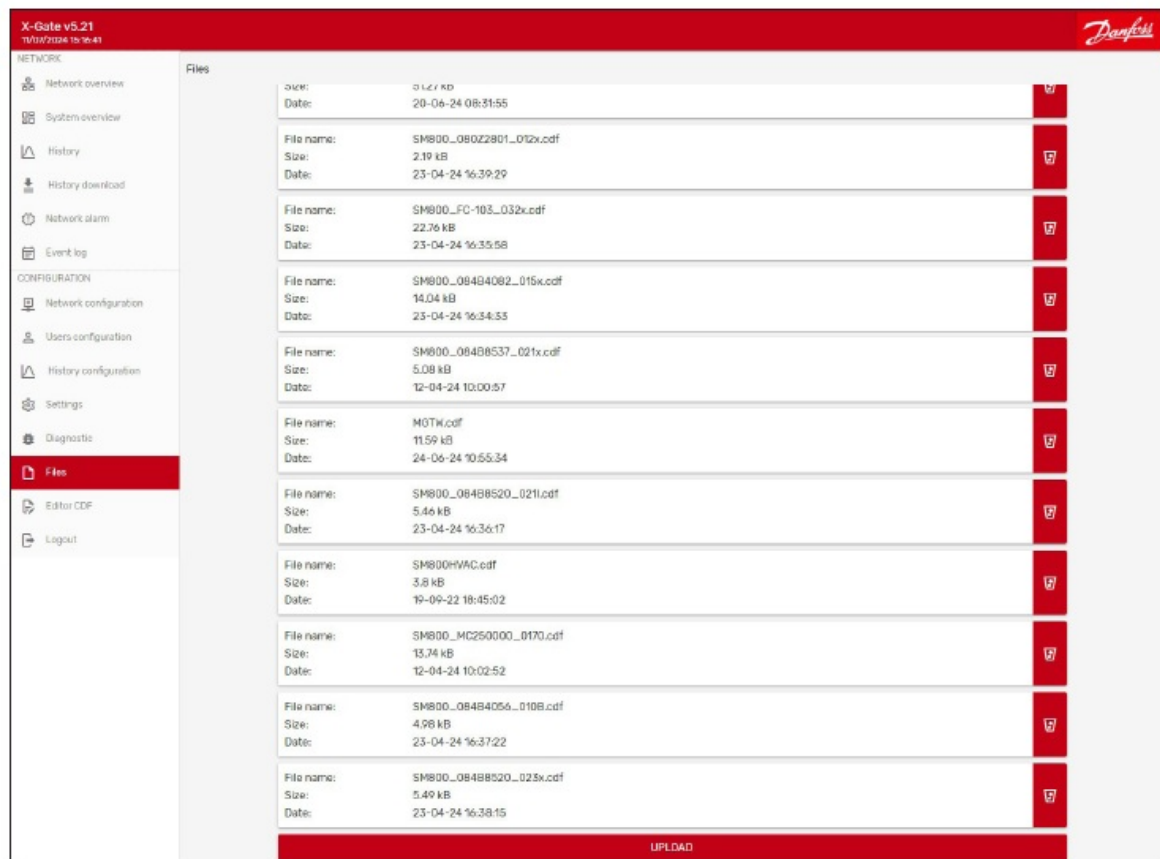


3. Go to “Network Configuration” and add a node with the following settings:

- Node ID: 1
- Description: (Enter a descriptive name – this field cannot be blank)
- Application: Select the appropriate CDF file.
- Protocol Address: Leave empty.

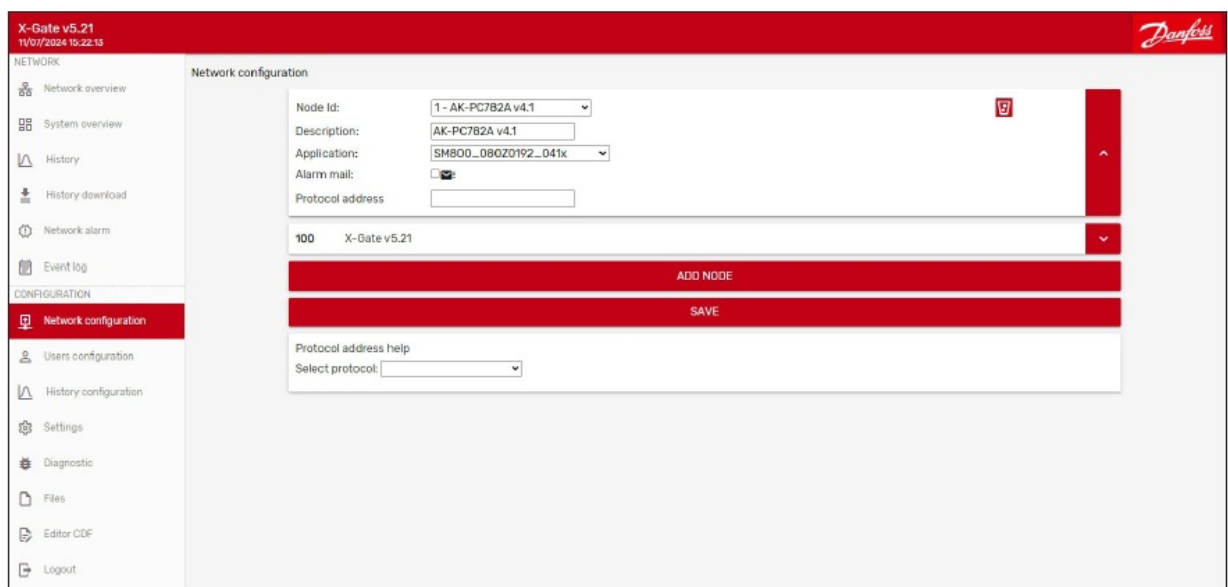


4. In the Network Overview, access the X-Gate settings by pressing the arrow next to it:




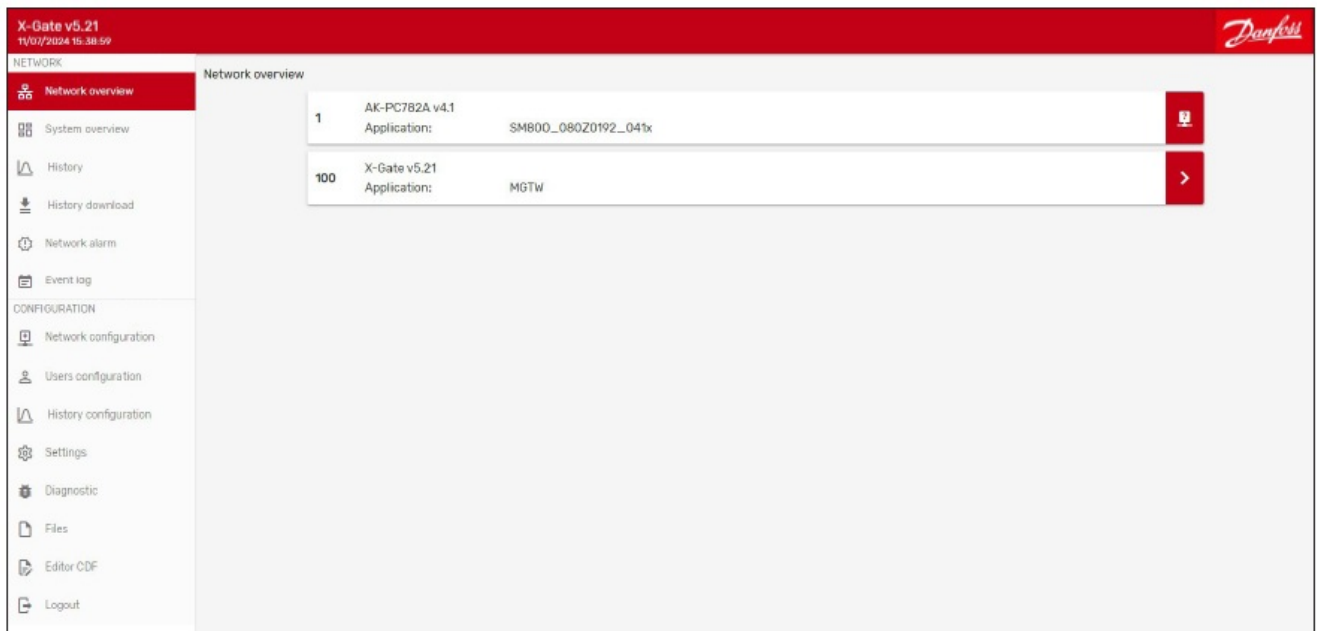


5. Go to Client fieldbus and enable CANbus (G36):

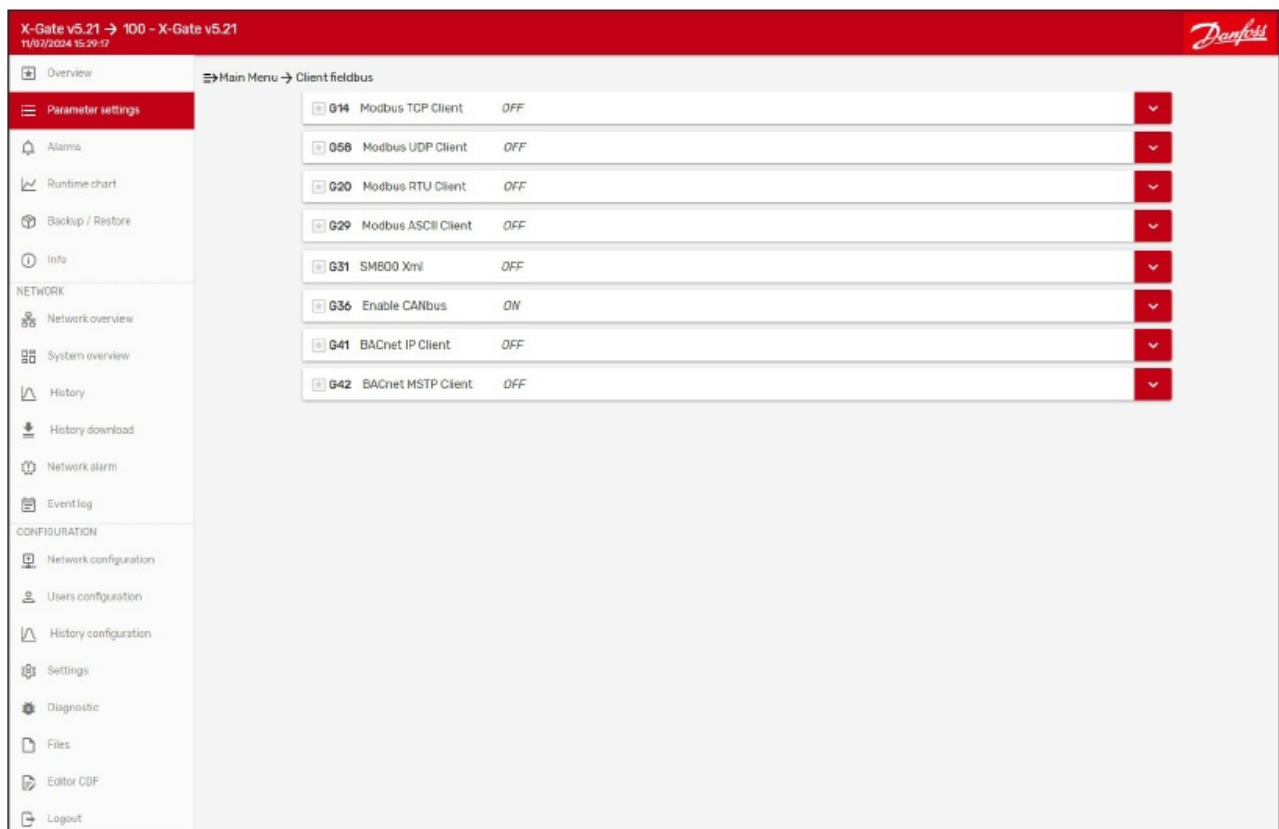


6. Go to “Supervisor Settings” from the Main Menu and verify that the CAN Baud Rate (SU4) is set to 50kbps.

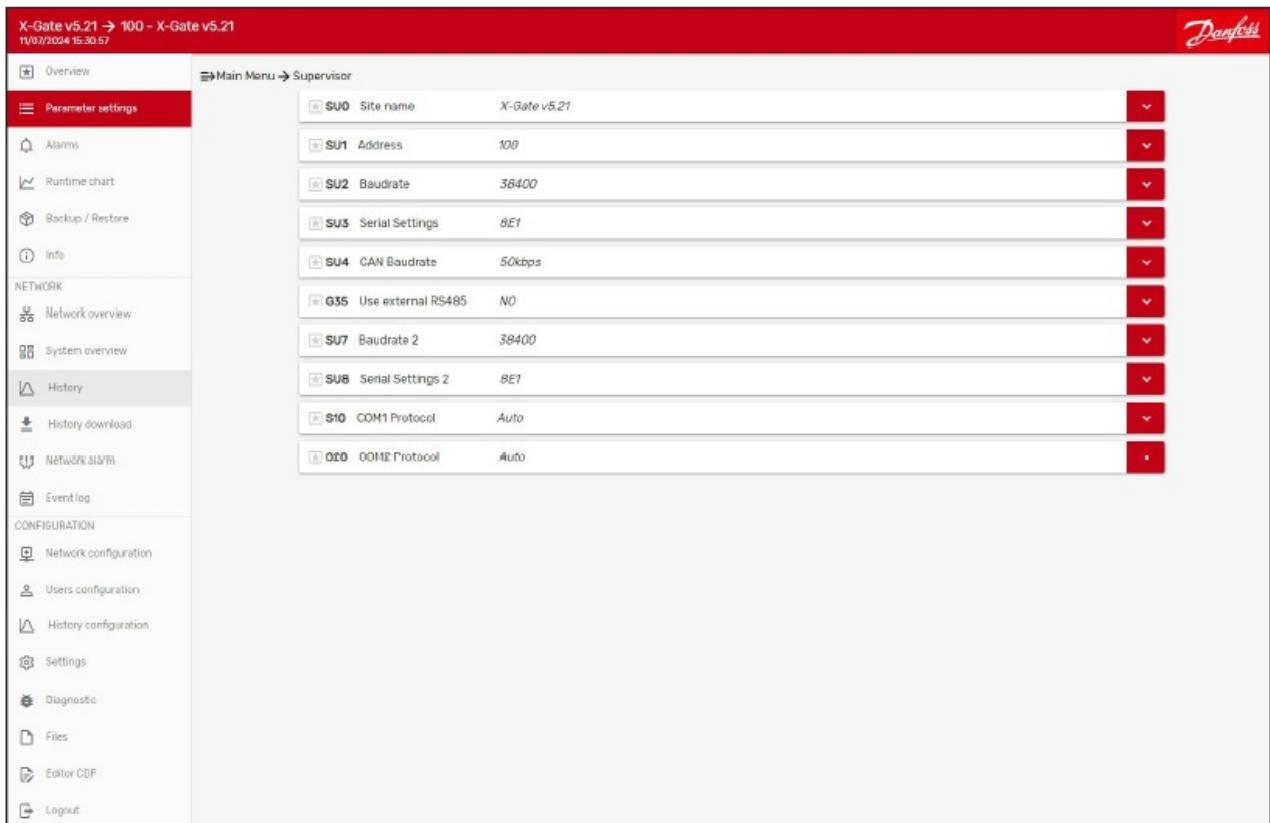

- Go to the Network Overview, it can take 1-2 minutes to load the page. The question mark symbol next to the AK-PC 78x should now be replaced with an arrow, indicating a successful connection:

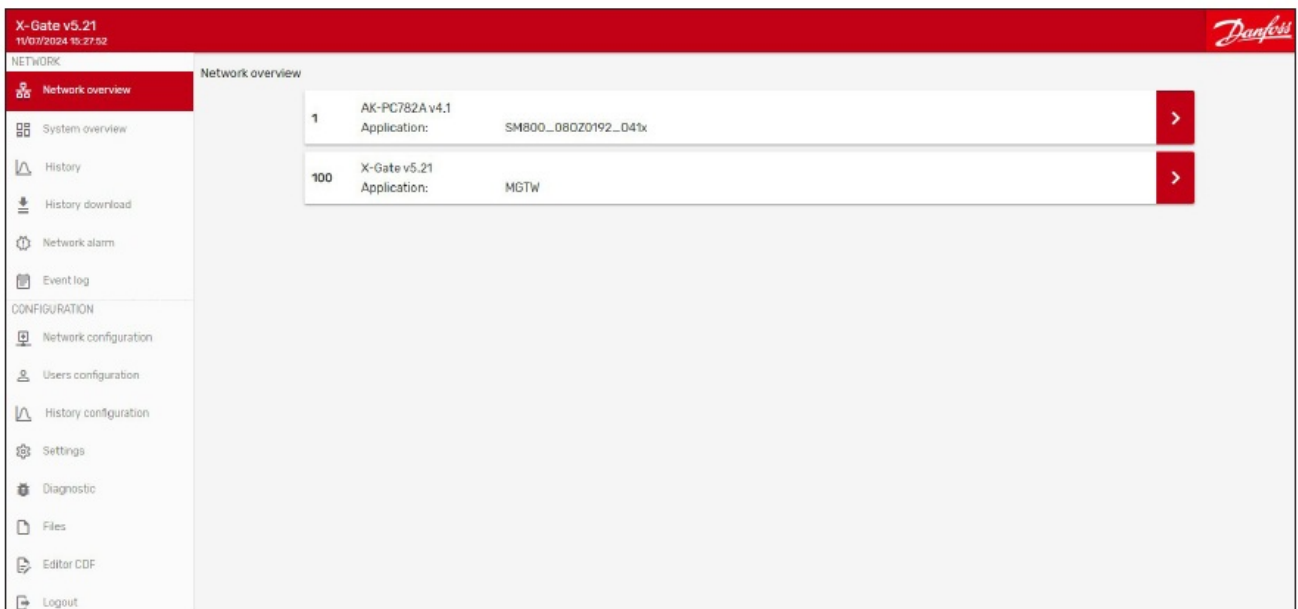

- Go to the Pack Controller settings. You should see various values displayed. Note that some values might appear as “NaN” if the corresponding functions are not used in the Pack Controller.

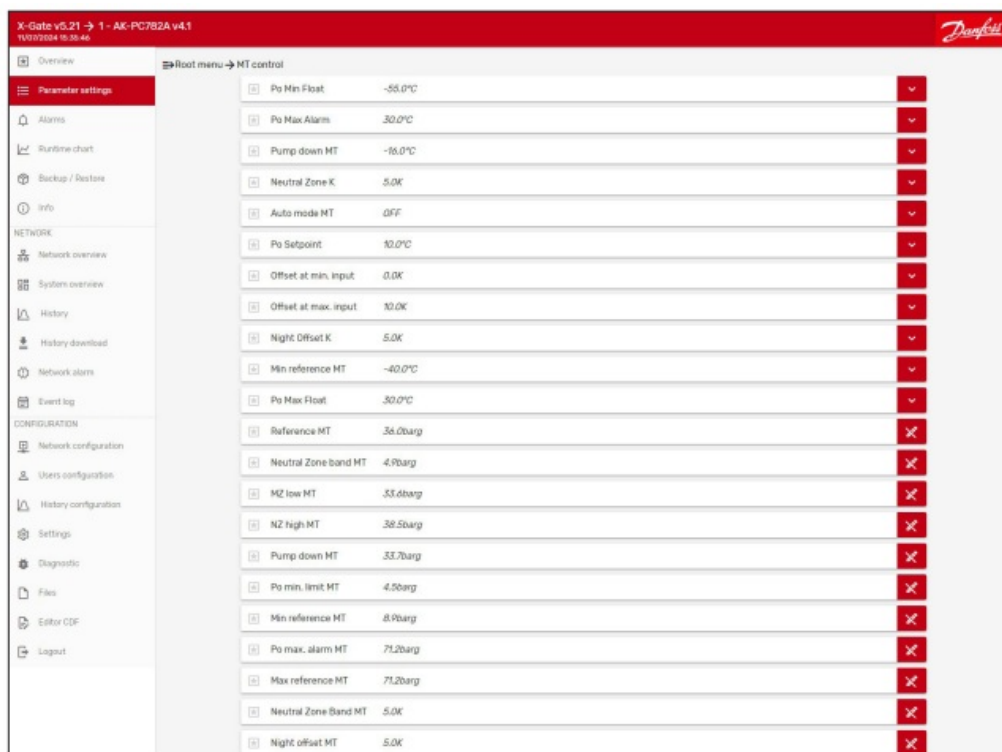

## Glossary of terms

ED3/ED4	<p>These files are used to store configuration settings and other information for Danfoss devices, ensuring that the devices operate efficiently.</p> <p><b>ED3/ED4</b> are formats specifically used by Danfoss for the Danfoss System Manager AK-SM 800A.</p>
CDF (Configuration Description File)	<p><b>CDF</b> is a more generic format used to store configuration settings and parameters for controllers. While it serves the same purpose as ED3/ED4 files, either format could be used depending on the system and application.</p>
BMS (Building Management System)	<p>A <b>BMS</b>, also known as a Building Automation System (BAS), is a control system used in buildings to manage and monitor the building's mechanical and electrical equipment.</p>
PLC (Programmable Logic Controller)	<p>A <b>PLC</b> is an industrial digital computer designed for the control and automation of manufacturing processes, such as assembly lines, robotic devices, or any activity that requires high reliability, ease of programming, and process fault diagnosis.</p>

Scada (Supervisory Control and Data Acquisition )	<b>Scada</b> is a system used for remote monitoring and control of industrial processes. It gathers real-time data from remote locations to control equipment and conditions
---	--

## Danfoss AIS

Climate Solutions

- [danfoss.com](https://danfoss.com)
- +45 7488 2222

Any information, including, but not limited to information on selection of product, its application or use, product design, weight, dimensions, capacity or any other technical data in product manuals, catalogues descriptions, advertisements, etc. and whether made available in writing, Orally, electronically, online or via download, shall be considered informative, and is Only binding if and to the extent, explicit reference is made in a quotation or Order confirmation. Danfoss cannot accept any responsibility for possible errors in catalogues, brochures, videos and Other material.

Danfoss reserves the right to alter its products Without notice. This also applies to products ordered but not delivered provided that such alterations can be made without changes to form, fit or function Of the product. All trademarks in this material are property Of Danfoss A'S or Danfoss group companies. Danfoss and the Danfoss logo are trademarks Of Danfoss A'S. All rights reserved.

## FAQ

- **Q: Do I need to terminate CANH-R on both ends of the network?**

A: No, terminate CANH-R only on the first and last elements of the network as specified in the manual.

- **Q: How do I know if the connection between X-Gate and AK-PC 78x is successful?**


A: In Network Overview, a successful connection is indicated by an arrow symbol replacing the question mark next to AK-PC 78x.

- **Q: What should I do if some values appear as NaN in Pack Controller settings?**

A: NaN values indicate that corresponding functions are not in use. It is normal

behavior and does not require action.

## Documents / Resources

	<p><a href="#">Danfoss MMIGRS2 X-Gate AK2 Over CANbus Controller [pdf]</a> User Guide</p> <p>MMIGRS2, MMIGRS2 X-Gate AK2 Over CANbus Controller, X-Gate AK2 Over CANbus Controller, AK2 Over CANbus Controller, CANbus Controller, Controller</p>
---	---

## References

- [User Manual](#)

📁 Danfoss

💎 AK2 Over CANbus Controller, Canbus Controller, controller, Danfoss, MMIGRS2, MMIGRS2 X-Gate AK2 Over CANbus Controller, X-Gate AK2 Over CANbus Controller

—Previous Post

[Danfoss ETC 1H KoolProg Software User Guide](#)

—

## Leave a comment

Your email address will not be published. Required fields are marked \*

Comment \*

Name

Email



Website

☐ Save my name, email, and website in this browser for the next time I comment.

**Post Comment**

[Manuals+](#), [Privacy Policy](#) | [@manuals.plus](#) | [YouTube](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.