

# DATALOGIC DS1-LD-SR-015-JV Areascan Light Grids Instruction Manual



## Contents

- 1 DS1 SERIES**
  - 1.1 INSTRUCTION MANUAL**
- 2 AREAscan™**
  - 2.1 CONTROLS**
  - 2.2 INSTALLATION MODES**
    - 2.2.1 General information on device positioning**
  - 2.3 CONNECTIONS**
  - 2.4 FUNCTIONING AND PERFORMANCES**
  - 2.5 EMISSION POWER REGULATION (only DS1-LD-SR-XXX-PV)**
  - 2.6 TECHNICAL DATA**
  - 2.7 DIAGNOSTICS**
    - 2.7.1 RECEIVING UNIT (RX):**
    - 2.7.2 EMITTING UNIT (TX):**
  - 2.8 DIMENSIONS**
    - 2.8.1 FIXING BRACKET**
  - 2.9 SPECIFICATIONS**
- 3 Documents / Resources**
  - 3.1 References**
- 4 Related Posts**

## DS1 SERIES

### INSTRUCTION MANUAL

### AREAscan™

### CONTROLS

#### **OUT LED on receiver (RX)**

The yellow LED ON indicates the presence of the object into controlled area.

#### **POWER ON LED on receiver (RX)**

The green LED ON indicates the optimal device functioning.

The fast blinking of the green LED indicates a critical device alignment.

Please refer to “DIAGNOSTICS” paragraph for other indications.

#### **POWER ON LED on emitter (TX)**


The green LED ON indicates the correct device functioning.

Please refer to “DIAGNOSTICS” paragraph for other indications.

## INSTALLATION MODES

### General information on device positioning

- Align the two receiver (RX) and emitter (TX) units, verifying that their distance is inside the device operating distance, in a parallel manner, placing the sensitive sides one in front of the other, with the connectors oriented on the same side. The critical alignment of the unit will be signalled by the fast blinking of the green receiver LED.

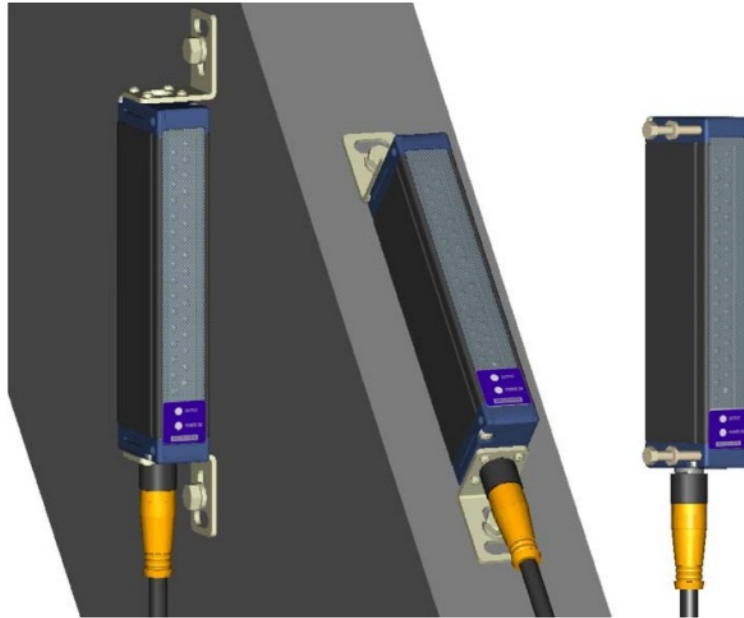

- Mount the receiver and emitter units on rigid supports which are not subject to strong vibrations, using specific fixing brackets and /or the holes present on the device lids.

### Precautions to respect when choosing and installing the device

- Choose the device according to the minimum object to detect and the maximum controlled area requested (= operating distance x controlled height);
- In agroindustrial applications, the compatibility of light grid housing material and any chemical agents used in the production process has to be verified with the assistance of the DATALOGIC technical sales support department;
- The **AREAscan™** light grids are NOT safety devices, and so MUST NOT be used in the safety control of the machines where installed.

Moreover the following points have to be considered:


- avoid installation near very intense and / or blinking light sources, in particular near to the receiver unit;
  - the presence of strong electromagnetic disturbances can condition the correct functioning of the device; this condition has to be carefully evaluated and checked with the DATALOGIC technical sales support department;
  - the presence of smoke, fog and suspended dust in the working environment can reduce the operating distance of the device;
  - strong and frequent temperature variations, with very low peak temperatures, can generate a thin condensation layer on the optics surfaces, compromising the correct functioning of the device;
  - reflecting surfaces near the luminous beam of the AREAscan™ device (above, under or lateral) can cause passive reflections able to compromise object detection inside the controlled area.
- if different devices have to be installed in adjacent areas, the emitter of one unit must not interfere with the

receiver of the other unit.


General information relative to object detection and measurement

For a correct object detection and / or measurement, the object has to pass completely through the controlled area; testing the correct detection before beginning the process is suggested.

CONNECTIONS

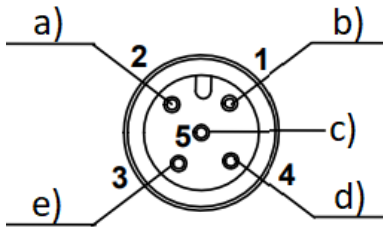

- a) ANALOGUE OUTPUT
- b) +24 Vdc
- c) SYNC (→ TX)
- d) SWITCHING OUTPUT
- e) 0 V

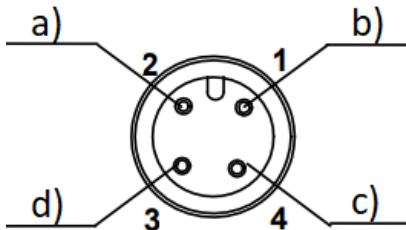


- a) NOT USED
- b) +24 Vdc
- c) SYNC (← RX)
- d) 0 V

<b>RECEIVER (RX):</b> M12 5-pole connector	1 – brown:	+24 Vdc
	2 – white:	Analogue output
	3 – blue:	0 V
	4 – black:	Switching output
	5 – grey:	SYNC
<b>EMITTER (TX):</b> M12 4-pole connector	1 – brown:	+24 Vdc
	2 – white:	Not used
	3 – blue:	0 V
	4 – black:	SYNC

- Shielded cables are not foreseen in the standard connection
- Ground connection of the two units is not necessary

- Use the same power supply for both units: for a correct functioning it's necessary that both units TX and RX have the same voltage reference 0V

#### FUNCTIONING AND PERFORMANCES

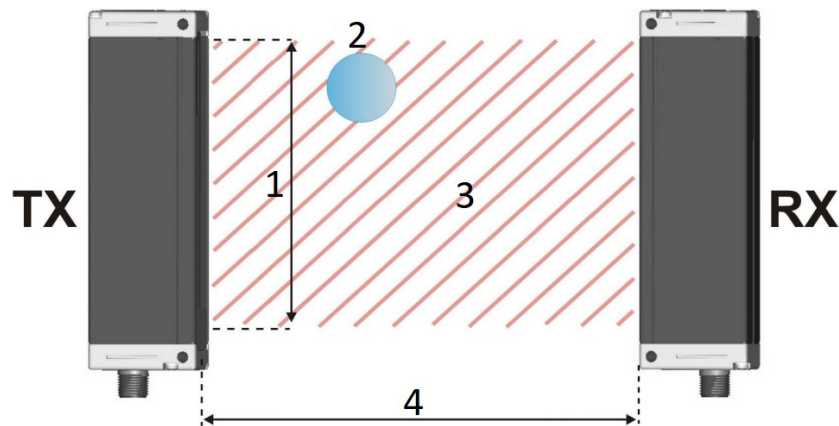

1. CONTROLLED HEIGHT
2. Object
3. CONTROLLED AREA
4. OPERATING DISTANCE (D)

The beam interruption due to the passage of an object inside the controlled area caused the closing of the switching output and the variation of the device analogue output signal. Small objects can be detected (reaching dimensions of only 5 mm) and determine linear measurements with a 3 mm error in best cases.

In particular, the switching output is always activated when at least one beam is obscured. The status variation is signaled by the yellow receiver LED that turns on.


The analogue output value (0-10 V) is proportional to the number of obscured beams (0V means that no beam is interrupted, 10V all beams interrupted)

The device does not require calibration; periodical checks of the resolution and / or measurement are however suggested.



The blinking of the green receiver LED (stability function) signals the critical alignment of the units and / or the functioning outside or near the maximum operating distance. In optimal conditions the LED remains on continuously.

The two units are synchronised via cable (SYNC wire); precarious connections or induced disturbances on the synchronism line can cause device malfunctioning or a temporary blocking.

The diagrams, given below, show the typical minimum resolution trend of each model, SR (standard resolution) and HR (high resolution), in according to the operating distance (D). For DS1-LD-SR-XXX-PV, the minimum resolution at a particular operating distance is to be intended with the trimmer calibrated near commutation threshold for that distance.

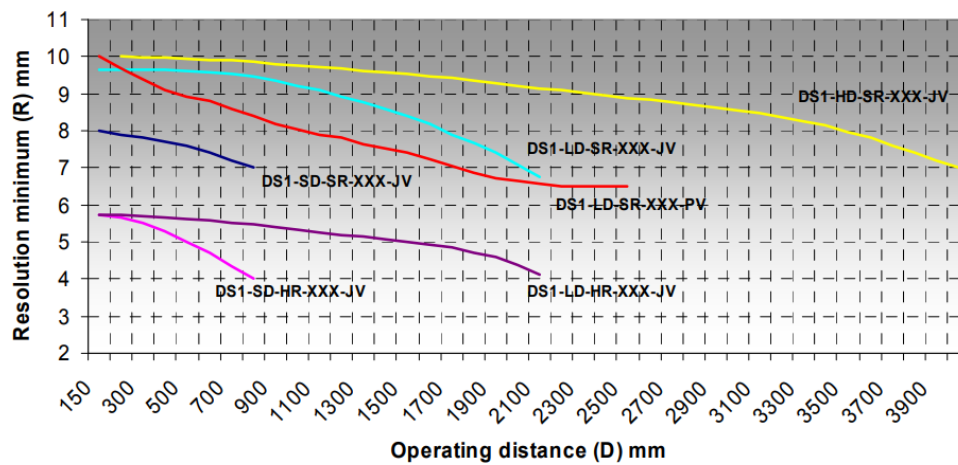

#### EMISSION POWER REGULATION (only DS1-LD-SR-XXX-PV)

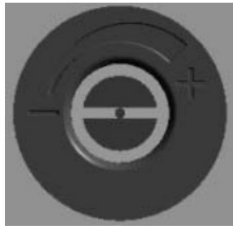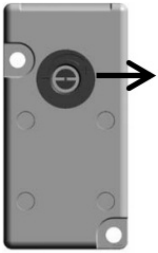

The emitter is equipped with a trimmer which let user change the emission power. The operating distance increases rotating the trimmer clockwise. The emission power reduction it is useful to decrease passive reflections when the maximum operating distance it is not required. Trimmer rotation is limited to 260°. Do not apply a torque greater than 35 Nmm.

Rotate the trimmer clockwise to the limit (maximum emission), then align RX and TX at the required operating distance (LED OUT off); decrease emission power rotating the trimmer counterclockwise until the output switches (LED OUT off) or the limit is reached (minimum emission); in the first case, rotate the trimmer clockwise until the output switches again and LED OUT remains off.



#### TECHNICAL DATA

Power supply:	24 Vdc $\pm$ 15%
Consumption on emitting unit (TX):	150 mA max.
Consumption on receiving unit (RX):	50 mA max without load
Switching output:	1 PNP output
Switching output current:	100 mA; short-circuit protection
Output saturation voltage:	$\leq$ 1.5 V at T=25 °C
Analogue output:	0-10V proportional to obscured beams
Analogue output current:	10 mA max. (1K $\Omega$ minimum resistive load)


Minimum resolution:	refer to “Specifications” table
Measurement precision:	± 3.5 mm (refer to “Specifications” table)
Response time:	1 ms (refer to “Specifications” table)
Indicators:	<b>RX:</b> OUT LED (yellow) / POWER ON LED (green) <b>TX:</b> POWER ON LED (green)
Operating temperature:	0...+ 50 °C
Storage temperature:	-25...+ 70 °C
Operating distance (typical values):	<b>DS1-SD-XX-XXX-JV:</b> 0.15...0.8 m <b>DS1-LD-XX-XXX-JV:</b> 0.15...2.1 m <b>DS1-LD-SR-XXX-PV:</b> 0.20...2.5 m <b>DS1-HD-XX-XXX-JV:</b> 0.20...4.0 m
Emission type:	Infrared (880 nm)
Vibrations:	0.5 mm amplitude, 10 ... 55 Hz frequency, for every axis (EN60068-2-6)
Shock resistance:	11 ms (30 G) 6 shock for every axis (EN60068-2-27)
Housing material:	Black electro-painted aluminium
Lens material:	PMMA
Mechanical protection:	IP65 (EN 60529)
Connections:	M12 4-pole connector for TX M12 5-pole connector for RX
Weight:	300 g. (DS1-xx-010-xx) 400 g. (DS1-xx-015-xx) 600 g. (DS1-xx-030-xx)

## DIAGNOSTICS



### RECEIVING UNIT (RX):

Signal	Status	Cause	Action
 OUT LED	ON	Switching output. Presence of the object in the controlled area.	
	OFF	Switching output. Controlled area free of objects.	
 POWER ON LED	ON	Optimal functioning	
	Fast blinking	Critical alignment of the unit or/and functioning closed to maximum operating distance.	
	Slow blinking	Wrong connections and/or malfunctioning.	<ul style="list-style-type: none"> <li>– Verify the output connections and any short-circuits</li> <li>– Switch OFF and switch ON the device.</li> <li>– If condition persists, contact Datalogic.</li> </ul>
	OFF	Device is not powered.	<ul style="list-style-type: none"> <li>– Verify the connections.</li> <li>– If condition persists, contact Datalogic.</li> </ul>


#### EMITTING UNIT (TX):

Signal	Status	Cause	Action
 POWER ON LED	ON	Normal functioning of emission unit.	
	Blinking	Unit malfunctioning	<ul style="list-style-type: none"> <li>– Switch OFF and switch ON the device.</li> <li>– If condition persists, contact Datalogic.</li> </ul>
	OFF	Absence of powering and/or synchronism with receiver	<ul style="list-style-type: none"> <li>– Verify the connections and right value of power supply.</li> <li>– If condition persists, contact Datalogic.</li> </ul>

#### DIMENSIONS

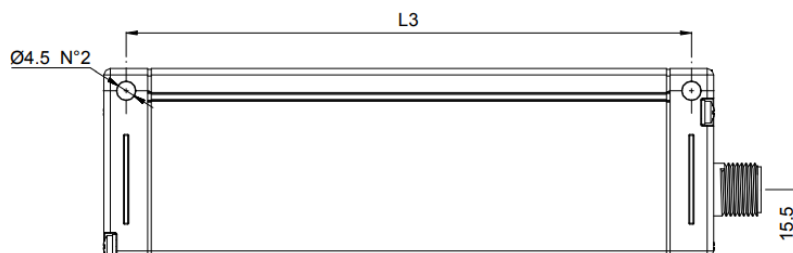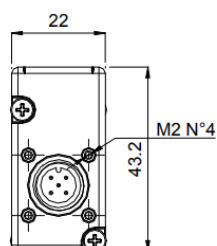


mm

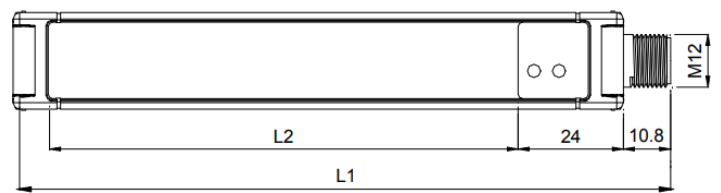

	L1	L2	L3
DS1-010	150.1	107	129.1
DS1-015	200.1	157	179.1
DS1-030	350.1	307	329.1

#### FIXING BRACKET

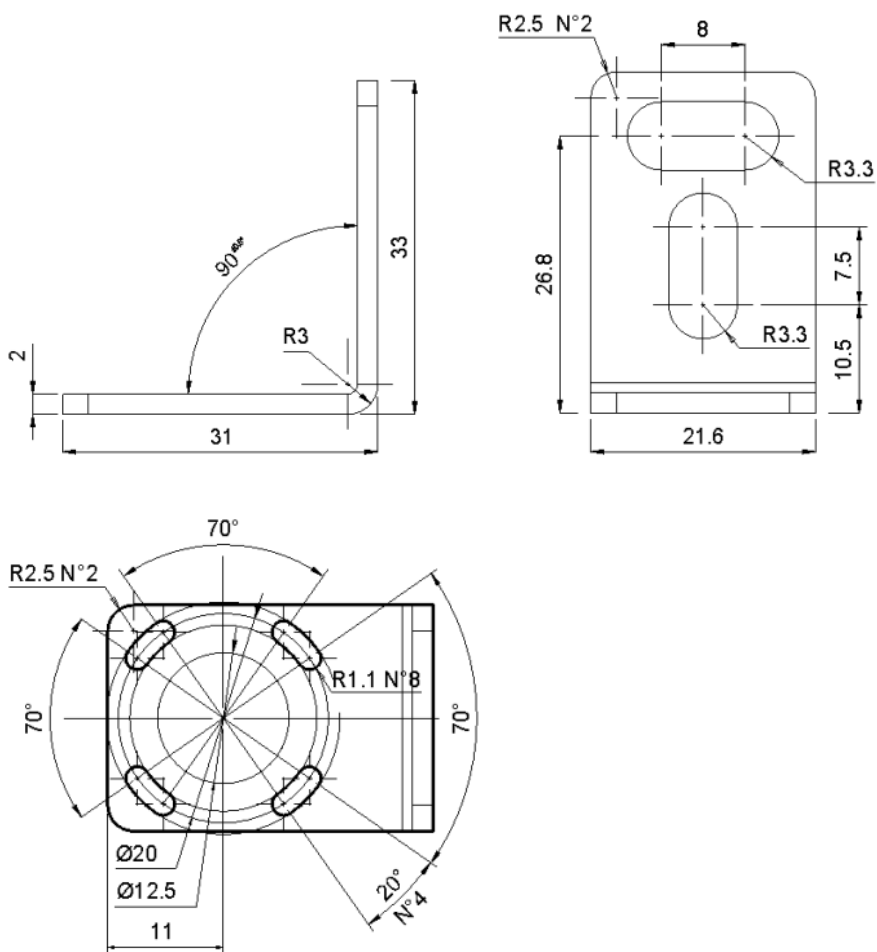

The fixing bracket is supplied with the product.

#### **SPECIFICATIONS**



<b>Model</b>	<b>Controlled height (mm)</b>	<b>N°. beam s</b>	<b>Minimum re solution (mm)</b>	<b>Output analogue sensitivity (V)</b>	<b>Measurement precision (mm)</b>	<b>Response time (ms)</b>	<b>Operating distance (m)</b>
<b>DS1-LD-HR -010-JV</b>	<b>100</b>	<b>32</b>	<b>5</b>	<b>0.31</b>	<b>± 3.5</b>	<b>2</b>	<b>0.15...2 .1</b>
<b>DS1-LD-HR -015-JV</b>	<b>150</b>	<b>48</b>	<b>5</b>	<b>0.21</b>	<b>± 3.5</b>	<b>2.75</b>	<b>0.15...2 .1</b>
<b>DS1-LD-SR -010-JV</b>	<b>100</b>	<b>16</b>	<b>7</b>	<b>0.63</b>	<b>± 7</b>	<b>1</b>	<b>0.15...2 .1</b>
<b>DS1-LD-SR -010-PV</b>	<b>100</b>	<b>16</b>	<b>7</b>	<b>0.63</b>	<b>± 7</b>	<b>1</b>	<b>0.20...2 .5</b>
<b>DS1-LD-SR -015-JV</b>	<b>150</b>	<b>24</b>	<b>7</b>	<b>0.42</b>	<b>± 7</b>	<b>1.5</b>	<b>0.15...2 .1</b>
<b>DS1-LD-SR -015-PV</b>	<b>150</b>	<b>24</b>	<b>7</b>	<b>0.42</b>	<b>± 7</b>	<b>1.5</b>	<b>0.20...2 .5</b>
<b>DS1-LD-SR -030-JV</b>	<b>300</b>	<b>48</b>	<b>7</b>	<b>0.21</b>	<b>± 7</b>	<b>2.75</b>	<b>0.15...2 .1</b>
<b>DS1-LD-SR -030-PV</b>	<b>300</b>	<b>48</b>	<b>7</b>	<b>0.21</b>	<b>± 7</b>	<b>2.75</b>	<b>0.20...2 .5</b>
<b>DS1-SD-SR -010-JV</b>	<b>100</b>	<b>16</b>	<b>7</b>	<b>0.63</b>	<b>± 7</b>	<b>1</b>	<b>0.15...0 .8</b>
<b>DS1-SD-SR -015-JV</b>	<b>150</b>	<b>24</b>	<b>7</b>	<b>0.42</b>	<b>± 6</b>	<b>1.5</b>	<b>0.15...0 .8</b>
<b>DS1-SD-SR -030-JV</b>	<b>300</b>	<b>48</b>	<b>7</b>	<b>0.21</b>	<b>± 7</b>	<b>2.75</b>	<b>0.15...0 .8</b>
<b>DS1-SD-HR -010-JV</b>	<b>100</b>	<b>32</b>	<b>4</b>	<b>0.31</b>	<b>± 3</b>	<b>2</b>	<b>0.15...0 .8</b>

<b>DS1-SD-HR -015-JV</b>	<b>150</b>	<b>48</b>	<b>4</b>	<b>0.21</b>	<b>± 3</b>	<b>2.75</b>	<b>0.15...0 .8</b>
<b>DS1-HD-SR -010-JV</b>	<b>100</b>	<b>16</b>	<b>7</b>	<b>0.63</b>	<b>± 7</b>	<b>1</b>	<b>0.20...4</b>
<b>DS1-HD-SR -015-JV</b>	<b>150</b>	<b>24</b>	<b>7</b>	<b>0.42</b>	<b>± 7</b>	<b>1.5</b>	<b>0.20...4</b>
<b>DS1-HD-SR -030-JV</b>	<b>300</b>	<b>48</b>	<b>7</b>	<b>0.21</b>	<b>± 7</b>	<b>2.75</b>	<b>0.20...4</b>

### Datalogic S.r.l.

Via S. Vitalino 13 – 40012 Calderara di Reno – Italy

Tel: +39 051 3147011 – Fax: +39 051 3147205 – [www.datalogic.com](http://www.datalogic.com)

Helpful links at [www.datalogic.com](http://www.datalogic.com): **Contact Us, Terms and Conditions, Support.**

The warranty period for this product is 36 months. See General Terms and Conditions of Sales for further details.




Under current Italian and European laws, Datalogic is not obliged to take care of product disposal at the end of its life. Datalogic recommends disposing of the product in compliance with local laws or contacting authorised waste collection centres.

© 2009 – 2017 Datalogic S.p.A. and/or its affiliates ♦ ALL RIGHTS RESERVED. ♦ Without limiting the rights under copyright, no part of this documentation may be reproduced, stored in or introduced into a retrieval system, or transmitted in any form or by any means, or for any purpose, without the express written permission of Datalogic S.p.A. and/or its affiliates. Datalogic and the Datalogic logo are registered trademarks of Datalogic S.p.A. in many countries, including the U.S.A. and the E.U. All other trademarks and brands are property of their respective owners. Datalogic reserves the right to make modifications and improvements without prior notification.

**826003144 Rev.E**

## Documents / Resources

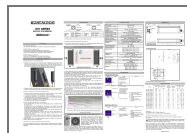

**[DATALOGIC DS1-LD-SR-015-JV Areascan Light Grids](#)** [pdf] Instruction Manual  
DS1-LD-SR-015-JV Areascan Light Grids, DS1-LD-SR-015-JV, Areascan Light Grids, Light Grids, Grids

## References

- **[Datalogic | Automatic Data Capture and Industrial Automation - Datalogic](#)**
- **[Search - Manual-Hub.com](#)**