



Daviteq WS433-MA Wireless Current Input User Guide

[Home](#) » [daviteq](#) » Daviteq WS433-MA Wireless Current Input User Guide 

Contents

- [1 Daviteq WS433-MA Wireless Current Input](#)
- [2 Product Information](#)
- [3 Functions Change Log](#)
- [4 Introduction](#)
- [5 Specification](#)
- [6 Typical Applications](#)
- [7 Operation Principle](#)
 - [7.1 Add sensors node to Co-ordinator WS433-CL](#)
 - [7.2 Configuration](#)
- [8 Installation](#)
 - [8.1 IO Wiring](#)
 - [8.2 Battery installation](#)
- [9 Troubleshooting](#)
- [10 Support contacts](#)
- [11 Documents / Resources](#)
 - [11.1 References](#)



Daviteq WS433-MA Wireless Current Input



Product Information

- **Product Name:** Wireless Sensor 0-20mA Current Input WS433-MA
- **SKU:** WS433-MA
- **Hardware Version:** 2.5
- **Firmware Version:** 5.0
- **Item Codes:** WS433-MA-21, WS433-MA-31

Introduction

The Wireless Sensor 0-20mA Current Input WS433-MA is a device used to measure 0-20mA DC current from process instruments such as pressure transmitters, temperature transmitters, level transmitters, flow meters, and analyzers. It operates at a very low voltage drop and can be configured remotely from the Globiots platform or via Modbus RTU software. The wireless module is powered by a single AA battery and can last up to 10 years.

Specifications

- **Measuring Range:** 0-20mA DC current

- **Accuracy:** Not specified
- **Resolution:** Not specified
- **Temperature Drift:** Not specified
- **Electrical Connection:** M12-Male Connector
- **Optional Accessories:** Not specified
- **Data Speed:** Not specified
- **Transmission Distance (LOS):** Not specified
- **Antenna:** Not specified
- **Battery:** AA 1.5VDC
- **Frequency Band:** Not specified
- **Receiving Sensitivity:** Not specified
- **International Compliance:** Not specified
- **Security Standard:** Not specified
- **Operating Temperature of PCB:** Not specified
- **Housing:** IP67

This document is applied for the following products

SKU	WS433-MA	HW Ver.	2.5	FW Ver.	5.0
Item Code	WS433-MA-21	Wireless Sensor 1-channel 0-20mA DC current input, IP67, battery AA 1.5VDC, 15VDC Output for Instrument power supply, M12-Male Connector			
	WS433-MA-31	Wireless Sensor 1-channel 0-20mA DC current input, IP67, battery AA 1.5VDC, 24VDC Output for Instrument power supply, M12-Male Connector			

Functions Change Log

HW Ver.	FW Ver.	Release Date	Functions Change
2.5	5.0	DEC-2019	Change RF data rate by button

Introduction

0-20mA CURRENT INPUT WIRELESS SENSOR WS433-MA



WS433-MA-H1.PNG

Wireless sensor with one channel to measure 0-20mA DC current from Process instruments like Pressure transmitter, Temperature transmitter, Level transmitter, Flow meters, Analyzers... at very low voltage drop. It is configured the operation parameters like data sending interval, health check cycle...remotely from Globiots platform or via ModbusRTU software. The wireless module can last up to 10 years with a single AA battery.

Specification

Measuring range	0 .. 20mA
Accuracy	0.05% of span
Resolution	1/3000
Temperature drift	< 50ppm
Electrical connection	shielded cable 0.5m length with PG9 cable gland
Optional accessories	304SS Adapter PG9/male 1/2"NPT or PG13.5 or M20 to allow direct mounting on Process instruments or electrical panel
Data speed	Up to 50kbps
Transmission distance, LOS	500m
Antenna	Internal Antenna, 3 dbi
Battery	01 x AA 1.5VDC, up to 10-year operation, depends on configuration
Frequency Band	ISM 433Mhz, Sub-GHz technology from Texas Instrument, USA
Receiving Sensitivity	-110dBm at 50kbps
International Compliance	ETSI EN 300 220, EN 303 204 (Europe) FCC CFR47 Part15 (US), ARIB STD-T108 (Japan)
Security Standard	AES-128
Operating temperature of PCB	-40oC..+60oC (with AA L91 Energizer)
Housing	Poly-carbonate, IP67

Installation method	L-type bracket SUS304 , by M4 screws or double-sided 3M tape (included)
Product dimensions	125x30x30mm
Net weight (without battery)	< 100g
Box dimension	190x50x50mm
Gross weight	140g

Typical Applications


WIRELESS SENSOR CURRENT INPUT CONNECT WITH 4-20mA INSTRUMENTS




CONNECT WIRELESS SENSORS TO any PLC or HMI



CONNECT WIRELESS SENSORS TO any SCADA or 10T Platform

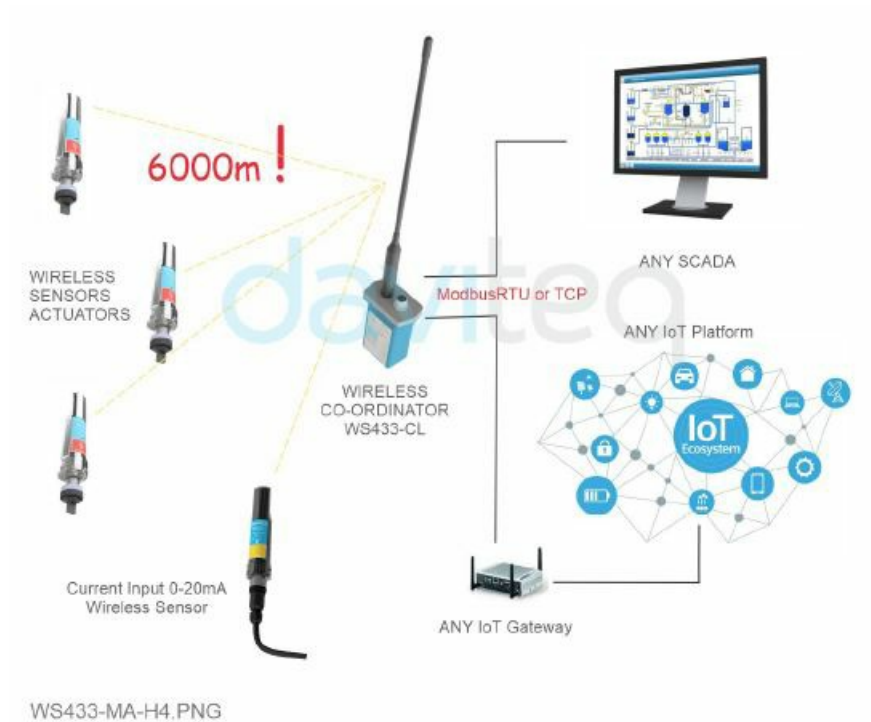


CONNECT WIRELESS SENSORS TO GLOBIOTS Platform

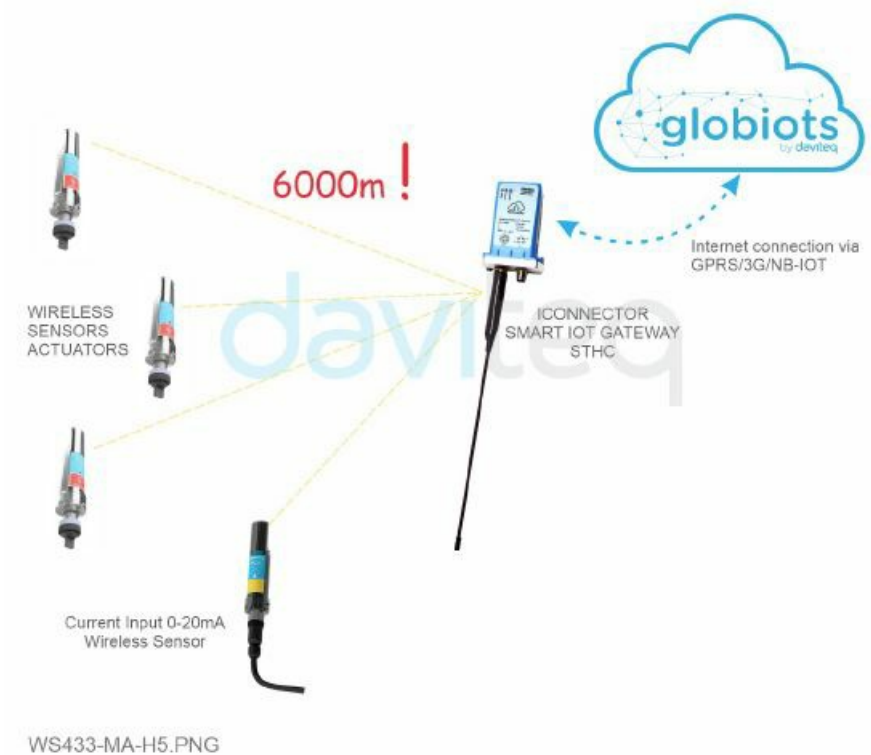


DIMENSION DRAWINGS OF WS433-MA SENSOR

(Unit: mm)

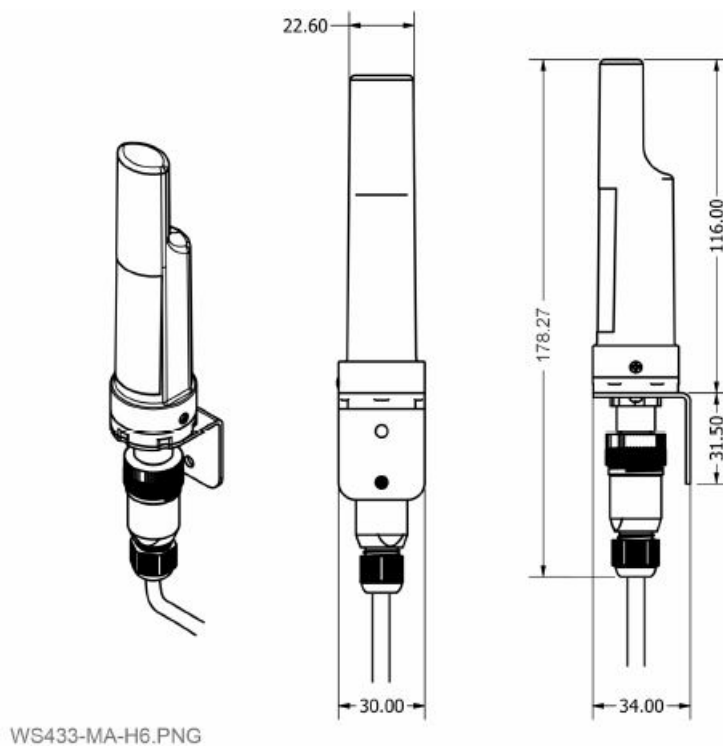

WS433-MA-H6.PNG

CARTON BOX OF WIRELESS SENSOR

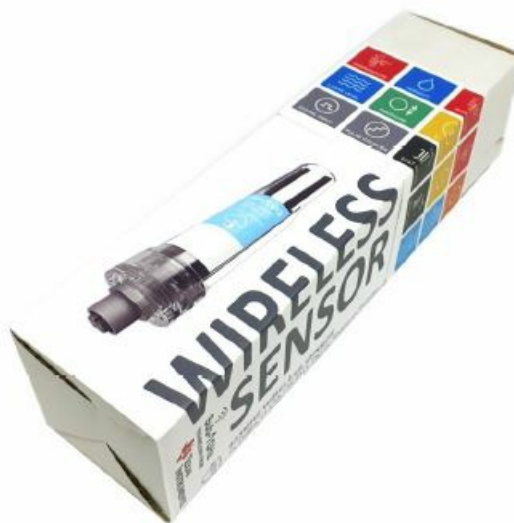

SIZE: 50x50X190MM

WS433-MA-H7.PNG

Operation Principle

Process of measurement

When the sensor sampling time interval is reached, for example 2 minutes, the node will wake up and switch ON the power supply to supply the energy to external sensor to start the measurement. Depends on the type and characteristic of external sensor, the sensor will take a certain time to finish the measurement.

For example: the measurement time is 200mS, after this time, the node will read the value of sensor using I2C, node will switch OFF power supply to external sensor to save energy.

Once reading the sensor value, the raw data is X, it can be scaled to any engineering value by the following formula:

- $Y = aX + b$

Where

- **X**: the raw value from sensor
- **Y**: the calculated value for parameter 1's value or parameter 2's value
- **a**: constant (default value is 1)
- **b**: constant (default value is 0)

So, if there is no user setting for a and b ==> $Y = X$
The Y value will be compared with Lo and Hi threshold.

For example 1: We need to calibrate the mA sensor at 4-20mA. When putting the sensor at 4mA and 20mA, we will have:

The raw X1 ADC value measured at 4 mA (Y1 value) CO2 is 605, and the value of X2 ADC value at 20 mA (Y2 value) is 3005. Then:

$$Y1 = a.X1 + b \rightarrow 4 = a.605 + b$$

$$Y2 = a.X2 + b \rightarrow 20 = a.3005 + b$$

- Use the offline configuration tool to configure sensor. Write in the sensor the parameters a 1 and b1.

Status bytes of sensor Node

Hi-Byte is error code

Error code	Description
0	No error
1	Just exchange the sensor module but node has not been reset ==> please take out the battery for 20s then install it again to reset node to recognize the new sensor module
2	Error, sensor port M12F shorted to GND
3	Error, sensor port M12F shorted to Vcc
4	Error, sensor port M12F shorted each other

Lo-Byte is sensor type

Error code	Description
0	No error
1	Just exchange the sensor module but node has not been reset ==> please take out the battery for 20s then install it again to reset node to recognize the new sensor module
2	Error, sensor port M12F shorted to GND
3	Error, sensor port M12F shorted to Vcc
4	Error, sensor port M12F shorted each other

Info: Refer to Section 5.4 for more details.

Add sensors node to Co-ordinator WS433-CL


Add Sensor Node ID automatically

CONNECT CO-ORDINATOR TO RS485 - CONFIGURATION
CABLE via M12 CONNECTOR



WS433-CL-H12.PNG

PIN ASSIGNMENT & WIRING

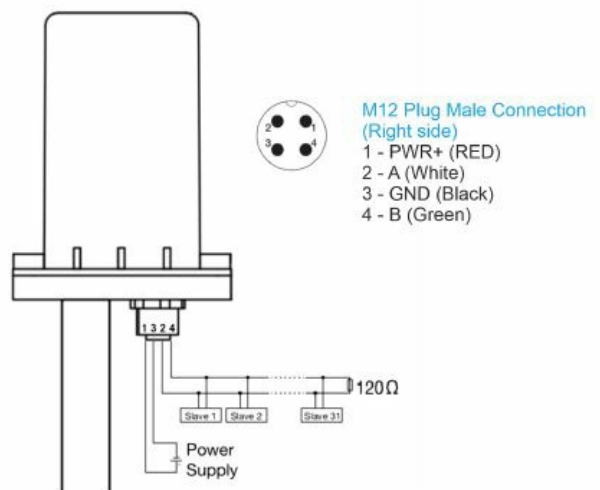

WS433-CL-H18.PNG

Step 1: After supplying power the Co-ordinator via M12 connector, the Node ID must be registered within the first 5 minutes, up to 40 WS.

Step 2: Bring the wireless sensor closer to the Co-ordinator's antenna then take off the wireless sensor battery, wait for 5s then insert the battery again. If:

- Buzzer plays 1 peep sound, LED blink 1 time, that means registering Node ID on Co-ordinators successfully.
- Buzzer plays 2 peep sounds, LED blink 2 times, that this Node ID is already registered.

If you do not hear the "Peep" sound, please disconnect the power the co-ordinator, wait a few minute and try again.

Node id added in this way will be written to the smallest node_id_n address which is = 0.

Set Rssi_threshold (see RF MODE CONFIG (in the Modbus Memmap of WS433-CL), default -25): The case if

Coordinator is on high position and need to add node sensor. We set the sensor as close as possible and set the Rssi_threshold to -80, -90 or -100 to increase the sensitivity to allow WS433-CL-04 can add sensors at a longer distance. After that, perform 2 steps of adding sensors and then reset Rssi_threshold = -25.

Enb_auto_add_sensors configuration (see RF MODE CONFIG (in the Modbus Memmap of WS433-CL)): In case you do not want to turn off the power WS433-CL, you can set Enb_auto_add_sensors = 1, this way we have 5 minutes to add nodes (add up to 40 nodes) . After 5 minutes Enb_auto_add_sensors will automatically = 0.

Memmap registers

- You can download Modbus Memmap of WS433-CL with the following link: <https://filerun.daviteq.com/wl/?id=WBbGm89AToHWyvlyMOc780N1KmjfUr3Y>

Add sensor node into WS433-CL-04 (1) through intermediate WS433-CL-04 (2) and Modbus

In case the sensor need to be added to WS433-CL-04 (1) has been installed in a high position, the sensor cannot be brought close to WS433-CL-04 (1). For more details: <http://www.daviteq.com/en/manuals/books/long-range-wireless-co-ordinator-ws433-cl/page/user-guidefor-long-range-wireless-co-ordinator-ws433-cl>

Button Function

- Open the cover of sensor then use the push button to set the data transfer speed for the first 30 seconds when the battery is first installed, after 30 seconds the push button function does not work.
- Press and hold the button for 2 seconds => LED blinks once => Release the button to set Data rate RF 50kbps
- Press and hold the button for 5 seconds => LED blinks twice => Release the button to set Data rate RF 625bps
- Press and hold the button for 10 seconds => LED blinks 3 times => Release the button to reset RF parameters (frequency, RF output power, data rate), if held for more than 30 seconds then the button function does not work.

Reset default WS433

- **Frequency:** 433.92 MHz
- **RF transmit power:** 15 dBm
- **RF data rate:** 50 kbps

Configuration

First, you need to prepare



Computer



RS485
Configuration Cable



Power Adapter 12-24VDC

WS433-CL-H9.PNG

- Num of Node will indicate the number of nodes managed by WS433-CL.
- Every time a node is added, the Num of Node will increase by 1.
- Every time a node is deleted, the Num of Node is reduced by 1.
- Writing Num of Node = 0 will delete all 40 node ids to 0.
- If you want to delete a node id, then write it = 0 with the Write function is 16 and the Read function is 3.

Step 1: Connect Antenna, RS485 – configuration cable and power supply co-ordinator

INSTALL ANTENNA



WS433-CL-H10.PNG

CONNECT CO-ORDINATOR TO RS485 - CONFIGURATION
CABLE via M12 CONNECTOR



WS433-CL-H12.PNG

SUPPLY POWER 12-24VDC



WS433-CL-H11.PNG

CONNECT RS485 - CONFIGURATION
TO COMPUTER via USB




WS433-CL-H13.PNG

Step 2: Open Modbus tool on PC


- You can download Daviteq Modbus Configuration Tool with the following link: <https://filerun.daviteq.com/wl/?id=qK0PGNbY1g1fuxTqbFW9SXtEvCw7bpc6>

Template File: <https://filerun.daviteq.com/wl/?id=hgrjOg3wwvyrvAZ54p8iZiFpDyXTcnec>


How to use the Modbus configuration software

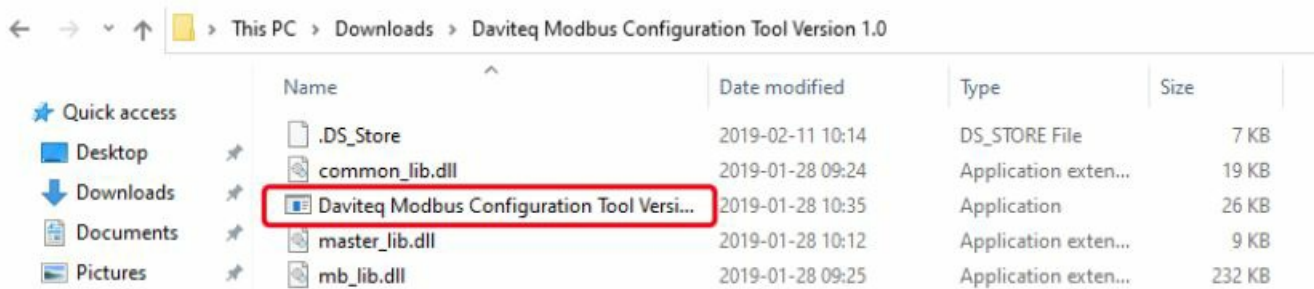

- Unzip file and run file application “Daviteq Modbus Configuration Tool Version”
- Choose COM Port (the Port which is USB cable plugged in)

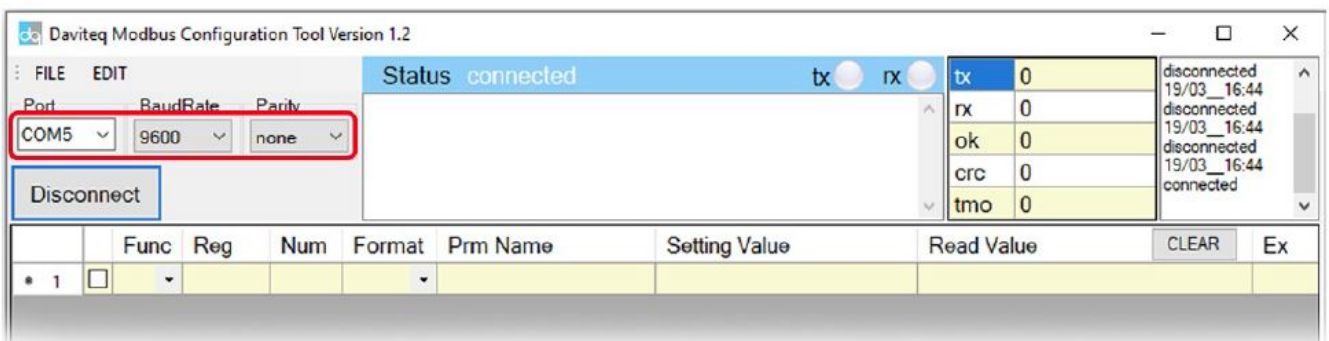

- Set the BaudRate: 9600, Parity: none

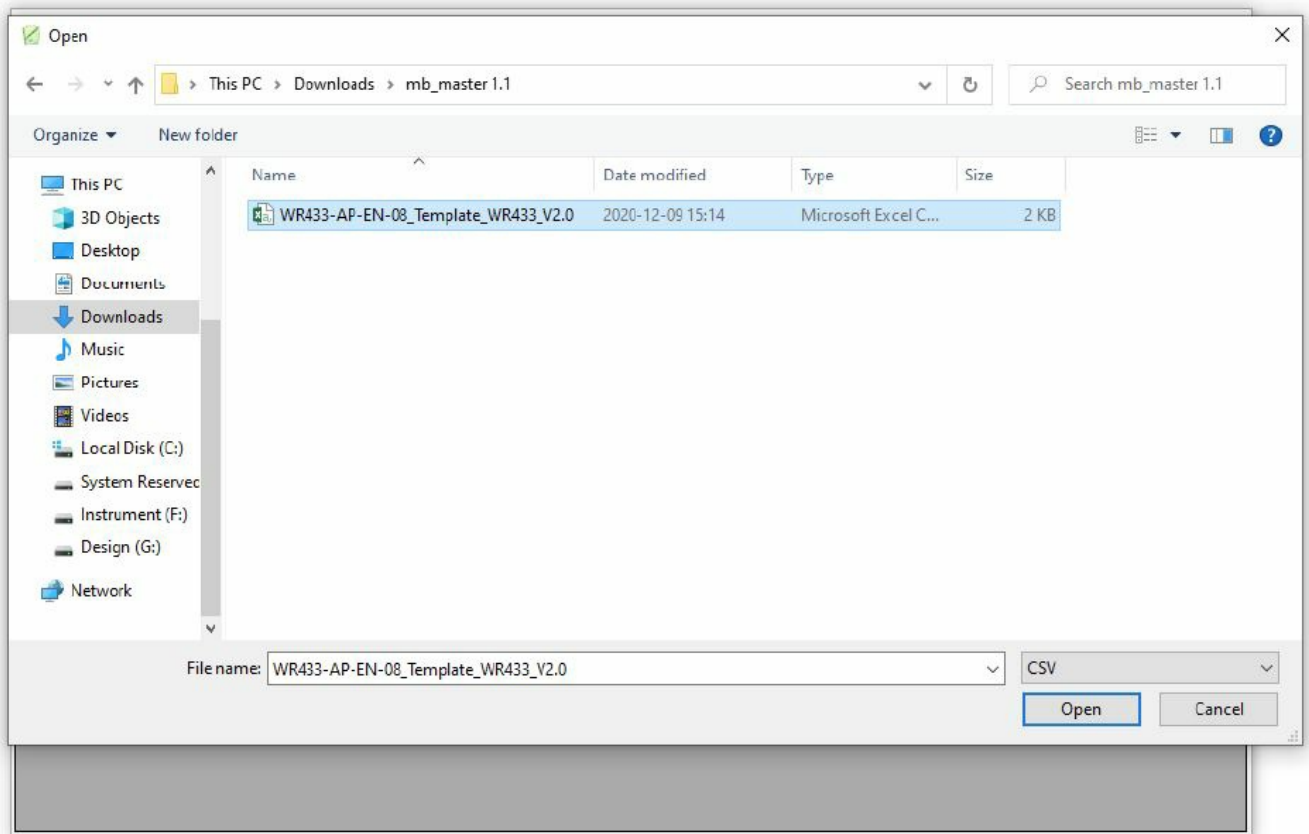

- Click “ Connect “ until the Status displays “disconnected” to “connected“. It means the WS433-CL-04 is being connected with computer;
- Next, we need to import the configuration file for WS433-CL-04 by importing the csv file: Go to MENUF: ILE / Import New / => select the template file.
- **Step 3:** Configure parameters of the sensor.

Memmap resgisters

- You can download Modbus Memmap of WS433-CL with the following link: <https://filerun.daviteq.com/wl/?id=BKEaUzdArkoc0Hc7nfpRShdPVTovrQZ>

In the memmap file, refer to the Memmap of WS433-AI sheet to configure the sensor’s operating parameters accordingly.

Info: The reference memmap addresses are based on the order of the sensors added in the Memmap file above

Below are examples of some typical sensor parameters:

Function Code (Read)	# of register	Byte Size	Description	Value Range	Default	Format	Property	Explanation
4	1	2	%Battery of sensor Node	10,30,60,99		uint16	Read	Battery level, only 04 levels: 10 %, 30%, 60% and 99% (full). When 10 % ==> Need to replace the battery
4	2	4	Analog value 1 of sensor Node (parameter 1)			float	Read	Value from Analog input sensor. This value is parameter 1 of a wireless sensor node

4	2	4	Value of parameter 2 of sensor Node			float	Read	Same value as parameter 1
3	1	2	Data status of Node	0-9, 99		byte	Read	0-9: Interval updated data 99: Disconnected
3	1	2	RF Signal strength of Node	0-4		byte	Read	From 0 to 4 with 0 is being lost connection RF and 4 is the strongest RF

3	1	2	Cycle_wakeup	1-3600(s)	120	unit 16	Read/Write	<p>Every time interval of Cycle_wakeup, sensor node would ONLY send data to the co-ordinator if the new measured value was changed more than the Delta value of the last measured value.</p> <p>Default Cycle_wakeup is 120 seconds</p>
3	1	2	Cycle_healthsta	60-7200(s)	600	unit 16	Read/Write	<p>Every time interval of the Cycle_healthsta sensor node will absolutely send data to the co-ordinator regardless any condition</p>

3	2	4	Radio frequency	433.05- 434.79, 433 Mhz	433.92	float	Read/Write	Configure the operating frequency of wireless sensor by Coordinator, which should be configured from 433.05- 434.79 MHz, only for advanced users
---	---	---	-----------------	-------------------------	--------	-------	------------	--

Installation

Mounting bracket installation

- Locate the place where the wireless sensor is mounted, from that locate the position to mount the bracket;
- Placing the wireless module on bracket and secure it by 02 x M2 screws (supplied in accessory bag)

Note: The bracket can be mounted on the wireless module in both direction, upward or downward

The mounting bracket is made from hard metallic material. The following steps are for mounting this bracket;




Installation location

Wireless sensor utilize the ultra-low power 433Mhz RF signal to transmit/receive data with Wireless co-ordinator. To maximize the distance of transmission, the ideal condition is Line-of-sight (LOS) between the Wireless sensor and Gateway. In real life, there may be no LOS condition. However, the two modules still communicate each other,

but the distance will be reduced significantly. The bracket will be fixed on the wall or material with a flat surface with double-sided 3M tape (included in the accessory bag in a carton box) or 2 x M4 screws (supplied by the customer);

Info: When using 3M double sided tape, please install the sensor at a height of 2 meters or less.

ATTENTION

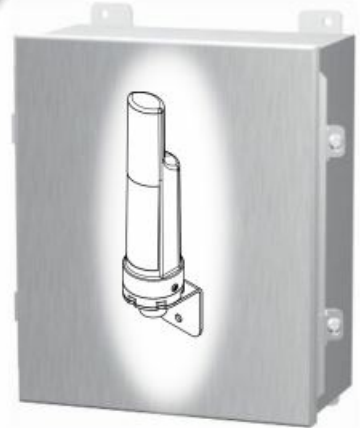


DO NOT install the Wireless sensor or its antenna inside a completed metallic box or housing, because the RF signal can not pass through the metallic wall. The housing is made from Non-metallic materials like plastic, glass, wood, leather, concrete, cement...is acceptable.

IO Wiring

Warning

- DO NOT CONNECT AN EXTERNAL POWER SUPPLY TO THE PWR + WIRE OF THE WIRELESS SENSOR !!!
- SUPPLYING AN EXTERNAL POWER SUPPLY TO THE SENSOR'S PWR + LINE CAN MAKE SERIOUS DAMAGE !!!

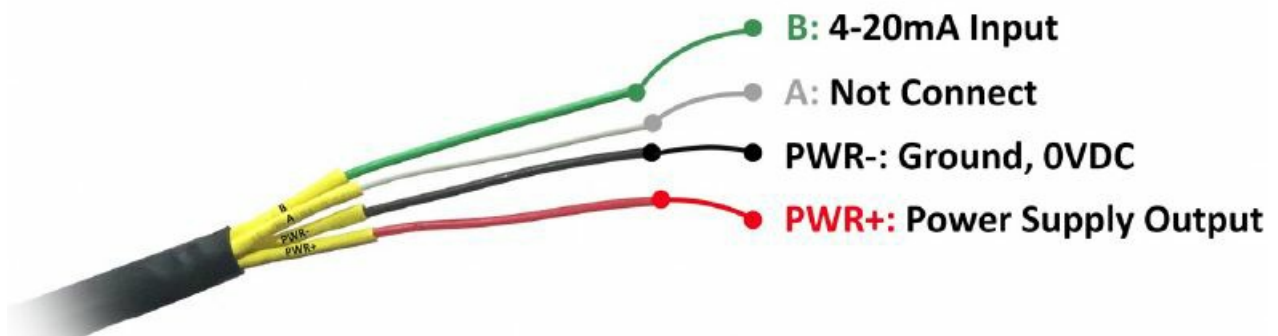


- **Red:** Power Supply Output

- **Black:** Ground (GND)
- **Green:** 4-20mA Input
- **White:** Not connect


Warning: Based on the sensor version there will be corresponding Output Power Supply:

- WS433-MA-21: 15VDC
- WS433-MA-31: 24VDC

CASE 1 : WORK WITH LOOP POWERED SENSOR

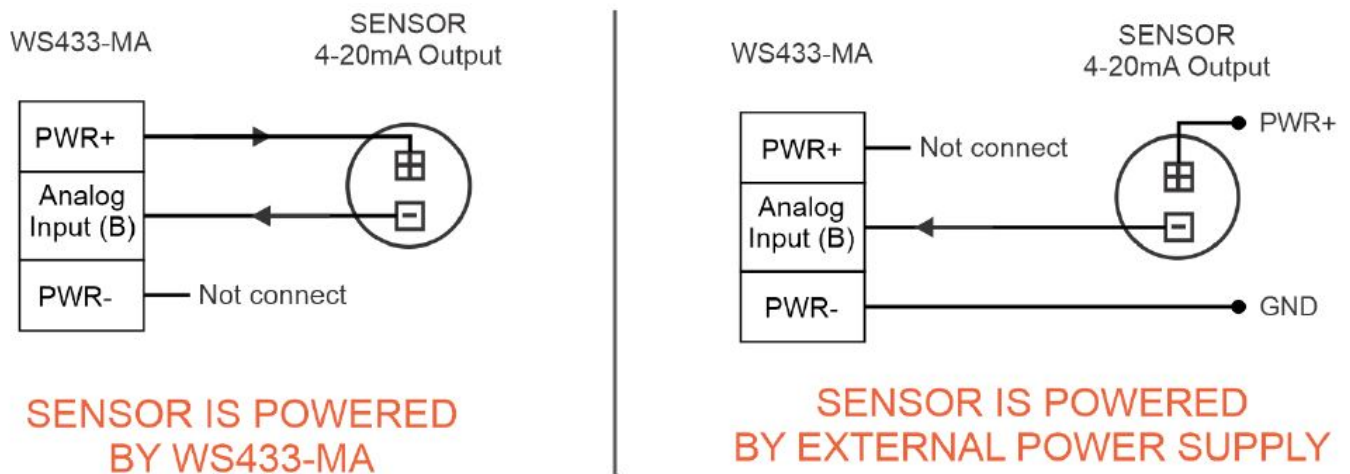

CASE 2: WORK WITH NON – LOOP POWERED SENSOR

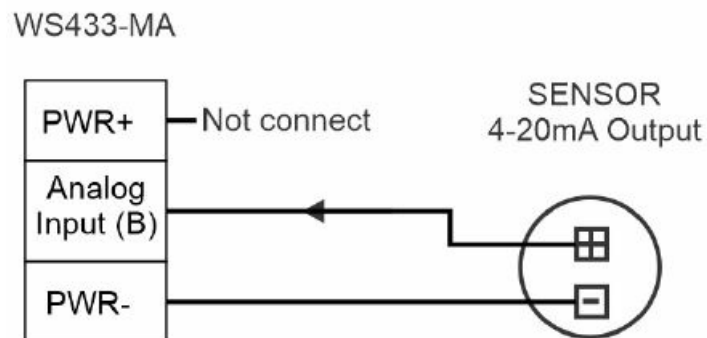

Warning: The signal cable from sensor should be protected by corrugated hose or the $\Phi 16$ plastic tube, keep the cable avoid high temperature areas.

Battery installation

Steps for battery installation:



- **Step 1:** Using Philips screw driver to unscrew M2 screw at the side of housing.



- **Step 2:** Pull out the cover then insert the AA 1.5VDC battery, please take note the poles of the battery.
 - **ATTENTION:** Because of O-ring, it requires to have much pulling force at the beginning, therefore please do it carefully to avoid the damage of circuit board which is very thin (1.00mm);
 - REVERSED POLARITY OF BATTERIES IN 10 SECONDS CAN DAMAGE THE SENSOR CIRCUIT!

RECOMMENDED BATTERIES FOR WIRELESS SENSOR WS433

E91 AA Alkaline battery



-18 .. + 60 oC working temperature

10-year shelf life

3000 mAh Capacity

Price: 1X

L91 AA Lithium battery



-40 .. + 60 oC working temperature

20-year shelf life

3500 mAh Capacity

Price: 3.5X

WS433-MA-H8.PNG

- **Step 3:** Insert the top plastic housing and locking by M2 screw



Troubleshooting

No.	Phenomena	Reason	Solutions
1	The status LED of wireless sensor doesn't light up	No power supply Configuration function of the LED is not correct	Check that the battery is empty or not installed correctly Reconfigure the led light function exactly as instructed

2	Wireless sensor not connected to co-ordinator	No power supply The configuration function of the RF data rate is incorrect	Check that the battery is empty or not installed correctly Reconfigure the RF data rate with the button according to the instructions
---	---	--	--

Support contacts

Manufacturer

Daviteq Technologies Inc

- No.11 Street 2G, Nam Hung Vuong Res., An Lac Ward, Binh Tan Dist., Ho Chi Minh City, Vietnam.
- **Tel:** +84-28-6268.2523/4 (ext.122)
- **Email:** info@daviteq.com
- www.daviteq.com

Distributor in Australia and New Zealand

- Templogger Pty Ltd
- **Tel:** 1800 LOGGER
- **Email:** contact@templogger.net

Revision #31

Created Sat, Mar 21, 2020 1:29 AM by Kiệt Anh Nguyễn

Updated Tue, Jan 31, 2023 2:35 AM by Phi Hoang Tran

Documents / Resources

[Daviteq WS433-MA Wireless Current Input \[pdf\] User Guide](#)

WS433-MA-21, WS433-MA-31, WS433-MA Wireless Current Input, WS433-MA, Wireless Current Input, Current Input, Input

References

- [Daviteq – Nhà sản xuất cảm biến đo lường và hệ thống IoT](#)
- [USER GUIDE FOR LONG RA... | Online Product Manuals & Datasheets](#)
- [daviteq.com/en/manuals/uploads/images/gallery/2020-02/1HktMXx8TuYVTcmr-WS433-CL-H12.png](#)
- [daviteq.com/en/manuals/uploads/images/gallery/2020-02/5MKIKqdRSf25I4UF-WS433-M12F-H16.png](#)
- [daviteq.com/en/manuals/uploads/images/gallery/2020-02/FPhnePNbHSMNDEtU-WS433-M12F-H13.png](#)
- [daviteq.com/en/manuals/uploads/images/gallery/2020-02/IIZbmOcyKKY1KpaH-WS433-M12F-H15.png](#)
- [daviteq.com/en/manuals/uploads/images/gallery/2020-02/lgZGLBZZIOgqfNWb-WS433-CL-H13.png](#)
- [daviteq.com/en/manuals/uploads/images/gallery/2020-02/MNC4PF5ttHiFe0V5-WS433-M12F-H12.png](#)
- [daviteq.com/en/manuals/uploads/images/gallery/2020-02/NDiNIDVqvX5g3MKU-WS433-CL-H9.png](#)
- [daviteq.com/en/manuals/uploads/images/gallery/2020-02/PcJk1cj4hwaudzDi-WS433-M12F-H11.png](#)
- [daviteq.com/en/manuals/uploads/images/gallery/2020-02/PEsu8shSFsJ5apuE-WS433-CL-H11.png](#)
- [daviteq.com/en/manuals/uploads/images/gallery/2020-02/ppj3ObodTb2dwXUs-WS433-CL-H10.png](#)
- [daviteq.com/en/manuals/uploads/images/gallery/2020-02/XDbJrESvc8f24raJ-WS433-M12F-H14.png](#)
- [daviteq.com/en/manuals/uploads/images/gallery/2020-02/yZSwCaA7aNAuEFik-WS433-CL-H18.png](#)
- [daviteq.com/en/manuals/uploads/images/gallery/2020-03/GPnUDAmLmFZFpLTk-WS433-CL-H15.png](#)
- [User Guide for Modbus ... | Online Product Manuals & Datasheets](#)
- [daviteq.com/en/manuals/uploads/images/gallery/2020-06/1tNNET2vHkT8A7Qd-logo-01.png](#)
- [daviteq.com/en/manuals/uploads/images/gallery/2020-10/DlpSk1ixXtb7rrWA-1.png](#)
- [daviteq.com/en/manuals/uploads/images/gallery/2020-11/7w0LQPYFnnUQjieH-WS433-MA-H1.png](#)
- [daviteq.com/en/manuals/uploads/images/gallery/2020-11/AD1stugGa9D1Q9Ps-WS433-MA-H3.png](#)
- [daviteq.com/en/manuals/uploads/images/gallery/2020-11/EfbgA5EasuZkEPTw-WS433-MA-H4.png](#)
- [daviteq.com/en/manuals/uploads/images/gallery/2020-11/efs9aW81YXLtI9tk-WS433-MA-H2.png](#)
- [daviteq.com/en/manuals/uploads/images/gallery/2020-11/IUQ6Yg5rK3lle9Er-WS433-MA-H9.png](#)
- [daviteq.com/en/manuals/uploads/images/gallery/2020-11/IUVcliCvtFcKc4Ob-WS433-MA-H8.png](#)
- [daviteq.com/en/manuals/uploads/images/gallery/2020-11/jwSMPe2Rgq7sjlMu-WS433-MA-H5.png](#)
- [daviteq.com/en/manuals/uploads/images/gallery/2020-11/SF1daTpuM7G1r6dV-WS433-MA-H6.png](#)
- [daviteq.com/en/manuals/uploads/images/gallery/2020-11/sRj37RILgq5UoY3C-WS433-MA-H7.png](#)
- [daviteq.com/en/manuals/uploads/images/gallery/2020-11/ugnxMLWkXX68VVP5-WS433-MA-H10.png](#)
- [daviteq.com/en/manuals/uploads/images/gallery/2020-12/WImHbpAYLqe2y12t-image-1607503255920.png](#)
- [daviteq.com/en/manuals/uploads/images/gallery/2023-01/FzLbrRMRDfHkLjFt-equation.png](#)
- [Online Product Manuals & Datasheets](#)
- [filerun.daviteq.com/wl/?id=BKEaUzdArkoc0Hc7nfpRShdPVTToVrqQZ](#)

- filerun.daviteq.com/wl/?id=hgrjOg3wwwvyrvAZ54p8iZiFpDyXTcnec
- filerun.daviteq.com/wl/?id=qK0PGNbY1g1fuxTqbFW9SXtEvCw7bpc6
- filerun.daviteq.com/wl/?id=WBbGm89AToHWyvlyMOc780N1KmjfUr3Y
- [User Manual](#)