

DETECTO

DETECTO DM15 Price
Computing Scale



DETECTO DM15 Price Computing Scale Instruction Manual

[Home](#) » [DETECTO](#) » DETECTO DM15 Price Computing Scale Instruction Manual 

Contents

- [1 DETECTO DM15 Price Computing Scale](#)
- [2 Usage Instructions](#)
- [3 SPECIFICATIONS](#)
- [4 INSTALLATION](#)
- [5 ANNUNCIATORS](#)
- [6 KEY FUNCTIONS](#)
- [7 OPERATION](#)
- [8 SCALE SETTINGS](#)
- [9 STATEMENT OF LIMITED WARRANTY](#)
- [10 Documents / Resources](#)
 - [10.1 References](#)
- [11 Related Posts](#)

DETECTO[®]

DETECTO DM15 Price Computing Scale



Specifications

- Display: 0.5 High Seven-Segment LCD with backlight
- Dimensions: 13.39 W x 13.39 D x 5.00 H (340 mm x 340 mm x 127 mm)
- Platform Size: 12.60 W x 9.06 D (320 mm x 230 mm)
- Capacity and Division Value: 240 oz x 0.1oz / 15 lb x .005 lb
- Zero Power: Established on power up routine and maintained by auto-zero circuitry
- Tare: 100% of full scale capacity
- Operating Temperature: 12 VDC 1.0 A Rechargeable battery pack or AC Adapter 110/120 VAC 50/60Hz
- Interface: RS-232 Serial Port, 9-Pin (DB-9), Baud Rate 9600

Installation

Unpacking

Ensure the scale is unpacked carefully and that all components are accounted for.

Placement

Place the scale in a dust and moisture-free environment on a stable, level surface away from direct sunlight and air sources that could cause fluctuations in weight readings. Clear the area around the scale for proper air circulation.

CAUTION: Do not place the scale on an unstable surface to prevent accidents or damage to the unit.

Level Adjustment

Check if the scale is level using the indicator at the front. Adjust the four mounting feet until the bubble is centered to ensure a level scale. Lock the feet in place once the scale is leveled.

Usage Instructions

Follow these steps to operate the Detecto DM-15 Price Computing Scale:

FAQ

1. **Q: Can I use the scale without plugging it into a power source?**

A: Yes, you can operate the scale using the included rechargeable battery pack.

2. Q: How can I reset the zero value on the scale?

A: The zero value is established during the power-up routine and is maintained by the auto-zero circuitry.

INTRODUCTION

Thank you for purchasing our Detecto DM-15 Price Computing Scale. Your scale has been designed to operate from 115 VAC 50/60 Hz or with the included rechargeable battery pack.

This manual will guide you through setup and operation of your scale. Please read it thoroughly before attempting to operate this scale and keep it handy for future reference.

FCC COMPLIANCE STATEMENT

This equipment generates uses and can radiate radio frequency and if not installed and used in accordance with the instruction manual, may cause interference to radio communications. It has been tested and found to comply with the limits for a Class A computing device pursuant to Subpart J of Part 15 of FCC rules, which are designed to provide reasonable protection against such interference when operated in a commercial environment. Operation of this equipment in a residential area may cause interference in which case the user will be responsible to take whatever measures necessary to correct the interference. You may find the booklet "How to Identify and Resolve Radio TV Interference Problems" prepared by the Federal Communications Commission helpful. It is available from the U.S. Government Printing Office, Washington, D.C. 20402. Request stock No. 001-000-00315-4.

COPYRIGHT

All rights reserved. Reproduction or use, without expressed written permission, of editorial or pictorial content, in any manner, is prohibited. No patent liability is assumed with respect to the use of the information contained herein.

DISCLAIMER

While every precaution has been taken in the preparation of this manual, the Seller assumes no responsibility for errors or omissions. Neither is any liability assumed for damages resulting from use of the information contained herein. All instructions and diagrams have been checked for accuracy and ease of application; however, success and safety in working with tools depend to a great extent upon the individual accuracy, skill and caution. For this reason the Seller is not able to guarantee the result of any procedure contained herein. Nor can they assume responsibility for any damage to property or injury to persons occasioned from the procedures. Persons engaging the procedures do so entirely at their own risk.

- Serial Number _____
- Date of Purchase _____
- Purchased From _____

RETAIN THIS INFORMATION FOR FUTURE USE

PRECAUTIONS

Before using this instrument, read this manual and pay special attention to all "WARNING" symbols:



IMPORTANT



ELECTRICAL WARNING

SPECIFICATIONS

Display:	0.5" High Seven-Segment LCD with backlight Weight = 6 Digits Unit Weight = 6 Digits Total Price = 6 Digits
Dimensions:	13.39" W x 13.39" D x 5.00" H (340 mm x 340 mm x 127 mm)
Platform Size	12.60" W x 9.06" D (320 mm x 230 mm)
Capacity and Division Value	240 oz x 0.1oz / 15 lb x .005 lb
Zero	Established on power up routine and maintained by auto-zero circuitry
Power	12 VDC 1.0 A Rechargeable battery pack or AC Adapter 110/120 VAC 50/60Hz
Tare	100% of full scale capacity
Operating Temperature	14° ~ 104°F (-10° ~ 40°C)
Interface:	RS-232 Serial Port, 9-Pin (DB-9), Baud Rate 9600

INSTALLATION

Unpacking

Before beginning installation of your DM15 Price Computing Scale, make certain the instrument has been received in good condition. Carefully remove the instrument from the shipping carton and inspect it for any evidence of damage (such as exterior dents or scratches) that may have taken place during shipment. Keep the carton and packing material for return shipment if it should become necessary. It is the responsibility of the purchaser to file all claims for any damages or loss incurred during transit.


Placement

Place the scale in an environment free of excessive dust and moisture and on a stable, vibration-free level surface away from direct sunlight and any rapidly moving air source (heating/cooling vents, fans, etc.). This will prevent sudden temperature changes and air currents that may result in unstable weight readings. Keep the area around the scale clear to provide adequate air circulation and make certain the power cord is routed out of the way of normal traffic.

CAUTION! DO NOT place the scale on any unstable cart, stand or table. The scale may fall causing injury to the operator, and seriously damage the unit, or proper operation of the scale may be inhibited.

Level Adjustment

Check to make certain the scale is level. The level indicator is located at the front of the scale. If the scale is not level (the bubble will not be centered), loosen the locking ring on all four (4) mounting feet and adjust them as required to center the bubble and attain a level scale. Once the scale is level, lock the mounting feet in place by tightening the adjustment locking rings against the bottom of the scale.

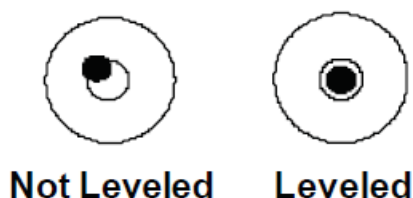

Power Connection

The scale uses an external AC power adapter that converts the 110/120 VAC 50/60Hz wall supply to the 12VDC power required by the scale. The scale also has circuitry necessary to monitor and recharge the battery and is capable of operating the scale and recharging the battery simultaneously.


NOTE: In areas subject to lightning strikes, additional protection (surge suppressors) should be installed.

Printer Connection


1. Attach RS232 cable to port at rear of printer.
2. Attach power cable from printer AC adapter to jack at rear of printer.
3. Attach RS232 cable to port on underside of scale.
4. Attached power cable of scale to jack on underside of scale.
5. Plug both AC adapter power supplies into power outlet.
6. Turn scale on – power switch on underside of right side of scale.
7. Turn printer on – power switch at rear of printer.

ANNUNCIATORS

Annunciators indicate the active mode or functions of the scale. The meaning of each annunciator is described below.

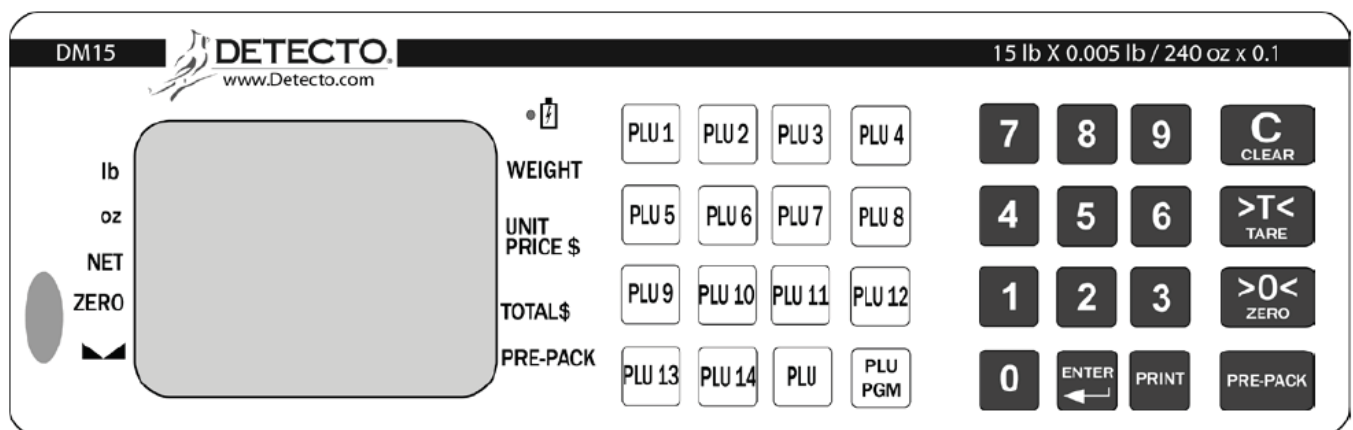

Front – Operator Keypad and Display

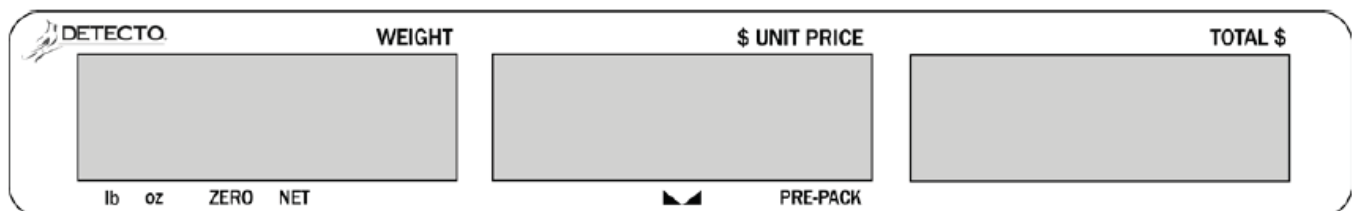

Rear – Customer Display

ZERO

The ZERO annunciator is located to the left of the display and is selected to indicate that the gross scale weight is zero.

NET

The NET annunciator is located to the left of the display and indicates the displayed weight is the net weight. Net weight is determined by subtracting the tare weight from the gross or scale weight. The tare weight, usually the weight of the container, is entered using the tare key. Note that the NET annunciator is only active when a zero tare weight or tare weight value is stored and the display is in the weight mode.

kg

The kg annunciator indicates weight displayed is in kilograms and the UNIT PRICE is per kilogram.

lb

The lb annunciator indicates weight displayed is in pounds and the UNIT PRICE is per pound.

PRE-PACK

Indicates the scale is in the PRE-PACK mode. The PRE-PACK mode is used for repetitive price computing.



Indicates weight on scale is stable



Red Light indicates the battery is charging. Green light indicates the battery is fully charged.

KEY FUNCTIONS

This section describes the use of each of the keys on the DM15 Price Computing Scale. It will be helpful to refer to the scale keyboard or the figure above when reading this section.



- Clears unit price
Exits PLU and clears Tare



- Set the weight display to zero and turn on the ZERO annunciator.
Also used in User Setup mode to return to previous step.



- Stores the current gross weight as the new tare weight and changes scale to the net weight mode.



- Retains the Unit Price and Tare for repetitive price computing.



- Enter input



- Print Label



- Price Look Up for PLU 15-99



- Program Price Look Up PLU 1-99



- Price Look Up for PLU 1-14



- Numeric keys 0-9


The membrane keypad is not to be operated with pointed objects (pencils, pens, fingernails, etc.). Damage to keypad resulting from this practice will NOT be covered under warranty.

OPERATION

Power Switch

The Power Switch is located on the bottom right side panel towards the front of the scale. Place the power switch in the on position. The scale will perform a brief display test illuminating all display segments and annunciator LED's to allow the operator to make a visual verification that the display is operational. After completion of the display test, the software version will be displayed, the weight display will show zero weight indicating the scale is ready for use. Before using the scale, it should be "warmed up" (turned on and unloaded for approximately 15 to 20 minutes).

Weight Display Displaying Weight

1. With the scale in the weigh mode [] will be displayed on the Weight display and [] will be displayed on the UNIT PRICE and TOTAL PRICE displays, place the item to be weighed on the scale platform.
2. The WEIGHT display will show the weight on the scale platform. NOTE: The UNIT PRICE and TOTAL PRICE displays will remain at [].

Zero the Weight Display

1. Press the ZERO key.
2. The weight display will return to zero. The ZERO annunciator will illuminate, indicating a center-of-zero gross weight condition.

Standard Unit Price Computation

1. Place commodity on scale.
2. Enter UNIT PRICE.
3. Read WEIGHT and TOTAL PRICE.

4. If a label printer is connected to the scale, press PRINT key to print a label.
5. Remove commodity. Weight will return to zero and prices will be cleared.

Pre-Pack Operation

For repetitive price-computing of commodities with the same unit price.

1. Enter tare if so desired as outlined in Tare Operation. Tare entry will be retained in PRE-PACK mode.
2. Enter unit price and press the PRE-PACK key. The PRE-PACK annunciator will illuminate.
3. Place commodities on scale.
4. If a label printer is connected to the scale, press PRINT key to print a label.
5. When the pre-packing operation is ended, press the CLEAR key to clear unit price, turn off PRE-PACK mode and clear Tare.


Tare Operation

1. Place empty container on scale.
2. Press the TARE key.
3. The WEIGHT display will change to zero and the NET weight annunciator will illuminate.
4. Key in unit price.
5. Place commodity in container. Net weight of commodity will be displayed.
6. Read net commodity weight and total price.
7. If a label printer is connected to the scale, press PRINT key to print a label.
8. Remove container and commodity from scale.
9. Scale will return to zero and clear tare and unit price information.
10. Scale is ready for next operation.

Sample Labels

Standard Unit Price:

- Weight
- PLU#
- Unit Price
- Total Price

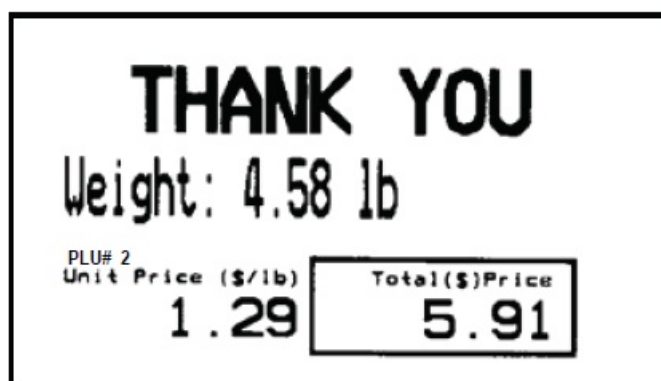

Unit Price with maximum digits:


- Weight
- Unit Price
- Total Price

THANK YOU	
Weight: 4.58 lb	
Unit Price (\$/lb)	Total (\$)Price
1509.00	6911.22

Total Price exceeds digit print capacity:

- Weight
- Unit Price

THANK YOU	
Weight: 4.58 lb	
Unit Price (\$/lb)	Total (\$)Price
2500.00	-----

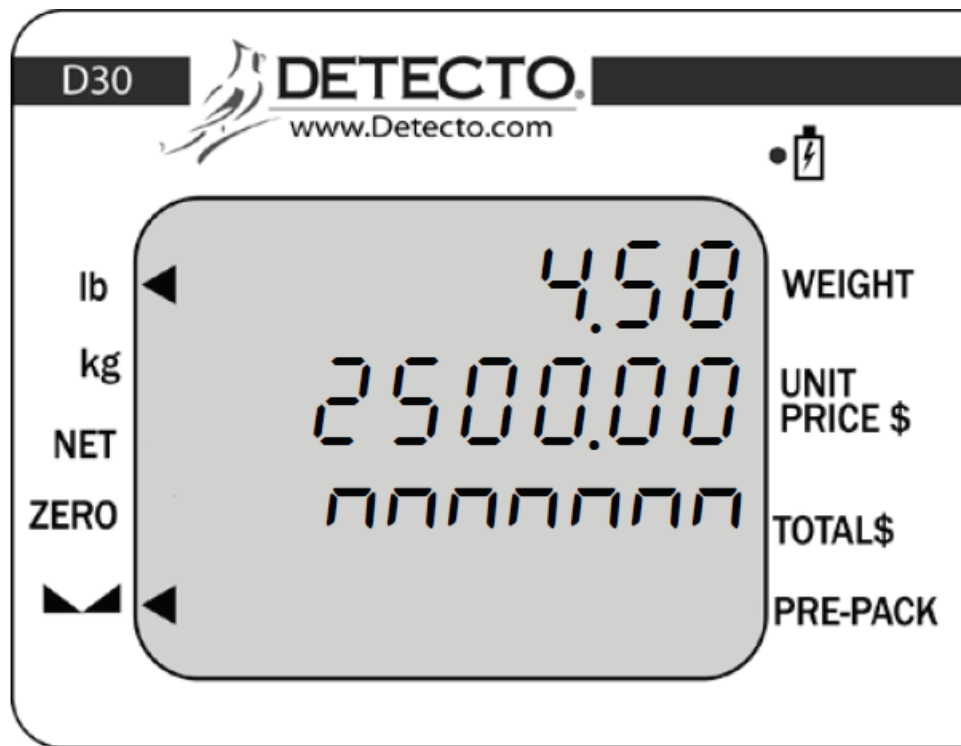

Scale display with Total Price digit capacity exceeded.

PRICE LOOK UP (PLU) OPERATION

PLU Programming

Programming PLU without a Tare Weight

1. Press the PLU PGM key
2. Press the PLU key (PLU1 – PLU14) or enter the PLU number (15-99) to programmed.
3. Press ENTER
4. Enter the UNIT PRICE and press ENTER twice.

Programming PLU with a Tare Weight

1. Press the PLU PGM key
2. Press the PLU key (PLU1 – PLU14) or enter the PLU number (15-99) to programmed.
3. Press ENTER
4. Enter the UNIT PRICE and press ENTER
5. Enter the known Tare weight or place the empty container on the scale and press ENTER.

PLU Operation

1. Press the key for the desired PLU (PLU1-PLU14 key or PLU key then number 15-99)
2. The PLU Unit Price will be displayed.
3. If a Tare weight is programmed for the selected PLU, the Weight displayed will be negative and the NET annunciator illuminated.
4. Place the commodity on the scale. Be sure to use the proper container if a Tare weight is programmed.
5. The Total Price will be displayed.
6. If a label printer is connected to the scale, press the PRINT key to print a label.

7. Remove the commodity, the scale will exit the PLU and return to zero weight.

Pre-Pack Operation with PLU

For repetitive price-computing of commodities with the same unit price.

1. Select the desired PLU as above.
2. Press the PRE-PACK key. The PRE-PACK annunciator will illuminate.
3. Place commodities on scale.
4. If a label printer is connected to the scale, press the PRINT key to print a label.
5. Repeat until all commodities have been weighed.
6. When the pre-packing operation is ended, press the CLEAR key to turn off PRE-PACK mode and exit PLU.

SCALE SETTINGS

Access User setup with scale off, press and hold the PRE-PACK key while switching the scale on. Scale will


display **SEtUP**. Use the following keys to navigate settings shown below.

PRE-PACK ↓ Accept the displayed setting and to proceed to next step

TARE → Toggles available settings for the current step

ZERO ↑ Returns to previous step

CLEAR Exits setup and proceeds to SAVE

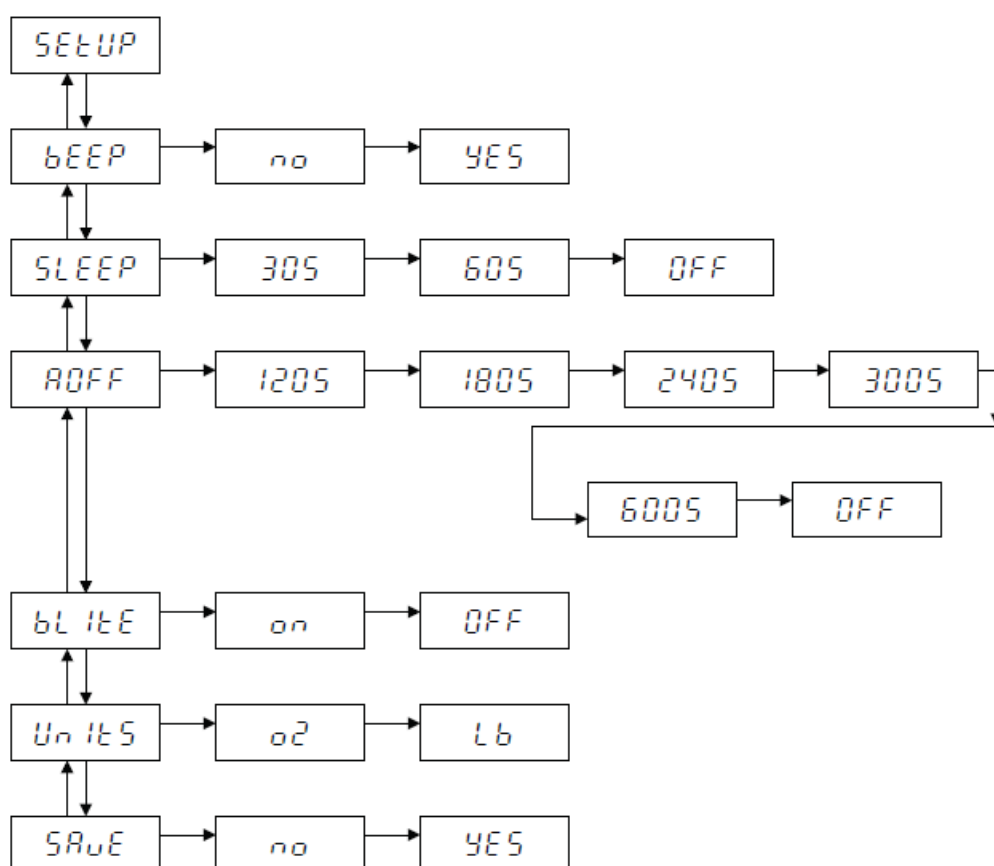

NOTE: No set-up is required for Printer Port. It is pre-configured as OUTPUT only.

ERROR AND STATUS DISPLAYS

The DM15 Price Computing Scale is equipped with a diagnostic software program that tests various portions of the instrument's circuitry and verifies proper operation. Should a problem be detected, an error or status message will be displayed alerting the operator to that condition. The following lists these error messages and their

meanings.

Display	Meaning
OCAP	Over Capacity - Indicates the scale weight capacity has been exceeded.
Lo BAT	Low Battery - Indicates the internal battery requires charging.
ErrE	E EPROM error
ErrH	Zero value too high
ErrL	Zero value too low
ErrS	Keypad error

BEFORE YOU CALL FOR SERVICE

Your DM15 Price Computing Scale has been designed to provide you with years of trouble-free operation. In spite of this, troubles sometimes happen. Before calling for service assistance you should make some initial checks to verify that a problem does exist. The following describes several types of symptoms along with suggested remedies.

PROBLEM	POSSIBLE SOLUTIONS
Display does not turn on	AC Operation: • Is the AC power cord fully inserted into the wall receptacle? • Check wall receptacle for proper AC power. Try another electrical appliance in the same receptacle. Does it work? • Check the circuit breaker. • Has there been power failure Battery operation: • Check if battery is properly installed. • Is battery discharged? Recharge or replace battery.
Incorrect weight displayed	• Insure that the scale platform isn't touching an adjacent object. • Have proper operation procedures been followed?

CARE AND CLEANING

- DO NOT submerge the scale in water, pour or spray water directly on it.
- DO NOT use acetone, thinner or other volatile solvents for cleaning.
- DO clean the indicator with a damp soft cloth and mild non-abrasive detergent.
- DO remove power before cleaning with a damp cloth.
- DO clean and store the scale in a plastic bag (in a dry environment) if the scale is not going to be used for some time. A desiccant packet may be included to prevent moisture build up.
- DO recharge the internal battery every three months while in storage.

STATEMENT OF LIMITED WARRANTY

DETECTO warrants its equipment to be free from defects in material and workmanship as follows: DETECTO

warrants to the original purchaser only that it will repair or replace any part of equipment which is defective in material or workmanship for a period of two (2) years from date of shipment. Detecto shall be the sole judge of what constitutes a defect.

During the first ninety (90) days DETECTO may choose to replace the product at no charge to the buyer upon inspection of the returned item. After the first ninety (90) days, upon inspection of the returned item, DETECTO will repair or replace it with a remanufactured product. The customer is responsible for paying for the freight both ways.

This warranty does not apply to peripheral equipment not manufactured by DETECTO; this equipment will be covered by certain manufacturer's warranty only. This warranty does not include replacement of expendable or consumable parts. This does not apply to any item which has deteriorated or damaged due to wear, accident, misuse, abuse, improper line voltage, overloading, theft, lightning, fire, water or acts of God, or due to extended storage or exposure while in purchaser's possession. This warranty does not apply to maintenance service. Purchased parts will have a ninety (90) day repair or replacement warranty only. DETECTO may require the product to be returned to the factory; item(s) must be properly packed and shipping charges prepaid. A return authorization number must be obtained for all returns and marked on the outside of all returned packages. DETECTO accepts no responsibility for items lost or damaged in transit.

Conditions Which Void Limited Warranty

This warranty shall not apply to equipment which:

- Has been tampered with, defaced, mishandled or has had repairs and modifications not authorized by DETECTO.
- Has had serial number altered, defaced, or removed.
- Has not been properly grounded according to Detecto's recommended procedure.

Freight Carrier Damage

Claims for equipment damaged in transit must be referred to the freight carrier in accordance with freight carrier regulations. This warranty sets forth the extent of our liability for breach of any warranty or deficiency in connection with the sale or use of the product. DETECTO will not be liable for consequential damages of any nature, including but not limited to, loss of profit, delays or expenses, whether based on tort or contract. Detecto reserves the right to incorporate improvements in material and design without notice and is not obligated to incorporate improvements in equipment previously manufactured. The foregoing is in lieu of all other warranties, express or implied including any warranty that extends beyond the description of the product including any warranty of merchantability or fitness for a particular purpose. This warranty covers only those DETECTO products installed in the forty-eight (48) contiguous continental United States.

- Ph. [800-641-2008](tel:800-641-2008)
- E-mail: detecto@cardet.com

102 E. Daugherty

Webb City, MO 64870

04/22/2024

Printed in USA

D268-WARRANTY-DET-B

DETECTO

102 E. Daugherty, Webb City, MO 64870 USA

- Ph: [417-673-4631](tel:417-673-4631) or 1-[800-641-2008](tel:800-641-2008)
- Fax: [417-673-2153](tel:417-673-2153)
- www.Detecto.com

- Technical Support: 1-[866-254-8261](tel:866-254-8261)
- E-mail: tech@cardet.com

Documents / Resources

 DM15 Price Computing Scale Operation Manual	DETECTO DM15 Price Computing Scale [pdf] Instruction Manual DM15, DM15 Price Computing Scale, Price Computing Scale, Computing Scale, Scale
--	---

References

- [User Manual](#)

Manuals+. Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.