



# Diamond AP50M-1A Overlapping Refrigeration Unit User Manual

[Home](#) » [DIAMOND](#) » Diamond AP50M-1A Overlapping Refrigeration Unit User Manual 

## Contents

- [1 Diamond AP50M-1A Overlapping Refrigeration Unit](#)
- [2 STARTING THE MACHINE](#)
- [3 Control panel description](#)
- [4 ADVANCED ELECTRONIC CARD PROGRAMMING FOR BLOCK SYSTEM](#)
- [5 EMERGENCY SYSTEM](#)
- [6 Documents / Resources](#)
- [7 Related Posts](#)



**Diamond AP50M-1A Overlapping Refrigeration Unit**




## **STARTING THE MACHINE**

Before starting the Block system, make sure of the following

- All locking screws are correctly tightened
- All electrical connections have been made correctly.
- The cold room door is closed so that the door microswitch contact is closed.

## **Control panel description**

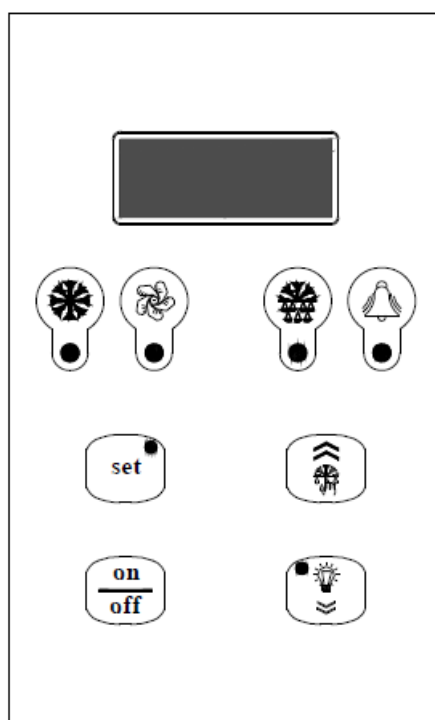

	<p>Green "COMPRESSOR" LED</p> <p>OFF: The compressor is off</p> <p>LIT: The compressor is operating.</p> <p>BLINKING: The switch on request is pending (delays or protective devices activated)</p>
	<p>Green "FANS" LED</p> <p>OFF: The fans are off</p> <p>LIT: The fans are operating</p> <p>BLINKING: The switch on request is pending (delays or protective devices activated)</p>
	<p>Green "DEFROSTING" LED</p> <p>OFF: Defrosting is not activated</p> <p>LIT: Defrosting is in progress</p> <p>BLINKING: Manual defrosting is in progress; a defrosting request is pending (delays or protective devices activated); network synchronised (master/slave) defrosting</p>
	<p>Yellow "ALARM LED"</p> <p>OFF: No alarm is in progress</p> <p>LIT: A serious alarm is in progress (and alarm relay activated)</p> <p>BLINKING: A non-serious alarm is in progress or a serious alarm has been silenced (alarm relay deactivated)</p>
	<p>"SETPOINT" key + "SETPOINT/REDUCED SET" green LED</p> <p>LIT: The setpoint is displayed</p> <p>BLINKING: The reduced set is activated</p> <p>ENTER" key: This is used to set the setpoint, to access the programming menu, and to view the machine status (if held down for 1 second); to enter the programming mode, this key must be held down for 5 seconds.</p>
	<p>"UP" key: This is used to command manual defrosting (if held down for more than 5 seconds) as well as to increase the value of the parameter being displayed and to scroll forwards through the menu list.</p>
	<p>"ON/OFF" key: This is used as a manual on-off control, to confirm a parameter value and it also allows you to return to the previous menu. To switch the machine on or off, hold this key down for more than 5 seconds.</p>
	<p>"DOWN" key: This is used to command the lights manually (if held down for 1 second); it also decreases the value of the parameter being displayed and scrolls back through the menu list.</p>

### Switching on/off

When the machine is energized, the display will read OFF and show the cold room temperature alternately. To switch the Blocks system on (off), hold down the "ON/OFF" key on the front of the machine for more than 5 seconds.

### Coldroom temperature adjustment

The temperature ranges within which the Block system can operate are as follows:

	Minimum	Maximum
High Temperature (HBP)	+2	+10
Medium Temperature (MBP)	-5	+5
Low Temperature (LBP)	-25	-15

The temperature adjustment setpoint can be accessed directly for display or adjustment purposes.

- Press and release SETPOINT: the display will read "SEt" (the procedure is slightly different if there are alarms in progress; see the machine status display paragraph)
- Press SETPOINT: the green SET LED will switch on and the Setpoint value will be displayed
- Press UP or DOWN to set the new value
- Press SETPOINT or ON/OFF (or wait for the 5-second timeout) to confirm the value (the SET LED will switch off and the display will read "SEt")
- Press ON/OFF (or wait for the 5-second timeout) to return to the normal display mode

### How to vary parameters

Blocksystem operation is governed by parameters that have been stored in the memory of the electronic control unit by the manufacturer (see the parameters table). These factory settings should not be varied unless strictly necessary, and in all cases such operations are only to be carried out by qualified staff. Parameters are not only divided by function, they are also divided according to their security/accessibility

### levels

- Level 0 Setpoint parameters direct access (see paragraph 7.3)
- Level 1 frequently used parameters access without password (see paragraph 7.5)
- Level 2 configuration parameters access with password (see paragraph 7.7)
- Parameters can be varied as follows:
  - From the keyboard
  - Via LAN network (Master/Slave)
  - Via Supervision network

### How to vary level 1 parameters

- Hold down SET for 5 seconds until the display reads "reg" (adjustment parameters)
- Press UP or DOWN until the required menu appears on the display
- Press SET to access the menu; the code number for the first parameter in the selected menu will appear
- Press UP or DOWN until the required parameter appears
- Press SET to view the value of the parameter
- Press UP or DOWN to set the required value
- Press SET to confirm the value and return to the parameters list; press ON/OFF to confirm the value and return to the menu list
- Press ON/OFF to pass from the parameters list to the menu list

- Press ON/OFF again to exit the editing procedure,

If no key is pressed for more than 15 seconds, any value shown on the display will be stored in the memory for the relevant parameter and there will be a forced exit from the parameters variation procedure.

## Machine status display

- Press and release SET: the display will read “SEt” or “AAL” if there are any alarms in progress
- Press UP or DOWN until the required status is displayed
- AAL alarms in progress (if present)
- SEt setpoint
- Pb1 cold room temperature probe value
- Pb2 evaporator temperature probe value
- Pb3 probe 3 value (if present)
- Out relay outputs status
- InP digital inputs status
- Press SET to view the value
- For alarm status, output status or input status, press UP or DOWN to scroll through the alarms in progress, the outputs or the inputs,
- Press SET or ON/OFF (or wait for the 5-second timeout) to return to the status list
- Press ON/OFF (or wait for the 5-second timeout) to return to the normal display mode

Code	Level	Descr.		Range	Unit
PPA		List of <b>-PPS</b> passwords		0 ... 255	
		Parameters access password Entering a pre-set password will give access to protected parameters			
SEt	0	List of <b>-rEG</b> adjustment parameters		LSE ...HSE	°C [°F]
		Setpoint			
diF	1	Differential temperature > setpoint + diff. -> adjustment On temperature ≤ setpoint -> adjustment Off		0.1 ... 50.0	°C [°F]
CA1 CA2 CA3	1	List of <b>-Pro</b> probe parameters		-20.0 ... 20.0	°C [°F]
		Probe 1 calibration	The value assigned to this parameter is added to (positive value) or taken away from (negative value) the temperature detected by the probe		
		Probe 2 calibration			
		Probe 3 calibration			
		List of <b>-CPr</b> compressor parameters			
Ont	1	Compressor ON time in the event of probe failure	In the event of an adjustment probe error, the compressor is enabled in cyclical mode with set operation and off times. In particular: Ont=0: the compressor remains off Ont>0 and OFt=0: the compressor remains on	0 ... 60	min
OFt	1	Compressor OFF time in the event of probe failure		0 ... 60	min
dOn	1	Compressor activation delay The time, starting from the switch on request, after which the compressor is effectively activated. In the event of network control in sequential mode, this represents the activation delay from compressor to compressor		0 ... 250	sec
dOF	1	Minimum compressor OFF time The time, starting from the moment of deactivation, for which it is not possible to restart the compressor		0 ... 60	min
dbi	1	Delay between switch on times The time, starting from the moment of previous activation, for which the compressor cannot be restarted.		0 ... 60	min

OdO	1	Outputs delay at power-on (compressor, fans, defrosting) This is used to delay the enabling of adjustments after the instrument has been switched on for a set amount of time. The transition from stand-by to machine activated (ON command from the keyboard) bypasses this delay	0 ... 60	min
List of <b>-dEF</b> defrosting parameters				
dtY*	1	Defrosting type 0 = heating element: ends at temperature or after maximum safe time (timeout) 1 = <b>hot gas</b> : ends at temperature or after maximum safe time (timeout) For defrosting using a heating element, there is a 1 second delay between the compressor switching off and the defrosting relay being triggered	0,1	
dit	1	Defrosting interval The maximum time (from start to start) between two consecutive defrosting cycles. When this time expires, a defrosting cycle is enabled (cyclical defrosting). The timer is reset at each defrosting request (even if not cyclical). 0 = cyclical defrosting disabled	0 ... 250	h
dct	1	Defrosting interval count mode 0 = counts if the compressor is operating 1 = counts all the time	0,1	
dOH	1	Defrosting start delay at power-on The time, as from when the instrument is switched on, for which any defrosting requests are frozen (manual defrosting excluded)	0 ... 250	min
dEt*	1	Defrosting timeout When the set time expires, defrosting is in any case ended, even if the defrost end temperature has not been reached, passing on to the drip phase	1 ... 250	min
dSt*	1	Defrost end temperature The probe 2 temperature above which defrosting is ended. If, at the start of a defrosting cycle, the temperature is greater than that set, no defrosting will be carried out. In the event of a probe 2 malfunction, the defrosting cycle will in any case terminate after reaching a time limit	-50.0 ... 199.0	°C [°F]
<b>Code</b>	<b>Level</b>	<b>Descr.</b>	<b>Range</b>	<b>Unit</b>
dS2	1	Defrost end temperature for the second evaporator The probe 3 temperature above which defrosting for the second evaporator is ended. If, at the start of a defrosting cycle, the temperature is greater than that set, no defrosting will be carried out. In the event of a probe 3 malfunction, the defrosting cycle will in any case terminate after reaching a time limit. <b>This function is only enabled if P01=3o4, Co4=3 and CP0=2</b> (alarm relay used for second evaporator defrosting and probe 3 used to detect the temperature of the second evaporator). In this case, the dripping phase will begin after the defrosting cycles of both evaporators have ended.	-50.0 ... 199.0	°C [°F]
dPO	1	Defrosting at power-on 0 = disabled 1 = defrosting when the instrument is switched on	0,1	flag
List of <b>-FAn</b> fan parameters				
FSt	1	Fans switch on temperature	$\text{probe2} \geq \text{FSt}$ : fans off $\text{Fot} \leq \text{probe2} < (\text{FSt} - \text{FAd})$ : fans on $\text{probe2} < (\text{Fot} - \text{FAd})$ : fans off	°C [°F]
Fot	1	Fans switch off temperature		°C [°F]
FAd	1	Fans switch on and off differential		°C [°F]
Fdt	1	Post-dripping time The time after the dripping phase, during which the fans remain switched off	0 ... 60	min
dt	1	Dripping time The time after a defrosting cycle during which the compressor and the evaporator are stopped in order to favour evaporator dripping	0 ... 60	min
dFd	1	Fans deactivated during defrosting 0 = fans activated (operation set from FPt) 1 = fans deactivated	0,1	flag
FCO	1	Fans activated with compressor off 0 = fans deactivated 1 = fans activated (operation set from FPt) 2 = fans in duty cycle operation	0 ... 2	
Fon	1	Fans ON time during duty cycle operation (FCO=2)	1 ... 60	min
FoF	1	Fans OFF time during duty cycle operation (FCO=2)	1 ... 60	min

		List of <b>-ALr</b> alarm parameters		
AFd	1	Temperature alarm threshold differential This sets the re-entry temperature threshold after a high- or low-temperature alarm condition	1.0 ... 90.0	°C [°F]
HAL	1	Maximum alarm threshold Above this value (absolute or referred to the setpoint) an alarm is triggered If the reference is relative, the unmarked value is added to the setpoint	-50.0 ... 199.0	°C [°F]
LAL	1	Minimum alarm threshold Below this value (absolute or referred to the setpoint) an alarm is triggered If the reference is relative, the unmarked value is subtracted from the setpoint	-50.0 ... 199.0	°C [°F]
PAO	1	Temperature alarm delay at power-on	0 ... 10	h
dao	1	Temperature alarm delay after defrost The time, starting from the end of the dripping phase, during which no alarm is signalled. In the event of contemporaneous network defrosting, the time refers to the defrosting end command	0 ... 999	min
OAO	1	Temperature alarm delay after door closure The time, after the door is closed again and during which no alarm is signalled	0 ... 10	h
dAt	1	Defrosting alarm timeout enabling This enables the signalling of any defrosting end due to the maximum time limit being reached (timeout). 0 = signal disabled 1 = signal enabled	0,1	flag
		List of <b>-diS</b> display parameters		
ndt	1	Decimal point display 0 = display without decimal point 1 = display with decimal point.	0,1	flag
ddL	1	Display during the defrosting phase 0 = normal display (as set from the ddd par.) 1 = freezes the temperature value displayed at the start of defrosting until the end of defrosting and the reaching of the setpoint 2 = "dF" until the end of defrosting and the reaching of the setpoint <b>The ddL parameter can be controlled only if the standard display (ddd par.) includes the adjustment probe (probe 1 or network probe)</b>	0,1,2	
Ldd	1	Defrosting display block timeout The time, starting from the end of defrosting (end of dripping phase), after which the normal display is in any case restored	0 ... 255	min
dro	1	°C or °F selection 0 = °C 1 = °F This selection only affects temperature measurements. The values of the parameters concerning temperature maintain their current values and therefore, they must be varied manually to adapt them to the Fahrenheit scale.	0,1	flag
Code	Level	Descr.	Range	Unit
		List of <b>-CnF</b> configuration parameters		
LOC (**)	1	Keyboard lock 0 = keyboards disabled 1 = main terminal keyboard enabled 2 = secondary terminal keyboard enabled 3 = keyboards enabled (the first to request a service has precedence until completion)	0 ... 3	
rEL	1	Software release A read-only value that identifies the software version	0.0 ... 99.9	
		List of <b>-Lan(***)</b> network parameters		
dEA	1	Supervision network address (for Master only) The address to be set on each master must take into account the number of slaves present in the LAN network preceding it: "dEA"="dEA[previous master]"+"L01[previous master]" +1 The Supervision network address for a Slave is "dEA[master]"+"L00")	1 ... 199	

**For models** PTM068Z012, PTM080Z012, PTL060Z012, PTL080Z012, PTM110Z012, PTM140Z012, PTM200Z012, PTL130Z012, PTL1 80Z012, PTL200Z012, PTL260Z012, PTM300Z012, PTM370Z012, PTL350Z012 and PTL450Z012, the dtY,dEt and dSt parameters have the following values (Defrosting by heater):

dtY	1	Defrosting type 0 = <u>heating element</u> : ends at temperature or after maximum safe time (timeout) 1 = hot gas: ends at temperature or after maximum safe time (timeout) For defrosting using a heating element, there is a 1 second delay between the compressor switching off and the defrosting relay being triggered	0,1	
dEt	1	Defrosting timeout ( <b>Defrosting by heater</b> ) When the set time expires, defrosting is in any case ended, even if the defrost end temperature has not been reached, passing on to the drip phase	1 ... 250	min
dSt	1	Defrost end temperature ( <b>Defrosting by heater</b> ) The probe 2 temperature above which defrosting is ended. If, at the start of a defrosting cycle, the temperature is greater than that set, no defrosting will be carried out. In the event of a probe 2 malfunction, the defrosting cycle will in any case terminate after reaching a time limit	-50.0 ... 199.0	°C [°F]

**Note:** To release the keypad, hold down "SET" and "ON/OFF" together for at least 5 seconds.

**Note:** The "LAn" network parameter only serves in the event of MASTER/SLAVE or REMOTE CONTROL operation



# ADVANCED ELECTRONIC CARD PROGRAMMING FOR BLOCK SYSTEM

## Level 2 programming

The procedure for editing level 2 parameters is protected by a password and can be carried out in the following manner: enter the programming mode by holding down the “set” key for at least 7 seconds until the display reads “reg”, which corresponds to the adjustment parameters directory, then proceed as follows:

- Press the “down” key (the display will read “PPS”)
- Press the “set” key (the display will read “PPA”)
- Press the “set” key again (the display will read “0”)
- Press the “up” key until the display reads 22 (the level 2 password)
- Press the “set” key to confirm the password

At this point, using the “up” and “down” keys, you can access all of the electronic card parameters shown in the annexed programming chart. Once you have edited the required parameters, press the “ON/OFF” key twice until the display shows the cold room temperature (or wait for 15 seconds without pressing any keys); this way the edited parameters will be stored to memory.

### CAUTION!

THE FOLLOWING SECTION EXPLAINS THE NECESSARY PROCEDURE IN THE EVENT THAT PARAMETERS ARE EDITED WITHOUT FOLLOWING ANY CRITERIA OR THAT THE CARD SETTINGS ARE LOST. IN ANY CASE, WE ADVISE THAT YOU FOLLOW THESE STEPS ONLY AFTER THE APPROVAL OF A RIVACOLD TECHNICAL ENGINEER.

## Restoring the factory settings

**CAUTION:** the following procedure will restore all factory settings for the electronic card. We advise that you only do this if strictly necessary and in any case, that you are assisted by a technical engineer from Rivacold. Cut off the power to the Blocksystem. Press the “set” and “down” keys at the same time, then switch the Block system on again while holding down these keys. Release the keys when the display reads “3”. At this point, the electronic card will restart and its parameters will have returned to those set in the factory. The display will read “Um” for 1 second; it will then show the temperature read by the cold room probe.

**PLEASE NOTE:** THIS OPERATION RESTORES THE FACTORY SETTINGS FOR A MEDIUM-TEMPERATURE MACHINE APPLICATION (-5/+5°C) WITH “HOT-GAS” DEFROSTING. IF YOU ARE USING AN APPLICATION OTHER THAN “MEDIUM TEMPERATURE” AND/OR A DIFFERENT TYPE OF DEFROSTING (NOT “HOT-GAS”), YOU MUST FOLLOW THE INSTRUCTIONS IN THE FOLLOWING SECTION, AND REFER TO THE “CPP PARAMETER PROGRAMMING CHART”.

## Rapid programming according to the application required

Level 2 programming contains a parameter known as “CPP” (to be found in the “cnf” directory) which is used for the rapid programming of parameters according to application and defrosting types (see following chart).

## CPP parameter programming chart



Defrosting		Hot gas	Hot gas	Fan	Heating element	Heating element
Application		-5/+5°C	-25/-15°C	+2/+10°C	-5/+5°C	-25/-15°C
Menu	Code no.	CPP=1	CPP=2	CPP=3	CPP=4	CPP=5
REG	SEt	2.0	-18.0	5.0	2.0	-18.0
REG	diF	2.0	2.0	2.0	2.0	2.0
REG	HSE	5.0	-15.0	10.0	5.0	-15.0
REG	LSE	-5.0	-25.0	2.0	-5.0	-25.0
DEF	dtY	1	1	0	0	0
DEF	dEt	15	15	15	30	30
DEF	dSt	10.0	15.0	10.0	15.0	15.0
Fan	FSt	8.0	-5.0	50.0	8.0	-5.0
Fan	Fdt	1	2	0	1	2
Fan	dt	2	2	0	2	2
Fan	dFd	1	1	0	1	1

- Follow the instructions in paragraph 1 to access level 2 programming
- Press the “up” or “down” keys until you reach the “CnF” directory
- Press the “set” key (the LOC parameter will appear)
- Press the “up” key until you reach the “CPP” parameter
- Press the “set” key (the number 0 will appear)
- Press the “up” key until you reach the number corresponding to the required program
- Then press the “set” key to confirm.

## ALARM SIGNALS

In the event of an alarm, the card normally activates the following

- The relevant alarm code is shown on the display. In particular, the control alternates the alarm code and the temperature that is normally shown on the display; if there is more than one alarm, they are displayed in succession, alternated with the temperature
- The alarm LED is switched on
- The alarm relay is triggered.

For some alarms and signals, the LED and/or relay are not triggered. The table below gives a detailed description for each alarm and the relevant actions undertaken. Pressing any button will deactivate the relay (if triggered) and the LED will blink, while the alarm code will remain on the display. The LED will switch off and the alarm code will disappear only when the cause behind it has ceased. The alarm codes are listed in the table below:

## Code displayed Description/Control

E1	<b>cold room probe temperature error</b> if a probe is used for adjustment, the compressor will be activated cyclically and defrosting cycles will be disabled; if a balanced network probe is enabled, adjustment will continue, bypassing the malfunctioning probe	yes	yes	automatic when the condition ceases
E2	<b>End defrostin probe g error</b> defrosting will end due to timeout	yes	yes	automatic when the condition ceases
E3	<b>3<sup>rd</sup> probe error</b> (condenser temperature) the associated controls are disabled	blink.	no	automatic when the condition ceases
	<b>3<sup>rd</sup> probe error</b> (2nd evaporator temperature) defrosting will end due to timeout	yes	yes	
	<b>heat alarm (*)</b> adjustment is disabled	yes	no	automatic when the condition ceases
	<b>HP pressure switch alarm(*)</b> adjustment is disabled	yes	no	automatic when the condition ceases
	<b>LP pressure switch alarm(*)</b> adjustment is disabled	yes	no	automatic when the condition ceases
E4	<b>repeated heat alarm</b> adjustment is disabled permanently	yes	yes	at switch on
E5	<b>repeated HP pressure switch alarm</b> adjustment is disabled permanently	yes	yes	at switch on
E6	<b>repeated LP pressure switch alarm</b> adjustment is disabled permanently	yes	yes	at switch on
LO	<b>low temperature alarm</b>	yes	yes	automatic when the condition ceases
HI	<b>high temperature alarm</b>	yes	yes	automatic when the condition ceases
EE	<b>data saving alarm</b> default parameters are loaded	yes	yes	at power-on or after the parameter has been stored to memory
Ec	<b>condenser cleaning alarm</b>	blink.	no	automatic when the condition ceases
Er	<b>network alarm (**)</b>	yes	yes	automatic when the condition ceases
Ed	<b>defrosting timeout alarm</b>	blink.	no	automatic at the start of the next defrost
Od	<b>door open timeout alarm</b> normal operation is enabled again	blink.	no	automatic when the condition ceases
nx	<b>slave x alarm</b> (on master only)	yes	progr.	automatic when the condition ceases
Ux	<b>slave x not connected</b> (on master only) the slave is not controlled	blink.	no	automatic when the condition ceases
u0	<b>master not connected</b> (on slave only) the slave is released from the network and operates autonomously	blink.	no	automatic when the condition ceases
dx	<b>slave x download failed</b> (on master only)	blink.	no	manual or automatic when the condition ceases

- There is no reading on the display.
- Network alarms are where, subsequent to programming, the alarm command is communicated from the master to all network devices, in the event that the alarm relay is triggered on the master itself
- During operation, in specific conditions the following signals are displayed:

Code displayed	Description	Notes
OFF	unit in stand-by (operation disabled)	remains until the next ON command
dF	defrosting in progress	see par. "ddL"
dFu	defrosting not performed	displayed for 2 seconds when the defrosting command is not performed because the evaporator temperature is already above the defrosting end temperature (parameter dst)
uM	master unit	at switch on, the network configuration of the unit is displayed
uSx	slave x unit	
Cn	terminal/control connection interrupted	the terminal is not receiving data from the control

If the terminal/control connection does not operate correctly at switch on, the terminal display will read "88,8" and the LEDs will all be switched off.

## EMERGENCY SYSTEM

**PLEASE NOTE: A specialist technical engineer must only perform the operations described here below.**


If the electronic control unit breaks down or presents operating anomalies and it is impossible to replace it immediately, there is an EMERGENCY SYSTEM that can be used to maintain the unit in operation until it can be replaced.

To use this system, proceed as follows:



1. Cut off power to the Block system
2. Remove all jumpers between the L terminals and the common contacts of the card relays (terminals 25-28-33-36-38)
3. As shown in the diagram, connect a thermostat between the L terminal, the NO terminals (terminals 32,37) and the NC terminal (terminal 34) of the compressor, defrosting and fan relays (COMP, DEF and FAN)
4. Fit a jumper between the L terminal and the NO terminal of the ON/OFF relay (terminal 26 supplying power to the crankcase heaters, door and waste, where fitted).
5. Connect the Blocks system back to the mains power, setting the thermostat to the required temperature.
6. PLEASE NOTE: This connection can only be used momentarily. Contact your dealer as soon as possible to replace the malfunctioning card.
7. PLEASE NOTE: Defrosting will be cut out for the entire emergency phase and for this reason, we recommend that cold room door opening be kept to a minimum.
8. When fitting the new control unit, restore all of the connections described in points 2,3,4 and 5.

## Key

- T = Thermostat

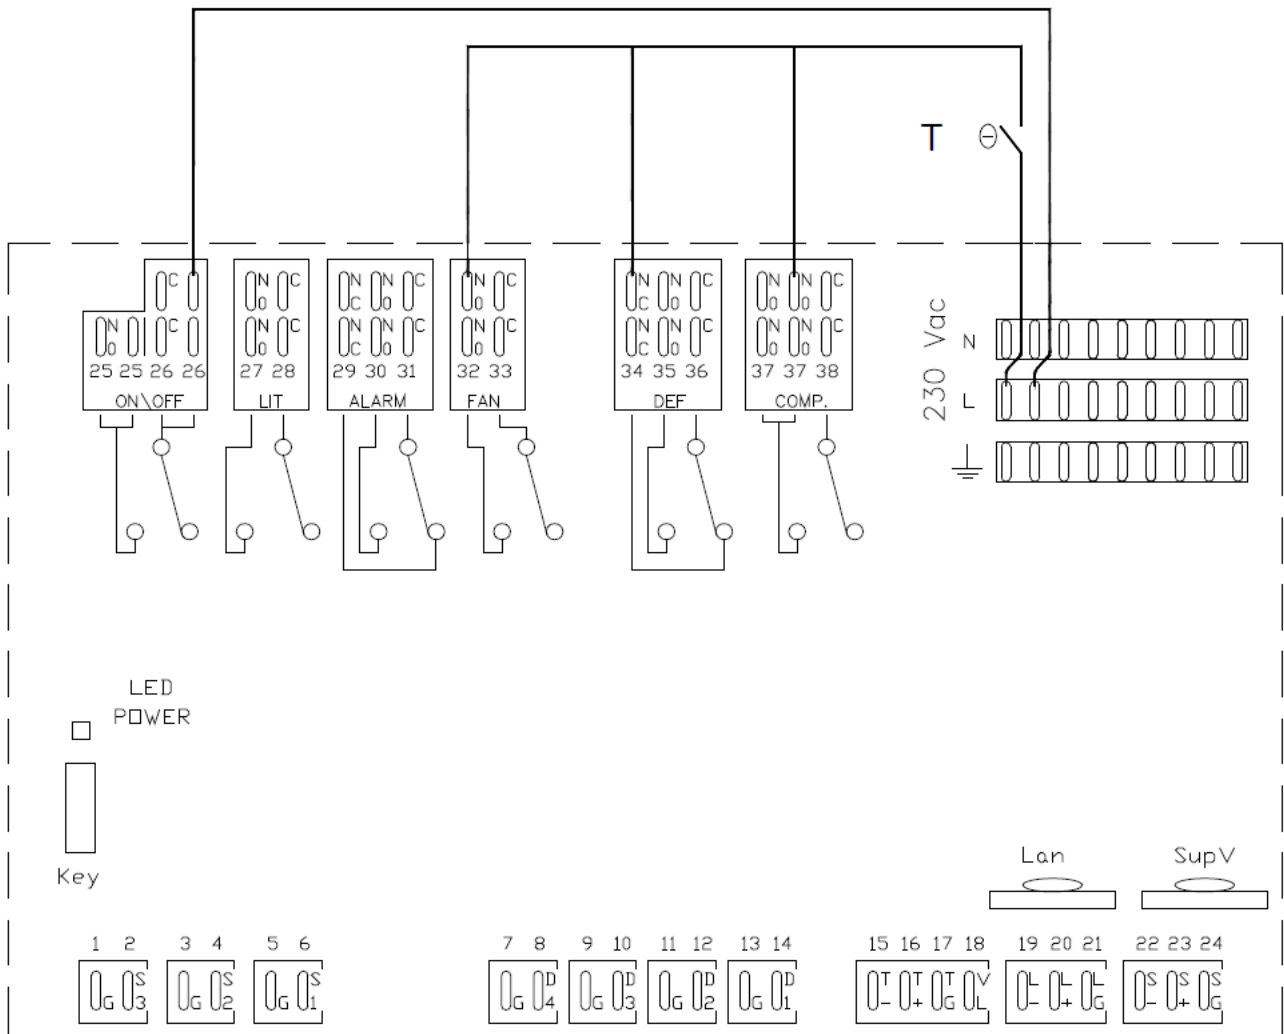

## Documents / Resources

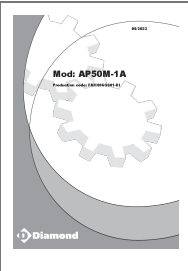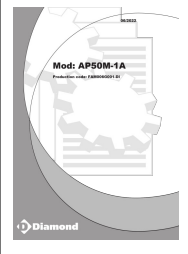	<p><a href="#">Diamond AP50M-1A Overlapping Refrigeration Unit</a> [pdf] User Manual</p> <p>AP50M-1A, FAM006G001-DI, AP50M-1A Overlapping Refrigeration Unit, AP50M-1A Refrigeration Unit, Overlapping Refrigeration Unit, Refrigeration Unit</p>
	<p><a href="#">Diamond AP50M-1A Overlapping Refrigeration Unit</a> [pdf] Installation Guide</p> <p>AP50M-1A, FAM006G001-DI, AP50M-1A Overlapping Refrigeration Unit, AP50M-1A Refrigeration Unit, Overlapping Refrigeration Unit, Refrigeration Unit</p>