



Contents [[hide](#)]

- [1 EG4 12kPV Device Monitoring](#)
- [2 TECHNICAL SPECIFICATIONS](#)
- [3 INVERTER SAFETY](#)
- [4 MONITOR SYSTEM](#)
- [5 MONITOR SYSTEM SETTINGS OVERVIEW](#)
- [6 OPERATION GUIDE](#)
- [7 WARRANTY INFORMATION](#)
- [8 Documents / Resources](#)
 - [8.1 References](#)



EG4 12kPV Device Monitoring



TECHNICAL SPECIFICATIONS

AC INPUT DATA				
NOMINAL AC VOLTAGE	120/240VAC; 120/208VAC (L1/L2/N required)			
FREQUENCY	50/60Hz			
MAX. AC INPUT POWER	8000W			
MIN. GENERATOR SIZE	>5000W			
MAX. GEN GRID PASSTHROUGH CURRENT	80A 80A			
AC GRID OUTPUT DATA				
MAX. OUTPUT CURRENT	33.3A@240VAC 38.5A @208VAC			
OUTPUT VOLTAGE	120/240VAC; 120/208VAC			
NOMINAL POWER OUTPUT	8000W			
OUTPUT FREQUENCY	50/60Hz			
POWER FACTOR	0.99 @ Full Load			
REACTIVE POWER ADJUST RANGE	±0.8			
MAX CONT. LINE WATTAGE	4000W			
PEAK POWER	0.5 s	1 s	1 min	12 min
	16kW	12kW	10kW	8.8kW
OPERATING FREQUENCY	50/60Hz			
THD (V) @FULL LOAD	<3%			
TRANSFER TIME	Single			Parallel
	20 ms – Default, 10 ms – Selectable			20 ms
PV INPUT DATA				
NUMBER OF MPPTS	2			
INPUTS PER MPPT	2			
MAX. USABLE INPUT CURRENT	25/25A			
	25A per MPPT 41.6A in total			
MAX. SHORT CIRCUIT INPUT CURRENT	31/31A			
DC INPUT VOLTAGE RANGE	100-600 VDC			
UNIT STARTUP VOLTAGE	100 VDC			
MPPT OPERATING VOLTAGE RANGE	120-500 VDC			
NOMINAL MPPT VOLTAGE	360 VDC			
MAXIMUM UTILIZED SOLAR POWER	12000W			
RECOMMENDED MAXIMUM SOLAR INPUT	15000W			
EFFICIENCY				
MAXIMUM EFFICIENCY (PV TO GRID)	97.5%			
MAXIMUM EFFICIENCY (BATTERY TO GRID)	94%			
CEC WEIGHTED EFFICIENCY	96.4%			
MAXIMUM EFFICIENCY (PV TO BATTERY)	99.9%			
IDLE CONSUMPTION (STANDBY MODE)	<55W			

BATTERY DATA	
COMPATIBLE BATTERY TYPES	Lead-Acid/Lithium
MAX. CHARGE/DISCHARGE CURRENT	167A @ 48 VDC
NOMINAL VOLTAGE	48 VDC
VOLTAGE RANGE	40-60 VDC (Lithium); 40-60 VDC (Lead-Acid)
RECOMMENDED BATTERY CAPACITY PER INVERTER	>200Ah
GENERAL DATA	
MAX. UNITS IN PARALLEL	10
PRODUCT DIMENSIONS (H×W×D)	29.5×20.5×11.2 in (750×520×285 mm)
UNIT WEIGHT	110 lbs. (50 kg)
DESIGN TOPOLOGY	High Frequency - Transformerless
RELATIVE HUMIDITY	0-100%
OPERATING ALTITUDE	<2000m (<6561 ft)
OPERATING AMBIENT TEMPERATURE RANGE	-13°F – 140°F (-25°C – 60°C)
STORAGE AMBIENT TEMPERATURE RANGE	-13°F – 140°F (-25°C – 60°C)
NOISE EMISSION (TYPICAL)	<50 dB @ 3 ft
LOCKED ROTOR AMPS (LRA)	195A
COMMUNICATION INTERFACE	RS485/Wi-Fi/CAN
STANDARD WARRANTY*	10-year standard warranty
ENCLOSURE RATING	NEMA 4X
SAFETY FEATURES	PV Arc Fault Protection, PV Ground Fault Protection, PV Reverse Polarity Protection, Pole Sensitive Leakage Current Monitoring Unit, Surge Protection Device, integrated PV disconnect
STANDARDS AND CERTIFICATIONS	
UL1741 SB	
CSA C22.2#107.1:2016	
CSA C22.2#330:2017 ED. 1	
HECO SRD-IEEE-1547.1:2020 ED. 2	
RAPID SHUT DOWN (RSD) NEC 2020:690.12	
FCC PART 15, CLASS B	

*For information regarding warranty registration on EG4® Electronics products, please navigate to <https://eg4electronics.com/warranty/> and select the corresponding product to begin the registration process.

INVERTER SAFETY

SAFETY INSTRUCTIONS

International safety regulations have been strictly observed in the design and testing of the inverter. Before beginning any work, carefully read all safety instructions, and always observe them when working on or with the inverter. The installation must follow all applicable national or local standards and regulations.

Incorrect installation may cause:

- Injury or death to the installer, operator or third party
- Damage to the inverter or other attached equipment

IMPORTANT SAFETY NOTIFICATIONS

DANGER: Hazardous Voltage Circuits!

There are various safety concerns that must be carefully observed before, during, and after the installation, as well as during future operation and maintenance. The following are important safety notifications for the installer and any end users of this product under normal operating conditions.

1. Beware of high PV voltage. Install an external DC disconnect switch or breaker and ensure it is in the “off” or “open” position before installing or working on the inverter. Use a voltmeter to confirm there is no DC voltage present to avoid electric shock.
2. Beware of high grid voltage. Ensure the AC switch and/or AC breaker are in the “off” or “open” position before installing or working on the inverter. Use a voltmeter to confirm there is no voltage present to avoid electric shock.
3. Beware of high battery current. Ensure that the battery module breakers and/or on/off switches are in the “open” or “off” position before installing or working on the inverter. Use a voltmeter to confirm there is no DC voltage present to avoid electric shock.
4. Do not open the inverter while it is operating to avoid electric shock and damage from live voltage and current within the system.
5. Do not make any connections or disconnections (PV, battery, grid, communication, etc.) while the inverter is operating.
6. An installer should make sure to be well protected by reasonable and professional insulative equipment [e.g., personal protective equipment (PPE)].
7. Before installing, operating, or maintaining the system, it is important to inspect all existing wiring to ensure that it meets the appropriate specifications and conditions for use.
8. Ensure that the PV, battery, and grid connections to the inverter are secure and proper to prevent damage or injuries caused by improper installation.
9. Some components of the system can be very heavy. Be sure to utilize team-lift among other safe lifting techniques throughout the installation.

WARNING: TO REDUCE THE RISK OF INJURY, READ ALL INSTRUCTIONS!

All work on this product (system design, installation, operation, setting, configuration, and maintenance) must be carried out by qualified personnel. To reduce the risk of electric shock, do not perform any servicing other than those specified in the operating instructions unless qualified to do so.

1. Read all instructions before installing. For electrical work, follow all local and national wiring standards, regulations, and these installation instructions.
2. Make sure the inverter is properly grounded. All wiring should be in accordance with the National Electrical Code (NEC), ANSI/NFPA 70.
3. The inverter and system can inter-connect with the utility grid only if the utility provider permits. Consult with the local AHJ (Authority Having Jurisdiction) before installing this product for any additional regulations and requirements for the immediate area.
4. All warning labels and nameplates on the inverter should be clearly visible and must not be removed or covered.
5. The installer should consider the safety of future users when choosing the inverter's correct position and location as specified in this manual.
6. Keep children from touching or misusing the inverter and relevant systems.
7. Beware! The inverter and some parts of the system can be hot when in use. Do not touch the inverter's surface or most of the parts when they are operating. During operation, only the LCD and buttons should be touched.


WARNING!

Cancer and Reproductive Harm – See www.P65Warnings.ca.gov for more details.

MONITOR SYSTEM

WI-FI DONGLE CONNECTION

A Wi-Fi dongle can be used to monitor the inverter and remotely view the monitoring data on a computer or smart phone. This module can be attached by plugging it in to the “Wi-Fi” connector on the inverter and securing it with the 4 included size M3x.5 Phillips head screws and a PH1 screwdriver. See section 10 for more information on dongle setup.

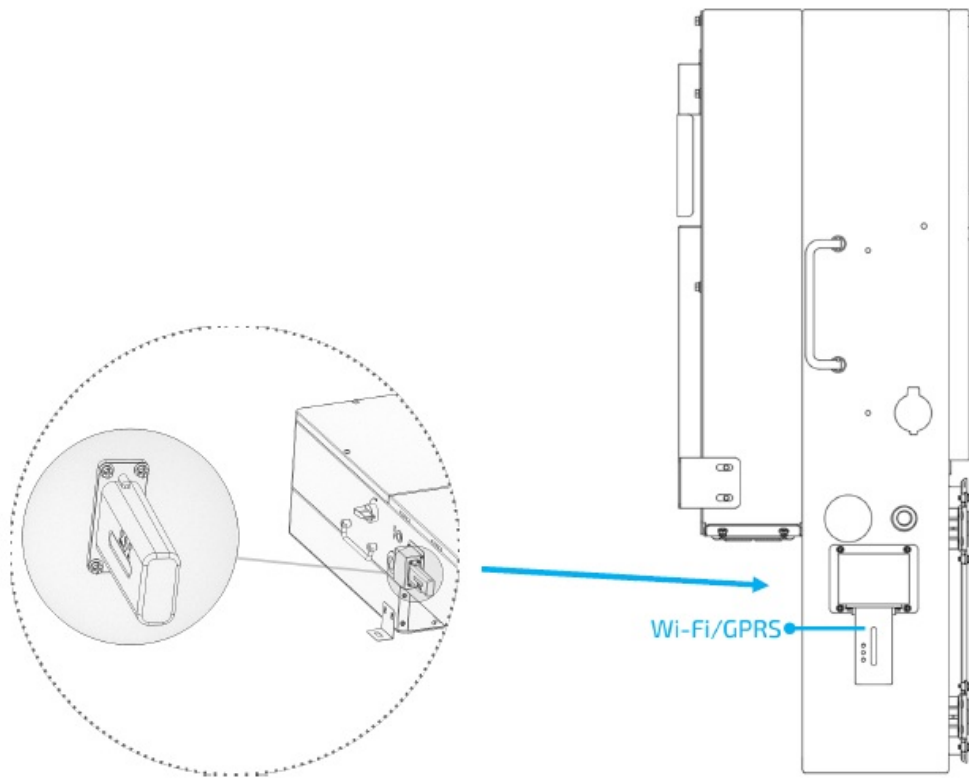

CONNECTIVITY REQUIREMENTS


Due to certain limitations of the Wi-Fi Dongle, please ensure that the home Wi-Fi network signal and security settings meet the following requirements:

- The Wi-Fi dongle only supports wireless networks in the 2.4GHz frequency band. If the router supports the 5GHz or 6GHz network frequencies, please confirm the router supports the 2.4GHz network frequency band and it is enabled.
- The Wi-Fi dongle is compatible with WPA1, WPA2, and WPA3 security protocols on the 2.4GHz network only.
- Ensure the Wi-Fi dongle can obtain an IP address by verifying the home Wi-Fi router has DHCP (Dynamic Host Configuration Protocol) setup and it is enabled.
- It is recommended the home Wi-Fi network name length does not exceed 19 characters, and the password length does not exceed 24 characters. It is not recommended to use any of the following special symbols in the password: @, #, \$, %, &, *, ?, _, /, or using a space “keyboard spacebar”.

THIRD-PARTY RS485 COMMUNICATION

Ports 485B and 485A (pictured below-right) can be used when an electrical meter is not connected. These two ports can be used to communicate with the inverter using the RS485 Modbus protocol.

INV485: This interface (pictured below-left) is shared with the Wi-Fi module. If the Wi-Fi module is not in use, this interface can be used to communicate with the inverter. Please contact the distributor to get the Modbus protocol for third-party app development.

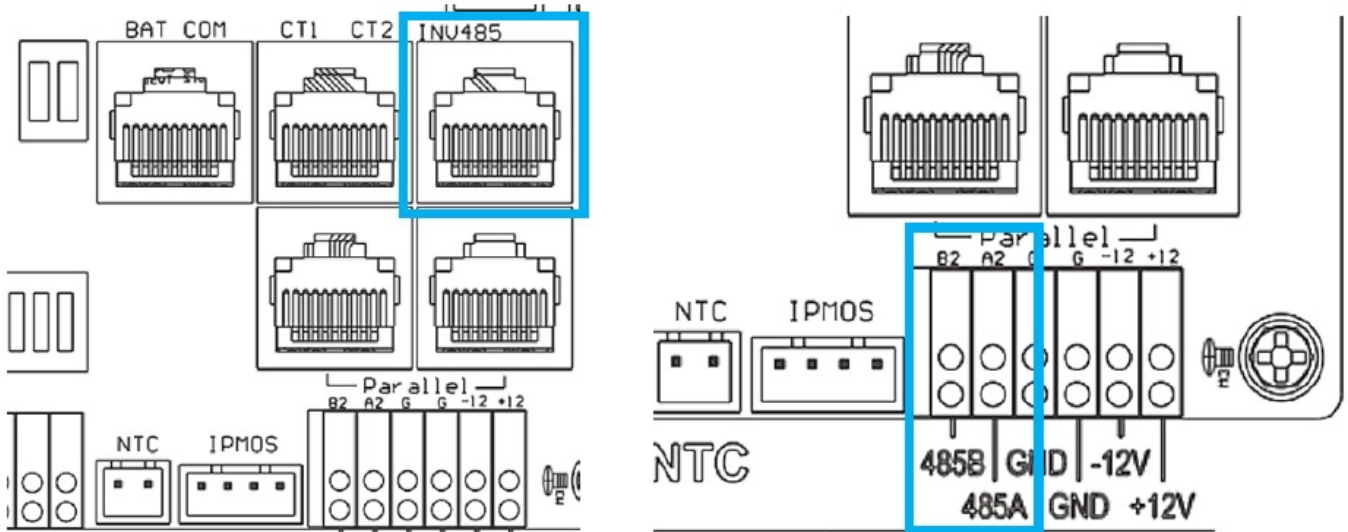

View data on smart phone:


A QR code with app installation steps can be found on the side of the inverter. Or visit our downloads page at www.eg4electronics.com for more information.

ONLINE MONITORING SYSTEM USER INTERFACE

After connecting the Wi-Fi dongle, create an account by registering at <https://monitor.eg4electronics.com/>

DASHBOARD (MONITOR TAB)

NOTE: The monitoring system may change due to updates, so you may find the following UI descriptions vary from the current pages on the site. If you have any questions, or to create distributor or installer accounts, please contact support@eg4electronics.com for assistance.

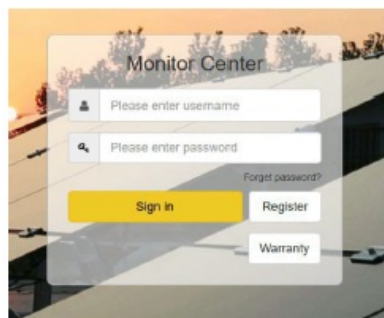

Once the account is created, log in and the main page of the monitoring interface will appear.



NAME	DESCRIPTION
Select station first	Select which station to view, and then select which unit/dongle to view by choosing a serial number from the dropdown list. Note: Unchecking the box will only display serial numbers linked to the account.
Solar Yield	Shows power generated by the solar panels (for AC coupled inverters it shows the power generated by the on-grid inverter). The PV CT clamp will have to be installed to be able to show the data correctly. When the picture of the solar yielding is clicked, it will display how the solar energy has been used that day. A second click will show the totals since commissioning.
Battery Discharging/ Charging	Shows the charge and discharge energy from the battery/batteries. When the battery picture is clicked, the display will switch between battery discharging and battery charging, showing totals for that day and since commissioning.
Feed-in Energy	Shows energy exported to grid for that day and since commissioning. When the picture is clicked, it shows energy imported from the grid for that day and since commissioning.

Consumption	Shows the total energy consumption of the property for that day and since commissioning.
Start Quick Charge	Clicking this will direct the inverter to charge batteries faster for one hour. It will then default back to its original setting.
Select station first	Select which station to view, and then select which unit/dongle to view by choosing a serial number from the dropdown list. Note: Unchecking the box will only display serial numbers linked to the account.

Input & Output Power and Energy Overview can also be viewed via the EG4 Monitoring Software. See following page for examples.



NAME	DESCRIPTION
Input & Output Power	This chart shows the power curve for each day, including solar power, battery charge/discharge power and grid import/export power and consumption. Hovering over an item name will highlight it in the chart. Clicking it will remove it from the list.

Energy Overview	<p>This chart shows energy production and consumption for each day, including solar production, battery, grid export and consumption. Hovering over an item name will highlight it in the chart. Clicking it will remove it from the list.</p> <p>Selecting “Month” will show the energy statistics for each day. Selecting “Year” will show energy for each month. Selecting “Total” will show energy for each year.</p>
------------------------	---


DASHBOARD (DATA TAB)

The Data Tab displays additional detailed data including technical details for PV, battery, grid, and loads, that is helpful for analysis and maintenance.

Five categories make up the Data Tab view: “Chart,” “Energy,” “Data History,” “Local data,” and “Event History.” For more details on each category, please see the following tables.

Chart

Displays various parameters in chart format over a 24-hour period. There are separate charts for “PV Side,” “Battery,” “AC Side,” and “Backup Output.”

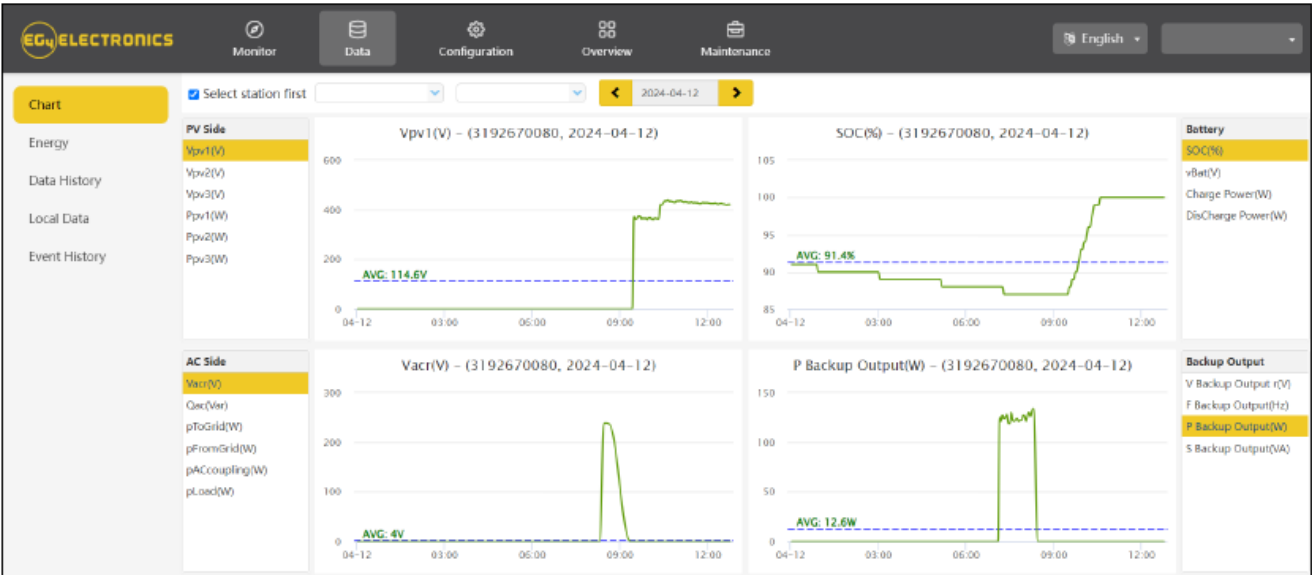


NAME	DESCRIPTION
Vpv	Voltage of solar input

Ppv	Power of solar input
SOC(%)	Battery state of charge
Vacr	Voltage of AC output
Qac	Reactive power of AC output
V Backup Output(V)	Load rated voltage
F Backup Output(Hz)	Load frequency
P Backup Output(W)	Load output power
S Backup Output(VA)	Load Apparent power
pToGrid	Power feed into grid

Energy

Displays how key energy parameters have varied over time.

- Selecting “Month” will show the energy statistics for each day of the month.
- Selecting “Year” will show energy for each month of the year.
- Selecting “Total” will show energy for each year.

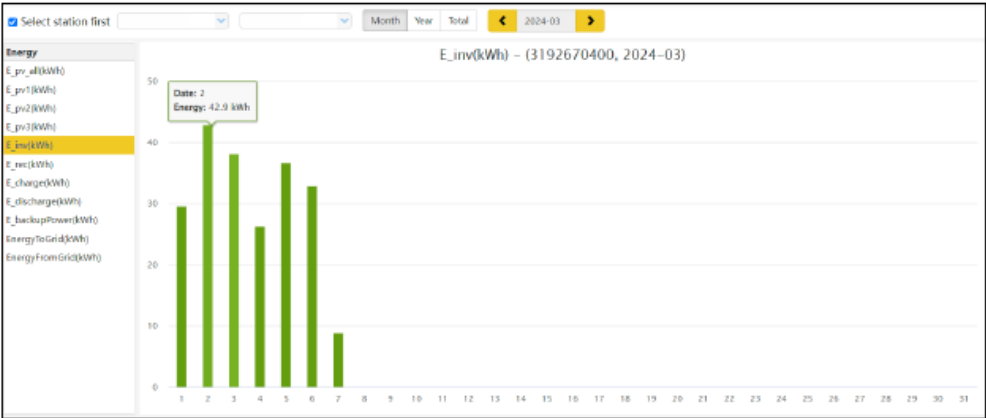

NAME	DESCRIPTION
E_pv1(kWh)	Energy generated by PV string 1

E_pv2(kWh)	Energy generated by PV string 2
E_inv(kWh)	Energy output via AC output
E_rec(kWh)	Energy of AC charge
E_charge(kWh)	Energy used for battery charge
E_discharge(kWh)	Energy output by battery discharging
E_backupPower(kWh)	Load energy output
EnergyToGrid(kWh)	Feed-in energy
EnergyToUser(kWh)	Energy import from grid

History Data

Displays the measured technical characteristics of PV, battery, load, and grid for users or their distributor’s examination to promptly address any potential issues.

Advanced technical knowledge is necessary to properly comprehend this table. End users are advised to concentrate solely on the “Monitor” view, “Chart” and “Energy” sections as these only offer simple to comprehend performance data.

ECUELECTRONICS

Monitor

Data

Configuration

Overview

Maintenance

English

Chart

Select station first

2024-04-12

Export data

Export data(2024-04-12 - 2024-04-05)

Energy

Data History

Local Data

Event History

	Serial number	Time	Status	Vpv1(V)	Vpv2(V)	Vpv3(V)	vBat(V)	SOC(%)	Ppv1(W)	Ppv2(W)	Ppv3(W)	pCharge(%)	pDisCharge(%)	Vac(v)(V)	Vacsv(V)	Vact(V)	Fac(%)	Pinv(v)(V)	Prec(v)(V)	PF(f)	Vepss(v)(V)	Vepss(v)(V)	Vepst(v)
	1	2024-04-12 12:17:51	0x88	425.4	0	0.1	55.7	100%	42	0	0	38	0	0	25.6	0.1	0	0	0	[0]	242.3	0	0
	2	2024-04-12 12:14:49	0xC0	427.1	0	0.1	55.7	100%	0	0	0	0	0	0	25.6	0.1	0	0	0	[0]	241.6	0	0
	3	2024-04-12 12:11:46	0xC0	425.8	0	0.1	55.7	100%	0	0	0	0	0	0	25.6	0.1	0	0	0	[0]	241.4	0	0
	4	2024-04-12 12:08:44	0x88	425.8	0	0.1	55.7	100%	0	0	0	0	0	0	25.6	0.1	0	0	0	[0]	242.3	0	0
	5	2024-04-12 12:05:43	0x88	425.9	0	0.1	55.7	100%	75	0	0	68	0	0	25.6	0.1	0	0	0	[0]	241.9	0	0
	6	2024-04-12 12:02:42	0x88	426.9	0	0.1	55.7	100%	13	0	0	12	0	0	25.6	0.1	0	0	0	[0]	241.6	0	0
	7	2024-04-12 11:59:40	0x88	428	0	0.1	55.7	100%	0	0	0	0	0	0	25.6	0.1	0	0	0	[0]	241.4	0	0
	8	2024-04-12 11:56:39	0xC0	428.8	0	0.1	55.7	100%	0	0	0	0	0	0	25.6	0.1	0	0	0	[0]	242.3	0	0
	9	2024-04-12 11:53:39	0xC0	427.7	0	0.1	55.7	100%	0	0	0	0	0	0	25.6	0.1	0	0	0	[0]	241.6	0	0
	10	2024-04-12 11:50:38	0x88	429.3	0	0.1	55.7	100%	75	0	0	68	0	0	25.6	0.1	0	0	0	[0]	241.4	0	0
	11	2024-04-12 11:47:36	0xC0	427.6	0	0.1	55.7	100%	0	0	0	0	0	0	25.6	0.1	0	0	0	[0]	242.3	0	0
	12	2024-04-12 11:44:32	0xC0	425	0	0.1	55.7	100%	0	0	0	0	0	0	25.6	0.1	0	0	0	[0]	241.6	0	0


HELPFUL TIP: Data can be exported to an Excel file to provide the distributor for technical support. Distributors can then analyze the following factors to perform quick troubleshooting for their end users.

NAME	DESCRIPTION
PtoGrid/PtoUser	To check if CT was connected correctly

Vpv/Ppv	To check the MPPT
Vo/Po/So	To check the load type and if there is an overload when in load mode
Vb/SOC	To check the current state of charge and if the battery is overcharged or overly discharged.
Vac/Fac	To evaluate Grid performance and to check if working voltage and frequency range is adjusted to comply with grid
E-xxday	To evaluate energy distribution
E-xxall	To check if the system is working well under off grid mode

Local Data

The data captured during the offline periods are displayed in the “Local data” section (loss of Internet or Wi-Fi). The only distinction from “Data History” is that it is used for offline data recording. Local data is recorded while the system is offline for more than 20 minutes and is taken every 5 minutes. Data can be stored in the system for a maximum of 90 days.

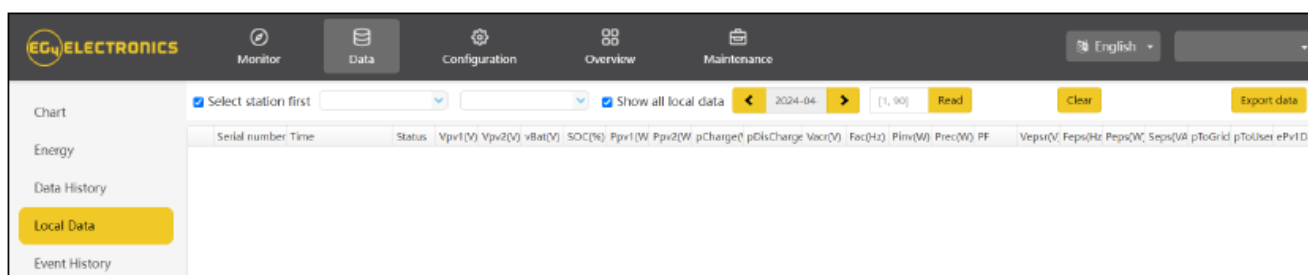

History Event

The “Event History” section displays a timeline of events. (Notice and Fault events) If there is not a record of a “historical event,” the hybrid inverter is properly connected and working without any issues.

The screenshot shows the EQuELECTRONICS Event History interface. The 'Data' tab is selected, and the 'Event History' section is highlighted in the left sidebar. The main area displays a table with columns for Station, Serial number, Event Type, Event, Start Time, and Time Recovered. The table contains 7 rows of event data.

Station	Serial number	Event Type	Event	Start Time	Time Recovered
1		Notice	W016: No AC Connection	2024-04-12 09:21:36	
2		Notice	W026: Battery voltage low	2024-04-12 08:28:52	2024-04-12 09:21:36
3		Notice	W027: Battery open	2024-04-12 08:20:04	2024-04-12 09:21:36
4		Notice	W016: No AC Connection	2024-04-11 11:01:26	2024-04-12 08:26:52
5		Notice	W000: Communication failure with battery	2024-04-09 10:33:05	2024-04-09 12:49:40
6		Notice	W026: Battery voltage low	2024-04-09 09:58:07	2024-04-11 11:01:26
7		Notice	W027: Battery open	2024-04-09 09:22:58	2024-04-11 11:01:26

DASHBOARD (CONFIGURATION TAB)

The “Configuration” page is used for users to manage their station, dongle, and user information.

<div>EG4ELECTRONICS</div> <div>MonitorDataConfigurationOverviewMaintenance</div> <div>English</div>						
Stations	<div>+ Add Station</div> <div>Search by station name</div>					
	Station name	Country	Timezone	Daylight saving time	Create date	Action
	1	United States of America	GMT -6	No	2023-09-15	Station Management
	2	United States of America	GMT -6	No	2023-04-13	Station Management
Dongles						
Devices						
Users						

Stations

The Stations section will show all stations linked to the account. Clicking on a station name will display all inverters under that station or location.

Clicking the Add Station button creates another site if there is more than one station under the same account. This is useful for distributors who have multiple customers who would like assistance with monitoring/troubleshooting their inverters.

<div>EG4ELECTRONICS</div> <div>MonitorDataConfigurationOverviewMaintenance</div> <div>English</div>								
Stations	<div>All StatusAll Type</div> <div>+ Add Dongle</div> <div>Import Dongle</div> <div>Search by dongle SN</div>							
	Serial number	Dongle type	Station name	EndUser	Firmware	Create date	Connect Status	Last Update Time Action
	1	Wi-Fi		EndUser		2023-08-11	Lost	2024-01-18 13:05 Management
	2					2023-09-22	Lost	2023-08-15 14:36 Management
	3	Wi-Fi				2023-08-02	Lost	2023-08-15 14:36 Management
Dongles	4					2024-03-03	Lost	2024-03-07 13:00 Management
Devices	5	Wi-Fi				2023-10-13	Connected	2024-03-07 14:28 Management
Users								

Dongles

Users can add the dongle Serial Number (SN) in the station if they have more than one inverter in the station. The inverter will be shown on the system immediately when powered on after adding the dongle and configuring the proper password for the Wi-Fi dongle. Dongles can also be searched by individual serial number.

IMPORTANT: Before configuring the password for the Wi-Fi dongle, please add the dongle to the monitor system.

Stations																
<div><div></div><div>All Status</div><div>All Device Type</div><div>All Measurement</div><div>All Battery Type</div></div> <div>Search by inverter/dongle SN</div> <div>Complex export</div> <div>Export data</div>																
<div>Serial number Dongle</div> <div>Station name EndUser</div> <div>Device type Battery type Power Rat Firmware</div> <div>Status</div> <div>Connect Status</div> <div>Last Update Tin BattParalk BattCapac Export</div> <div>Commission Warranty exp Action</div>																
Dongles	1			18KPV	Lithium Ix	12KW	FAAB-000E	20	Lost	2024-01-29 08: 2	20048	true				Management
Devices	2			18KPV	Lithium Ix	12KW	FAAB-1110	136	Connected	2024-03-07 13: 5	20048	true				Management
	3			18KPV	Lithium Ix	12KW	FAAB-1212	0	Connected	2024-03-07 11: 2	560	true				Management
	4			18KPV	Lithium Ix	12KW	FAAB-1818	192	Connected	2024-03-07 13: 0	589	true				Management
Users	5			18KPV	Lithium Ix	12KW	FAAB-1110	12	Connected	2024-03-07 13: 0	100	true				Management

Devices

Users can see the entire inverter list connected to the account and check if the inverter

is online. Data can be exported to an Excel file for record keeping or to view specific inverter stats.

Stations

Dongles

Devices

Users

+ Add Distributor_2

+ Add Installer

+ Add end user

All Role

Show disabled user

Username

Search by username

Username	Nickname	Role	E-mail	Country	Timezone	Tel number	Address	Create date	User Permiss	Installer Code	Tech support typ	Tech suppor	Cluster	Action
1				United Sta	GMT -6			2023-08-29	Normal				North An	User Management
2				United Sta	GMT 0			2023-12-01	Normal				North An	User Management
3				United Sta	GMT -5			2024-01-03	Normal				North An	User Management
4				United Sta	GMT -7			2024-01-05	Normal				North An	User Management
5				United Sta	GMT -6			2024-01-22	Normal				North An	User Management

Users

This tab shows a full list of users, distributors and any other roles linked to the account. End users can edit password and personal information in the user page. Distributors can add an installer account and end user account on this page.

Station Overview

Device Overview

Search by station name

Name	Status	SolarPower	ChargePower	DischargePower	Load	Solar Yield	BatteryDischarge	FeedEnergy	ConsumptionEn	Installer	EndUser
1	Offline	0 W	0 W	0 W	0 W	0 kWh	0 kWh	0 kWh	0 kWh		
2	Offline	0 W	0 W	0 W	0 W	0 kWh	0 kWh	0 kWh	0 kWh		
3	Offline	0 W	0 W	0 W	0 W	0 kWh	0 kWh	0 kWh	0 kWh		
4	Offline	0 W	0 W	0 W	0 W	0 kWh	0 kWh	0 kWh	0 kWh		

DASHBOARD (OVERVIEW TAB)

“Overview” allows EG4 or its distributors to quickly monitor system-wide data for their end users, such as solar yields, battery discharging, and other factors.

Station Overview

All the stations linked to the account can be found here. Clicking a station name will switch the main page to show the real time data.

Station Overview

Device Overview

All Status

Search by inverter SNI

Serial number	Status	Device type	SolarPower	ChargePower	DischargePow	Load	Solar Yield	BatteryDischa	FeedEnergy	Consumption	Station name	Parallel	Action
1	Offline	18KPV	0 W	0 W	0 W	0 W	0 kWh	3550.1 kWh	4330.2 kWh	0 kWh			
2	Offline	18KPV	0 W	0 W	0 W	0 W	0 kWh	64.9 kWh	16.9 kWh	39.8 kWh			
3	Offline	18KPV	0 W	0 W	0 W	0 W	273.1 kWh	5502.1 kWh	5191.1 kWh	79.1 kWh			
4	Notice	18KPV	13 W	12 W	0 W	0 W	36.7 kWh	30.1 kWh	1.9 kWh	244 kWh			
5	Normal	18KPV	0 W	0 W	11 kW	-221 W	36.6 kWh	17145.7 kWh	14848.1 kWh	0 kWh			
6	Offline	6000XP	0 W	0 W	0 W	0 W	0 kWh	35 kWh	0 kWh	12.2 kWh			
7	Offline	6000XP	0 W	0 W	0 W	0 W	387.1 kWh	651.8 kWh	0 kWh	156.2 kWh			
8	Offline	6000XP	0 W	0 W	0 W	0 W	0 kWh	13.2 kWh	0 kWh	0 kWh			
9	Normal	6000XP	5 kW	4 kW	0 W	0 W	181 kWh	144.4 kWh	0 kWh	20.4 kWh			

Device Overview

All the inverters linked to the account can be found here. Clicking a serial number will switch the main page to show the real time data for that inverter.


DASHBOARD (MAINTENANCE TAB)

The “Maintenance” view is used for firmware updates and to remotely change settings on the inverter by selecting a station and then an inverter serial number. Distributors can manage all settings for all inverters at once with the help of the batch setting capability supported by EG4’s monitor system.




MONITOR SYSTEM SETTINGS OVERVIEW

All of the settings that will be discussed in section 4 can be found under the Maintenance Tab of the EG4 Monitor site, as shown below.

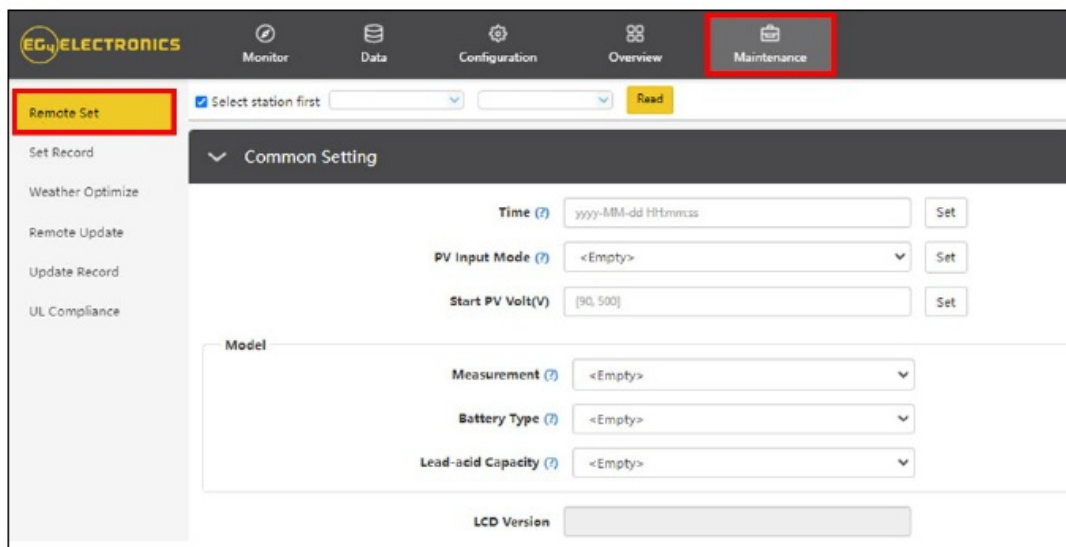

COMMON SETTINGS

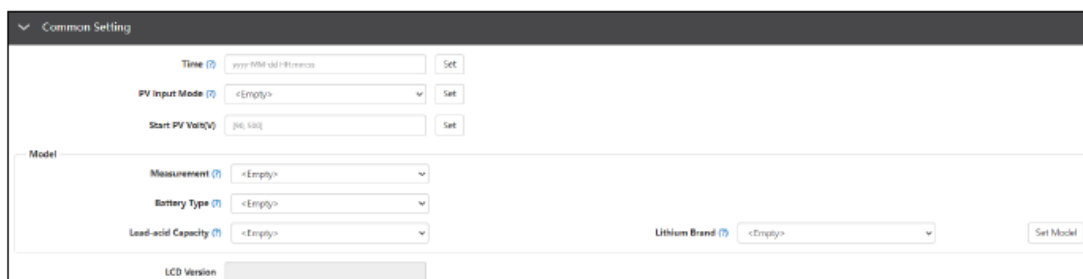

Model

- **Time:** Set the time/date of the inverter. The input format is 2019-02-14 14:44:00 (YYYY-MM-DD HH:MM:SS.)
- **PV Input Mode:** The connection type of solar modules.
- **Start PV Volt (V)**
- **Measurement:** Choose the correct measurement, Meter Type or CT Sample Ratio according to the external measuring device you installed. The default measurement is CT with sample ratio: 1000/1, and you can adjust the measurement if you have

installed a meter to the inverter.

- **Battery Type:** Choose the battery type and then select Lithium Brand (for closed-loop communications), or battery capacity for Lead-Acid/Lithium batteries with no communications. Please note after setting the battery type, all other settings will reset to default.
- **Lead-acid Capacity:** Set the total capacity when using Lead-Acid batteries.
- **Lithium Brand:** Choose the brand of lithium battery being used.

NOTE: When you need to change the “Model” settings, you need to set inverter to “Standby” first, and then press “Set Battery” to change the model.

APPLICATION SETTINGS

The screenshot displays the 'Application Setting' window with the following settings:

- No Batteries:** Enable (checked), Disable
- Power Backup:** Enable (checked), Disable
- Grid Sell Back:** Enable (checked), Disable
- Fast Zero Export:** Enable (checked), Disable
- PV Arc:** Enable (checked), Disable
- Grid Loss Warning Clear:** Enable (checked), Disable
- Normal / Standby:** Normal (selected), Standby
- Micro-Grid:** Enable (checked), Disable
- System Charge SOC Limit(%):** 100.000, Set
- Seamless EPS Switching:** Enable (checked), Disable
- Grid Sell Back Power(kW):** 10.000, Set
- Off-Grid Mode:** Enable (checked), Disable
- PV Arc Fault Clear:** Clear
- RSO:** Enable (checked), Disable
- Reboot Inverter:** Reboot
- Min. AC Input Power(kW):** 10.0000, Set
- System Charge Volt Limit(V):** 140.000, Set
- Parallel System:**
 - Set System Type:** <Empty>, Set
 - Set Composed Phase:** <Empty>, <Empty>, Set
- Skew Battery:** Enable (checked), Disable
- Parallel Setting Data Sync:** Enable (checked), Disable

- **No Batteries:** Allows access to off-grid mode when only solar input is available without battery storage.
- **Power Backup:** If Power Backup function is Enabled, the LOAD terminal will maintain output when AC is interrupted. You can set “Power Backup” via web or “Off-Grid Output” by LCD. (When enabling this mode, the inverter’s output will be uninterrupted.)
- **Seamless EPS Switching:** When power is interrupted, the inverter will turn to EPS mode seamlessly unless there is a grid voltage fluctuation issue; in which case, we suggest you set to “Disable” to avoid misjudgment.
- **Grid Sell Back:** In some cases, the customer cannot feed energy into grid. If the customer does not want to feed energy to grid, the Grid Sell Back function can be disabled.
- **Grid Sell Back Power(kW):** If Grid Sell Back function is enabled, you can adjust the power limitation to feed into the grid.
- **Fast Zero Export:** Normally the inverter will adjust output power every 5 seconds to

avoid export. If Fast Zero Export is enabled, the inverter will adjust output power accordingly.

- Off-Grid Mode: Enable for nominal Off-Grid operations while utilizing AC Input as a backup power source, allowing for absolute zero export.
- PV Arc: The inverter will detect when there is a PV input Arc Fault and protect the inverter from an Arc Fault.
- PV Arc Fault Clear: Clear the records of PV Arc fault.
- Grid Loss Warning Clear: Enable for Off-Grid Operations.
- RSD: The rapid shut-down detection of the PV inputs.
- Normal/Standby: “Standby” is used to set the system into standby mode, stopping feed in, charge and discharge. “Normal” is used to set the whole system to auto run status.
- Restart Inverter: Resets the inverter.
- Micro-Grid: Should be set only when the generator is connected to the Inverter’s Grid terminal. With this option enabled, the inverter will use AC power to charge the battery and will not export any power through the Grid terminal if AC power is present at the inverter’s Grid terminal.
- Max. AC Input Power(kW): The inverter can adjust the charge power based on the detected inverter’s load consumption and maximum AC input power limitation.
- System Charge SOC Limit(%)
- System Charge Volt Limit(V)

Parallel System

Parallel System

Set System Type (?)	<Empty>	Set	Share Battery (?)	Enable	Disable	
Set Composed Phase (?)	<Empty>	<Empty>	Set	Parallel Setting Data Sync (?)	Enable	Disable

Set System Type: The EG4 12kPV supports paralleling of multiple inverters. You would need to connect the LOAD terminals together for paralleling. In this scenario we need to set one of the inverters to Master and the others to Slave. If you install all inverters as single-phase, be sure to set one of the inverters to “1 Phase Master.” If you want to compose a three-phase system, set one of the inverters to “3 Phase Master.” All inverters are set to Slaves by default, so when you get the inverters, you will need to set one inverter to Master when paralleling multiple inverters.

- **Share Battery:** For paralleled systems: if all inverters connect to same battery bank, you must enable Share Battery. The Master inverter will broadcast the battery information to all other inverters.
- **Set Composed Phase:** When you use ≥ 3 inverters to compose a three-phase system, you must connect the AC terminals of the inverter to a three-phase grid (used when composing a three-phase system). If the system is connected to the grid, the inverter will detect the phase it connects to automatically, record it and output the phase as it detected. If the user setting is different from the phase the inverter detected, it will output the phase detected. The output phase record will be cleared if the customer clears it. If the system is not connected to the grid, the inverter will use the user output phase setting to compose the three-phase output. If the customer sets the wrong phase, i.e., 2 U phase and no W phase, the system will report error.
- **Parallel Setting Data Sync:** Syncs master inverter settings to those of the slave inverter(s).

GRID CONNECT SETTINGS

Grid Connect Setting

Grid Frequency(Hz) (?)

<Empty>

Set

Grid Type (?)

<Empty>

Set

- **Grid Frequency:** If the Grid Frequency is nominal at 50Hz, then the inverter's Frequency will be adjusted to 50Hz automatically. If there is no grid power and it is read as 50Hz but the devices are 60Hz, then you can set it to 60Hz manually. This is based on the rated frequency of the local grid regulation and devices.
- **Grid Type:** Select the correct Grid type to function, such as split phase: 240/120 or 208/120V.

CHARGE SETTINGS

The screenshot displays the 'Charge Setting' interface with the following sections and controls:

- Top Section:**
 - Batt Charge Control:** Radio buttons for 'Volt' and 'SOC'.
 - Charge Current Limit(Adc):** Input field set to [0.25] with a 'Set' button.
 - Charge Last:** 'Enable' and 'Disable' buttons.
 - Battery Backup Mode:** 'Enable' and 'Disable' buttons.
- AC Charge Section:**
 - AC Charge Enable:** 'Enable' and 'Disable' buttons.
 - AC Charge Based On:** Dropdown menu set to '<empty>' with a 'Set' button.
 - AC Charge Power(kW):** Input field set to [0.25] with a 'Set' button.
 - Start AC Charge SOC(%):** Input field set to [0.90] with a 'Set' button.
 - Stop AC Charge SOC(%):** Input field set to [0.100] with a 'Set' button.
 - Start AC Charge Volt(V):** Input field set to [40.5] with a 'Set' button.
 - Stop AC Charge Volt(V):** Input field set to [40.59] with a 'Set' button.
 - AC Charge Start Time 1:** Input field set to [0.23] with a 'Set' button.
 - AC Charge Start Time 2:** Input field set to [0.23] with a 'Set' button.
 - AC Charge End Time 1:** Input field set to [0.23] with a 'Set' button.
 - AC Charge End Time 2:** Input field set to [0.23] with a 'Set' button.
 - AC Charge Start Time 3:** Input field set to [0.23] with a 'Set' button.
 - AC Charge End Time 3:** Input field set to [0.23] with a 'Set' button.
- Battery Backup Mode Section:**
 - PV Charge Priority:** 'Enable' and 'Disable' buttons.
 - PV Charge Power(kW):** Input field set to [0.25] with a 'Set' button.
 - PV Charge Priority Stop SOC(%):** Input field set to [0.100] with a 'Set' button.
 - PV Charge Priority Stop Volt(V):** Input field set to [40.59] with a 'Set' button.
 - Battery Priority Start Time 1:** Input field set to [0.23] with a 'Set' button.
 - Battery Priority Start Time 2:** Input field set to [0.23] with a 'Set' button.
 - Battery Priority End Time 1:** Input field set to [0.23] with a 'Set' button.
 - Battery Priority End Time 2:** Input field set to [0.23] with a 'Set' button.
 - Battery Priority Start Time 3:** Input field set to [0.23] with a 'Set' button.
 - Battery Priority End Time 3:** Input field set to [0.23] with a 'Set' button.

- **Battery Charge Control:** If the inverter communicates with the Lithium battery and is capable of closed-loop communication, then you can select charge control according to “SOC.” If communication is not available, you can always select charge control according to “VOLT.”
- **Charge Current Limit (Adc):** The Max. Charge current limitation of the entire system.
- **Charge Last:** Charges battery last.
- **Battery Backup Mode**

AC Charge

- **AC Charge Enable:** If using AC (i.e., the Grid) to charge the battery, the customer must (1) Enable “AC Charge Enable,” (2) set the max power to charge the battery from AC (AC Charge Power (kW)), (3) set the SOC and Voltage Limits (Start AC Charge SOC(%)/Volt(V) and Stop AC Charge SOC (%)/Volt(V)) and (4) set the time period to use the AC to charge the battery. There are 3 time periods that can be set. If the battery SOC and Voltage is within the limits, the system will use AC from the Grid to charge the battery during the time that is set.
- **AC Charge Based On:** According to time: Set a preferred time period to charge your battery range: 00:00 – 23:59. According to voltage: Set AC to charge the battery when it drops to a pre-set voltage. Range: 50-59V. (Recommend using with Lithium Battery)
- **AC Charge Power (kW):** The max charging power from grid.
- **AC Charge:** Set AC charging according to Time or Volt(V)/SOC (%).
Start AC Charge SOC(%)/Volt(V): Limit of SOC and Voltage at which system will start charging batteries from AC.
- **Stop AC Charge SOC(%)/Volt(V):** Limit of SOC and Voltage at which system will stop

charging batteries from Grid.

- AC Charge Start Time 1-3: Start AC Charging according to these time settings.
- AC Charge End Time 1-3: Stop AC Charging according to these time settings.

Battery Backup Mode

- PV Charge Priority: In this mode, solar will charge battery first. After charging batteries, solar will supply any loads. Lastly, it will feed into the grid if surplus power is generated.
- PV Charge Power(kW)
- PV Charge Priority Stop SOC (%): When SOC reaches this limit, charge first mode will end.
- PV Charge Priority Stop Volt (V): When voltage reaches this limit, charge first mode will end.
- Battery Priority Start Time 1-3: Start time for charge first setting.
- Battery Priority End Time 1-3: End time for charge first setting.

GENERATOR CHARGE SETTINGS

Generator Charge	
Generator	
Batt Charge Current Limit(Adc) (7)	[0, 4000] Set
Charge Start Volt(V)	[40, 57] Set
Charge End Volt(V)	[40, 50] Set
Gen Rated Power(kW) (7)	[0, 25.5] Set
Charge Start SOC(%)	[0, 100] Set
Charge End SOC(%)	[0, 100] Set

- Batt Charge Current Limitation (Adc) – Battery charge current limitation from Generator.
- Gen Rated Power (kW) – You can limit the battery charge power based on the detected inverter's load consumption and Generator input power limitations.
- Charge Starts Volt(V)/SOC (%) - While using auto-start function of the generator, you can limit the charge start voltage / SOC to start up the generator automatically.
- Charge End Volt(V)/SOC (%) - While using auto-start function of the generator, you can limit the charge end voltage / SOC to turn off the generator automatically.

DISCHARGE SETTINGS

The screenshot displays the 'Discharge Setting' interface, which is organized into several sections for configuring battery discharge parameters:

- Start Discharge Control:** Includes a dropdown menu to select between 'VOLT' and 'SOC'.
- Discharge Current Limit (Adc):** A field to set the maximum discharge current limit when grid power is on.
- Start Discharge P_Import(W):** A field to set the power threshold (default 100W) for starting discharge when grid power is higher.
- On-Grid Cut-Off SOC(%) / Volt(V):** Fields to set the SOC or voltage threshold for stopping discharge when connected to the grid.
- Off-Grid Cut-Off SOC(%) / Volt(V):** Fields to set the SOC or voltage threshold for stopping discharge when not connected to the grid.
- Forced Discharge:**
 - Forced Discharge Enable:** A toggle switch to enable or disable the forced discharge function.
 - Forced Discharge Power(kW):** A field to set the power limit for forced discharge.
 - Stop Discharge SOC(%) / Volt(V):** Fields to set the SOC or voltage threshold for stopping forced discharge.
 - Forced Discharge Start Time 1 & 2:** Time selection fields for two different discharge periods.
 - Forced Discharge End Time 1 & 2:** Time selection fields for two different discharge periods.
 - PSelfToGrid(Comp. A) HEMS ON:** A toggle switch for power self-consumption.
- Peak Shaving:**
 - Grid Peak-Shaving:** A toggle switch to enable or disable grid peak-shaving.
 - Grid Peak-Shaving Power 1(kW) & 2(kW):** Fields to set power limits for two different peak-shaving periods.
 - Start Peak-Shaving SOC 1(%) & 2(%) / Volt 1(V) & 2(V):** Fields to set SOC or voltage thresholds for two different peak-shaving periods.
 - Peak Shaving Start Time 1 & 2:** Time selection fields for two different peak-shaving periods.
 - Peak Shaving End Time 1 & 2:** Time selection fields for two different peak-shaving periods.
- AC Couple:**
 - AC Couple Start Volt(V) & SOC(%) / End Volt(V) & SOC(%)**: Fields to set voltage or SOC thresholds for starting and ending AC coupling.
- Smart Load:**
 - Smart Load:** A toggle switch to enable or disable the smart load function.
 - Smart Load Start Volt(V) & SOC(%) / End Volt(V) & SOC(%)**: Fields to set voltage or SOC thresholds for starting and ending smart load.

- **Batt Discharge Control:** If the inverter communicates with the Lithium battery and is capable of closed-loop communication, then you can select discharge control according to “SOC.” When using Lead-Acid batteries or Lithium batteries without communication, you can always select discharge control according to “VOLT.”
- **Discharge Current Limit (Adc):** The max. discharge current limit when grid power is on.
- **Start Discharge P_Import(W):** Default value is 100 which means the battery will begin to discharge power to take the load when the import power from grid is higher than 100W. (Adjust range [50-100]).
- **On-Grid Cut-Off SOC(%)/Volt(V):** When the inverter connects to the grid and if the battery is discharging to take the load, it will stop discharge when the SOC/Voltage is lower than this limit.
- **Off-Grid Cut-Off SOC(%)/Volt(V):** When the inverter is not connected to the grid and the battery is discharging to take the load, the battery will stop discharging when the SOC/Voltage is lower than this limit.

Forced Discharge

- **Forced Discharge Enable/Disable:** If the customer wants to simply discharge the battery; you can enable forced discharge function and set both the discharge power and time period.
- **Forced Discharge Power(kW):** Forced discharge power limit.
- **Stop Discharge SOC(%)/Volt(V):** If Battery SOC is lower than this limit, the inverter will stop forced discharging function.

- PVSellToGrid(Comp. w/ NEM3.0): Enable or disable PV sell back to grid feature.
- Forced Discharge Start Time 1-3: Start time for Forced Discharge.
- Forced Discharge End Time 1-3: End time for Forced Discharge.

Peak Shaving

- Grid Peak-Shaving: Peak-Shaving is used to avoid peak demand charges from the grid. Peak shaving can be accomplished by halting Grid Charging at specific times. For example, during periods of peak demand (i.e., high grid rates), or when the batteries are near fully charged based on SOC and Voltage. See Section 11.1.2 for more information regarding Peak-Shaving settings.
- Grid Peak-Shaving Power 1-2(kW): Used to set the max. power that the inverter can draw from the grid.
- Start Peak-Shaving Volt/SOC 1(V): The point at which Peak-Shaving starts.
- Start Peak-Shaving Volt/SOC 2(V): The point at which Peak-Shaving stops.
- Peak-Shaving Start Time 1-2: The time of day at which charging by the grid will be halted.
- Peak-Shaving End Time 1-2: The time of day at which charging by the grid will resume.

AC Couple

- AC Couple Start Volt(V)/SOC (%): AC Coupling will start at this set Voltage/SOC.
- AC Couple Stop Volt(V)/SOC (%): AC Coupling will stop at this set Voltage/SOC.

Smart Load

- Smart Load Enable/Disable: When Smart load function is enabled, the GEN terminal will be reused to Smart Load, and the inverter will offer power to this load based on the setup values.
- Start PV Power (kW): This is the min. PV power limit to function with smart load output.
- On Grid Always On: Once this function is enabled, smart load will always function when grid power is on.
- Smart Load Start SOC (%) / Volt (V): The high limit for battery to turn on smart load.

- Smart Load Stop SOC (%) / Volt (V): The low limit for battery to turn off smart load.

BATTERY

▼ Battery

Read

☐ Restart Battery Module 0

Restart Battery Module

Restart battery module

RESET

▼ Reset

All to Default

Reset

Reset: Reset all settings to default.

OPERATION GUIDE

OPERATION MODE AND FUNCTION

SELF-USAGE MODE


In this mode, the order of priority for powering loads is Solar>Battery>Grid. The order of priority for solar power usage is Load>Battery.

Application Scenarios

Self-usage mode will increase the self-consumption rate of solar power and reduce energy bills.

Related Settings

Effective when Charge Priority, AC Charge, and Forced Discharge are disabled.

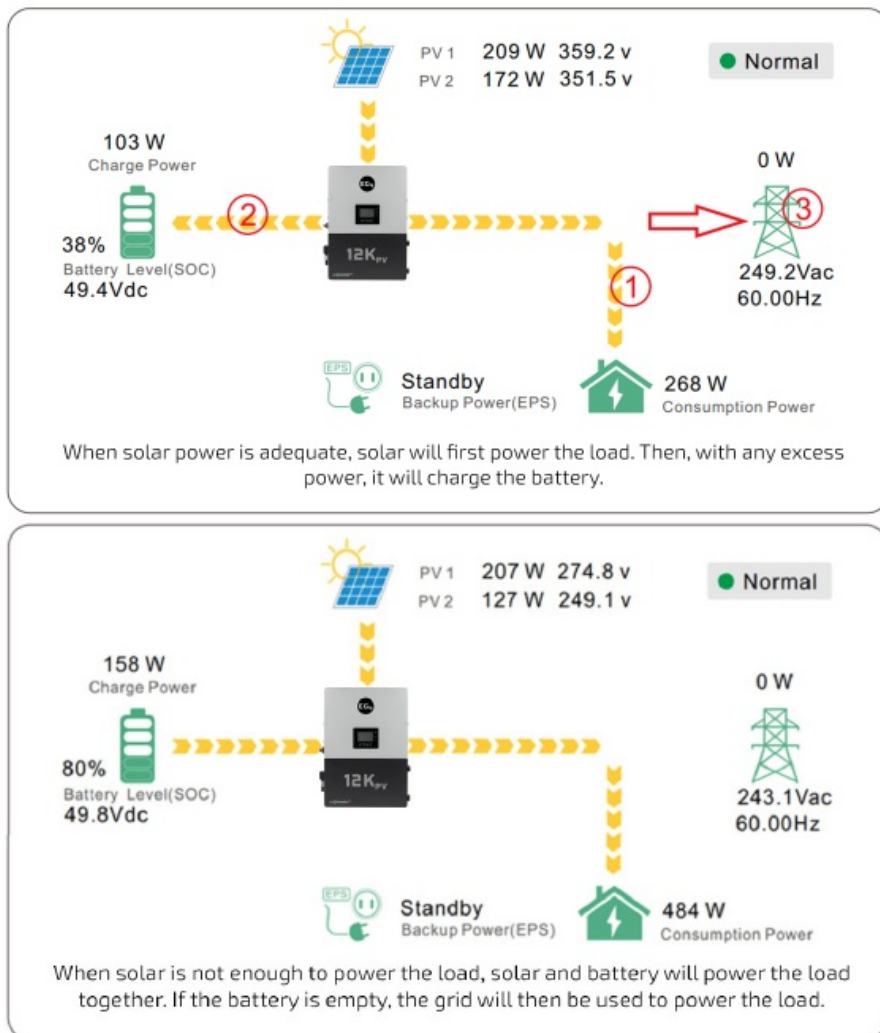

CHARGE FIRST MODE

The order of priority for solar power usage will be Battery>Load>Grid. During the charge first period, loads are first supplied power from the grid. If there is excess solar power after charging batteries, the excess solar will power the loads along with grid power.

Application Scenarios:

When users want solar power to charge batteries and the grid is used to power loads.

Related Settings:

Basic

Charge

Discharge

Advanced

Debug

Device info.

Charge first(PV) Set

Time 1 Charge first power(kW)

Time 2 Stop charge first SOC(%)


Time 3 Stop charge first Volt(V)

Lead-acid

Absorb voltage(V) Float voltage(V) Set

Start derate Volt(V)

Example

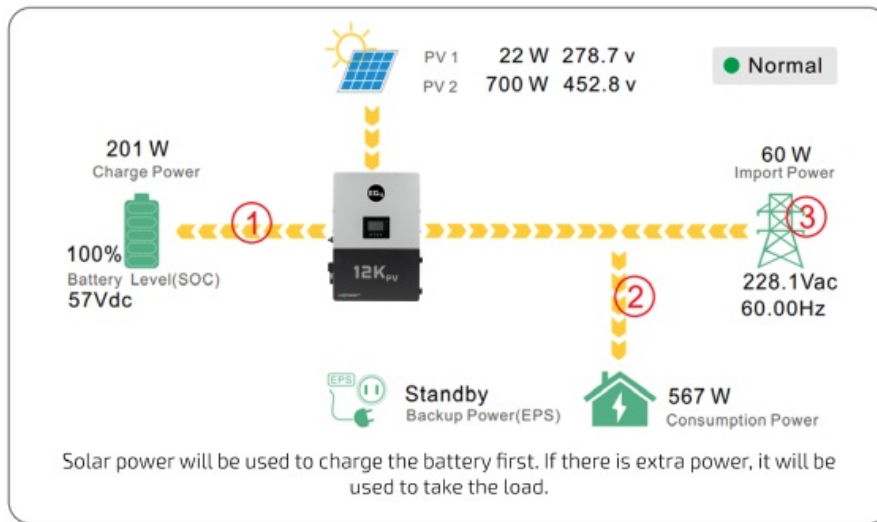

AC CHARGE MODE


AC charge mode

Users can charge batteries with grid power when electricity prices are low, then use battery power run loads or export to the grid when electricity prices are high.


Application Scenarios

When users have a Time of Use (TOU) rate plan.

Related Settings (see image to left)

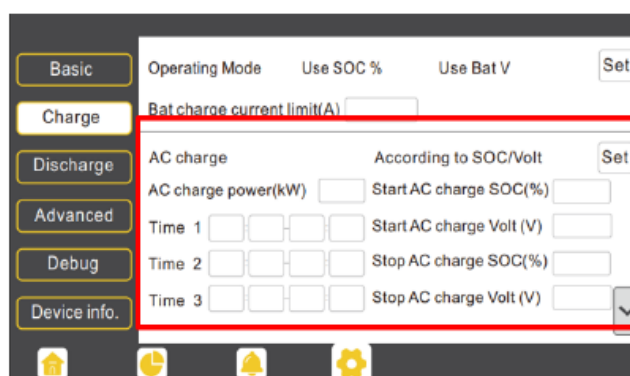

GRID PEAK-SHAVING FUNCTION

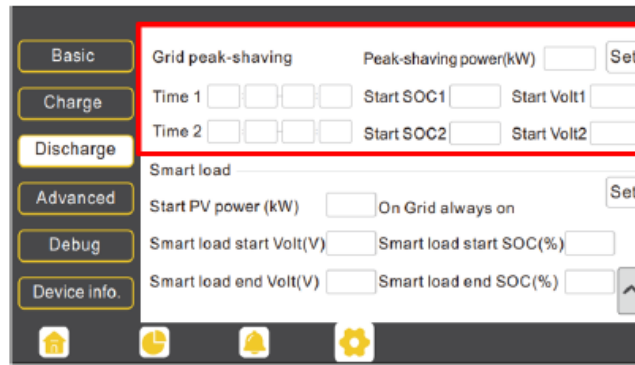

Grid peak-shaving and peak- shaving power (kW):

Used to set the maximum power that the inverter will draw from the grid. The minimum setting value is 0.2kW.

SMART LOAD FUNCTION

Smart Load: This function will make the GEN input connection point to a load connection point. If enabled, the inverter will supply power to this load when the battery SOC and PV power are above user set values.


For Example: Smart load start SOC=90% Smart load end SOC=85%

Start PV power=1kW means:

When the PV power exceeds 1000W, and the battery system SOC gets to 90%, the Smart Load Port (GEN) will automatically switch on to power the connected load. When the battery reaches SOC<85% or PV power<1000W, the Smart Load Port automatically switches off.





Important Note:

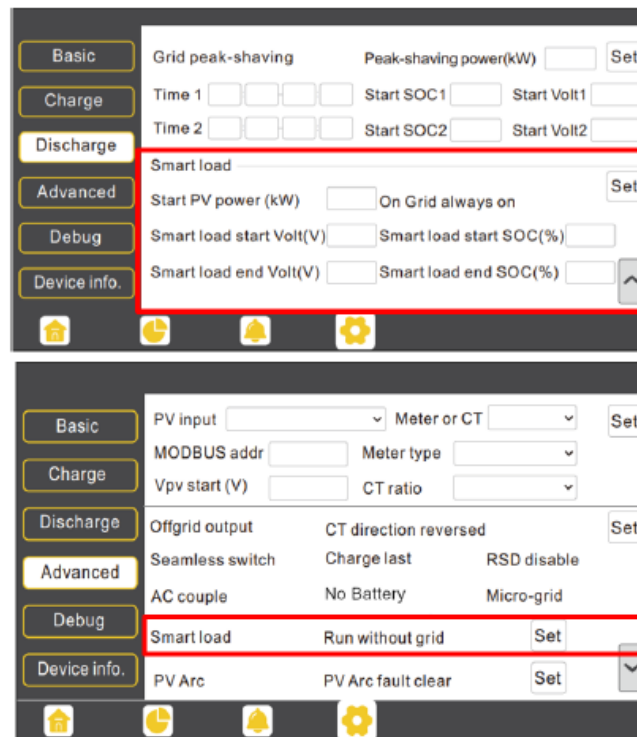If the smart load function is enabled, a generator cannot be connected at the same time; otherwise, the device will be damaged!



LCD DISPLAY AND SETTINGS

Users can wake up the LCD screen by simply pressing the Enter button. System status, real-time power, and daily/accumulated energy information can all be conveniently viewed on the inverter's LCD screen. Additionally, users can also check the alarm and fault record on the display for troubleshooting.


LED	Display	Description	Action
Green LED	Solid lit 	Working normally	No action needed
	Flashing 	Firmware upgrading	Wait until update is complete
Yellow LED	Solid lit 	Warning, inverter may stop working	Needs troubleshooting
Red LED	Solid lit 	Fault, inverter will stop working	Needs troubleshooting



VIEWING INFORMATION AND ALARM FAULT/RECORD

Home Screen

Touch the LCD screen to light it up if in sleep mode. The home page will appear on the display. Users will see a system overview diagram along with real-time information of each component such as battery SOC, battery charging/discharging power, grid import/export power, load power, etc. On the right side of the screen, users can check daily and accumulated solar energy, battery charge/discharge energy, grid import/export energy, as well as load consumption.

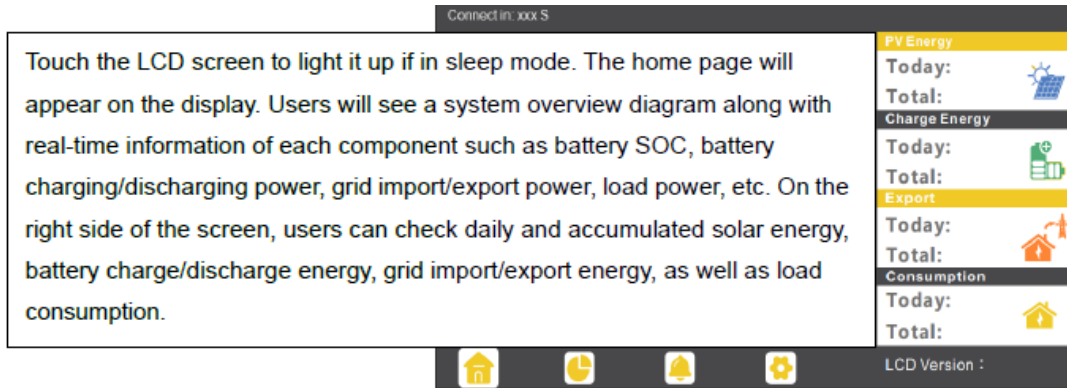

Detailed System Information

Click on the pie icon at the bottom of the screen to view the detailed real-time solar information, battery information, grid information, and load output information.






SETTING PARAMETERS

Click on the gear icon at the bottom of the screen to get into the parameter setting page for the inverter. If prompted during setting changes, enter “00000” as the password.

Basic Settings

Standby: This setting is for users to set the inverter to normal or standby status. In standby status, the inverter will stop any charging, discharging, or solar feed-in operations.

Restart Inverter: This selection restarts the system. Please note the power may be interrupted when the unit is restarted.

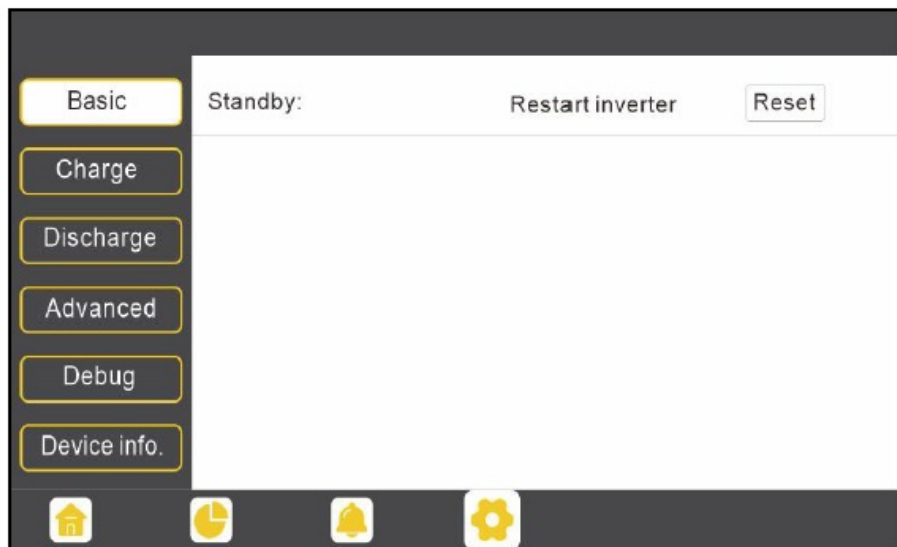

NOTE: Zero Export cannot prevent export of energy supplied by inverters that are AC Coupled to the 12kPV.

Charge Settings


Operating Mode: Users can decide to use state of charge (SOC) or battery voltage (Bat V) to control charge and discharge logic depending on battery type.

Bat. charge current limit (A): Users can set the maximum charge current.


AC Charge: Utility charge configuration. If users want to use grid power to charge their battery, then they can enable 'AC Charge' and set up to three different time periods when AC charging can happen. Set 'AC charge power (kW)' to limit utility charging power.

Set 'Stop AC Charge SOC (%)' as the target SOC for utility charging or 'Stop AC charge Volt (V)' as the target battery voltage for utility charging.


-

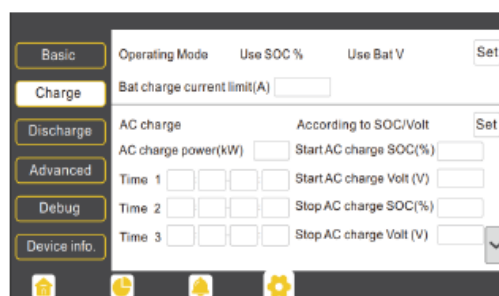

Charge first (PV): PV charge configuration. When using 'Charge first,' PV will charge the battery as the priority. Users can set up to three different time periods when PV charge can happen.

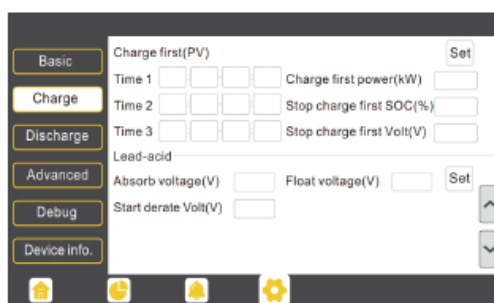

- Charge first power (kW): Limits PV charge power
- Stop charge first SOC (%): The target SOC for PV charge first.
- Stop charge first Volt(V): The target battery voltage for PV charge first.
- Lead-Acid: When using a Lead-Acid battery, users need to set parameters in these programs. Follow the battery manufacturer's recommendation for these settings.

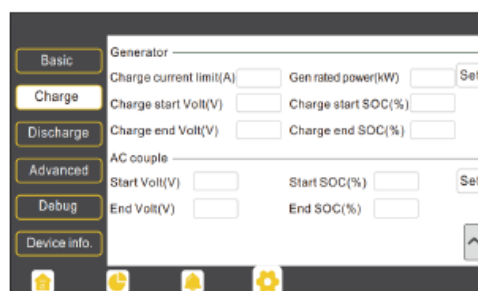


Generator

Bat. charge current limit(A):

Maximum battery charge current from the generator. The generator will start charging according to the 'Charge start Volt/SOC' and stop charging when the battery voltage or SOC reaches the 'Charge end Volt/SOC' value.

Gen rated power(kW): The inverter has a peak-shaving function. Users can enable it and set up the Gen peak-shaving power with this setting.

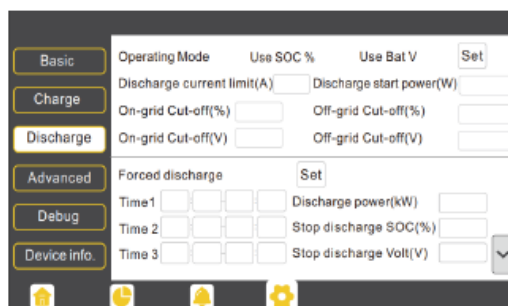

Discharge Settings

- Operating Mode: Users can choose "Use SOC %" or "Use Bat V" to control the battery discharge state.
- Discharge current limit(A): The maximum discharge current from the battery.

- Discharge start power(W): The minimum value can be set to 50. When the inverter detects the import power is higher than this value, the battery starts discharging; otherwise, the battery will stay in standby.
- On-grid Cut-off (%), Off-grid Cut off (%) / On-grid Cut-off(V), Off-grid Cut off(V): End of discharge SOC/Cutoff voltage when the system is in an on-grid or off-grid situation, respectively.
- Forced discharge: This setting will force the battery to discharge within the programmed period. In the preset period, the inverter will discharge the battery at the power set by
- “Discharge power(kW)” until battery SOC or voltage reaches “Stop discharge” value.
- IMPORTANT: The following settings may need to be adjusted by the installer after installation. Please consult with your installer/distributor before making any changes to avoid conflicting settings or damage to your system!

Advanced Settings

The image displays two screenshots of the inverter's Advanced Settings menu. The top screenshot shows settings for Grid type, Grid Freq, Grid regulation, Reconnect time, and various voltage and frequency thresholds (HV1, LV1, HF1, LF1, etc.). The bottom screenshot shows settings for PV input, Meter or CT, MODBUS addr, Meter type, Vpv start, CT ratio, Offgrid output, CT direction reversed, Seamless switch, Charge last, RSD disable, AC couple, No Battery, Micro-grid, Smart load, Run without grid, PV Arc, and PV Arc fault clear.

- Grid type: You can choose 240/120V or 220/208V
- Grid Regulation: Select the correct grid safety regulation.
- Grid Frequency: If the grid frequency is nominal at 50Hz, then the inverter's frequency

will be adjusted to 50Hz automatically. If there is no grid power and it is read as 50Hz but the devices are 60Hz; then you can set to 60Hz manually. This is based on the rated frequency of the local grid regulation and devices.


- Battery type: No battery, Lead-acid, or Lithium.
- If 'Lead-acid' battery is selected, please input the correct battery capacity.
- If 'Lithium' battery is selected, please choose the battery's brand in the Lithium brand drop-down list.
- Meter or CT: The supported CT ratio is 1000:1, 2000:1, and 3000:1. The default CT ratio is 3000:1. If a third-party CT is used, please ensure the CT ratio is one of the three supported types and set it accordingly.
- Meter type: Please choose setting according to the meter installed.
- Off-grid output: Enabling this setting will cause the inverter to provide backup power if the grid is lost.
- "Seamless switch" must be enabled if users want the load to be transferred seamlessly to the inverter backup power.
- "No Battery" can be enabled to use solar power to supply load when the grid fails or load-shedding happens. If users do not have a battery installed yet but still wish to have inverter backup power with only solar panels connected, this setting can be enabled.
- "Micro-grid" should be set only when the generator is connected to the inverter's Grid terminal. With this option enabled, the inverter will use AC power to charge the battery and will not export any power through the Grid terminal if AC power is present at the inverter's Grid terminal.
- "Charge last" will use solar power in the following order: 1. Loads 2. Grid export 3. Battery charging.
- "CT direction reversed" occurs when both CTs are installed in the wrong direction; the installer can remedy this by checking this box.

Export to Grid: This selection is for users to set a zero-export function. If exporting solar power is not allowed, users need to disable the "Export to Grid" option. If a user's utility meter is tripped with minimal solar export, "Zero Export" can be enabled; thus, the export detection and adjustment will take place every 20ms, which will effectively avoid any solar power being exported. If export is allowed, users can enable "Export to Grid" and set a maximum allowable export limit in "Max Export to Grid(kW)".

“Role” setting of the parallel system. It is set to “1 phase master” by default. In a parallel system, only one inverter is allowed to be set as Master and the others are set as Slaves.

“Phase” is the phase code setting of the load output. The system will automatically detect the phase sequence of the inverter (consistent with the phase sequence of the connected grid mains) and display it on the inverter after it is connected to the grid.

“Share battery”: If all inverters are connected to the same battery bank when configured as a parallel system, then this setting must be enabled. If the inverters are configured as a parallel system and are connected to independent battery banks, then this setting must be disabled.

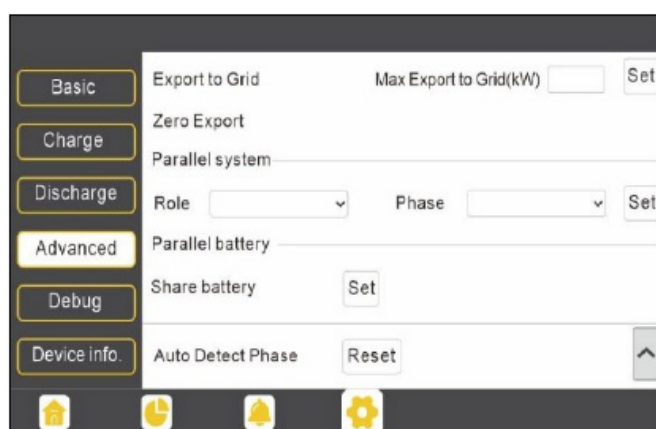

REMINDER: All setting changes for parallel inverters must be done while in Standby Mode.

If the system is connected to a Lithium battery, the host of the battery bank needs to communicate with the inverter that is set as Master in the parallel system.

Keep all the settings the same for each inverter in the parallel system on the LCD or remote monitor!

WARRANTY INFORMATION

For information regarding warranty registration on EG4® Electronics products, please navigate to <https://eg4electronics.com/warranty/> and select the corresponding product to begin the registration process.

CHANGELOG

- Version 1.2.5

Modified max input power value from 12000W to 8000W


- Version 1.2.4
Added Locked Rotor Amps (LRA) value to spec sheet
- Version 1.2.3
Modified Section 3 to include Connectivity Requirements for Dongle
- Version 1.2.2
Removed (Pending) from FCC Part 15 cert on spec sheet
- Version 1.2.1
Modified warranty information
- Version 1.2
Updated safety information
Added California Prop 65 label to safety section
- Version 1.1
Modified safety information for consistency.
- Version 1.0
First iteration of the completed white sheet

CONTACT US

support@eg4electronics.com 903-609-1988

www.eg4electronics.com

Documents / Resources

	<p>EG4 12kPV Device Monitoring [pdf] User Guide</p> <p>12kPV, 12kPV Device Monitoring, 12kPV, Device Monitoring, Monitoring</p>
---	---

References

- [User Manual](#)

📎 12kpv, 12kPV Device Monitoring, Device Monitoring, Eg4,

📁 Eg4 Monitoring

Leave a comment

Your email address will not be published. Required fields are marked *

Comment *

Name

Email

Website

☐ Save my name, email, and website in this browser for the next time I comment.

Post Comment

Search:

e.g. whirlpool wrf535swhz

Search

[Manuals+](#) | [Upload](#) | [Deep Search](#) | [Privacy Policy](#) | [@manuals.plus](#) | [YouTube](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.