

**envirovent**  
**env376 200 Wall**  
**And Floor Mounted**  
**Version**



# enviroVent env376 200 Wall And Floor Mounted Version Installation Guide

[Home](#) » [envirovent](#) » enviroVent env376 200 Wall And Floor Mounted Version Installation Guide 

## Contents

- 1 [environment env376 200 Wall And Floor Mounted Version](#)
- 2 [Location](#)
- 3 [Box Contents](#)
- 4 [Installation – Wall & Floor Units](#)
- 5 [Commissioning](#)
- 6 [Wireless Remote Control](#)
- 7 [Technical Specification](#)
- 8 [Airflow Performance](#)
- 9 [Spares/Accessories](#)
- 10 [Warranty](#)
- 11 [Documents / Resources](#)
  - 11.1 [References](#)
- 12 [Related Posts](#)

**envirovent**

**environment env376 200 Wall And Floor Mounted Version**



### **Safety**

Read and understand these instructions carefully before beginning installation. The unit should only be installed by a competent person.

### **Electrical Connection**

The unit requires a continuous electrical power supply. Connection to the fixed wiring must be made outside the unit in a suitable location. The unit must be able to be disconnected from the main supply after installation. The unit must be earthed and a double pole switch having a minimum contact separation of 3.0mm must be used to provide isolation for the unit.

The power cable running into the unit must remain the supplied flexible cable (not a solid core lighting cable). If the power cable becomes damaged, it must be replaced by EnviroVent, an authorized service agent for your region/country, or a similarly qualified person to avoid a hazard. Do not remove or tamper with any electronic components inside the unit.

All wiring must comply with Building Regulations and the current IET Wiring Regulations (BS7671 in the UK) or equivalent standards for other countries. The final installation should be examined and tested by a qualified electrician.

This product is not suitable for use with a Type AC RCD.

### **Location**

Check there is space for the unit in your chosen location including room for access and future servicing of the unit. The unit must not affect the operation of open-flue appliances. Consider the external vent locations for open flames from appliances e.g. boilers. You must ensure the external supply grilles are positioned away from open flues to avoid drawing harmful gases into the property. Consult your local regulations or a qualified gas engineer. Envirovent recommends at least 2m clearance.


### **Users**

This unit is not intended for use by persons [including children] with reduced physical, sensory, or mental capabilities or lack of experience and knowledge unless they have been given supervision and usage instruction


by a person responsible for their safety. Children should be supervised to ensure they do not play with the unit. Cleaning and user maintenance must not be performed by children.

## Diagrams

Overall unit dimensions and minimum area required for access & maintenance [mm].

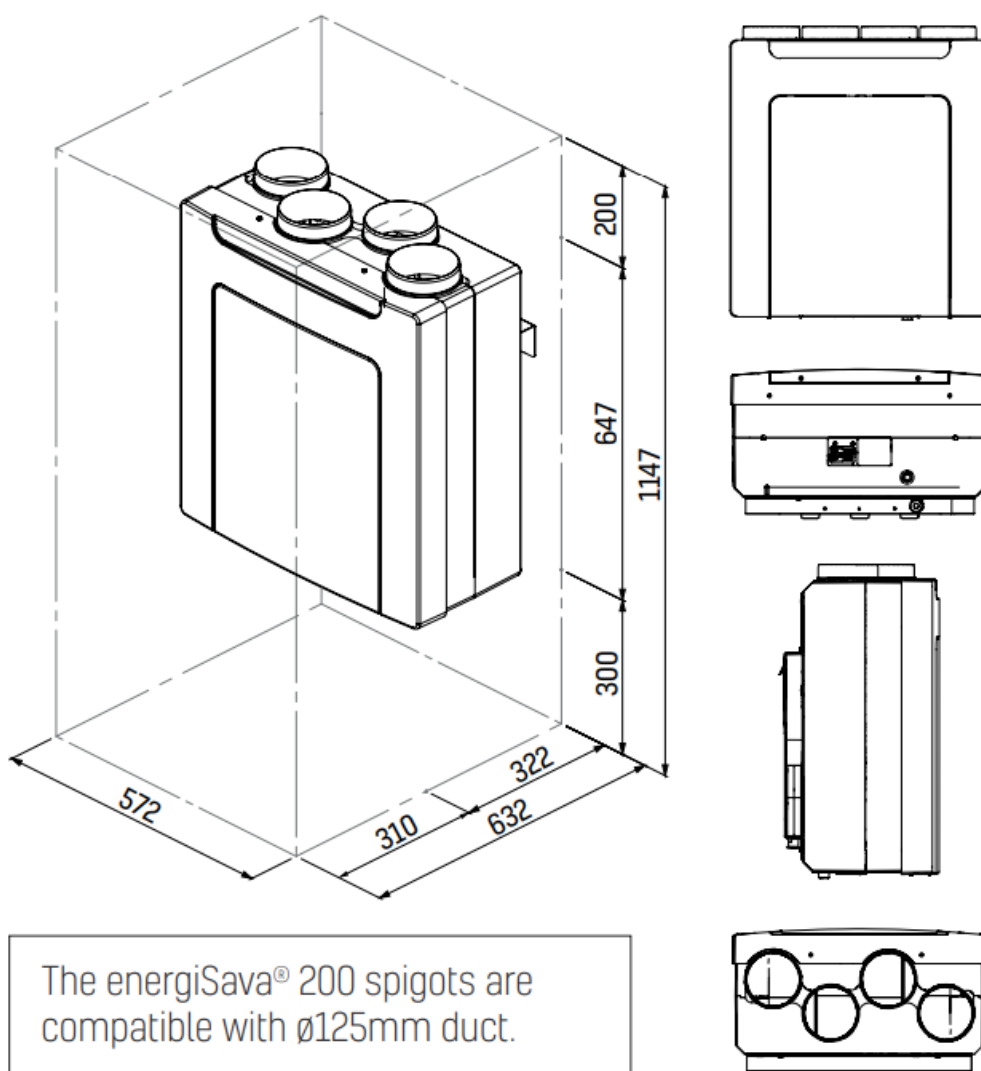

Overall unit dimensions and minimum area required for access & maintenance (mm). The local isolator must be connected to the mains as part of the fixed wiring. Connect the cores of the power cable to the matching terminals on the local isolator (3A fuse spur or similar). The black switch live core of the mains cable can be wired to a switch input such as a light switch. When the switch is turned on, the boost function is engaged. When the switch is turned off, the unit will return to normal running mode. In this configuration, a triple pole isolator must be used.

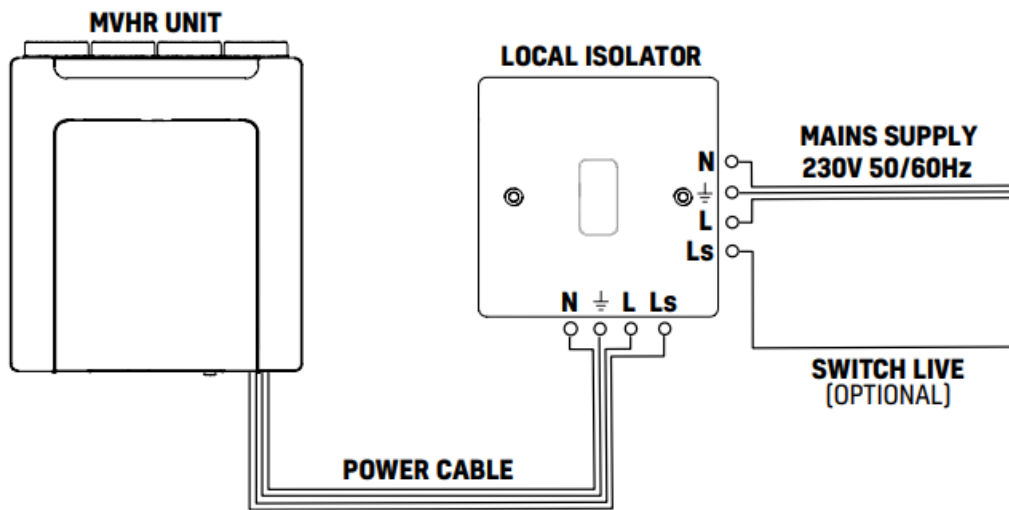

### About the energiSava® 200

The energiSava® 200 is an MVHR unit (Mechanical Ventilation with Heat Recovery). It is ideal for small to medium-sized properties with a kitchen and up to 5 additional wet rooms. The unit is capable of delivering a maximum airflow of 245m<sup>3</sup> /h (68l/s) and a maximum system pressure of over 500Pa.

The unit will help to create a fresh and healthy living environment by supplying filtered air into a property through supply valves. Moist, stale air is removed from the property through extract valves. The heat exchanger inside the unit transfers waste heat energy from the extracted air to the supplied air to improve the thermal efficiency of the property and reduce heating costs. When outdoor temperatures are low, the frost protection feature automatically reduces the supply air flow rate to ensure the heat exchanger inside the unit does not freeze.

The Intellitrac® humidity tracking function monitors the humidity levels in the extracted air and will automatically increase the supply and extract air flow rates when the humidity levels rise. Once the humidity levels are lower the air flow rates will return to the normal rate. The automatic, mechanical bypass helps to control the temperature entering the home on warmer days. The energiSava® 200 includes a switch live function. When wired through the lighting switch of a room (such as a bathroom) the unit will enter boost mode whenever the light is turned on.

## Box Contents

### EnergiSava® 200

- 1x energiSava® 200 unit
- 1x Remote control
- 1x Instruction guide
- 1x User guide
- 1x Wall mounting bracket
- 5x Screws 8g x 2.0"
- 5x Plasterboard plugs
- 2x Wall mount spacers
- 2x Screws 10g x 0.5"

### EnergiSava® 200 App

- 1x energiSava® 200 app unit
- 1x Instruction guide

- 1x User guide
- 1x App guide
- 1x Wall mounting bracket
- 5x Screws 8g x 2.0"
- 5x Plasterboard plugs
- 2x Wall mount spacers
- 2x Screws 10g x 0.5"

The floor-mounted version of the unit also contains:


- 2x large mounting brackets
- 2x small mounting brackets
- 16x Screws 10g x 0.5"

### **Pre – Installation Checklist**





- Does the unit fit in the space where it will be installed?
- Is there room to connect ducts to the spigots without tight duct bends?
- Is there room to access and replace the filters after installation?
- Are there any obstructions above or below the locations where the input and extract valves are to be fitted?
- Is the mounting surface strong enough to support the unit?
- Is the mounting surface level?
- Are there adequate facilities to connect the unit condensate drain to the internal waste system of the property?
- If required, the unit can be floor mounted using the additional floor mounting accessory kit. (Order code FIXINGKIT-ES200F).
- Mounting instructions are shown later on in this guide.

### **Installation – Wall Unit**

1. Hold the unit up to the chosen location and check there is space for ducts, condensate drainage, filter, and keypad access.
2. Once you are satisfied with the position, fix the wall bracket in place. Use 5 8gx2.0" screws and 5 plasterboard plugs.
3. Now attach the two wall spacers to the back of the unit. This must be done to ensure that any condensate drains out of the unit correctly. Use 2 10gx0.5" screws.
4. Place the unit onto the wall bracket. Hold the end of the tie-down cable flush to the wall then screw it in place. This will ensure the unit is not accidentally knocked out of position.
  - Make a water-tight connection to the white drainage connector on the unit and the wastewater system on the property.
  - A suitable non-return device must be fitted to ensure air and waste water from the drain system do not flow back up into the unit.

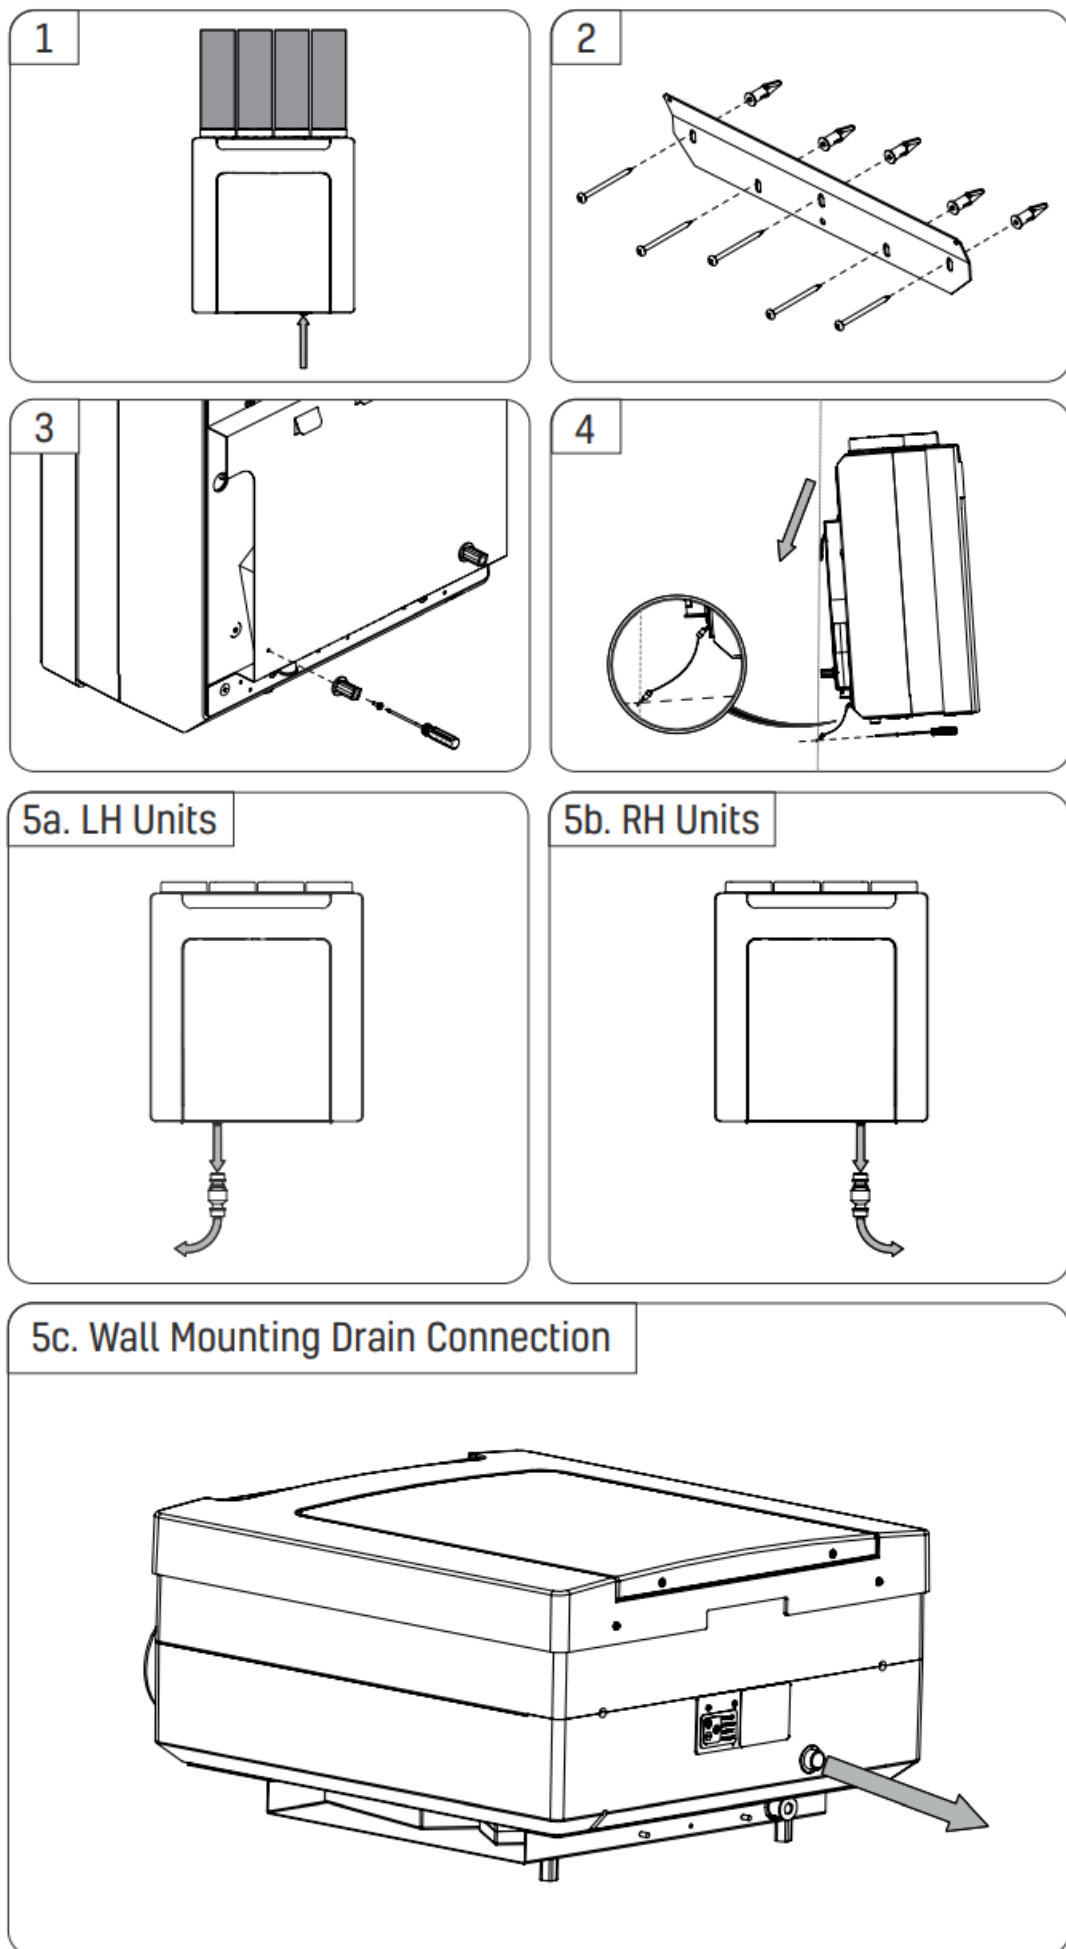


1. Hold the unit in the chosen location and check there is space for ducts, condensate drainage, filter, and keypad access.

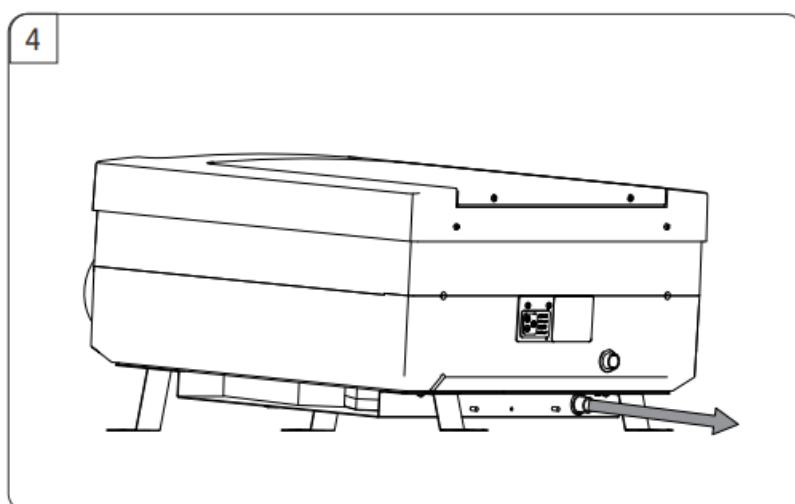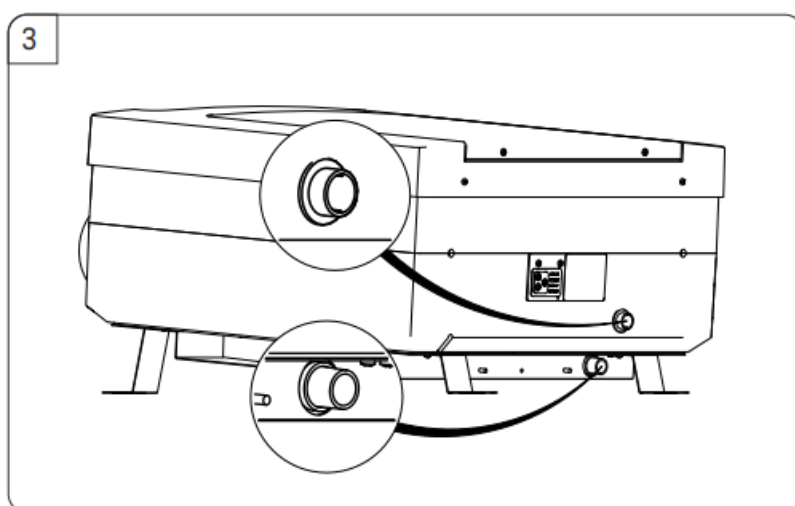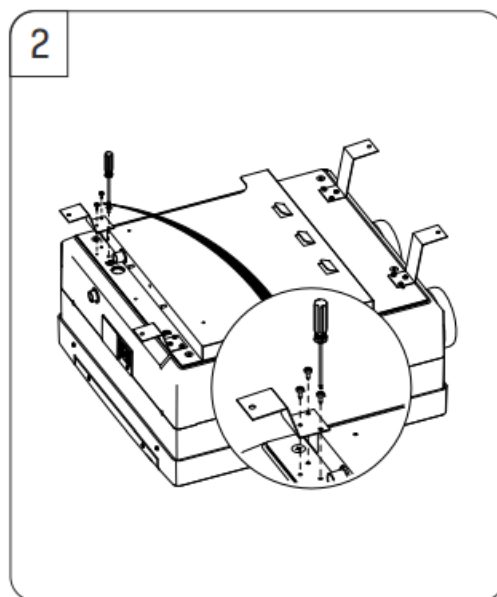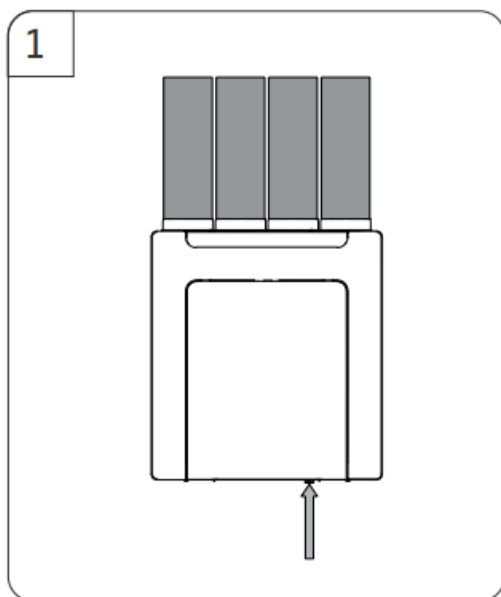

2. Screw the four mounting brackets to the unit as shown using the screws provided. The two larger brackets are fitted at the spigot end.
3. Remove the green plug from the black drain at the bottom of the unit. Now insert the green plug fully into the white drain above.
4. Screw all four brackets to the mounting surface then make a water-tight connection between the black drainage connector on the unit and the wastewater system in the property with a minimum five-degree fall and an

appropriate nonreturn device fitted (see spares/accessories table later in this guide).


## Installation – Wall & Floor Units

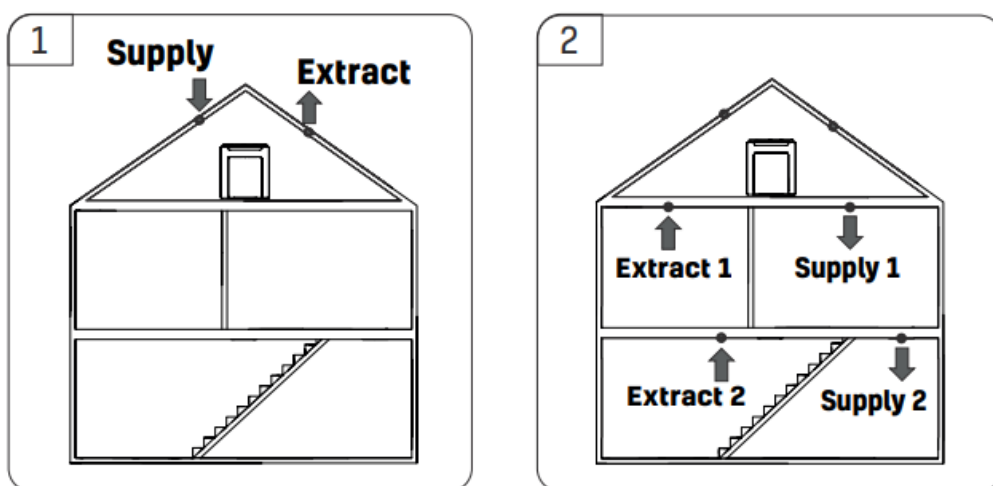

1. Fit the external supply and extract terminations.
2. Fit the supply and extract valves inside the property.
3. Fit the ductwork between the external terminations, the MVHR unit, and the supply and extract valves.
4. Connect each duct path to the spigot
5. With the mains supply isolated, wire the unit to the local isolator as per the wiring diagram and by the local wiring regulations.
6. When the power is turned on, air will begin flowing into the property after a few seconds.

## Ductwork should be fitted by the Domestic Ventilation

•

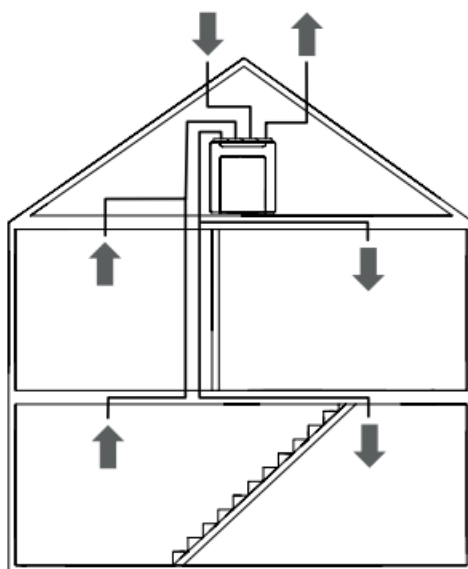


Compliance Guide. (Example RH unit configuration shown).


- Ducts to and from the atmosphere and through unheated spaces need to be insulated.



#### 4a. LH Units

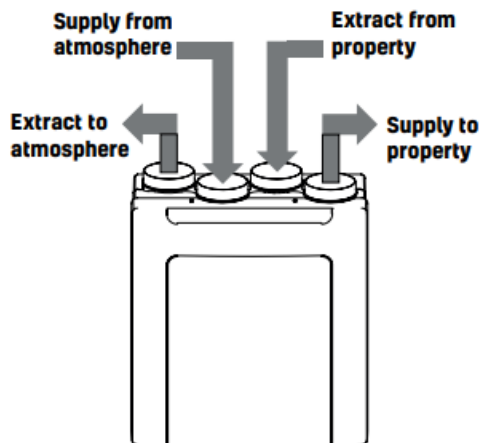


#### 4b. RH Units

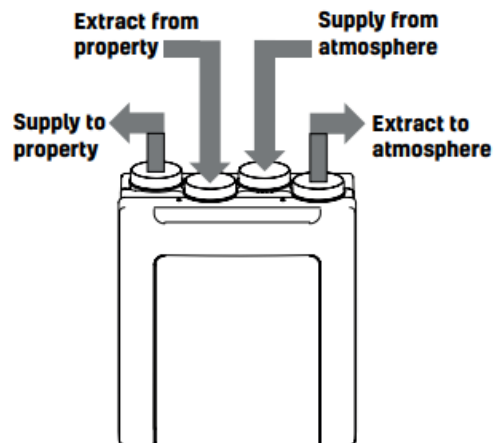


- For efficiency, all ductwork should be as large a diameter as possible (min. 125mm) and use rigid or semi-rigid ducts.

#### LH Units 4b. RH Unit

- With the mains supply isolated, wire the unit to the local isolator as per the wiring diagram on page 3 and by the local wiring regulations.

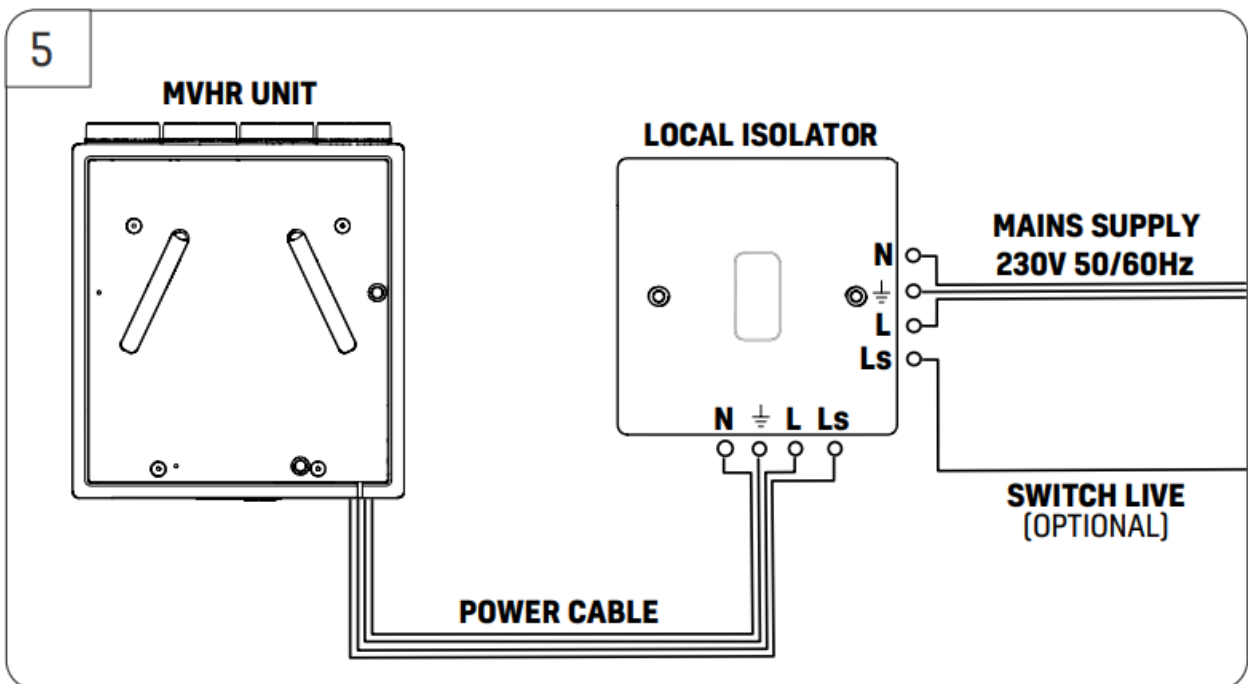

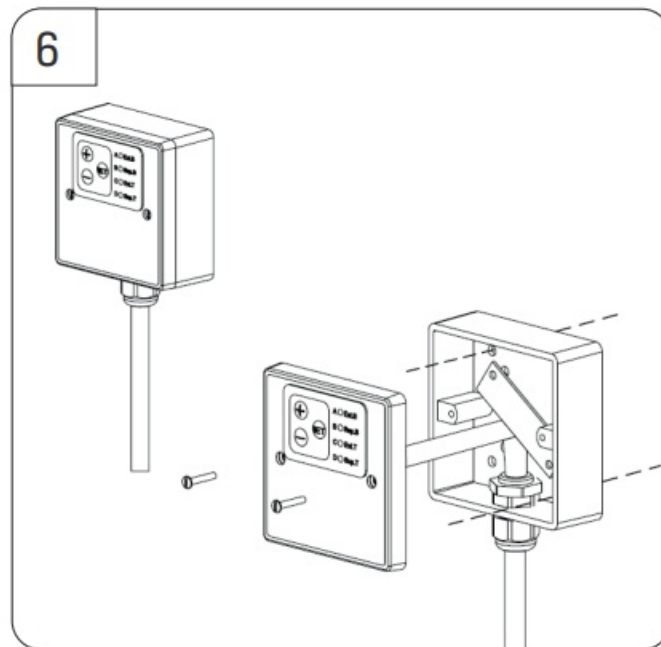

- When the power is turned on, air will begin flowing into the property after a few seconds.

#### **If you are installing a remote switch(-RS) unit**

- Open the switch ensuring the ribbon cable remains connected to the PCB.
- Screw the switch to the wall in an accessible location.
- Replace the lid and tighten the two screws.

#### **Commissioning**

All maintenance and building works should be completed before commissioning this MVHR unit. This will avoid any other major disturbance to the installation or high volumes of dust or debris being drawn into the system. Do not commission the MVHR unit until it is fully installed including power, ductwork, internal valves, and external vents.

#### **MVHR systems must be commissioned by an Approved**

Document F of the Building Regulations for England and Wales. Further good practice advice for the installation of MVHR systems can be found in the latest edition of the Domestic Ventilation Compliance Guide for England and Wales. For MVHR commissioning guidance in other countries, please refer to the relevant local Building Regulations for that country.

Step	Flow Rate	Actions
1	Extract Boost	Lock the valves. Record the air flow rates.
2	Supply Normal (Trickle)	Lock the valves. Record the air flow rates.
3	Supply Boost	Do not adjust the valves. Record the air flow rates.
4	Extract Normal (Trickle)	Do not adjust the valves. Record the air flow rates.

- Determine the required ventilation rates. For guidance see Approved
- Document F of the building regulations for England and Wales.
- During normal running mode, press the SET button for 4 seconds to enter commissioning mode. (Humidity and temperature sensor input is disabled temporarily while the unit is in commissioning mode).
- LEDs B C D will light and LED A will flash indicating that the extract boost flow rate is being modified.
- Fully open all supply/extract valves then measure the airflow rate at all system extract points using a calibrated air flow meter capable of measuring in l/s or m<sup>3</sup> /hr.
- Add the extract rates from all rooms together then compare this value to the calculated whole building boost extract ventilation rate.
- Use the + and – buttons to increase or decrease the flow rate to meet the calculated whole building extract ventilation rate.
- Now adjust the individual valves to extract at the appropriate rate for each wet room.
- Press the SET button once to move on to the next flow rate. The flashing LED indicates which flow rate is being modified.


A: Extract Boost  
 B: Supply Boost  
 C: Extract Trickle  
 D: Supply Trickle

- Commission the unit in the order shown below, using the previous steps for adjusting air flow rates and valves.
- (When the maximum speed setting is reached, the LED will flash faster.
- When the minimum speed setting is reached the LED will flash slowly).
- When commissioning is complete for all four flow rates, press SET for 4 seconds to return to normal running mode.
- If this is not done, the unit will automatically return to normal running mode after 60 minutes of inactivity and the current settings will be saved.


### Wi-Fi App myenvirovent

App-enabled units can be controlled using the myenvirovent app on Apple and Android devices. A separate instruction guide for the myenvirovent app is included in the box. The guide can also be accessed from within the app. Once the unit has been installed, refer to this guide for connection and further settings. The SSID and password information for the unit is printed on the back page of the app guide and also on a label attached to the

bottom of the unit.

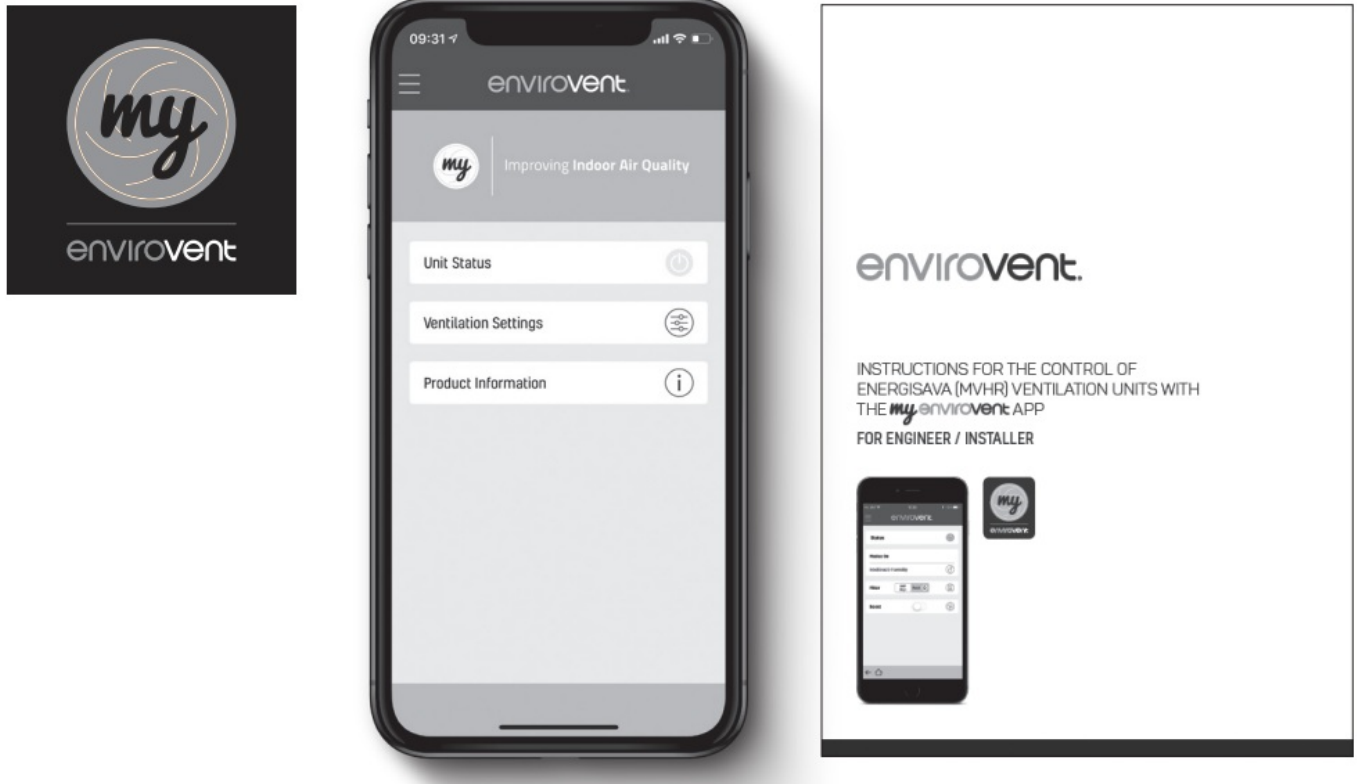

## Wireless Remote Control

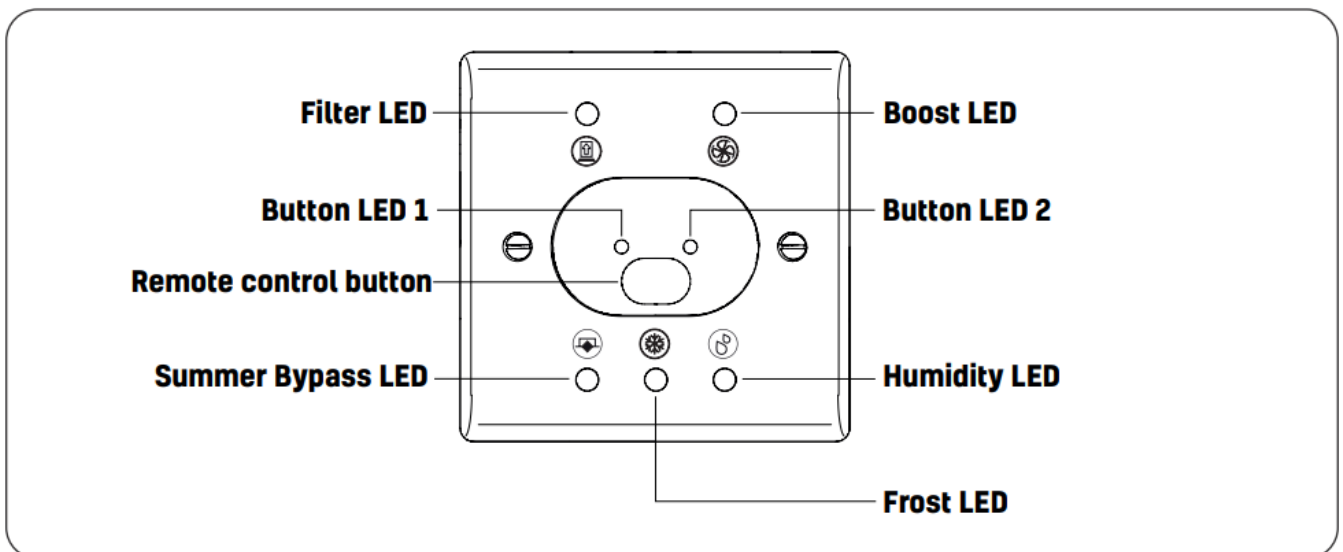

### To view the current status of the unit

- Press any button to wake the remote control and the relevant LEDs will light up according to the current status of the unit.
- To manually activate or deactivate the boost function:
  - Press any button to wake the remote control.
  - Press the button again, and the boost LED will flash (red). After 2 seconds the unit will enter boost mode for 20 minutes and then automatically return to trickle mode.
- If the switch live connection is turned on then boost cannot be canceled until the switch live connection is

turned off.

To deactivate the boost mode, repeat the above steps.

- To manually activate or deactivate the summer bypass function:
- Press any button to wake the remote control.
- Press the button again twice. The bypass LED will flash (red). After 2 seconds the unit will enter bypass mode for 24 hours and then automatically return to the normal running mode.
- To deactivate the summer bypass mode, repeat the above steps.

To switch between auto and manual summer bypass modes:

- Wake the remote control.
- Press and hold the button for 5 seconds, and the filter LED will flash green.
- Press the button once to switch to edit the summer bypass mode.
- Press and hold the button for 5 seconds to switch between summer bypass modes.
- Auto = Bypass LED constant, Manual = bypass LED flashing.

### **Filter indicator and reset**

- If on waking the remote control the filter LED flashes (green), the filters need to be replaced. Contact EnviroVent to order new filters.
- After replacement filters have been installed, wake the remote control.
- Press and hold the button for 5 seconds, and the filter LED will flash green.
- Press and hold the button for 5 seconds again to reset the filter, the filter LED will flash rapidly for 2 seconds to confirm the filter reset.


### **Pairing an extra remote control**

- Turn the unit off at the isolation point.
- Restore the power to the unit. For 20 seconds from restarting, the unit will be in pairing mode.
- Press the button on the new remote control once within 20 seconds and the remote control will pair with the unit.

If LED 2 lights are green, the pairing has succeeded. To reset/wipe wireless remote control memory:

- Press the + button on the unit control panel for 10 seconds.
- LEDs A, B, C, and D will all flash.
- Press the button on any EnviroVent wireless remote control.
- The memory of any linked wireless remote controls is wiped.

### **Fault indication**

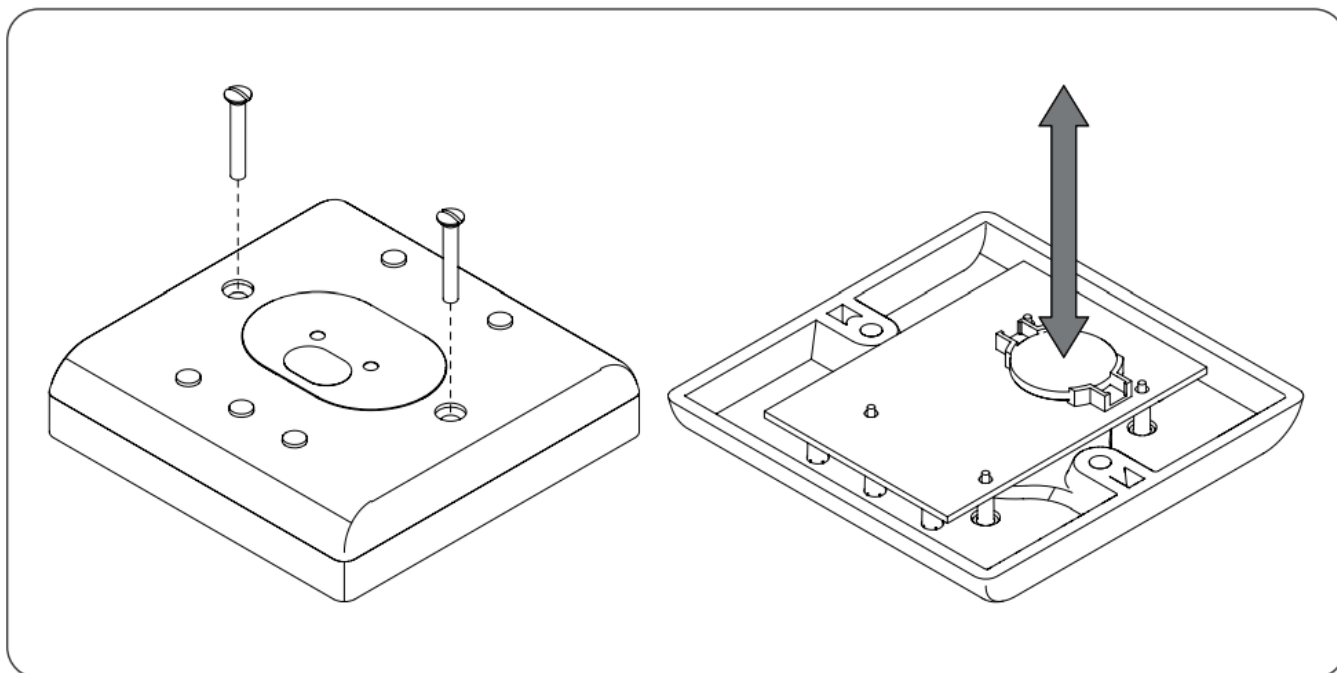


If on waking the remote control all LEDs are flashing (red), a fault has occurred with the MVHR unit. If it persists, call EnviroVent on 01423 810 810 for further help. When the remote control battery needs to be replaced, remove the two screws then open the remote control. The battery is located on the back of the front cover. Replace the battery then clip the rear cover back on. The switch will remain paired with the unit after battery replacement. The remote control uses a 1x CR2032 battery. Dispose of the discarded battery safely.

## Technical Specification

Spigot diameters	125mm
Maximum air flow rate	68l/s [245m <sup>3</sup> /h]
Maximum power consumption	130W
Electrical Supply	230V Single Phase 50Hz
Filter grade	ISO Coarse 45% [G3]
Boxed unit weight	16kg
Unboxed unit weight	14kg

## Airflow Performance

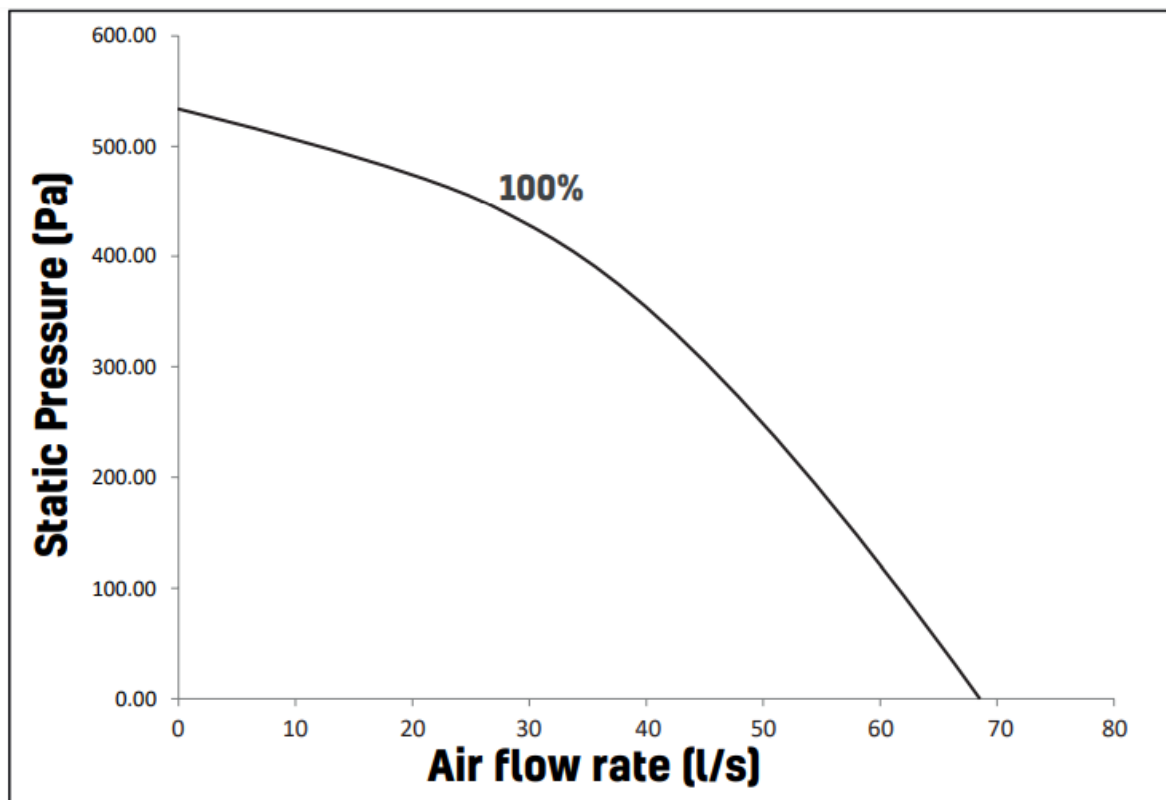



### Post-Installation Checklist

Installation instructions have been understood. Contact EnviroVent on 01423 810 810 if you require further technical help. The ductwork diameter is 125mm or larger throughout the property. Minimal amounts of flexible ducts have been used in the installation. All ducts, valves, vents, and drainage points are connected, mechanically fixed, and sealed. Both filters are inserted into the filter slots on the unit. The unit is securely fixed with adequate space left for servicing. The condensate drain is securely connected to the wastewater system, a nonreturn device is correctly fitted and pipework has been water tested before connection to the MVHR unit. All major building works have been completed before commissioning.

Supply and extract air flow rates have been commissioned with a calibrated anemometer to meet Approved Document F of the Building Regulations for England and Wales. Commissioning air flow rate data has been recorded. The occupants of the property are familiarised with the operation and maintenance of the system.

### Filter Maintenance

- Filters must be inspected every 6 months and replaced at least every 12 months. If filter maintenance is not carried out, it can invalidate the warranty.
- Isolate the unit from the mains supply then slide off the front cover.
- Remove the filter caps, replace both filters then reinsert filter caps.
- Engage the mains supply then reset the filter indication by pressing the minus button for 10 seconds. The filter change indication can also be reset via the remote control.
- Not maintaining the filters during the life of the product can invalidate the warranty. Filter indication duration is factory set to 12 months.

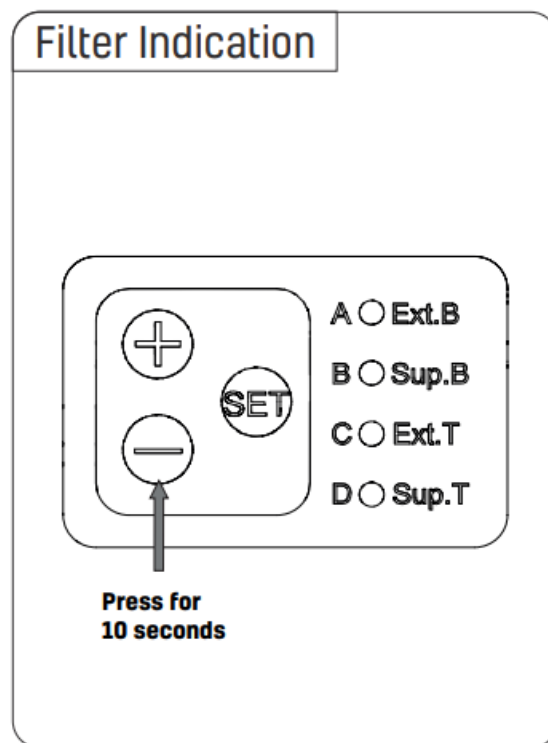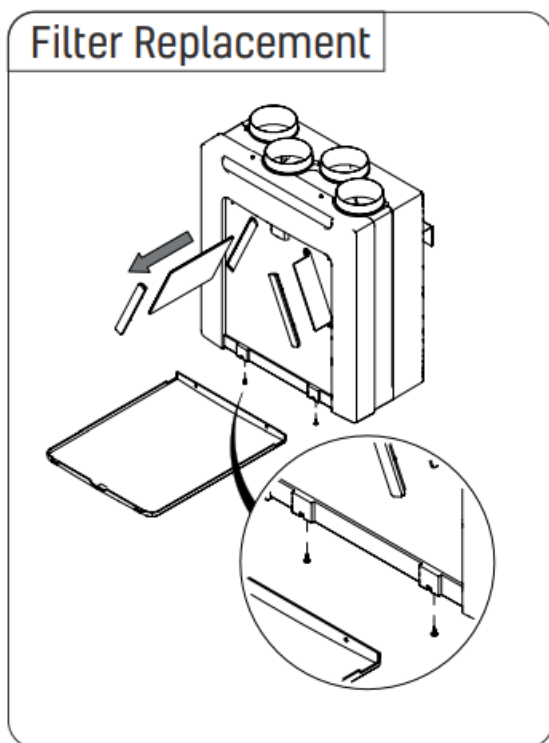

## Spares/Accessories

Item Description	Order Code
Replacement Filter	FILTER-ES250
125mm white supply valve	1DIFSUPPLY125WH
125mm white extract valve	1DIFEXTRACT125WH
150mm white supply valve	1DIFSUPPLY150WH
150mm white extract valve	1DIFEXTRACT150WH
Spare remote control	SWH-W-MVHR

## Warranty

We appreciate you choosing this quality EnviroVent product, which is designed and manufactured in Harrogate, North Yorkshire. We are confident that you will be delighted with the performance of the system and the resulting improvement in air quality in your home after it has been installed. This unit is covered by a 2-year warranty, subject to the replacement of filters every 12 months, or more frequently as required, depending on the environmental conditions. You should not dismantle or remove any parts of the product other than those instructed in this guide. Tampering with the unit will void the warranty. The valves should be checked periodically to ensure there is air flowing through the system.

## EnviroVent Supply & Installation

If your product has been supplied and installed by EnviroVent Ltd it is covered with a two-year parts and labor



warranty. If you detect a fault, please contact us on 01423 810 810. You will be given guidance over the phone, or an arrangement may be made for a member of our team to visit (call-out charges may apply if a fault cannot be identified).

### Supply Only

If your product has been supplied by EnviroVent and installed by a third party it is covered by a two-year parts-only warranty. If you detect a fault and the product has been installed by the fitting/wiring instructions, relevant guidance documents, and by a competent and qualified person (proof may be required), please return the product to the place of purchase for a replacement.

### Warranty Conditions & Exclusions

Please note that a receipt will be required as proof of purchase. Products bought from an unapproved source, including but not limited to auction websites, are not covered by the warranty.

- The system must be correctly installed and operated according to the instructions contained in the user guide supplied.
- The warranty will be rendered invalid if the system has been serviced, maintained, repaired, taken apart, or tampered with by any person not authorized, which in any way contradicts the instruction guide set out by EnviroVent.
- The warranty does not cover accidental damage, misuse, or abuse.
- The warranty is in addition to your statutory or legal rights. Your unit serial number For warranty conditions and exclusions, visit [www.envirovent.com/warranty](http://www.envirovent.com/warranty)

### EnviroVent Ltd

Harrogate West Business Park  
Unit 1 Bardner Bank  
Killinghall  
Harrogate  
HG3 2SP  
T / 01423 810 810  
E / [info@envirovent.com](mailto:info@envirovent.com)  
W / [envirovent.com](http://envirovent.com)


E&OE | MKT ENV376 – V20 – 14.08.24

Due to our policy of continuous innovation and improvement, EnviroVent reserves the right to alter product specifications and appearance without notice.

### We want to hear from you

Your feedback is important to us as we strive to improve our products, services, and overall customer experience. Please email us to help us serve you better: [feedback@envirovent.com](mailto:feedback@envirovent.com)

### Documents / Resources

	<p><a href="#">enviroVent env376 200 Wall And Floor Mounted Version</a> [pdf] Installation Guide env376, env376 200 Wall And Floor Mounted Version, env376, 200 Wall And Floor Mounted Version, Wall And Floor Mounted Version, Floor Mounted Version, Mounted Version, Version</p>
---	---

### References

- [!\[\]\(694fcb4611893e9db5249daba48abfc1\_img.jpg\) \*\*UK Manufacturer Of Ventilation Systems & Extractor Fans | EnviroVent\*\*](#)
- [!\[\]\(8ec8d5dc48934930a762fecf6ecbe179\_img.jpg\) \*\*Product Warranty Information | EnviroVent\*\*](#)
- [\*\*User Manual\*\*](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.