




[Home](#) » [ESPRESSIF](#) » **ESPRESSIF ESP32-H2-WROOM-02C Bluetooth Low Energy and IEEE 802.15.4 Module User Manual** 

## Contents [ [hide](#) ]

- [1 ESPRESSIF ESP32-H2-WROOM-02C Bluetooth Low Energy and IEEE 802.15.4 Module](#)
- [2 Module Overview](#)
- [3 Pin Definitions](#)
- [4 Get Started](#)
- [5 U.S. FCC Statement](#)
- [6 Related Documentation and Resources](#)
- [7 FAQ](#)
- [8 Documents / Resources](#)
  - [8.1 References](#)



## ESPRESSIF ESP32-H2-WROOM-02C Bluetooth Low Energy and IEEE 802.15.4 Module





# Module Overview

## Features

### CPU and On-Chip Memory

- ESP32-H2 embedded, RISC-V single-core 32-bit microprocessor, up to 96 MHz
- 128 KB ROM
- 320 KB SRAM
- 4 KB LP Memory
- 2 MB or 4 MB in-package flash

### Bluetooth

- Bluetooth Low Energy (Bluetooth 5.3 certified)
- Bluetooth mesh
- Bluetooth Low Energy long range (Coded PHY, 125 Kbps and 500 Kbps)
- Bluetooth Low Energy high speed (2 Mbps)
- Bluetooth Low Energy advertising extensions and multiple advertising sets
- Simultaneous operation of Broadcaster,

### Observer, Central, and Peripheral devices

- Multiple connections
- LE power control

### IEEE 802.15.4

- IEEE Standard 802.15.4-2015 compliant
- Supports 250 Kbps data rate in 2.4 GHz band and OQPSK PHY
- Supports Thread
- Supports Zigbee 3.0
- Supports Matter
- Supports other application-layer protocols (HomeKit, MQTT, etc)

### Peripherals



- 19 GPIOs
  - 3 strapping pins
- I2C, I2S, SPI, UART, ADC, LED PWM, ETM, GDMA, PCNT, PARLIO, RMT, TWAI®, MCPWM, USB Serial/JTAG, temperature sensor, general-purpose timers, system timer, watchdog timer

## Integrated Components on Module

- 32 MHz crystal oscillator

## Antenna Options

- On-board PCB antenna

## Operating Conditions

- Operating voltage/Power supply: 3.0~3.6 V
- Operating ambient temperature: -40~105 °C

## Description

ESP32-H2-WROOM-02C is a powerful, generic Bluetooth® Low Energy and IEEE 802.15.4 combo module that has a rich set of peripherals. This module is an ideal choice for a wide variety of application scenarios related to Internet of Things (IoT), such as embedded systems, smart home, wearable electronics, etc.

ESP32-H2-WROOM-02C comes with a PCB antenna.

The series comparison for ESP32-H2-WROOM-02C is as follows:

**Table 1: ESP32-H2-WROOM-02C Series Comparison**

Ordering Code	Flash	Ambient Temp. (°C)	Size (mm)
ESP32-H2-WROOM-02C-H2 S	2 MB (Quad SPI )		20.0 × 18.0 ×



ESP32-H2-WROOM-02C-H4 S	4 MB (Quad SPI )	−40~105	3.2
----------------------------	---------------------	---------	-----

ESP32-H2-WROOM-02C has integrated the ESP32-H2 chip, which has a 32-bit RISC-V single-core CPU that operates at up to 96 MHz.

Note:  
For more information on ESP32-H2 chip, please refer to ESP32-H2 Series Datasheet.

Pin Definitions

Pin Layout

The pin diagram below shows the approximate location of pins on the module.

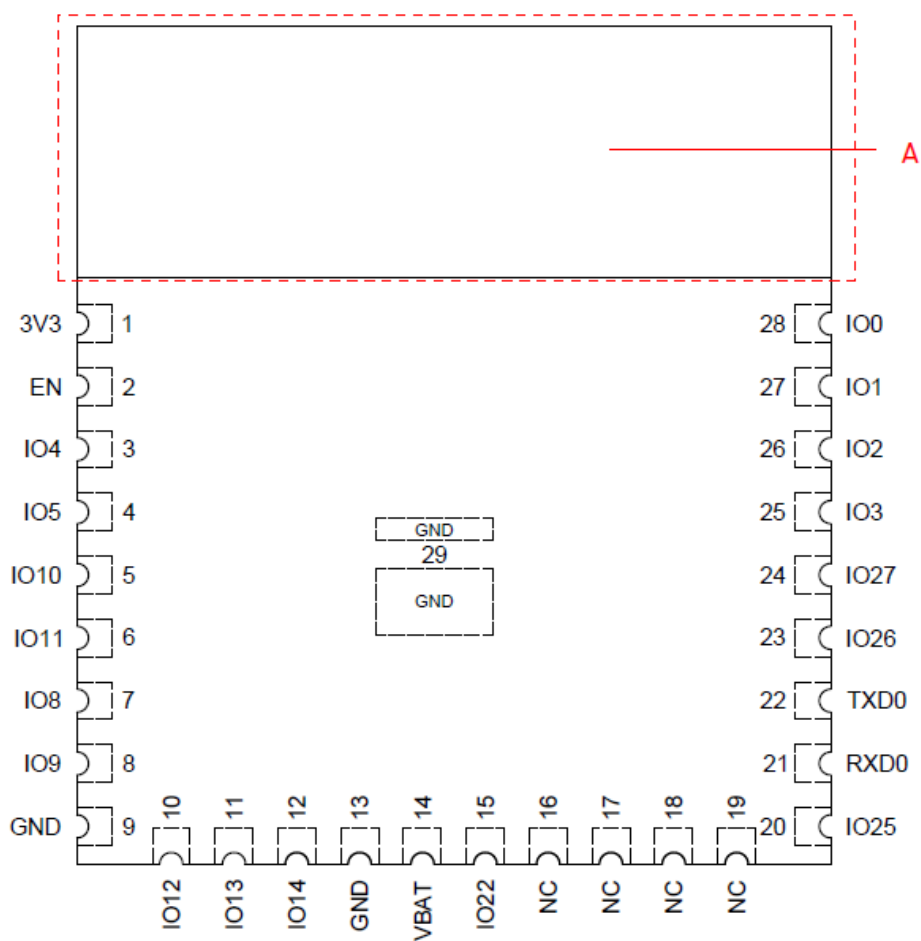


Figure 1: Pin Layout (Top View)

Note A:  
The zone marked with dotted lines is the antenna keepout zone. To learn more about the keepout zone for module’s antenna on the base board, please refer to ESP32-H2



## Pin Description

The module has 29 pins. See pin definitions in Table 2 Pin Description.

For peripheral pin configurations, please refer to ESP32-H2 Series Datasheet.

**Table 2: Pin Definitions**

Nam e	No.	Type 1	Function
3V3	1	P	Power supply

**Table 2 – cont'd from previous page**

Nam e	No.	Type 1	Function
EN	2	I	High: on, enables the chip. Low: off, the chip powers off.  Note: Do not leave the EN pin floating.
IO4	3	I/O/T	GPIO4, FSPICLK, ADC1_CH3, MTCK
IO5	4	I/O/T	GPIO5, FSPID, ADC1_CH4, MTDI
IO10	5	I/O/T	GPIO10, ZCD0
IO11	6	I/O/T	GPIO11, ZCD1
IO8	7	I/O/T	GPIO8
IO9	8	I/O/T	GPIO9
GND	9, 13, 29	P	Ground



IO12	10	I/O/T	GPIO12
IO13	11	I/O/T	GPIO13, XTAL_32K_P
IO14	12	I/O/T	GPIO14, XTAL_32K_N
VBA T	14	P	Connected to internal 3V3 power supply (Default) or external battery power supply (3.0 ~ 3.6 V).
IO22	15	I/O/T	GPIO22
NC	16 ~19	—	NC
IO25	20	I/O/T	GPIO25, FSPICS3
RXD 0	21	I/O/T	GPIO23, FSPICS1, U0RXD
TXD 0	22	I/O/T	GPIO24, FSPICS2, U0TXD
IO26	23	I/O/T	GPIO26, FSPICS4, USB_D-
IO27	24	I/O/T	GPIO27, FSPICS5, USB_D+
IO3	25	I/O/T	GPIO3, FSPIHD, ADC1_CH2, MTDO
IO2	26	I/O/T	GPIO2, FSPIWP, ADC1_CH1, MTMS
IO1	27	I/O/T	GPIO1, FSPICS0, ADC1_CH0
IO0	28	I/O/T	GPIO0, FSPIQ

1 P: power supply; I: input; O: output; T: high impedance.

## Get Started



## What You Need

To develop applications for module you need:

- 1 x ESP32-H2-WROOM-02C
- 1 x Espressif RF testing board
- 1 x USB-to-Serial board
- 1 x Micro-USB cable
- 1 x PC running Linux

In this user guide, we take Linux operating system as an example. For more information about the configuration on Windows and macOS, please refer to ESP-IDF Programming Guide for ESP32-H2.

## Hardware Connection

1. Solder the ESP32-H2-WROOM-02C module to the RF testing board as shown in Figure 2.

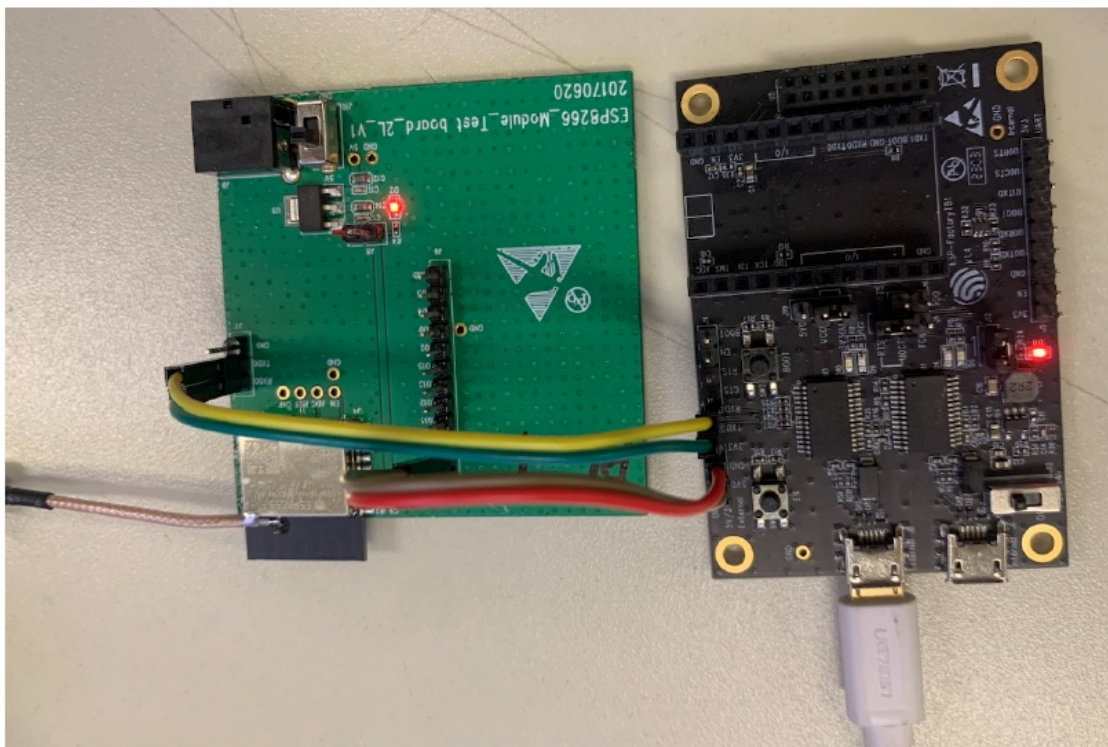


Figure 2: Hardware Connection

2. Connect the RF testing board to the USB-to-Serial board via TXD, RXD, and GND.
3. Connect the USB-to-Serial board to the PC.
4. Connect the RF testing board to the PC or a power adapter to enable 5 V power supply, via the Micro-USB cable.



5. During download, connect IO9 to GND via a jumper. Then, turn "ON" the testing board.
6. Download firmware into flash. For details, see the sections below.
7. After download, remove the jumper on IO9 and GND.
8. Power up the RF testing board again. The module will switch to working mode. The chip will read programs from flash upon initialization.

**Note:**

IO9 is internally pulled up (logic high). If IO9 is kept high or left floating, the normal Boot mode (SPI Boot) is selected. If this pin is pulled down to GND, the Download mode (Joint Download Boot) is selected. Note that IO8 must be high for proper operation in Download mode. For more information on ESP32-H2-WROOM-02C, please refer to ESP32-H2 Series Datasheet.

### 3.3 Set up Development Environment

The Espressif IoT Development Framework (ESP-IDF for short) is a framework for developing applications based on Espressif chips. Users can develop applications with ESP32-H2 in Windows/Linux/macOS based on ESP-IDF. Here we take Linux operating system as an example.

#### 3.3.1 Install Prerequisites

To compile with ESP-IDF you need to get the following packages:

- CentOS 7 & 8:
  - `sudo yum -y update && sudo yum install git wget flex bison gperf python3 cmake ninja-build ccache dfu-util libusb`
- Ubuntu and Debian:
  - `sudo apt-get install git wget flex bison gperf python3 python3-pip python3-venv cmake ninja-build ccache libffi-dev libssl-dev dfu-util libusb-1.0-0`
- Arch:
  - `sudo pacman -S --needed gcc git make flex bison gperf python cmake ninja ccache dfu-util libusb python-pip`

**Note:**

- This guide uses the directory `~/esp` on Linux as an installation folder for ESP-IDF.
- Keep in mind that ESP-IDF does not support spaces in paths.



## Get ESP-IDF

To build applications for ESP32-H2-WROOM-02C module, you need the software libraries provided by Espressif in ESP-IDF repository.

To get ESP-IDF, create an installation directory (`~/esp`) to download ESP-IDF to and clone the repository with 'git clone':

1. `mkdir -p ~/esp`
2. `cd ~/esp`
3. `git clone --recursive https://github.com/espressif/esp-idf.git`

ESP-IDF will be downloaded into `~/esp/esp-idf`. Consult ESP-IDF Versions for information about which ESP-IDF version to use in a given situation.

## Set up Tools

Aside from the ESP-IDF, you also need to install the tools used by ESP-IDF, such as the compiler, debugger, Python packages, etc. ESP-IDF provides a script named 'install.sh' to help set up the tools in one go.

1. `cd ~/esp/esp-idf`
2. `./install.sh esp32h2`

## Set up Environment Variables

The installed tools are not yet added to the PATH environment variable. To make the tools usable from the command line, some environment variables must be set. ESP-IDF provides another script 'export.sh' which does that. In the terminal where you are going to use ESP-IDF, run:

1. `$HOME/esp/esp-idf/export.sh`

Now everything is ready, you can build your first project on ESP32-H2-WROOM-02C module.

## Create Your First Project



## Start a Project

Now you are ready to prepare your application for ESP32-H2-WROOM-02C module. You can start with get-started/hello\_world project from examples directory in ESP-IDF.

Copy get-started/hello\_world to ~/esp directory:

1. `cd ~/esp`
2. `cp -r $IDF_PATH/examples/get-started/hello_world .`

There is a range of example projects in the examples directory in ESP-IDF. You can copy any project in the same way as presented above and run it. It is also possible to build examples in-place, without copying them first.

## Connect Your Device

Now connect your module to the computer and check under what serial port the module is visible. Serial ports in Linux start with '/dev/tty' in their names. Run the command below two times, first with the board unplugged, then with plugged in. The port which appears the second time is the one you need:

1. `ls /dev/tty*`

## Note

Keep the port name handy as you will need it in the next steps.

## Configure

Navigate to your 'hello\_world' directory from Step 3.4.1. Start a Project, set ESP32-H2 chip as the target and run the project configuration utility 'menuconfig'.

1. `cd ~/esp/hello_world`
2. `idf.py set-target esp32h2`
3. `idf.py menuconfig`

Setting the target with 'idf.py set-target esp32h2' should be done once, after opening a new project. If the project contains some existing builds and configuration, they will be cleared and initialized. The target may be saved in environment variable to skip this step at all. See Selecting the Target for additional information.



If the previous steps have been done correctly, the following menu appears:

```
(Top)
      Espressif IoT Development Framework Configuration
SDK tool configuration --->
Build type --->
Application manager --->
Bootloader config --->
Security features --->
Serial flasher config --->
Partition Table --->
Compiler options --->
Component config --->
Compatibility options --->

[Space/Enter] Toggle/enter  [ESC] Leave menu          [S] Save
[O] Load                  [?] Symbol info          [/] Jump to symbol
[F] Toggle show-help mode  [C] Toggle show-name mode [A] Toggle show-all mode
[Q] Quit (prompts for save) [D] Save minimal config (advanced)
```

Figure 3: Project Configuration - Home Window

You are using this menu to set up project specific variables, e.g. Wi-Fi network name and password, the processor speed, etc. Setting up the project with menuconfig may be skipped for “hello\_word”. This example will run with default configuration

The colors of the menu could be different in your terminal. You can change the appearance with the option ‘`--style`’. Please run ‘`idf.py menuconfig --help`’ for further information.

## Build the Project

Build the project by running:

### 1. idf.py build

This command will compile the application and all ESP-IDF components, then it will generate the bootloader, partition table, and application binaries.

### 1. \$ idf.py build

### 2. Running cmake in directory /path/to/hello\_world/build

### 3. Executing "cmake -G Ninja --warn-uninitialized /path/to/hello\_world"...

### 4. Warn about uninitialized values.

### 5. — Found Git: /usr/bin/git (found version "2.17.0")

### 6. — Building empty aws\_iot component due to configuration



7. — Component names: ...
  8. — Component paths: ...
  - 9.
  10. ... (more lines of build system output)
  - 11.
  12. [527/527] Generating hello\_world.bin
  13. esptool.py v2.3.1
  - 14.
  15. Project build complete. To flash, run this command:
  16. ../../../../components/esptool\_py/esptool/esptool.py -p (PORT) -b 921600 write\_flash —  
flash\_mode dio --flash\_size detect --flash\_freq 40m 0x10000 build/hello\_world.bin  
build 0x1000 build/bootloader/bootloader.bin 0x8000 build/partition\_table/ partition-  
table.bin
  17. or run 'idf.py -p PORT flash'
- If there are no errors, the build will finish by generating the firmware binary .bin file.

## Flash onto the Device

Flash the binaries that you just built onto your module by running:

1. idf.py -p PORT flash

Replace PORT with your ESP32-H2 board's serial port name from Step: Connect Your Device.

You can also change the flasher baud rate by replacing BAUD with the baud rate you need. The default baud rate is 460800.

For more information on idf.py arguments, see idf.py.

### Note:

The option 'flash' automatically builds and flashes the project, so running 'idf.py build' is not necessary.

When flashing, you will see the output log similar to the following:

1. ...
2. esptool esp32h2 -p /dev/ttyUSB0 -b 460800 --before=default\_reset --after=hard\_reset



```
write_flash -flash_mode dio -flash_freq 48m -flash_size 2MB 0x0 bootloader/  
bootloader.bin 0x10000 hello_world.bin 0x8000 partition_table/partition-table.bin
```

3. esptool.py v4.6
4. Serial port /dev/ttyUSB0
5. Connecting....
6. Chip is ESP32-H2 (revision v0.1)
7. Features: BLE
8. Crystal is 32MHz
9. MAC: 60:55:f9:f7:3e:93:ff:fe
10. Uploading stub...
11. Running stub...
12. Stub running...
13. Changing baud rate to 460800
14. Changed.
15. Configuring flash size...
16. Flash will be erased from 0x00000000 to 0x00005fff...
17. Flash will be erased from 0x00010000 to 0x00034fff...
18. Flash will be erased from 0x00008000 to 0x00008fff...
19. Compressed 20880 bytes to 12788...
20. Writing at 0x00000000... (100 %)
21. Wrote 20880 bytes (12788 compressed) at 0x00000000 in 0.6 seconds (effective 297.5 kbit/s)...
22. Hash of data verified.
23. Compressed 149424 bytes to 79574...
24. Writing at 0x00010000... (20 %)
25. Writing at 0x00019959... (40 %)
26. Writing at 0x00020bb5... (60 %)
27. Writing at 0x00026d8f... (80 %)
28. Writing at 0x0002e60a... (100 %)
29. Wrote 149424 bytes (79574 compressed) at 0x00010000 in 2.1 seconds (effective 571.7 kbit/s)...
30. Hash of data verified.
31. Compressed 3072 bytes to 103...
32. Writing at 0x00008000... (100 %)



33. Wrote 3072 bytes (103 compressed) at 0x00008000 in 0.0 seconds (effective 539.7 kbit/ s)...
34. Hash of data verified.
- 35.
36. Leaving...
37. Hard resetting via RTS pin...

If there are no issues by the end of the flash process, the board will reboot and start up the “hello\_world” application.

## Monitor

To check if “hello\_world” is indeed running, type ‘idf.py -p PORT monitor’ (Do not forget to replace PORT with your serial port name).

This command launches the IDF Monitor application:

1. \$ idf.py -p <PORT> monitor
2. Running idf\_monitor in directory [...]/esp/hello\_world/build
3. Executing "python [...]/esp-idf/tools/idf\_monitor.py -b 115200 [...]/esp/hello\_world/build/hello\_world.elf"...
4. — idf\_monitor on <PORT> 115200 —
5. — Quit: Ctrl+] | Menu: Ctrl+T | Help: Ctrl+T followed by Ctrl+H —
6. ets Jun 8 2016 00:22:57
- 7.
8. rst:0x1 (POWERON\_RESET),boot:0x13 (SPI\_FAST\_FLASH\_BOOT)
9. ets Jun 8 2016 00:22:57
10. ...

After startup and diagnostic logs scroll up, you should see “Hello world!” printed out by the application.

1. ...
2. Hello world!
3. Restarting in 10 seconds...
4. This is esp32h2 chip with 1 CPU core(s), BLE, 802.15.4 (Zigbee/Thread), silicon revision v0.1, 2 MB external flash



5. Minimum free heap size: 268256 bytes
6. Restarting in 9 seconds...
7. Restarting in 8 seconds...
8. Restarting in 7 seconds...

To exit IDF monitor use the shortcut Ctrl+].

That's all what you need to get started with ESP32-H2-WROOM-02C module! Now you are ready to try some other examples in ESP-IDF, or go right to developing your own applications.

## **U.S. FCC Statement**

The device complies with KDB 996369 D03 OEM Manual v01. Below are integration instructions for host product manufacturers according to the KDB 996369 D03 OEM Manual v01.

### **List of Applicable FCC Rules**

FCC Part 15 Subpart C 15.247

### **Specific Operational Use Conditions**

The module has BLE, Thread, and Zigbee functions.

- Operation Frequency:
  - Bluetooth: 2402 ~ 2480 MHz
  - Zigbee: 2405 ~ 2480 MHz
  - Thread: 2405 ~ 2480 MHz
- Number of Channel:
  - Bluetooth: 40
  - Zigbee/Thread: 16
- Modulation:
  - Bluetooth: GFSK
  - Zigbee: O-QPSK
  - Thread: O-QPSK
- Type: PCB Antenna
- Gain: 3.26 dBi



The module can be used for IoT applications with a maximum 3.26 dBi antenna. The host manufacturer installing this module into their product must ensure that the final composite product complies with the FCC requirements by a technical assessment or evaluation to the FCC rules, including the transmitter operation. The host manufacturer has to be aware not to provide information to the end user regarding how to install or remove this RF module in the user's manual of the end product which integrates this module. The end user manual shall include all required regulatory information/warning as shown in this manual.

### **Limited Module Procedures**

Not applicable. The module is a single module and complies with the requirement of FCC Part 15.212.

### **Trace Antenna Designs**

Not applicable. The module has its own antenna, and does not need a host's printed board microstrip trace antenna, etc.

### **RF Exposure Considerations**

The module must be installed in the host equipment such that at least 20cm is maintained between the antenna and users' body; and if RF exposure statement or module layout is changed, then the host product manufacturer required to take responsibility of the module through a change in FCC ID or new application. The FCC ID of the module cannot be used on the final product. In these circumstances, the host manufacturer will be responsible for re-evaluating the end product (including the transmitter) and obtaining a separate FCC authorization.

### **Antennas**

Antenna specification are as follows:

- Type: PCB Antenna
- Gain: 3.26 dBi

This device is intended only for host manufacturers under the following conditions:

- The transmitter module may not be co-located with any other transmitter or antenna.



- The module shall be only used with the external antenna(s) that has been originally tested and certified with this module.
- The antenna must be either permanently attached or employ a 'unique' antenna coupler.

As long as the conditions above are met, further transmitter test will not be required. However, the host manufacturer is still responsible for testing their end-product for any additional compliance requirements required with this module installed (for example, digital device emissions, PC peripheral requirements, etc.).

### **Label and Compliance Information**

Host product manufacturers need to provide a physical or e-label stating "Contains FCC ID: 2AC7Z-ESPH2WR02C" with their finished product.

### **Information on test modes and additional testing requirements**

- Operation Frequency:
  - Bluetooth: 2402 ~ 2480 MHz
  - Zigbee: 2405 ~ 2480 MHz
  - Thread: 2405 ~ 2480 MHz
- Number of Channel:
  - Bluetooth: 40
  - Zigbee/Thread: 16
- Modulation:
  - Bluetooth: GFSK
  - Zigbee: O-QPSK
  - Thread: O-QPSK

Host manufacturer must perform test of radiated and conducted emission and spurious emission, etc., according to the actual test modes for a stand-alone modular transmitter in a host, as well as for multiple simultaneously transmitting modules or other transmitters in a host product. Only when all the test results of test modes comply with FCC requirements, then the end product can be sold legally.

### **Additional testing, Part 15 Subpart B compliant**



The modular transmitter is only FCC authorized for FCC Part 15 Subpart C 15.247 and that the host product manufacturer is responsible for compliance to any other FCC rules that apply to the host not covered by the modular transmitter grant of certification. If the grantee markets their product as being Part 15 Subpart B compliant (when it also contains unintentional-radiator digital circuitry), then the grantee shall provide a notice stating that the final host product still requires Part 15 Subpart B compliance testing with the modular transmitter installed.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- This device may not cause harmful interference.
- This device must accept any interference received, including interference that may cause undesired operation.

**Caution:**

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.



This equipment complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. This device and its antenna must not be co-located or operating in conjunction with any other antenna or transmitter. The antennas used for this transmitter must be installed to provide a separation distance of at least 20 cm from all persons and must not be co-located or operating in conjunction with any other antenna or transmitter.

## **OEM Integration Instructions**

This device is intended only for OEM integrators under the following conditions:

- The transmitter module may not be co-located with any other transmitter or antenna.
- The module shall be only used with the external antenna(s) that has been originally tested and certified with this module.

As long as the conditions above are met, further transmitter test will not be required. However, the OEM integrator is still responsible for testing their end-product for any additional compliance requirements required with this module installed (for example, digital device emissions, PC peripheral requirements, etc.).

## **Validity of Using the Module Certification**

In the event that these conditions cannot be met (for example certain laptop configurations or co-location with another transmitter), then the FCC authorization for this module in combination with the host equipment is no longer considered valid and the FCC ID of the module cannot be used on the final product. In these circumstances, the OEM integrator will be responsible for re-evaluating the end product (including the transmitter) and obtaining a separate FCC authorization.

## **End Product Labeling**

The final end product must be labeled in a visible area with the following: “Contains Transmitter Module FCC ID: 2AC7Z-ESPH2WR02C”.

## **Related Documentation and Resources**

### **Related Documentation**

- ESP32-H2 Series Datasheet – Specifications of the ESP32-H2 hardware.



- ESP32-H2 Technical Reference Manual – Detailed information on how to use the ESP32-H2 memory and peripherals.
- ESP32-H2 Hardware Design Guidelines – Guidelines on how to integrate the ESP32-H2 into your hardware product.
- ESP32-H2 Series SoC Errata – Descriptions of known errors in ESP32-H2 series of SoCs.
- Certificates  
<https://espressif.com/en/support/documents/certificates>
- ESP32-H2 Product/Process Change Notifications (PCN)  
<https://espressif.com/en/support/documents/pcns?keys=ESP32-H2>
- ESP32-H2 Advisories – Information on security, bugs, compatibility, component reliability.  
<https://espressif.com/en/support/documents/advisories?keys=ESP32-H2>
- Documentation Updates and Update Notification Subscription  
<https://espressif.com/en/support/download/documents>

## Developer Zone

- ESP-IDF Programming Guide for ESP32-H2 – Extensive documentation for the ESP-IDF development framework.
- ESP-IDF and other development frameworks on GitHub.  
<https://github.com/espressif>
- ESP32 BBS Forum – Engineer-to-Engineer (E2E) Community for Espressif products where you can post questions, share knowledge, explore ideas, and help solve problems with fellow engineers.  
<https://esp32.com/>
- The ESP Journal – Best Practices, Articles, and Notes from Espressif folks.  
<https://blog.espressif.com/>
- See the tabs SDKs and Demos, Apps, Tools, AT Firmware.  
<https://espressif.com/en/support/download/sdks-demos>

## Products

- ESP32-H2 Series SoCs – Browse through all ESP32-H2 SoCs.



<https://espressif.com/en/products/socs?id=ESP32-H2>

- ESP32-H2 Series Modules – Browse through all ESP32-H2-based modules.

<https://espressif.com/en/products/modules?id=ESP32-H2>

- ESP32-H2 Series DevKits – Browse through all ESP32-H2-based devkits.

<https://espressif.com/en/products/devkits?id=ESP32-H2>

- ESP Product Selector – Find an Espressif hardware product suitable for your needs by comparing or applying filters.

<https://products.espressif.com/#/product-selector?language=en>

## Contact Us

- See the tabs Sales Questions, Technical Enquiries, Circuit Schematic & PCB Design Review, Get Samples (Online stores), Become Our Supplier, Comments & Suggestions.

<https://espressif.com/en/contact-us/sales-questions>

## Revision History

Date	Version	Release notes
2025-03-27	v1.1	Official release

## Disclaimer and Copyright Notice

Information in this document, including URL references, is subject to change without notice.

ALL THIRD PARTY'S INFORMATION IN THIS DOCUMENT IS PROVIDED AS IS WITH NO WARRANTIES TO ITS AUTHENTICITY AND ACCURACY.

NO WARRANTY IS PROVIDED TO THIS DOCUMENT FOR ITS MERCHANTABILITY, NON-INFRINGEMENT, FITNESS FOR ANY PARTICULAR PURPOSE, NOR DOES ANY WARRANTY OTHERWISE ARISING OUT OF ANY PROPOSAL, SPECIFICATION OR SAMPLE. All liability, including liability for infringement of any proprietary rights, relating to use of information in this document is disclaimed. No licenses express or implied, by estoppel or otherwise, to any intellectual property rights are granted herein. The Wi-Fi Alliance Member logo is a trademark of the Wi-Fi Alliance. The Bluetooth logo



is a registered trademark of Bluetooth SIG.

All trade names, trademarks and registered trademarks mentioned in this document are property of their respective owners, and are hereby acknowledged.

Copyright © 2025 Espressif Systems (Shanghai) Co., Ltd. All rights reserved.


[www.espressif.com](http://www.espressif.com)

FAQ

What is the default power supply for VBAT pin?

The VBAT pin is connected to the internal 3V3 power supply by default or can be connected to an external battery power supply ranging from 3.0 to 3.6 V.

Documents / Resources

	<p><a href="#">ESPRESSIF ESP32-H2-WROOM-02C Bluetooth Low Energy and IEEE 802.15.4 Module [pdf] User Manual</a></p> <p>ESP32-H2-WROOM-02C Bluetooth Low Energy and IEEE 802.15.4 Module, ESP32-H2-WROOM-02C, Bluetooth Low Energy and IEEE 802.15.4 Module, Low Energy and IEEE 802.15.4 Module, Energy and IEEE 802.15.4 Module, IEEE 802.15.4 Module, 802.15.4 Module, Module</p>
--	---

References

- [User Manual](#)

ESPRESSIF

802.15.4 Module, Bluetooth Low Energy and IEEE 802.15.4 Module, Energy and IEEE 802.15.4 Module, ESP32-H2-WROOM-02C, ESP32-H2-WROOM-02C Bluetooth Low Energy and IEEE 802.15.4 Module, espressif, IEEE 802.15.4 Module, Low Energy and IEEE 802.15.4 Module, Module

Leave a comment

Your email address will not be published. Required fields are marked \*

Comment \*



Name

Email

Website

☐ Save my name, email, and website in this browser for the next time I comment.

Post Comment

Search:

e.g. whirlpool wrf535swhz

Search

[Manuals+](#) | [Upload](#) | [Deep Search](#) | [Privacy Policy](#) | [@manuals.plus](#) | [YouTube](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.