



EVERBILT GARBAGE DISPOSAL User Manual

[Home](#) » [Everbilt](#) » EVERBILT GARBAGE DISPOSAL User Manual 

Contents

- 1 EVERBILT GARBAGE DISPOSAL
- 2 IMPORTANT SAFETY INSTRUCTIONS
- 3 REMOVAL OF OLD UNIT
- 4 INSTALLATION OF MOUNTING ASSEMBLY
- 5 DISHWASHER CONNECTION PREPARATION
- 6 ATTACHING DISCHARGE ELBOW
- 7 LOCKING MOUNTING ASSEMBLY DETAIL
- 8 DISCHARGE ELBOW & DISHWASHER CONNECTIONS
- 9 ELECTRICAL CONNECTIONS
 - 9.1 GROUNDING INSTRUCTIONS
 - 9.2 PERMANENT WIRE INSTALLATION INSTRUCTIONS
- 10 OPERATING INSTRUCTIONS
- 11 CLEANING AND MAINTENANCE
- 12 TROUBLESHOOTING
- 13 TYPICAL INSTALLATIONS
- 14 WARRANTY
- 15 Related Posts



EVERBILT GARBAGE DISPOSAL



IMPORTANT SAFETY INSTRUCTIONS

INSTRUCTIONS PERTAINING TO A RISK OF FIRE, ELECTRIC SHOCK OR INJURY TO PERSONS. SAVE THESE INSTRUCTIONS.

WARNING – When using electrical appliances, basic precautions should always be followed, including the following:

1. Read all instructions before using the appliance.
2. To reduce the risk of injury, close supervision is necessary when an appliance is used near children.
3. Do not put fingers or hands into a waste disposer.
4. Turn the power switch to the off position before attempting to clear a jam or remove an object from the disposer.
5. When attempting to loosen a jam in a waste disposer, use a long wooden object such as a wooden spoon or the wooden handle of a broom or mop.
6. When attempting to remove objects from a waste disposer use long-handled tongs or pliers. If the disposer is magnetically actuated, non-magnetic tools should be used.
7. To reduce the risk of injury by materials that may be expelled by a waste disposer, do not put the following into a disposer: clam or oyster shells; caustic drain cleaners or similar products; glass, china or plastic; large whole bones; metal, such as bottle caps, tin cans, aluminum foil or utensils; hot grease or other hot liquids; whole corn-husks.
8. When not operating a disposer, leave the stopper in place to reduce the risk of objects falling into the disposer.
9. DO NOT operate the disposer unless the splash guard is in place.
10. For proper grounding instructions see the ELECTRICAL CONNECTIONS portion of this manual.

The receptacle to which this appliance is connected must be controlled by a switch.

REMOVAL OF OLD UNIT



TYPICAL INSTRUCTIONS, YOUR MODEL MAY VARY.

Before starting this step, turn off the electrical power at the circuit breaker or fuse box. Unplug disposer.

NOTE: If your old mount is the same type (3-Bolt Mount) as the mount on your new disposer and you wish to continue using the old mount, just remove your old disposer as shown below in parts 1A,-1B, & 1C then skip to Step 3 on page 5.



If your old mount is the same type as the mount on your new disposer and you do not wish to use the old mount you can remove the old mount as follows:

- **A.** Have a container available to catch any excess water/waste from the current disposer.
- **B.** Use a pipe wrench to disconnect the drain line where it attaches to the disposer discharge elbow (see 1A).

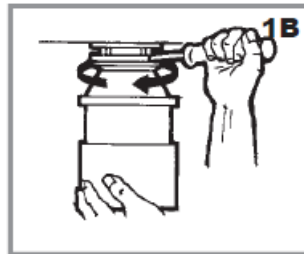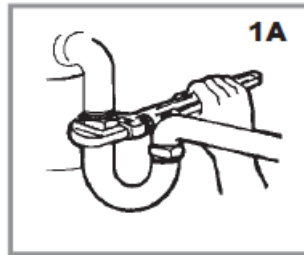

- **C.** Remove the disposer from sink flange by turning the mounting ring to the left clockwise (see 1B). If you are unable to turn the mounting ring, tap on one of the extensions from the ring with a hammer. Some mounting systems have tubular extensions. Inserting a screwdriver into one tube will provide additional leverage for turning the mounting ring (see 1B). Some disposers may require the removal or loosening of nuts from the mount screws (see 1C).

Some disposers may require the removal of a clamp.

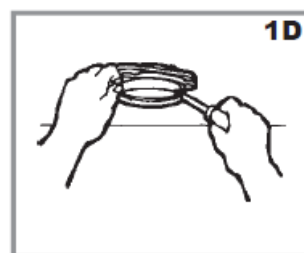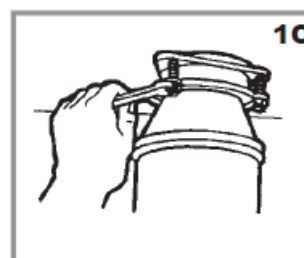

Caution: Be sure to support the disposer while performing this step or it may fall when the mounting ring is disconnected from the mounting assembly.

- **D.** To remove the remaining mount system from the sink, loosen the mount screws, and push the mount ring up. Under it is the snap ring. Use a screwdriver to pop off the snap ring (see 1D). Remove the mount ring,

protector ring and gasket from sink flange. Some mounts will require the unscrewing of a large ring holding the sink flange in place. Pull the sink flange up through sink and clean off old putty from sink.


- **E.** Ensure that sink is clean and thoroughly dry.

If you have a mounting system under the sink that is black plastic with threads:

- **A.** While holding the disposer in place, turn the metal mount ring clockwise (1E). If it is hard to turn, tap the ear of the mounting ring clockwise.
- **B.** When the disposer hopper projections get close to the mount ring opening, hold the disposer from the bottom and disengage it from the mounting ring.
- **C.** Remove the rubber cushion mount from under the mounting ring.
- **D.** Remove the mounting ring. Unthread the black support ring from sink flange by turning the support ring clockwise. Remove the fiber gasket and then remove the sink flange from above the sink.
- **E.** Ensure that sink is clean and thoroughly dry.


IMPORTANT: This is a good time to clean out the trap and drain lines by running a drain auger or plumber's snake before installing your new disposer.

Mount With Threaded Flange

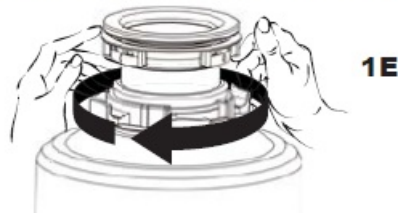

INSTALLATION OF MOUNTING ASSEMBLY

1. **A STOPPER**
2. **B REMOVABLE SPLASH GUARD**
3. **C SINK FLANGE**

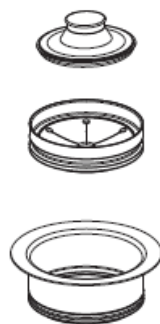

4. **D SUPPORT FLANGE**
5. **E UPPER MOUNT RING**
6. **F MOUNT SCREWS**




- 7. **G** RETAINER RING
- 8. **H** CUSHION RING*
- 9. **I** LOWER MOUNT RING




READ CAREFULLY AND COMPLETELY BEFORE STARTING

NOTE: As the mounting assembly is properly assembled at the factory, please pay close attention to the order of the mounting system parts.

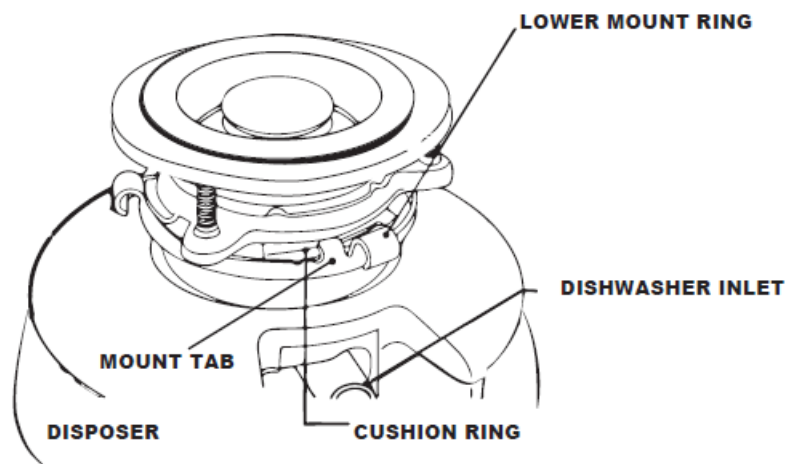


NOTE: Cushion Ring included between the Upper Mount Ring and Lower Mounting Ring.

* Part not disengaged during disposer installation.

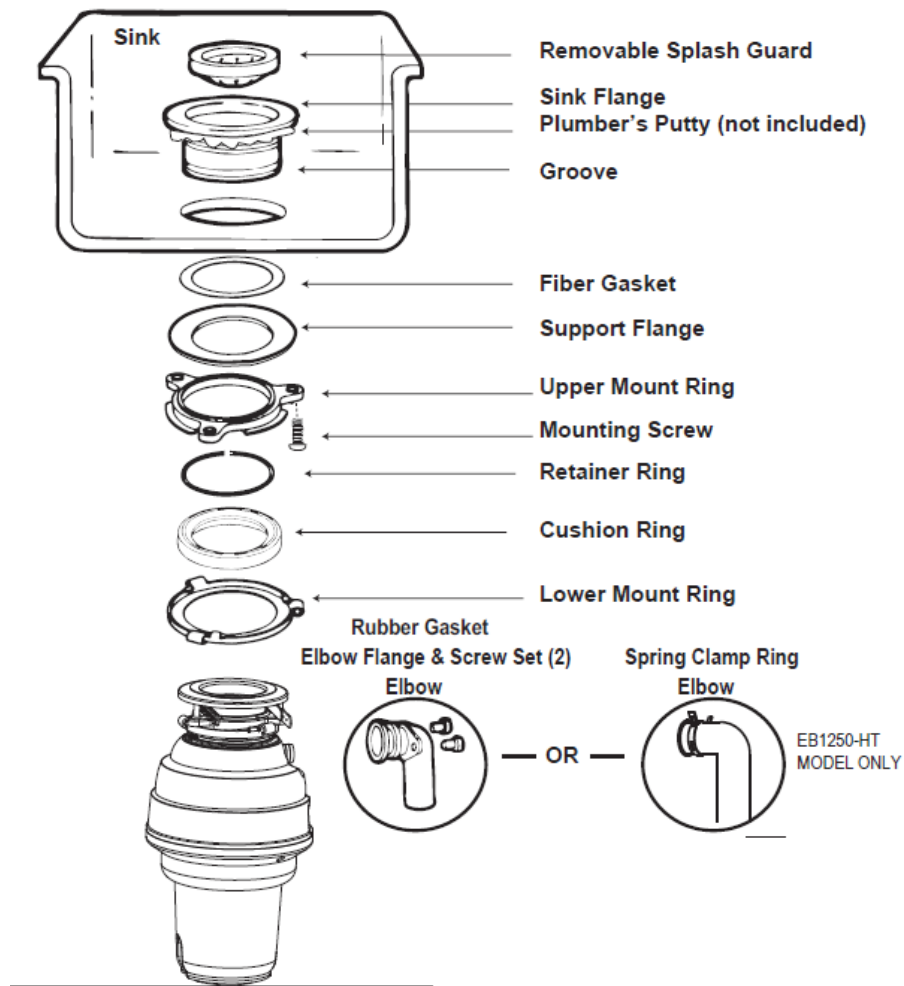


- A.** The Cushion Ring and the Lower Mount Ring will remain attached to the disposer during installation. Take apart the other parts of the mounting assembly by rotating the Lower Mount Ring (J on page 3) clockwise until the Lower Mount Ring Tabs slide off from the Upper Mount Ring ramp (A1). This allows you to pull the Sink Flange up and out of the remaining Lower Mount Assembly. Note the order of these parts as they are arranged in the required order. Unscrew the 3 Mount Screws until the Upper Mount Ring can be moved to the top of the Support Flange. Remove the Retainer Ring with a flat-head screwdriver.(A2)

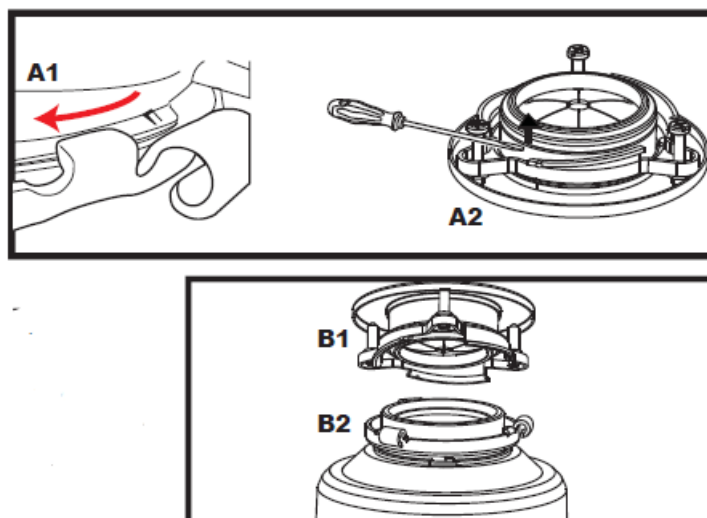


- B.** Keep the remaining parts placed together in the order they were removed (B1). Before you connect the disposer to the mounting assembly under the sink, make sure the Lower Mount Ring is in place and the black Cushion Ring is still engaged properly to the top of the disposer hopper (B2).



- **C.** Be sure the sink is clean. Load the underside rim of the sink flange with the plumber's putty (C1). From top of the sink, push the sink flange down against the sink opening to make a good seal (C2). DO NOT MOVE OR ROTATE the sink flange once it has been seated or the seal may be broken.

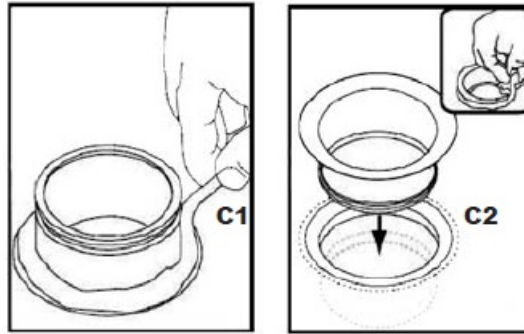


- **D** Place a heavy object, such as the disposer (use a towel to prevent sink scratching) on top of the Sink Flange to hold it down.

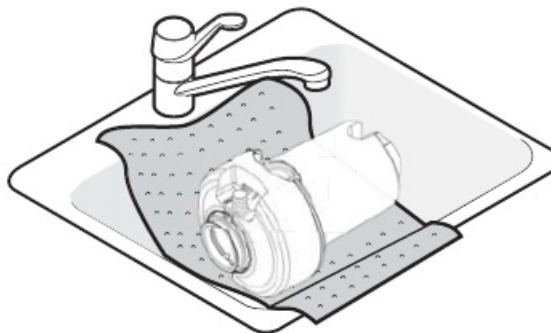

- **E.** Take the remaining portion of the mounting assembly, that was put aside. From under the sink insert the Fiber Gasket (E1), then the Support Flange (E2), and then the Upper Mount Ring (E3).

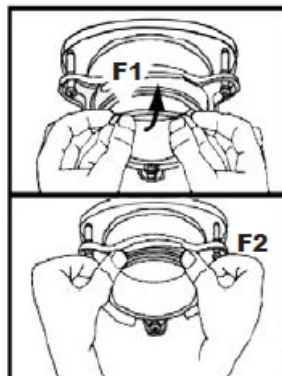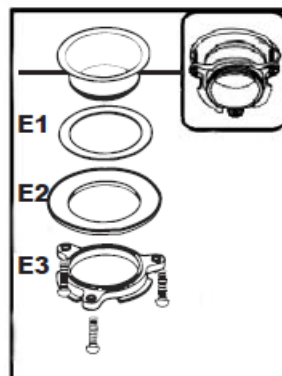

- **G.** Tighten the three Mount Screws evenly and firmly against the Support Flange (G1). Do not over-tighten.

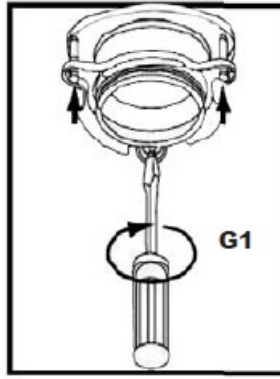


- **H.** Trim off any excess plumber's putty in the sink with a plastic knife or something similar that will not damage your sink.

DISHWASHER CONNECTION PREPARATION


If you are utilizing a dishwasher, complete the following procedure.

Using a blunt instrument (steel punch or wooden dowel), knock out entire plug. Do not use a screwdriver or sharp instrument. (When the knockout plug falls into the disposer, you may remove it or grind it up when the disposer is used. This will not damage the disposer in any way, but it may take some time to grind).

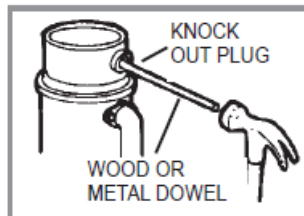

ATTACHING DISCHARGE ELBOW

FOR ALL MODELS EXCEPT THE EB1250-HT (A. & B.)

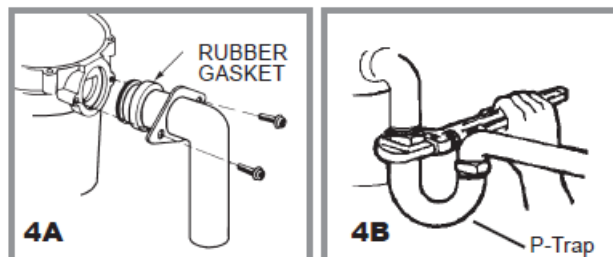

- **A.** Connect the waste elbow to the disposer by sliding the flange against the rubber gasket on the elbow and tightening the screws into the disposer (see 4A). Then connect the bottom of the elbow by tightening the slip nut (see 4B). If using a straight pipe, it must have a lip similar to the one on the elbow. Remove the gasket from the elbow and install it on the straight pipe with the flat end of the gasket facing toward the disposer discharge opening.
- **B.** If you are connecting to a dishwasher, return to section 2B. If not, make sure all plumbing connections are tight and in accordance with all plumbing codes and ordinances. Run water and check for leaks.


FOR THE EB1250-HT MODEL (C. & D.)

- **C.** Depress the wings on the spring clamp to remove it from the rubber sleeve. Slip the spring clamp over the smooth side of the elbow and slide it towards the lipped side of the elbow. (see 4C). Insert the waste elbow into the rubber sleeve so the elbow lip fits into the groove located inside the rubber sleeve. Position the spring

clamp over the rubber sleeve and secure (see 4D). If using a straight pipe, use one with a lip matching the lip on the elbow supplied with the disposer.


- **D.** If you are connecting to a dishwasher, return to section 2B. If not, make sure all plumbing connections are tight and in accordance with all plumbing codes and ordinances. Run water and check for leaks.

EB1250-HT MODEL

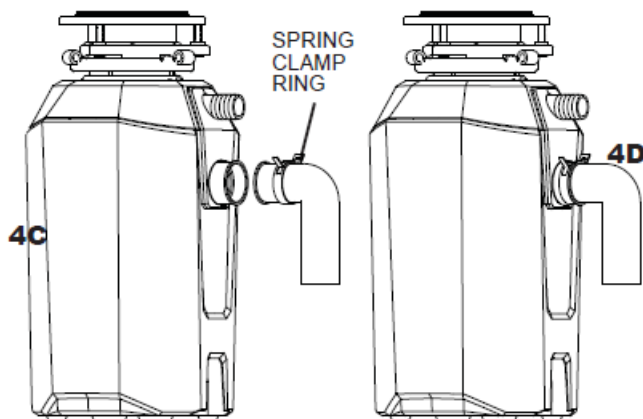

LOCKING MOUNTING ASSEMBLY DETAIL

Attach the disposer onto the Upper Mount Ring by aligning the three mount tabs on the Lower Mount Ring with the slide-up Ramps on the Upper Mount Ring and rotating counterclockwise. See Below.

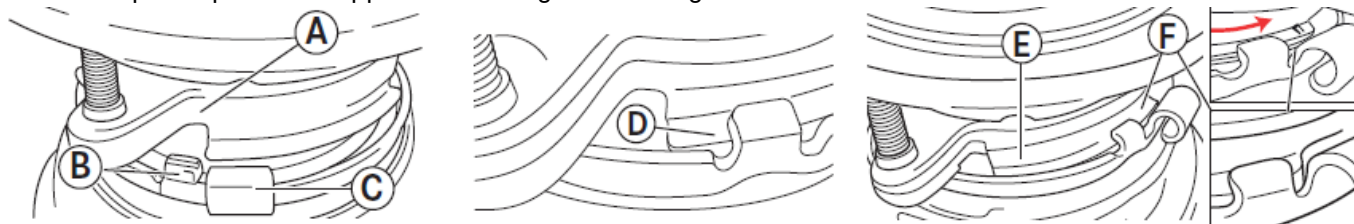

The lower mounting ring (which is part of the disposer) has 3 tabs that grab the mounting ring ramp.

As the Lower Mount Ring is turned counterclockwise each tab slides up onto the Upper Mount Ring Ramp (E) and locks in position over the Ridges (F).

Use a screwdriver or hammer for leverage if needed.


If a disposer needs to be removed, tapping on the Ear clockwise with a hammer will easily loosen the Lower Mount Ring.

DISCHARGE ELBOW & DISHWASHER CONNECTIONS

- **A.** Connect the bottom of the elbow by tightening the slip nut (see 6A).

If you are connecting to a dishwasher, see B. If not, make sure all plumbing connections are tight and in accordance with all plumbing codes and ordinances. Run water and check for leaks.

- **B.** Connect the dishwasher hose (6B) using a hose clamp. Make sure all plumbing connections are tight and in accordance with all plumbing codes and ordinances. Run water and check for leaks.

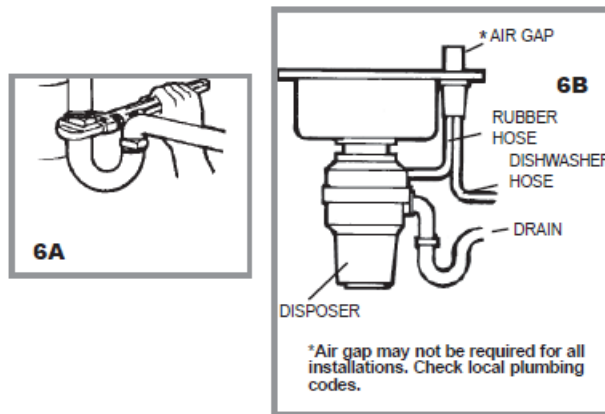

ELECTRICAL CONNECTIONS

- **A.** Connect the disposer to the appropriate household current only.

The receptacle to which this appliance is connected must be controlled by a switch.

WARNING: IMPROPER CONNECTION OF THE EQUIPMENT-GROUNDING CONDUCTOR CAN RESULT IN A RISK OF ELECTRIC SHOCK. CHECK WITH A QUALIFIED ELECTRICIAN OR SERVICEMAN IF YOU ARE IN DOUBT AS TO WHETHER THE APPLIANCE IS PROPERLY GROUNDED. DO NOT MODIFY THE PLUG PROVIDED WITH THE APPLIANCE IF IT WILL NOT FIT THE OUTLET. HAVE A PROPER OUTLET INSTALLED BY A QUALIFIED ELECTRICIAN.

GROUNDING INSTRUCTIONS

THIS DISPOSER IS EQUIPPED WITH A GROUNDED PLUG-IN POWER CORD.

B. This appliance must be grounded. In the event of a malfunction or breakdown, grounding provides a path of least resistance for electric current to reduce the risk of electric shock. This appliance is equipped with a cord having an equipment-grounding conductor and a grounding plug. The plug must be plugged into an appropriate outlet that is properly installed and grounded in accordance with all local codes and ordinances. If the supply cord is damaged it must be replaced by the manufacturer, its service agent or similarly qualified person in order to avoid a hazard. Removing an attached power cord or plug voids the warranty.

PERMANENT WIRE INSTALLATION INSTRUCTIONS

FOR WASTE DISPOSERS NOT EQUIPPED WITH A GROUNDED PLUG-IN POWER CORD.

GROUNDING: This disposer must be connected to a grounded, metal, permanent wiring system; or an equipment-grounding conductor must be run with the circuit conductors and connected to the equipment-grounding terminal or lead on the disposer.

An acceptable motor control switch with a marked-off position shall be provided at the time of installation to disconnect the disposer from all ungrounded supply conductors. The switch shall be mounted in sight of the disposer or in sight of the sink opening for the disposer.

WARNING: Electric Shock

Turn off power before installing or servicing the disposer. All wiring must comply with local electrical codes. Do not connect the electrical current at the main breaker panel until adequate ground is established. Inadequate connection of the ground wire can result in a risk of electric shock. Consult with a certified electrician or tradesman if there is any doubt whether the disposer is inadequately grounded. Your disposer must be adequately grounded.

1. Turn off or disconnect all power to the wall junction box serving the disposer.
2. Open the junction box in the wall and remove the wire nuts or electrical tape or whatever is tying the old disposer wire to the electrical wire inside of the junction box.

3. Open the end bell plate at the bottom of the disposer.

If you are using flexibly armored (BX) cable:

1. Install cable fitting in the disposer end bell hole.
2. Secure the cable to the fitting and install an insulating bushing or equivalent.
3. Connect the white wire from the junction box to the white (or blue) wire of the disposer.
4. Connect the black wire from the junction box to the black (or brown) wire of the disposer.
5. Connect bare ground wire from the junction box to the green ground screw within the disposer end bell.

If you are using nonmetallic-sheathed (ROMEX) cable:

1. Install cable fitting in the end bell hole and secure the cable to the fitting.
2. Connect the white wire from the junction box to the white (or blue) wire of the disposer.
3. Connect the black wire from the junction box to the black (or brown) wire of the disposer.
4. Connect the bare ground wire from the junction box to the green ground screw within the disposer end bell.

If your power supply cable does not include a grounding wire, one must be provided. Attach a copper wire securely to the disposer ground screw and attach another end of the ground wire to a metal cold water pipe. Do not attach the ground wire to a gas supply pipe. Use only UL Listed grounding clamp. If plastic pipe is used in your home, a qualified electrician should install a proper ground.

OPERATING INSTRUCTIONS

The Anti-Jam Swivel Impellers make a clicking sound as they initially swing into place. This indicates normal operation.

- **A.** Remove sink stopper. Turn on a medium flow of cold water.
- **B.** Turn switch to ON position; your motor is turning at full speed and ready to use.
- **C.** Scrape in food waste. Down the drain go table scraps, peelings, rinds, seeds, pits, small bones and coffee grounds. To speed up food waste disposal, cut or break up large bones, rinds and cobs. Large bones and fibrous waste require considerable grinding time and are more easily thrown away with other trash. Do not be alarmed that the disposer slows down while grinding. The disposer is actually increasing torque (grinding power) and is operating under normal conditions.
- **D.** Before turning the disposer off, let water and the disposer run for approximately 15 seconds after shredding or grinding stops. This assures that all waste is thoroughly flushed through trap and drain.
- **E.** It is not recommended to use hot water while running the disposer. Cold water will keep waste and fats solid so the disposer can flush away particles.

TIPS FOR SUCCESSFUL OPERATION

- **A.** Be sure the disposer is empty before using your dishwasher so it may drain properly.
- **B.** You may want to leave the stopper in the sink drain when not in use to prevent utensils and foreign objects from falling into the disposer.
- **C.** Your disposer is ruggedly built to give you many years of trouble-free service. It will handle all normal food

wastes, but it will NOT grind or dispose of such items as plastic, tin cans, bottle caps, glass, china, leather, cloth, rubber, string, clam and oyster shells, aluminum foil or feathers.

CLEANING AND MAINTENANCE

DO NOT ATTEMPT TO LUBRICATE YOUR DISPOSER!

The motor is permanently lubricated. The disposer is self-cleaning and scours its internal parts with each use. NEVER put lye or chemical drain cleaners into the disposer, as they cause serious corrosion of metal parts. If used, the resulting damage can be easily detected and all warranties are void. Mineral deposits from your water can form on the stainless steel turntable, giving the appearance of rust. DO NOT BE ALARMED, the stainless steel turntables used will not corrode.

TROUBLESHOOTING

Before seeking repair or replacement, we recommend that you review the following:

LOUD NOISES: (Other than those during the grinding of small bones and fruit pits): These are usually caused by accidental entry of a spoon, bottle cap or another foreign object. To correct this, turn off the electrical switch and water. After the disposer has stopped, remove the splash guard, remove objects with long handled tongs, and replace the splash guard.

UNIT DOES NOT START: Unplug the power cord or turn either the wall switch or breaker box switch to "OFF" position, depending on your model and wiring configuration. Remove the stopper and/or splash guard. Check to see if the turntable will rotate freely using a wooden broom handle. If the turntable rotates freely, replace the splash guard and check the reset button to see if it has been tripped. The reset button is red and located on the front of the disposer. Push the button in until it clicks and remains depressed.


If the reset button has not been tripped, check for shorted or broken wire connecting to the disposer. Check the electrical power switch, fuse box or circuit breaker. If wiring and electrical components are intact, the unit may have internal problems that require service or replacement.

IF TURNTABLE DOES NOT ROTATE FREELY: Turn off the disposer, then check for any foreign object lodged between the turntable and grind ring. Dislodge the object by rotating the table with a wooden broom handle (see 10A) and remove the object. If no foreign object is present, there may be internal problems.




LEAKS: If the unit leaks at the top, it may be due to:


1. Improper seating of sink flange (gasket centering, putty or tightening).
2. The support ring not tightened properly.
3. Defective or improperly installed cushion mount.

If unit leaks at the waste elbow, the leak may be due to improper tightening of elbow flange screws.

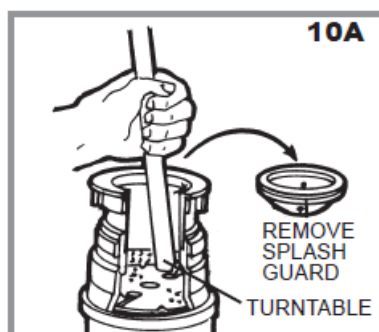

TYPICAL INSTALLATIONS

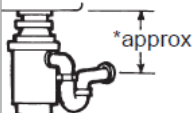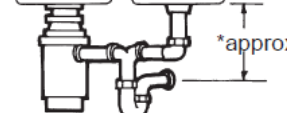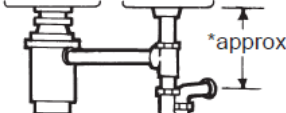*Approximate Dimension		SINGLE BOWL	DOUBLE BOWL CENTER OUTLET	DOUBLE BOWL END OUTLET
EB333, EB500, EB500-M & EB750-SL	10.2 in			
EB750	10.5 in			
EB1250-HT	10.5 in			

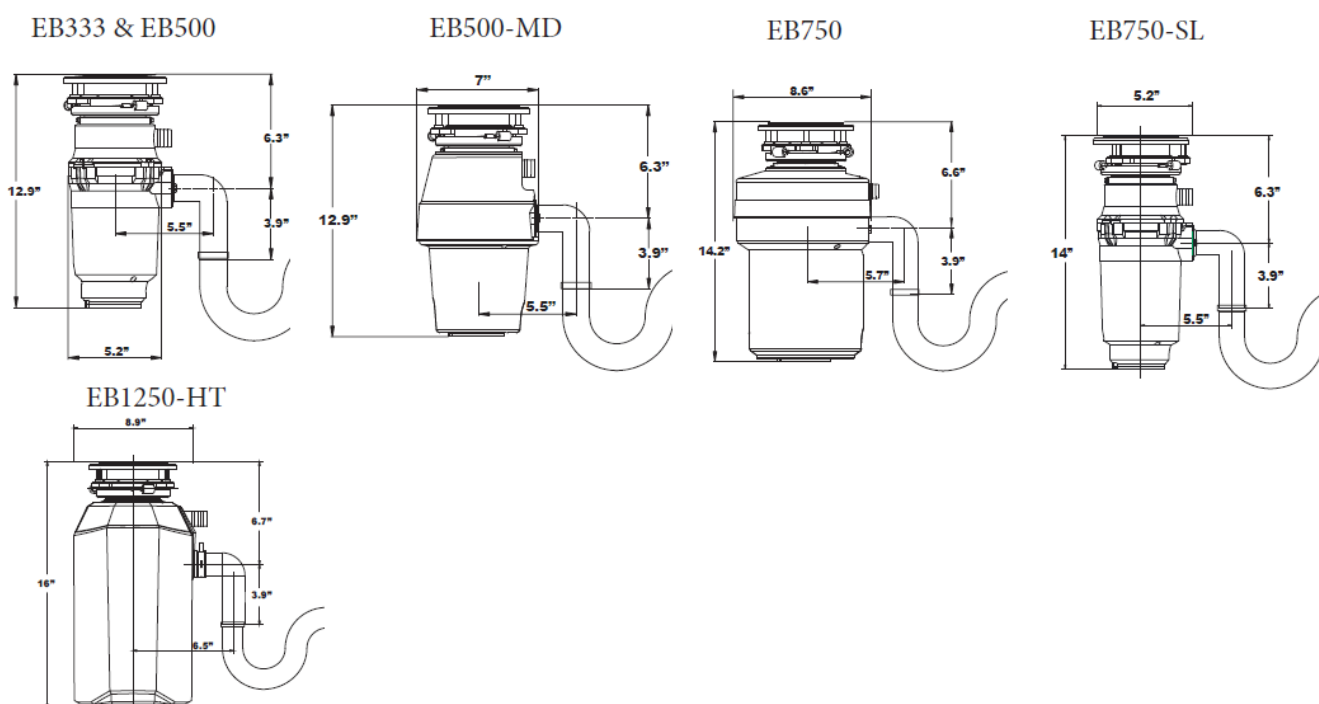

WARRANTY

Proof of purchase is required! A staple receipt or proof of purchase to this manual. Tracking is handled through the serial number affixed to the bottom of the disposer and/or on the power cord label.

Conveniently record your model number and serial number on the front of this manual for your records. If you need warranty service, call us toll-free at 833-240-6222. Have serial number and receipt available for the technician. The warranty is non-transferable.

1. **WARRANTY:** Everbilt disposers are warranted when installed in the United States to be free from defects in workmanship and material during the warranty period. This warranty sets forth our overall warranty commitment. We will not assume, nor authorize any person to assume for us, any other liability in connection with the sale of our products. Warranty only valid for products sold through authorized dealers/retailers.
2. **LENGTH OF WARRANTY:** MODEL# EB333 -3 years from the date of purchase. MODEL# EB500 – 4 years from date of purchase. MODEL# EB500-MD – 5 years from date of purchase. MODELS# EB750 & EB750-SL – 10 years from date of purchase. MODEL# EB1250-HT – LIFETIME. Models that fail to operate during its warranty period, will be repaired or replaced. This Warranty includes In-Home Warranty for Everbilt models that fall into disrepair due to manufacturing defect. This warranty is limited to the original purchaser. Original sales receipt required.
3. **DEFECTIVE DISPOSER:** During the warranty period, a defective or inoperative disposer will be replaced by the company at no charge to the consumer/purchaser. Original sales receipt required. The warranty on the replacement will be limited to the unexpired term of the warranty on the original disposer.
4. **CHANGE OF OWNERSHIP DISPOSER:** Warranty remains in force for the warranty period from date of

purchase of disposer by the original retail customer. The warranty is non-transferable. Original sales receipt required.

5. MISUSE OF DISPOSER: This warranty does not apply to any disposer which is misused, altered, improperly installed or used for anything other than normal residential use. Additional conditions are not covered by the warranty as follows: Electrical connections due to improper installation; cutting off of the electrical plug, leaks at the sink flange, dishwasher inlet or discharge elbow; damage by installer such as excessive torquing of screwed connections; incorrect operation such as grinding nonfood waste; and jams.
6. HOW TO RECEIVE SERVICE: Contact our Customer Service department: Toll-Free: (833-240-6222).
7. LIFETIME CORROSION WARRANTY: In addition to the above warranty, any disposer that fails to operate because of corrosion will be replaced. This Lifetime Corrosion warranty is limited to the original purchaser. The original sales receipt is required.
8. MODEL NUMBER AND SERIAL NUMBER: The model number and serial number are located on the bottom serial plate of your disposer and/or the power cord tag. Always reference the model number and serial number when contacting customer service about any warranties on your disposer.
9. IMPLIED WARRANTIES: IMPLIED WARRANTIES, INCLUDING IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE WARRANTY PERIOD FROM THE DATE OF PURCHASE. Some states do not allow limitations on how long an implied warranty lasts, so, therefore, the above limitation may not apply to you.
10. CONSEQUENTIAL OR INCIDENTAL DAMAGES: THE COMPANY SHALL NOT BE LIABLE FOR CONSEQUENTIAL OR INCIDENTAL DAMAGES FOR ANY BREACH OF WARRANTY, EXPRESS OR IMPLIED. Some states do not allow the exclusion or limitation of consequential or incidental damages, so, therefore, the above exclusion may not apply to you.
11. EXCLUSIVE REMEDY. CONSEQUENTIAL DAMAGES: The foregoing provisions state the exclusive remedy for any breach of warranty, express or implied, TO THE EXTENT PERMITTED BY LAW, THE COMPANY SHALL NOT BE LIABLE FOR CONSEQUENTIAL OR INCIDENTAL DAMAGES FOR BREACH OF WARRANTY, EXPRESS OR IMPLIED. Some states do not allow the exclusion or limitation of consequential or incidental damages, so, therefore, the above exclusion may not apply to you.

Download PDF: [EVERBILT GARBAGE DISPOSAL User Manual](#)