



FATEK FBs-1LC Load Cell Input Module User Manual

[Home](#) » [FATEK](#) » FATEK FBs-1LC Load Cell Input Module User Manual 

FATEK FBs-1LC Load Cell Input Module



Contents

- 1 Introduction
- 2 Specifications of FBs-PLC Load Cell Measurement Modules
- 3 The Procedures of Using FBs-PLC Load Cell Module
- 4 The Procedures of Configure the Load Cell Measurement
- 5 Load cell reading / control register
- 6 Description of Related Registers for Load Cell Measurement
 - 6.1 I/O Addressing of Load Cell Module
 - 6.2 Wiring of Load Cell Modules
- 7 Documents / Resources
- 8 Related Posts

Introduction

FBs-1LC / FBs-2LC is one of the analog input modules of FATEK FBs series PLC. It supports one / two channel of load cell input for weight measurement.

The conversion result is represented by a signed 16 bit integer value. In order to filter out the field noise imposed on the signal, it also provides the average of sample input function.

Note:

1. The supporting of I/O configuration for FBs-1LC/2LC module is available only for PLC OS V4.71 and Winproladder V3.22 or later version.
2. For those early applications which do not use I/O configuration to work with 1LC module can still work properly provided that no additional FBs-2LC module control is required.

Specifications of FBs-PLC Load Cell Measurement Modules

FBs-1LC/ FBs-2LC Load Cell Measurement Modules

Specifications	FBs-1LC	FBs-2LC
Total Channels	one channel	two channels
Resolution	16 bits (include signed bit)	
I/O Points Occupied	1 RI(Input Register) and 8 DO	
Conversion Rate	5/ 10/ 25/ 30/ 60/ 80 Hz	1/ 3/ 5/ 8 Hz
Non-Linearity	0.01% F.S. (@25°C)	
Zero Drift	0.2 $\mu\text{V}/^{\circ}\text{C}$	
Gain Drift	10 ppm/ $^{\circ}\text{C}$	
Excitation Voltage	5V with 100 Ω driving capability	
Sensitivity	2mV/V, 5mV/V, 10mV/V,20mV/V	
Software Filter	Moving average	
Average Samples	1~8 configurable	
Isolation	Transformer(Power) and photo-coupler(Signal)	
Indicator(s)	5V PWR LED	
Supply Power	24V-15%/+20%, 2VA	
Internal Power Consumption	5V, 100mA	
Operating Temperature	0 ~ 60 $^{\circ}\text{C}$	
Storage Temperature	-20 ~ 80 $^{\circ}\text{C}$	
Dimensions	40(W)x90(H)x80(D) mm	

The Procedures of Using FBs-PLC Load Cell Module


Start

Connects Load Cell Modules to the expansion interface on PLC in series and connects an external 24VDC source and load cell measure input wires.

Execute the WinProladder and configure the load cell configuration table address, the register address, and working register in load cell configuration windows, then you can read the weight measurement value form register directly

The Procedures of Configure the Load Cell Measurement

Click the item "I/O Configuration" which in Project Windows:

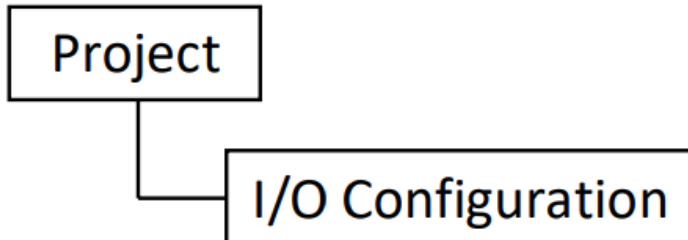

➔ Select "LC Configuration" :

Once the setting page displayed, is able to measure the load cell module.

The screenshot shows the 'I/O Configuration MC v4.x' window with the 'LC Configuration' tab selected. The 'Load Cell Configuration' section has three input fields: 'Starting register of configuration table' (R5000), 'Starting register of reading/controlling register' (R0), and 'Starting register of working register' (D0). Below this is a table for configuring multiple load cell modules.

	IR Address	Reading Address	Module Name	Span Ch0	Span Ch1	Scan Rate:	Times of Average:
#1:	R3840	R0	FBs-1LC	0~10mV(2mV/V)		5Hz	No
#2:	R3841	R16;R32	FBs-2LC	0~10mV(2mV/V)	0~10mV(2mV/V)	1Hz	No
#3:							
#4:							
#5:							
#6:							
#7:							
#8:							

At the bottom are 'Ok' and 'Cancel' buttons.

1. (Starting register of configuration table):

Assign a starting register value to store the load cell configuration table, there will allow the following inputs: RXXXX or DXXXX

The configuration table only occupies 4+N of registers, where N is the number of load cell modules.

As shown in the above example, R5000~ R5005 stores the load cell configuration table.

2. (Starting register of reading/control register):

Please input the starting register number of a block register that were allocated for receiving the measurement value and control parameters for load cell

There will allow the following inputs, RXXXX or DXXXX one channel occupies 16 register.

As shown in the above example, channel 1 used R0 ~ R15.

3. (Starting register of working register):

Assign a starting registers to reserve the working registers, there will allow the following inputs RXXXX or DXXXX.

The load cell measurement register occupies $(N \times 4) + 5$ registers, where N is the number of load cell modules.

As shown in the above example, D0~D12 are the working registers.

Notes: The above three settings can be used in all Load Cell modules.

Load cell module installation information and setup

4. (Module #1 ~ #16

Display the name of the installed module and the analog starting address of its own, there are the following modules.

1 FBs-1LC (1 channel of load cell module)

2 FBs-2LC (2 channels of load cell module)

5. (Span Ch0# / Ch1# Assign the following selection of the measurement range:

0~10mV(2mV/V), 0~25mV(5mV/V), 0~50mV(10mV/V),

0~100mV(20mV/V)

6. (Scan Rate Assign the scan rate of reading value, there are two selections:

1 FBs-1LC has 5 / 10 / 25 / 30 / 60 / 80 Hz can be assigned

2 FBs-2LC has 1 / 3 / 5 / 8 Hz can be assigned

7. (Times of Average): Assign the times of average for load cell measure, unbalanced average, 2 times the average, 4 times the average, and 8 times of the average can be assigned.

Load cell reading / control register

In following table, let's assume the starting register of reading/control register is R

Register Offset	Description	R/W
R+0	Engineering weight value	R
R+1	Raw weight value	R
R+2	High reference engineering value. Max. 32767	W
R+3	Command register- Bit 0 – set zero/tare reference Bit 1 – set high(full scale) reference	W
R+4	Auto zero threshold 0~255	W
R+5	Status register Bit 0 – Error indication Bit 1 – Over range or sensor broke indication	R
R+6	SPAN value(high reference –zero reference)	R
R+7	Zero value set by performing set zero reference	R
R+8	Current compensated zero value	R
R+9	Register for internal process usage	R
R+10~R+15	Reserved	

Each channel occupies 16 registers.

Note

1. Only the R+2 R+3 R+4 register are set by user, the other register are set by system
2. R+3
Bit 0 = 1, set current measurement value as zero reference
Bit 1 = 1, for SPAN. set current measurement value minus zero reference value as high reference value which corresponding to the weight value set in R+2
3. User can convert the engineering value on their own with reference the value in R+2,R+6 register if necessary
4. Error indication includes high reference engineering value(R+2) or SPAN(R+6) is zero or negative
5. Auto zeroing threshold –
This value confines the zero value drift tolerance region. If the zero drift value falls in this region, the zero drift

will be compensated. Set this value to zero will disable the auto zeroing function.

6. D4052 – delay time for auto zeroing activation , range from 1000 ~ 5000 (mS), default is 3000 (mS).


Description of Related Registers for Load Cell Measurement

Installation Status of Load Cell


- R4016 B0=1 means that the 1st channel is installed
 - B15=1 means that the 15th channel is installed
 - (the default of R4016 is FFFFH)
- R4017 B0=1 means that the 16th channel is installed
 - B15=1 means that the 31th channel is installed
 - (the default of R4017 is FFFFH)
- When the load cell is installed (the corresponding bit must be 1), the system will perform the line broken detection. If there is line broken happened, the broken value -32760 will be displayed.
- When the load cell is not installed (the corresponding bit must be 0), the system will not perform the line broken detection. The broken value will be 0.
- Depends on the user's installation, the ladder program may control the corresponding bit of R4016 and R4017 to perform or not perform the line broken detection.

I/O Addressing of Load Cell Module


Wiring of Load Cell Modules

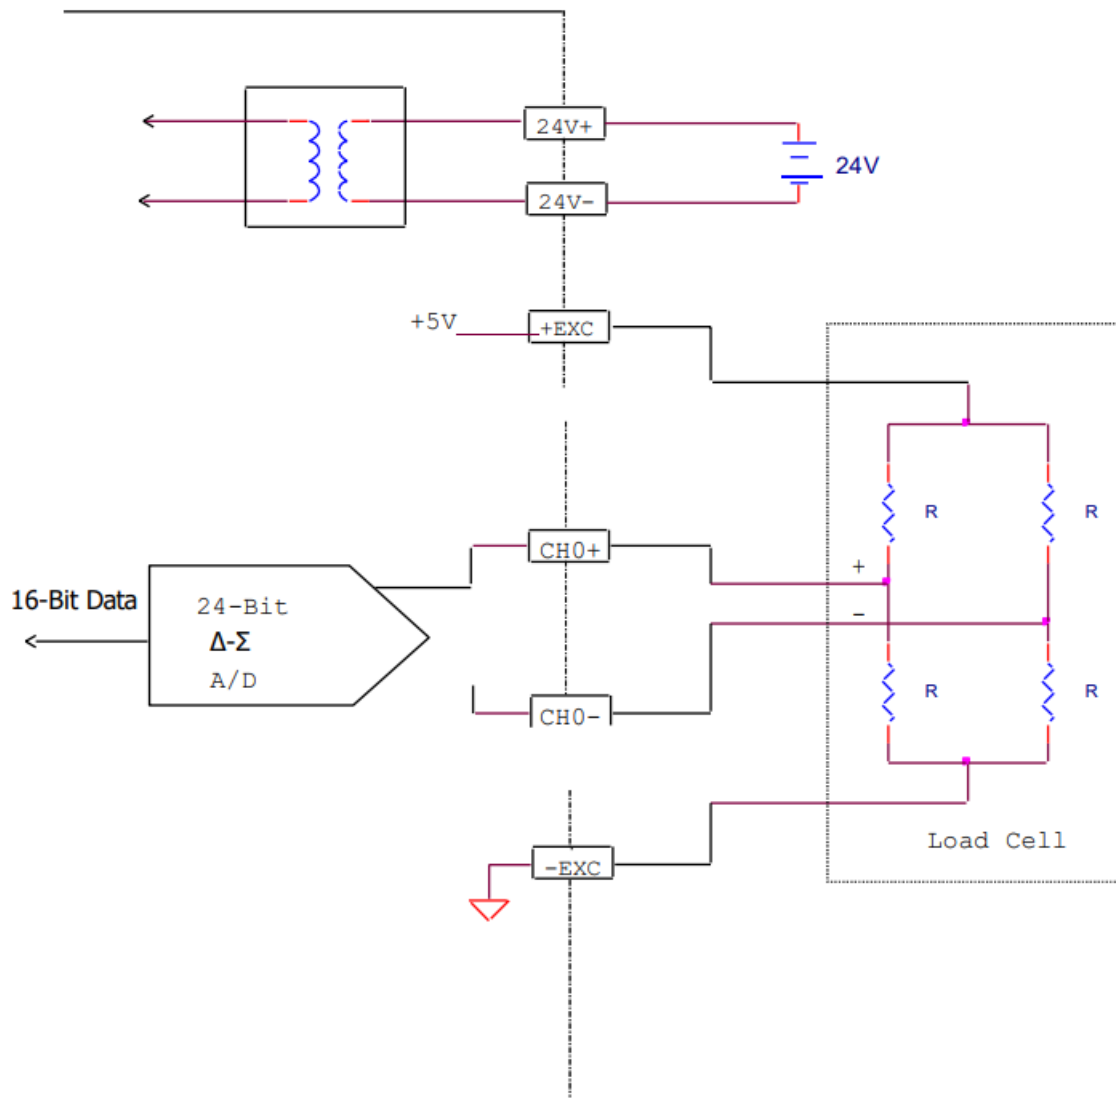

Wiring of FBs-2LC

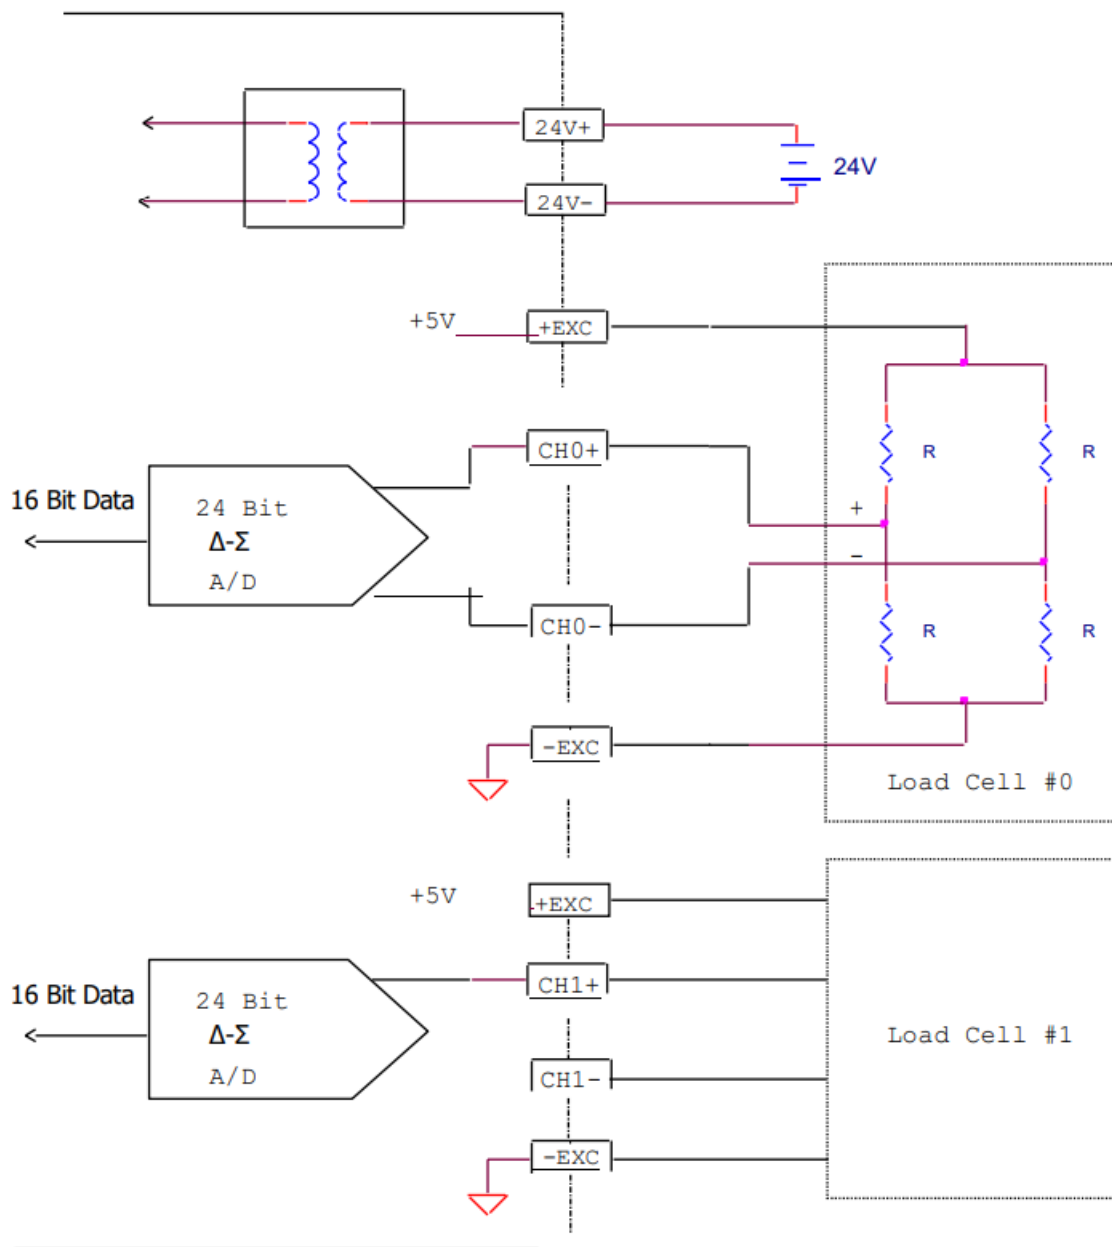

Documents / Resources

	<p>FATEK FBs-1LC Load Cell Input Module [pdf] User Manual</p> <p>FBs-1LC, FBs-2LC, FBs-1LC Load Cell Input Module, Load Cell Input Module, Cell Input Modul e, Input Module, Module</p>
---	---