



Feniex C-4200-DL 4200 Control Switch Instruction Manual

[Home](#) » [Feniex](#) » Feniex C-4200-DL 4200 Control Switch Instruction Manual 



4200
INTELLIGENT DESIGN



C-4200-DL
INSTRUCTION MANUAL



Feniex Product Copyrights This price List and the mentioned Feniex products include or describe copyrighted Feniex material. Laws in the United States and other countries preserve for Feniex Industries and its licensors certain exclusive rights for copyrighted material, including the exclusive right to copy, reproduce in any form, distribute and make derivative works of the copyrighted material. Accordingly, any copyrighted material of Feniex and its licensors contained herein or in the Feniex products described in this Price The list may not be copied, reproduced, distributed, merged or modified, transmitted, transcribed, stored in a retrieval system, or

translated into any language or computer language, in any form or by any means, without prior written permission of Fenix Industries, Inc.. Fenix and the stylized Fenix logo are registered in the U.S. Patent & Trademark



Office.

Contents

- 1 SAFETY REGULATIONS & WARRANTY SAFETY REGULATIONS**
- 2 SPECIFICATIONS & BOX CONTENTS**
- 3 WIG-WAG FLASH PATTERNS**
- 4 SYSTEM SPECIFICATIONS**
- 5 DIMENSIONS**
- 6 CONNECTION DIAGRAM**
- 7 MOUNTING INSTRUCTIONS**
- 8 CONFIGURATION RECORD**
- 9 PROGRAMMING SOFTWARE**
- 10 BLUETOOTH CONNECTIVITY**
- 11 FREQUENTLY ASKED QUESTIONS**
- 12 Documents / Resources**
- 13 Related Posts**

SAFETY REGULATIONS & WARRANTY SAFETY REGULATIONS

The following provides all the information necessary to safely operate the previously listed products of Fenix Industries, Inc. Please read this manual thoroughly before installing or operating your new product in order to prevent any damage or injury. Failure to follow the listed instructions in this manual may result in damage to your products or personal injury.

- Proper installation of this product requires good knowledge of automotive systems, electronics & procedures.
- Please guarantee all vital components of the vehicle are not in danger of being damaged by drilling holes necessary for installation. Check all sides of the mounting surface before drilling any holes into the vehicle.
- Do not install this product in any way that interferes with the deployment of the airbag. Doing so may damage the effectiveness of the airbag & can lead to serious personal and vehicle injury. The installer will assume full responsibility for the proper installation of the new unit.
- Please clean the mounting surface before installation of the unit when using tape, brackets, magnet, Velcro, or suction cups.
- The product's ground wire must be connected directly to the negative (-) battery post for effective use of the unit. Please follow all wiring guidelines provided to guarantee a long lifespan & productivity. Failing to follow these instructions may result in damage to the product.

WARRANTY

Fenix Industries, Inc. warrants to the original purchaser that the product shall be free from defects in material & workmanship for 2 years from the manufacturing date for all Public Works products.

If warranty service is needed, please contact customer support:

Phone: 1.800.615.8350

Web Site: www.Fenix.com/support

Email: techsupport@fenix.com

If the product needs to be returned for repair or replacement, contact our customer service team (using any

method listed above) to receive a Return merchandise authorization (RMA) number. Operational times are from 9 a.m. to 6 p.m. central time, Monday through Friday.



Please do not send in the product without contacting support first for a Return Merchandise Authorization (RMA) number.

CONDITIONS

Feniex Industries, Inc. will not be held responsible for any costs associated with equipment removal and/or re-installation resulting from a warranty claim. It is the sole responsibility of the party initiating a warranty claim to pay shipping charges associated with returning a product to Feniex Industries for repair or replacement.

SERVICE AFTER EXPIRATION

Feniex Industries will still provide service for all products after the expiration of the warranty. For any issues, call the customer support line. In some instances it may be necessary for the product to be shipped, freight prepaid, and insured for loss or damage to Feniex headquarters.



Utilizing non-factory screws and mounting brackets may result in the loss of warranty coverage.

COPYRIGHT


This instruction manual and the Feniex products described in this instruction manual may include or describe copyrighted Feniex material. Laws in the United States and other countries preserve for Feniex Industries and its licensors certain exclusive rights for copyrighted material, including the exclusive right to copy, reproduce in any form, distribute and make derivative works of the copyrighted material. Accordingly, any copyrighted material of Feniex and its licensors contained herein or in the Feniex products described in this instruction manual may not be copied, reproduced, distributed, merged, or modified in any manner without the express written permission of Feniex Industries, Inc.

FENIEX PRODUCT COPYRIGHTS

The products described in this document are the property of Feniex Industries, Inc. It is furnished by express license agreement only and may be used only in accordance with the terms of such an agreement. Products and documentation are copyrighted materials. Making unauthorized copies is prohibited by law. No part of the product or documentation may be reproduced, transmitted, transcribed, stored in a retrieval system, or translated into any language or computer language, in any form or by any means, without prior permission from Feniex Industries, Inc.

SPECIFICATIONS & BOX CONTENTS

| COMPONENT | QUANTITY |
|--------------------------|----------|
| 1. 4200 Data Link Relay | 1 |
| 2. 4200 Data Link Keypad | 1 |
| 3. Keypad Bail Bracket | 1 |
| 4. Ethernet Cable | 2 |
| 5. USB Cable | 1 |
| 6. Button Legends | 4 Sheets |

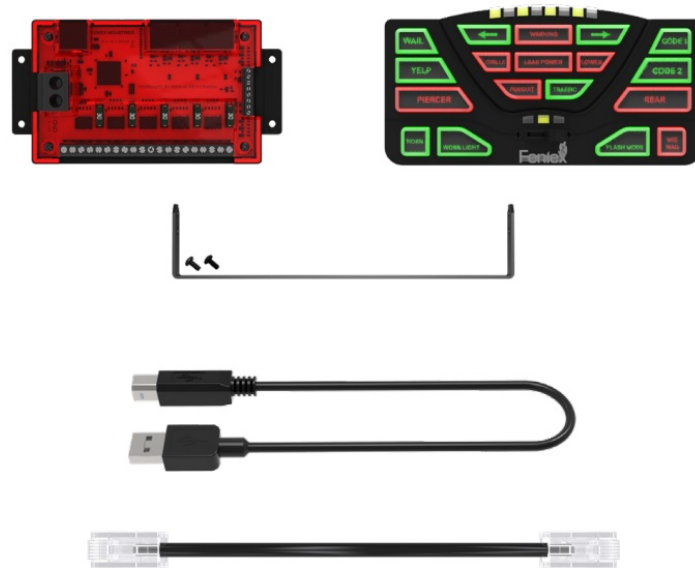


WIG-WAG FLASH PATTERNS

| | |
|----------------------|--------------------|
| Single Flash [Slow] | Quad Flash [Slow] |
| Single Flash [Fast] | Quad Flash [Fast] |
| Single Flash [Combo] | Quad Flash [Combo] |
| Triple Flash [Slow] | Combination #1 |
| Triple Flash [Fast] | Combination #2 |
| Triple Flash [Combo] | Highbeam Override |


SYSTEM SPECIFICATIONS

| | |
|----------------------|------------------------------|
| Input Power | 11 – 16 VDC |
| Max Input Current | 60 Amps |
| Maximum Output | 60 Amps |
| Standby Current | 100mA +/- |
| External Fuse | 125% of Circuit Load |
| Programmable Inputs | 2 Ground, 3 Positive |
| System Inputs | Ignition, Day, Night |
| Relays | Solid State, Built-in |
| Switch Type | Latching, Momentary, Timed |
| Buttons | Rubberized, Backlit, 2 Color |
| Button Legends | 4 Sheets |
| Relay Dimensions | 6.3" W x 3.3" H x 4.4" D |
| Keypad Dimensions | 6.9" W x 4.6" H x 1.0" D |
| Bluetooth Dimensions | 3.2" W x 1.5" H x 0.9" D |
| Bluetooth Range | 35 – 40ft |
| Warranty | 2 Years |

DIMENSIONS

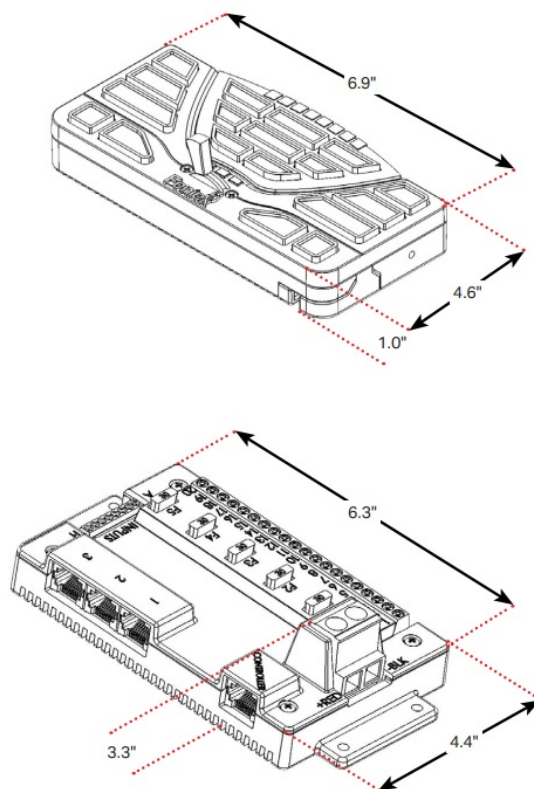

CONNECTION DIAGRAM

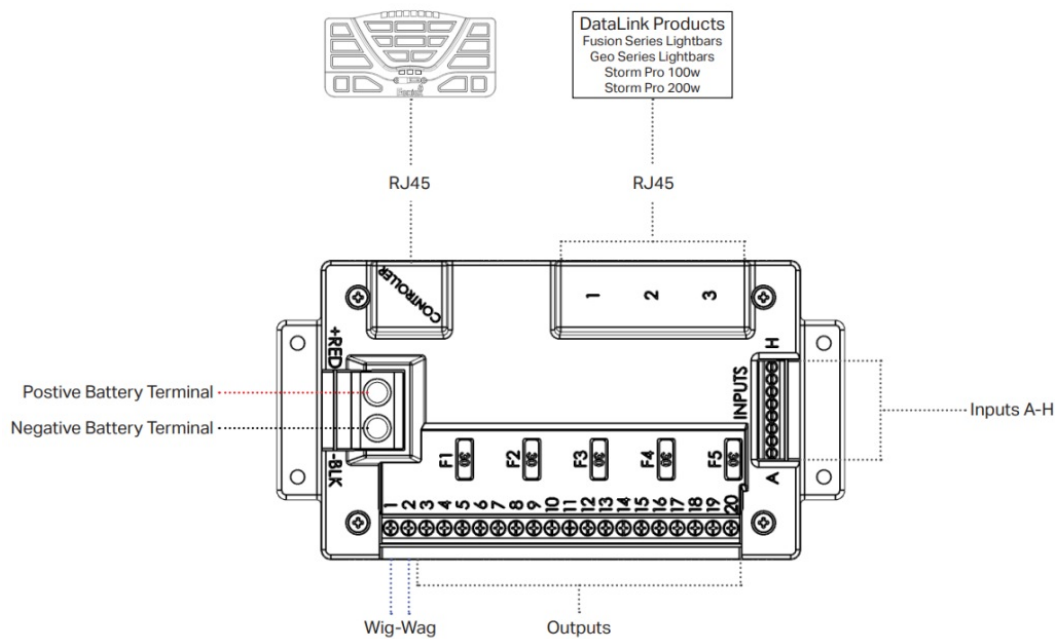

| PIN | FUNCTION | POLARITY |
|-----|------------------------------|----------|
| 1 | Headlight Flasher, Channel 1 | 12v (+) |
| 2 | Headlight Flasher, Channel 2 | 12v (+) |
| 3 | Programmable Output #3 | 12v (+) |
| 4 | Programmable Output #4 | 12v (+) |
| 5 | Programmable Output #5 | 12v (+) |
| 6 | Programmable Output #6 | 12v (+) |
| 7 | Programmable Output #7 | 12v (+) |
| 8 | Programmable Output #8 | 12v (+) |
| 9 | Programmable Output #9 | 12v (+) |
| 10 | Programmable Output #10 | 12v (+) |
| 11 | Programmable Output #11 | 12v (+) |
| 12 | Programmable Output #12 | 12v (+) |
| 13 | Programmable Output #13 | 12v (+) |
| 14 | Programmable Output #14 | 12v (+) |
| 15 | Programmable Output #15 | 12v (+) |
| 16 | Programmable Output #16 | 12v (+) |
| 17 | Programmable Output #17 | 12v (+) |
| 18 | Programmable Output #18 | 12v (+) |
| 19 | Programmable Output #19 | 12v (+) |
| 20 | Programmable Output #20 | 12v (+) |

| PIN | FUNCTION | POLARITY |
|-----|---------------------------------|----------|
| A | Programmable Input | 12v (-) |
| B | Programmable Input | 12v (-) |
| C | Programmable Input | 12v (+) |
| D | Programmable Input | 12v (+) |
| E | Programmable Input | 12v (+) |
| F | Programmable Input [Night Mode] | 12v (+) |
| G | Programmable Input [Day Mode] | 12v (+) |
| H | Programmable Input [Ignition] | 12v (+) |

MOUNTING INSTRUCTIONS

SWIVEL MOUNT INSTALLATION

1. Secure the Swivel Ball to the base of the controller using the #10 screw.
2. Attach the swivel ball to the swivel bracket base using the #10 screw.
3. Using the #10 screw, secure the two clamps loosely together.
4. Place the clamps and screw around the 2 swivel balls. Tighten the clamp screw, thereby attaching the swivel bracket base to the mini controller.
5. Secure the Swivel Bracket to the rear of the controller (as shown in the diagram).
6. Place the unit against the intended mounting surface.
7. Mark the areas where the mounting holes will be drilled. If the mounting surface is part of the vehicle, make sure no vital components could be damaged by the drilling process.
8. Drill two mounting holes on the mounting surface, making sure no vital components of the surface are damaged.
9. Using customer-supplied screws, secure the 4200 Mini to the mounting surface.

L-BRACKET INSTALLATION

Note: The provided L-brackets can be mounted either way, L-inward or L-outward. The instructions reflect the default mounting method: L-outward.

1. Utilizing the provided screws, secure the L-Bracket to the side of the controller using a Phillips head screwdriver.
2. Repeat Step 1 on the opposite side of the controller so both sides have the L-Bracket securely connected.
3. Place the unit against the intended mounting surface.
4. Mark the areas where the mounting holes will be drilled. If the mounting surface is part of the vehicle, make sure no vital components could be damaged by the drilling process.

5. Drill two mounting holes on the mounting surface, making sure no vital components of the surface are damaged.
6. Using customer-supplied screws, secure the 4200 Mini to the mounting surface.

OPTION B: SURFACE MOUNT

1. Mount the U-Shaped Bracket in the desired location using 2 self-tapping screws. If you wish to use machine screws, simply drill out the required hole size based on the size of the screw choice.

Important! Make sure not to damage any vital parts of the vehicle or mounting surface. Do not mount anywhere that interferes with the vehicle airbag.

2. Re-attach the control panel head to the U-Shaped bracket utilizing the factory-provided screws.
3. Connect the RJ45 cable to the RJ45 port located on the rear of the controller.

CONFIGURATION RECORD

Use this page to record the products connected to each outlet to assist when programming the control head with the provided software package.

| Outputs: | Buttons: (1 – 18, P1 – P3) |
|----------|----------------------------|
| 1 | 1 |
| 2 | 2 |
| 3 | 3 |
| 4 | 4 |
| 5 | 5 |
| 6 | 6 |
| 7 | 7 |
| 8 | 8 |
| 9 | 9 |
| 10 | 10 |
| 11 | 11 |
| 12 | 12 |
| 13 | 13 |
| 14 | 14 |
| 15 | 15 |
| 16 | 16 |
| 17 | 17 |
| 18 | 18 |
| 19 | P1 |
| 20 | P2 |
| | P3 |

Input/Polarity:

| Input/Polarity: | |
|-----------------|-----------------|
| A (-) | F- Night (+) |
| B (-) | G- Day (+) |
| C (+) | H- Ignition (+) |
| D (+) | |
| E (+) | |


BUTTON LEGENDS




The ignition input must be activated before the system can be used to control the attached equipment.



Tip: Once the appropriate ignition input is connected, install a small jumper wire between inputs H & G to activate the keypad backlight in "Day Mode".

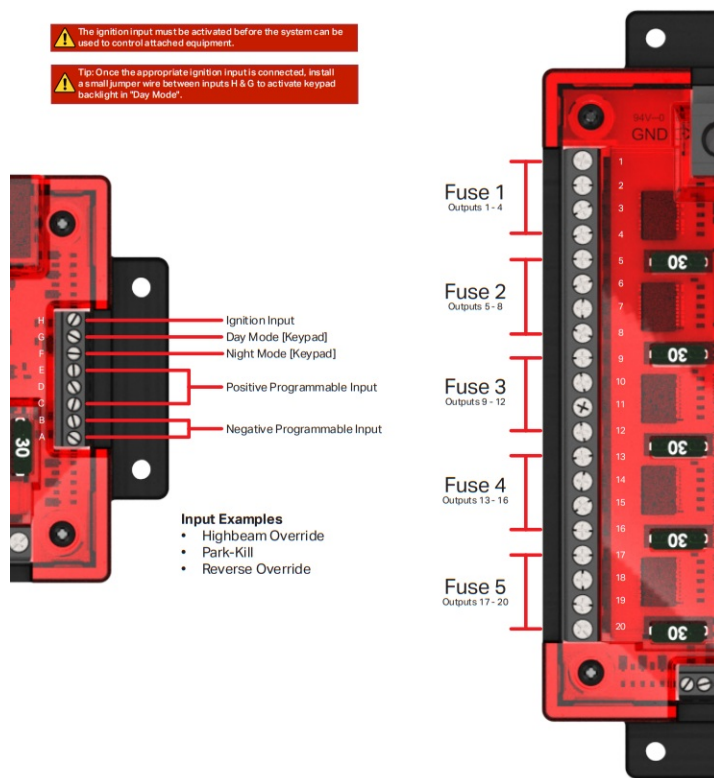

BUTTON LEGENDS

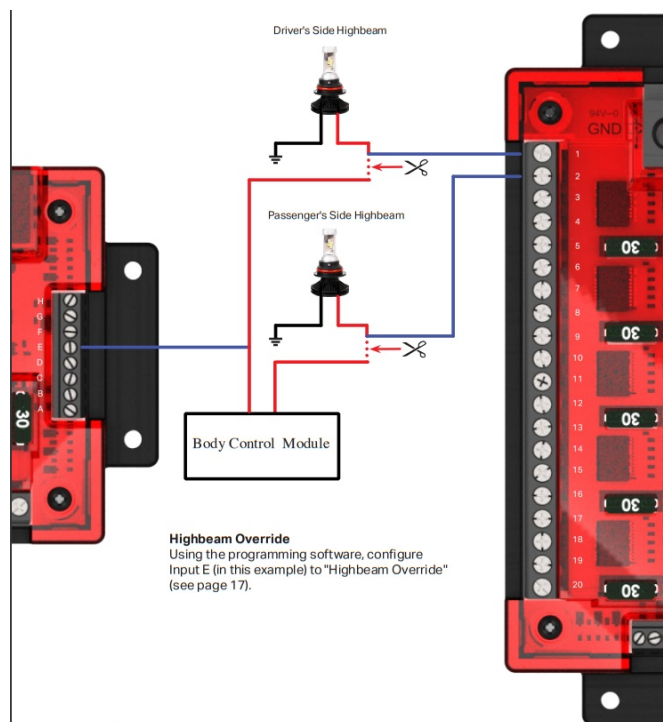


PROGRAMMING SOFTWARE

To program the Fenix 4200 Controller, first visit fenix.com to download the software.


Help

For assistance on how to use the software, please click the help button located on the top bar in the software

interface. You will find informative videos on how to program every function of the 4200 software system.

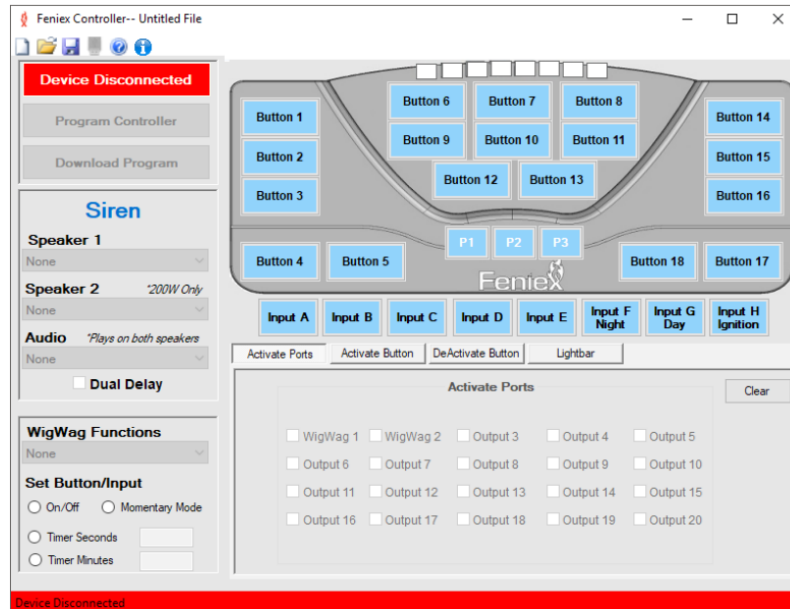


1) Connect the provided USB wire to the controller, and connect the other end of the USB port to the computer.

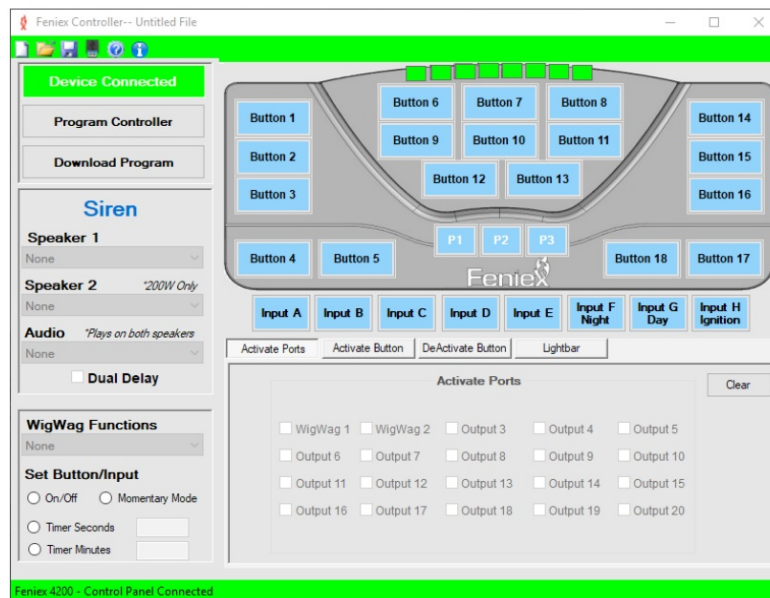

2) When the controller is plugged in, the red box reading "Device Disconnected" will change from Red to Green will read: "Device connected."


Ports 1-20 can be activated by:

- Button
- Input
- Slide Switch (p1, p2, p3)

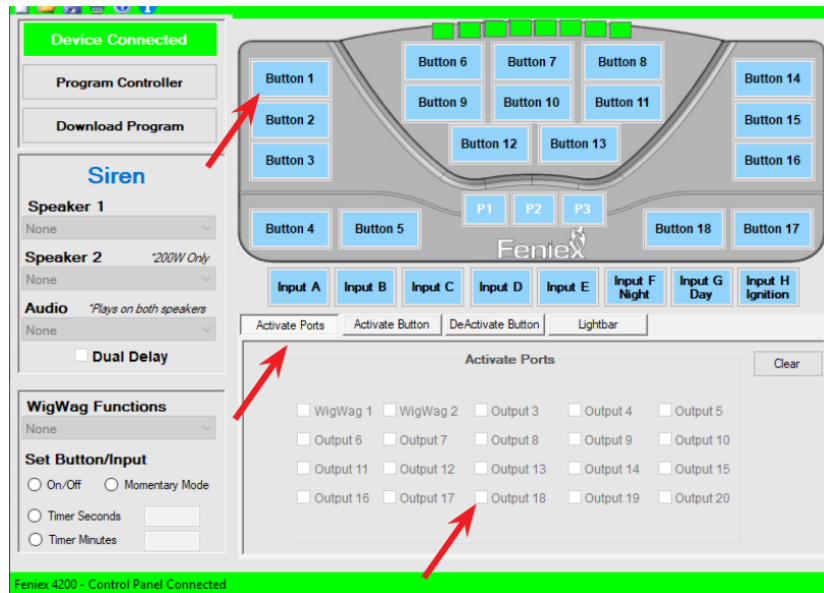


3) Activate Ports

Select button, input or slide switch and then check the box of the desired port. You can select as many ports as needed with each button programmed. Each output is capable of 10 amps. For any product requiring more than 10 amps, use multiple ports to split the load. For example: For a spotlight that requires 15 amps, select the desired button on the controller then use 2 ports to split the load. Don't exceed 30 amps per fuse quadrant.

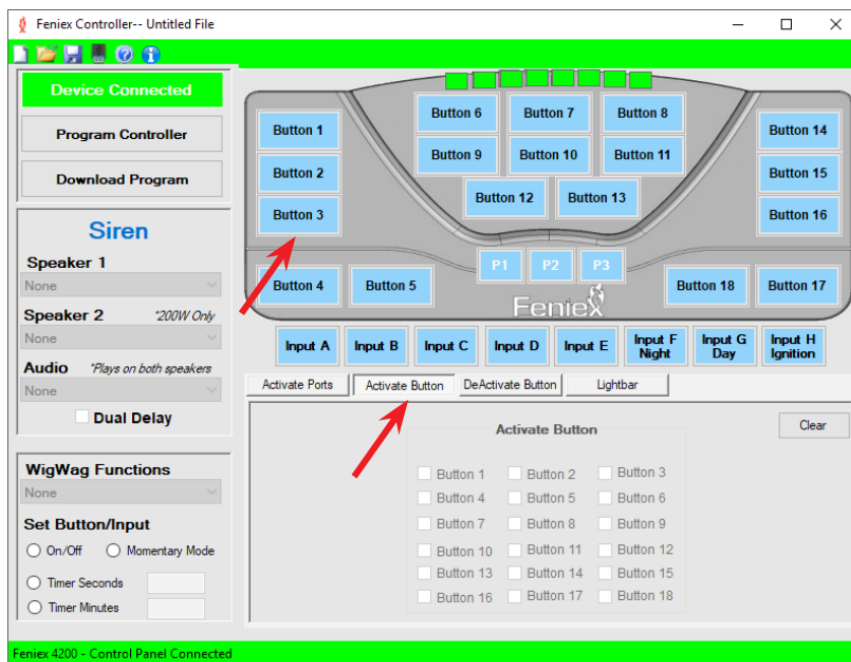


4) Activate Button

This function programs the slide switch (p1, p2, p3) or inputs A-E to activate a button. Please note a button cannot activate another button. Multiple buttons can be activated through the slide switch or input setup.

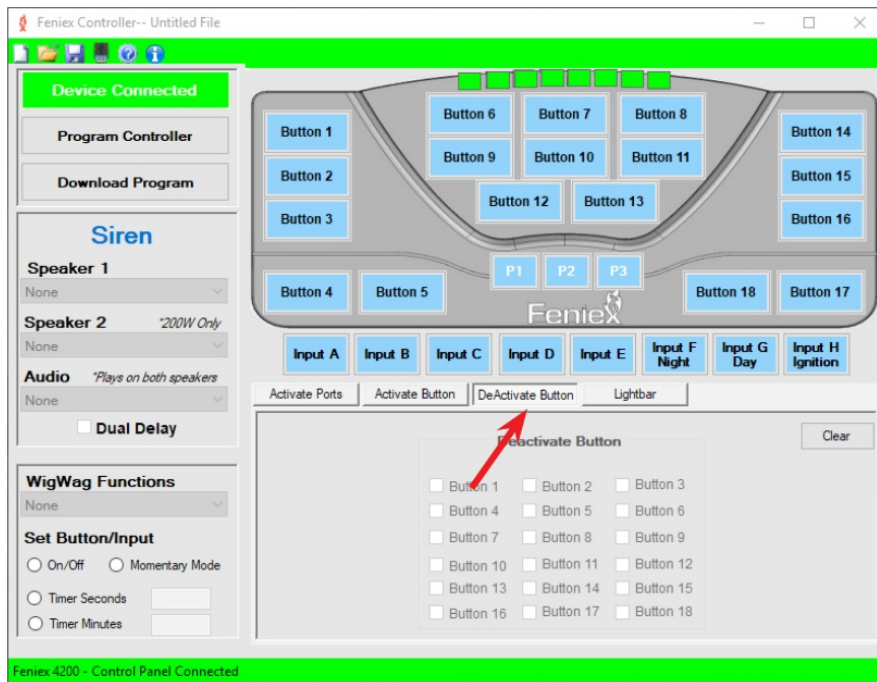


5) Deactivate Button

This function allows any input, slide switch, or button to turn off an activated button. For example. Arrow function: Left arrow button #6, right arrow button #8, center out button #7. When activating button #6, deactivate buttons #7 and #8.

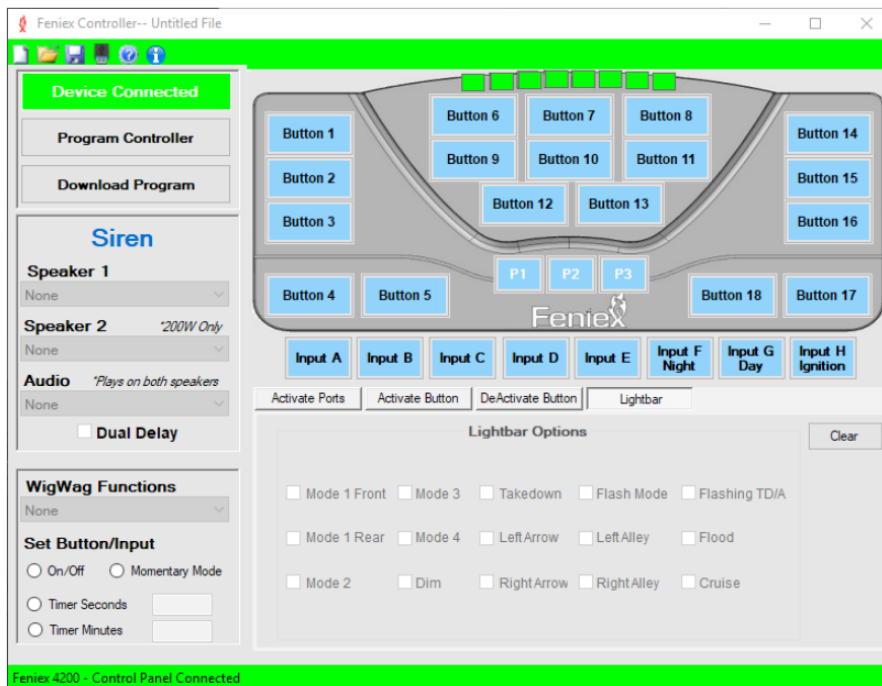

6) Lightbar

This function works when you have a full-size lightbar connected. To activate a function of the lightbar, select the desired switch (input, slide switch, button) then select the lightbar function. Multiple functions can be selected on 1 switch.

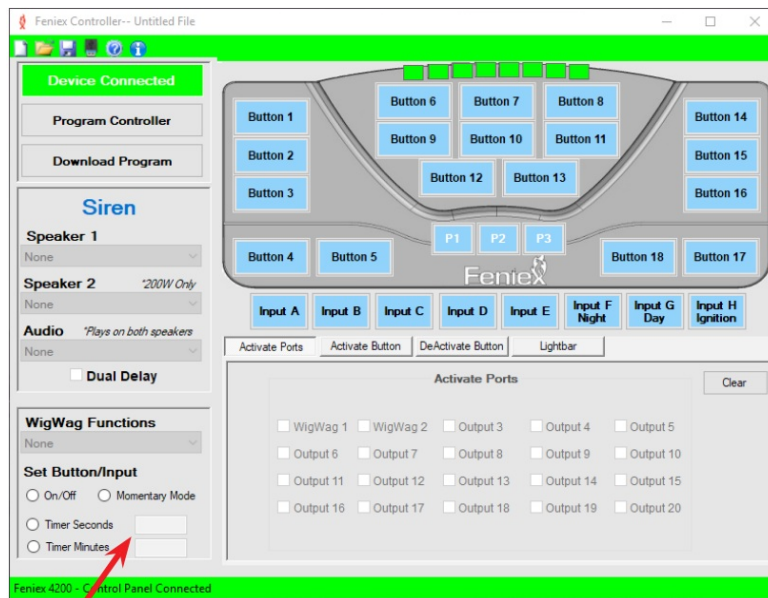


7) Timer

The timer function allows any button to continue functioning for a set period of time after it's been disabled. The timer can be set for any duration between 1 second to 1 hour. This applies to all inputs A-H and all buttons. The slide switch cannot be programmed for timer or momentary functions.


The momentary function only applies to buttons and allows a button to activate only when the user holds the button down. It will not remain active once pressure is released.

Ignition/Day/Night: These buttons in the software can only be used for their respective functions. Please refer to the wiring diagram on pages 8 & 9 for wiring examples.

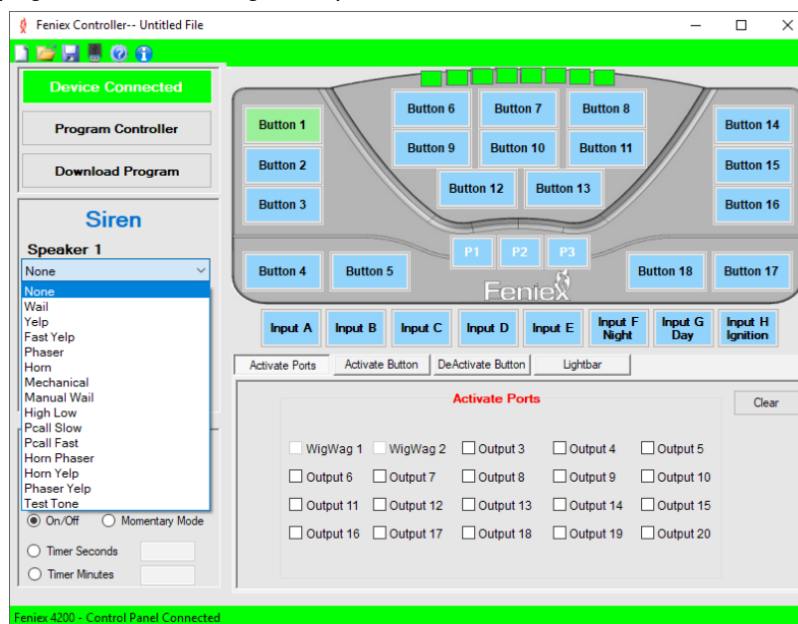


8) Siren

This function only works when you have a 100W or 200W Storm siren connected. Select the desired switch (input, slide, or button), then select the tone from the drop-down menu. If using a 100W siren, only select speaker 1. For 200W sirens, make sure to highlight speaker 1 and speaker 2.

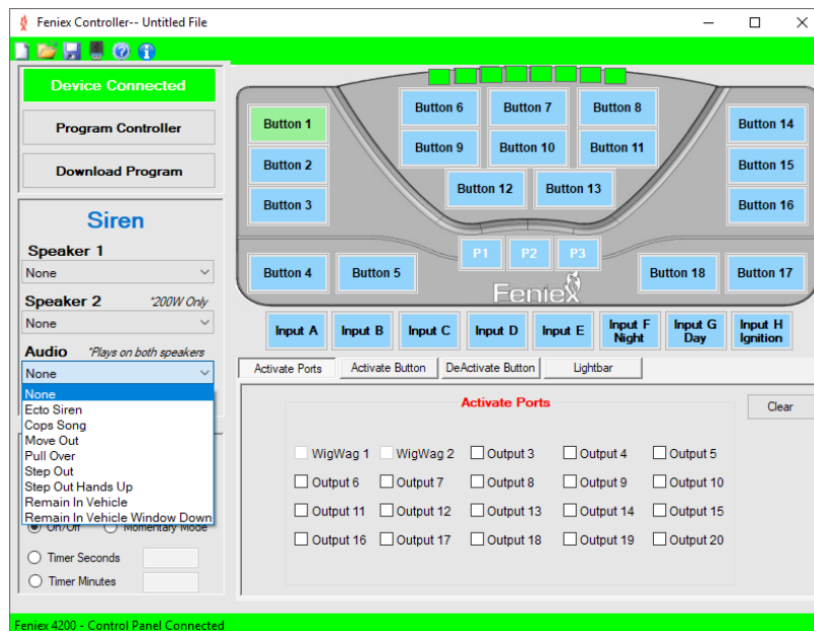


9) Audio (under Siren section)

This function only works when you have a 100W or 200W Storm siren connected. This function allows any input, slide switch or button to activate a desired audio tone. Select the desired switch (input, slide switch, or a button) then select the audio tone from the drop-down menu. If a 200W Storm siren is installed, the audio tones will always play on both speakers. For example, Tone 1 programmed on speaker 1 will play through both speakers #1 and #2 on a 200W siren.

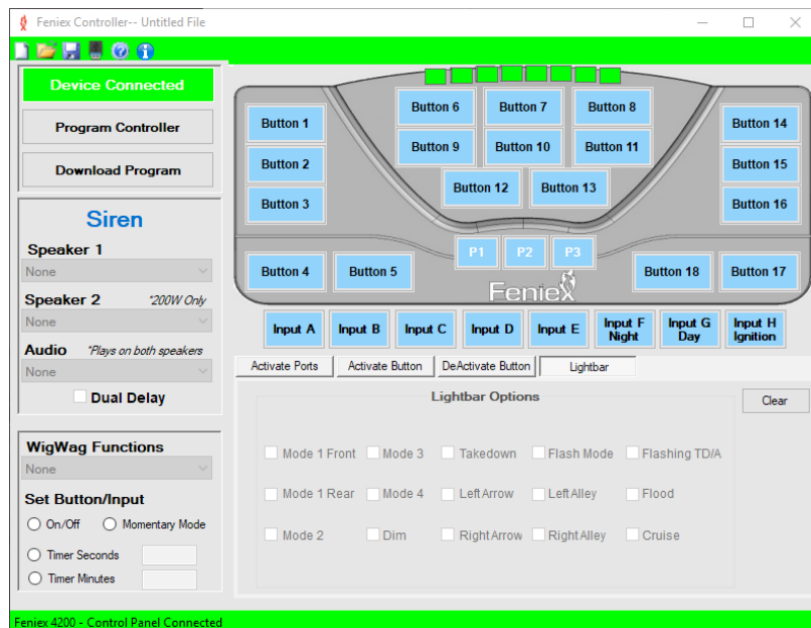

10) Dual Delay

This function works when a 200W Storm siren is connected to the 4200. Dual delay is a check box at the bottom of the siren section. When using a 200W siren and having one switch activating the same in tone, the dual delay will offset the 2 tones so that they alternate. **Note:** this is only needed when using the same tone and wanting the dual-tone functionality.

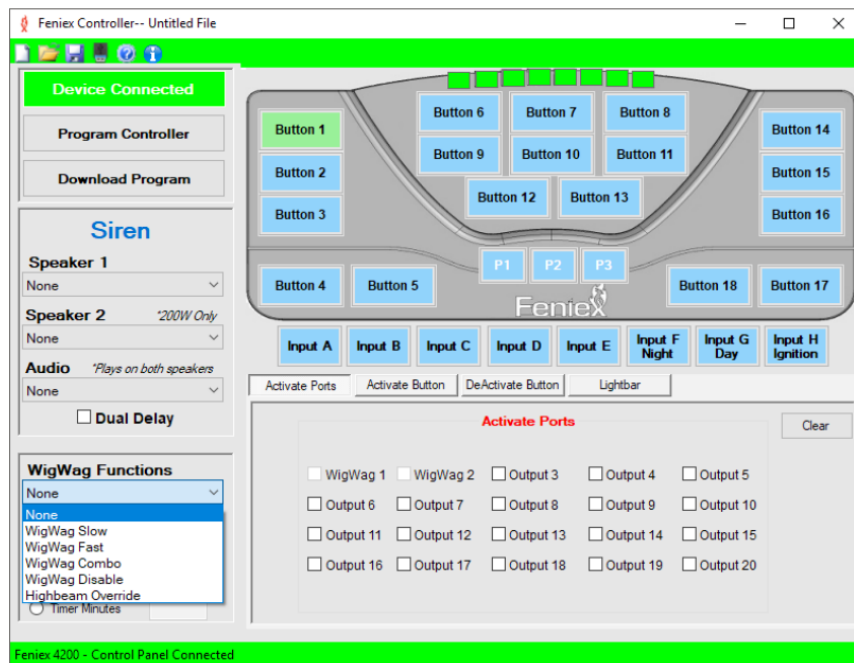

11) WigWag

This function works when output 1 and output 2 are connected to two separate halogen or LED lights. To enable, select the desired switch (input, slide switch, or a button) and select the speed from the drop-down menu.



Program the appropriate input (HighBeam signal) to override the flashing wig-wag function with a stead-on signal.




12) Lightbar

This function works when you have a full-size lightbar connected. To activate a function of the lightbar, select the desired switch (input, slide switch, button) then select the lightbar function. Multiple functions can be selected on 1 switch.

BLUETOOTH CONNECTIVITY

Bluetooth Hardware

The Fenix 4200 has the option of being controlled via a smartphone or tablet. To enable this feature you will require the Fenix in-line Bluetooth module (part #: C-4200WB-AD for Android Bluetooth; C-4200WB-AP for Apple Bluetooth). Follow the installation instructions below to pair the 4200 with a smartphone or tablet.

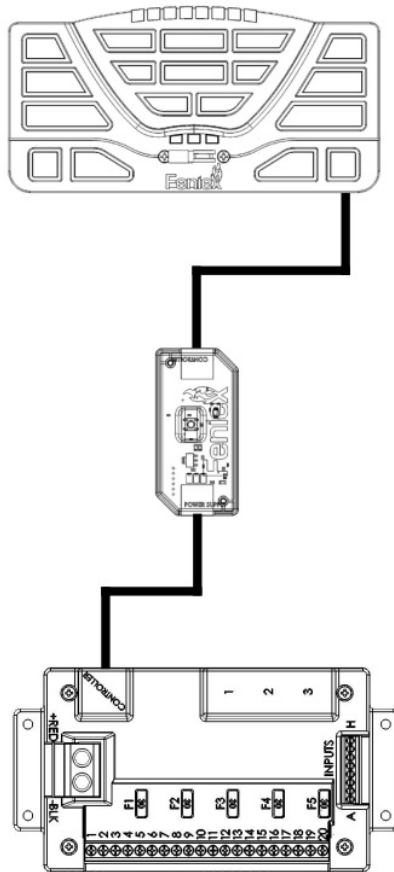

1. Connect the provided RJ45 cable exiting the 4200 power supply to one end of the BT module.
2. Connect the other end to the 4200 controllers and follow the marking on the Bluetooth unit for proper connectivity. Follow instructions on page 15: “4200 App requirements” and “Bluetooth Software” to complete Bluetooth installation.
3. Upload software to your handheld device.
 To download for apple devices, go to the App Store.
 To download for android devices, visit the Fenix website at: <http://www.fenix.com/s-4200>
 The app is not yet available on Google Play
4. Turn Bluetooth on using a handheld device.
5. Press and hold the pairing switch button on the Fenix Bluetooth device for 3 seconds.
6. In the 4200 apps, select “connect” in the upper right corner.
7. Select “Search for device” for Android or “Scan” for Apple
8. Enter password:
 For android devices, select Fenix 4200 and enter password: 1111.
 For apple devices, select Fenix 4200 and choose to enter 8 digit password: 11111111
9.]When the app is successfully paired with the Bluetooth module, the circle next to “connect” changes from red to green.

4200 App Requirements:

Android App minimum requirements are the following:

- Android 2.2 or higher
- Bluetooth 2.0 EDR with SPP support

The app should be compatible with most phones made in 2011 or after.
Apple App should work on the following devices:

- iPhone 5 or newer
- iPad Air or newer
- iPod Touch 5th Gen or newer
- iPad 3rd Gen or newer

Devices must have Bluetooth 4.0 and iOS 6.0 software or newer.

FREQUENTLY ASKED QUESTIONS

1. How do I know if there is power to my 4200 Relay?

A flashing green LED light on the PCBA will indicate if there is power to the board if the firmware is fully operational.

2. Why can't I program to outputs 1 – 2?

Outputs 1 – 2 are only for the WigWag Function Box.

3. My controller does not turn on after I programmed it?

Make sure to provide 12V+ into the "Ignition Input" (Input H).

4. What is the password for Fenieux Bluetooth Module?


Android: The password is: 1111

Apple: The password is: 11111111

5. Can I still use my high beams with the WigWag function?

Yes, please use the wiring diagram (see fig. 7.1) as a reference.

- To program, select Input C, D, or E
- Select "Highbeam Override" (see right, fig 7.2).

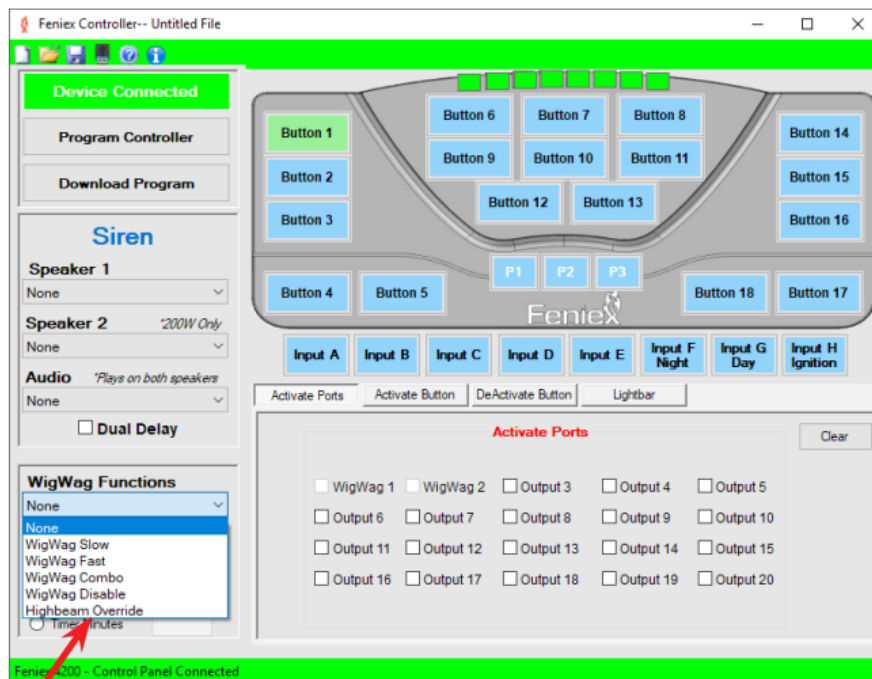

6) How do I use my wig wag option?

Each output will support 1 high beam light assembly. This option can be used for low beams. Make sure to wire

each output to the positive side of the high beam or low beam.

Be sure to completely cut the wire to not splice into it to percent feedback.

7) How do I wire the “HighBeam” function from the vehicle?

Run the “switch side” wire, after it’s cut off from the high beam bulb, into the 4200’s input (C, D or E). In the programming software, select the input of the vehicle’s HighBeam wire and on the left column of the programmer under “Wig Wag Function” select “high beam” override.

8) My controller button is not illuminating?

Make sure to provide 12V+ into Input G (day mode).



9) The program software will not acknowledge my 4200 controllers.

Make sure the 4200 control panel is plugged in via provided USB to the computer.

10) Can I change button labels on the App for the handheld devices?

Yes. If using the Android app, press and hold the button on a handheld device. Enter a new name for the button when text box appears. On the Apple app, select “settings” to edit labels on buttons.

Documents / Resources

| | |
|---|--|
|  | Fenix C-4200-DL 4200 Control Switch [pdf] Instruction Manual C-4200-DL, 4200 Control Switch |
|---|--|