

GL·iNet
GL-B3000/Marbel
AX3000 Wireless
Router



GL iNet GL-B3000/Marbel AX3000 Wireless Router User Manual

[Home](#) » [GL iNet](#) » GL iNet GL-B3000/Marbel AX3000 Wireless Router User Manual 

Contents

- 1 GL iNet GL-B3000/Marbel AX3000 Wireless Router
- 2 PACKAGE CONTENTS
- 3 TROUBLESHOOTING
- 4 WALL MOUNT C
- 5 PHOTO FRAME SETUP
- 6 VERTICAL STAND
- 7 SETTING UP
- 8 WARRANTY
- 9 FCC STATEMENT
- 10 Documents / Resources
 - 10.1 References

GL·iNet

GL iNet GL-B3000/Marbel AX3000 Wireless Router



Let's get started.

PACKAGE CONTENTS

- GL-B3000 router
- Power adapter
- Ethernet cable
- Wall mount
- Screws
- Adhesive pad
- Router stand
- Photo frame (Optional)

TROUBLESHOOTING

If you encounter any issues with your router, this troubleshooting guide will help you resolve common problems.

Unable to Access the Router Admin Panel

- Ensure your device has obtained an IP address. If not, try removing and reinserting the Ethernet cable or restarting the network.
- Set your device to “obtain IP address automatically” and “obtain DNS server address automatically”.
- Verify your device is connected to the router's LAN port, and check if the network cable is plugged in properly.
- Ensure that you enter `http://192.168.8.1` correctly in the web address bar.
- Try powering the router off and on again or restarting it.

No Internet Access After Setting Up the Router

- Ensure that the Ethernet cable is securely plugged into the router's WAN port.

- Connect your device directly to the upstream device via an Ethernet cable to check if you can access the internet.
- Ensure your device has obtained an IP address. If using PPPoE dial-up, verify that your account password is correct.
- If the interface says “connected, but the network is unavailable,” try removing and reinserting the Ethernet cable or check your upstream device.

Unable to Connect the Router to the GL.iNet App

- Ensure the WAN port cable is connected correctly.
- Connect your computer directly to the modem with a cable and check if the internet is working. If not, contact your internet service provider or restart the modem.
- Log in to the web admin panel and check if an IP address is obtained. If using PPPoE dial-up, verify the account password.
- If the interface indicates “connected but no internet”, try unplugging and re-plugging the network cable or check the upstream router.

Forgot the Admin Panel Password

- With the router powered on, press and hold the reset button for 10 seconds, release the button when the blue indicator light flashes rapidly, then wait for the router to restart.
- Log in to the web admin panel (<http://192.168.8.1>) and reset the router’s password.

Forgot the Wi-Fi Network Password


- If you haven’t changed the Wi-Fi password, you can find it on the product label on the bottom of the router.
- If you have changed the Wi-Fi password before, connect your device to the router’s web admin panel using a LAN cable, then view or modify your Wi-Fi password.

WALL MOUNT C


Note: The router is shown without the photo frame for greater clarity.

Method 1: Screw mount

1. Position the wall mount on the wall. Insert the two screws through the wall mount holes into the wall.

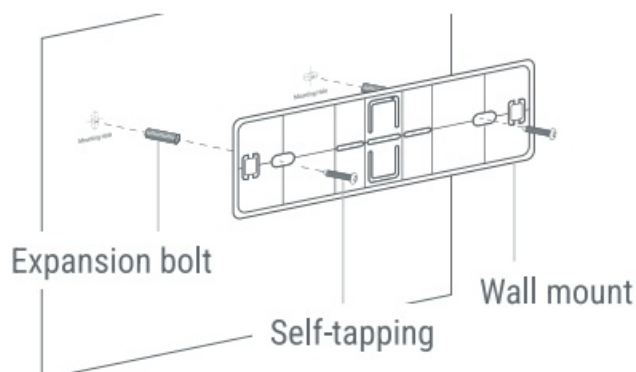


2. Connect the router to a power supply and insert an ethernet cable, then attach the router to the wall mount.

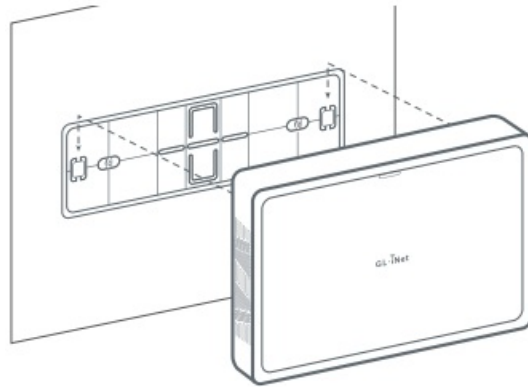


Method 2: Adhesive mount

1. Remove the matte white film. Stick the adhesive pad onto the wall mount.

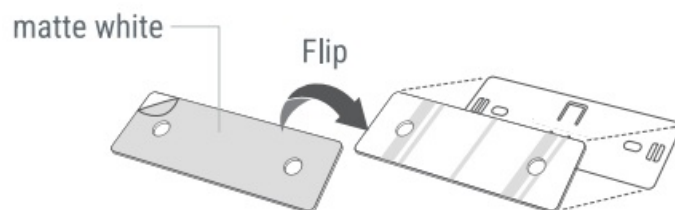

2. Remove the glossy transparent film. Stick the adhesive pad onto a clean and dry glass surface.

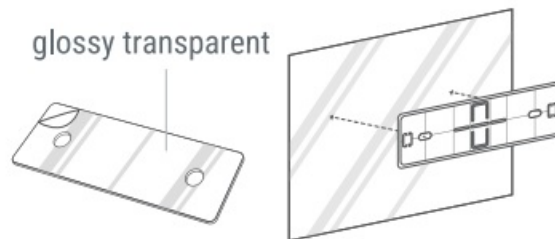

3. Do not stick the adhesive pad onto rough or wet surfaces. It won't stick well.


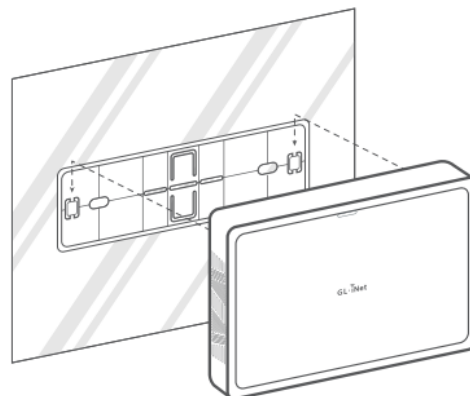


PHOTO FRAME SETUP

(Only applicable to the product version including the photo frame)

1. Remove the plastic films from both sides of the plastic sheet. Insert a photo together with the plastic sheet into the front of the photo frame, first into the left side, then into the right side.
(**Note:** Insert the plastic sheet fully into the frame without any gaps.)
 - The recommended photo size is 203mm x 152mm (8 inches).
2. Place the photo frame face down. Place the router face down on the photo frame's snap-in latches. Push the

router into the snap-in latches with both hands.

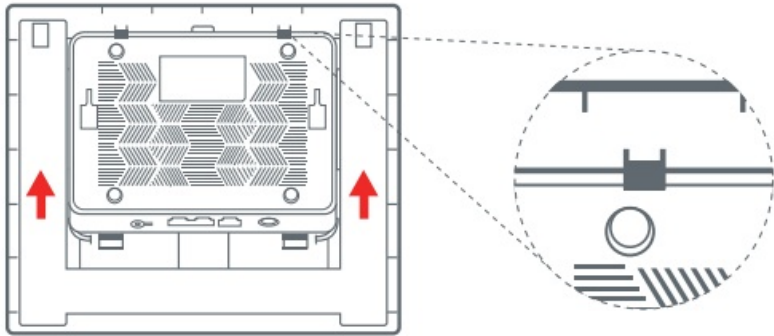


3. Pull out the photo frame's stand, then connect the router to a power supply and insert an ethernet cable for use.




Frame Removing

Please gently pull apart the two clips and remove the router upward

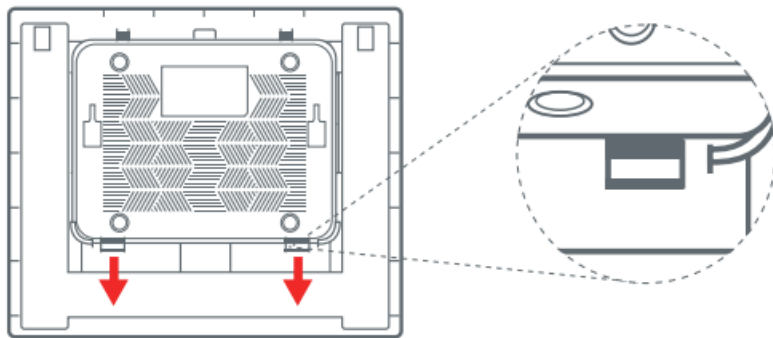


VERTICAL STAND

Set the router to stand on a flat surface with the vertical stand. This provides stability and improves the airflow.

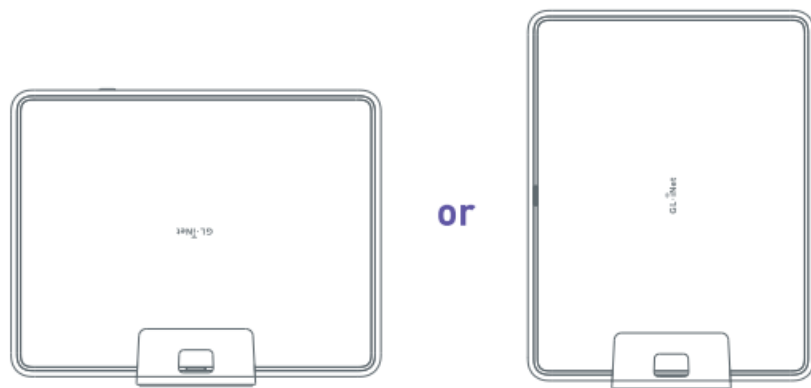

SUPPORT

Note: You can convert LAN1 to a WAN port in the admin panel.

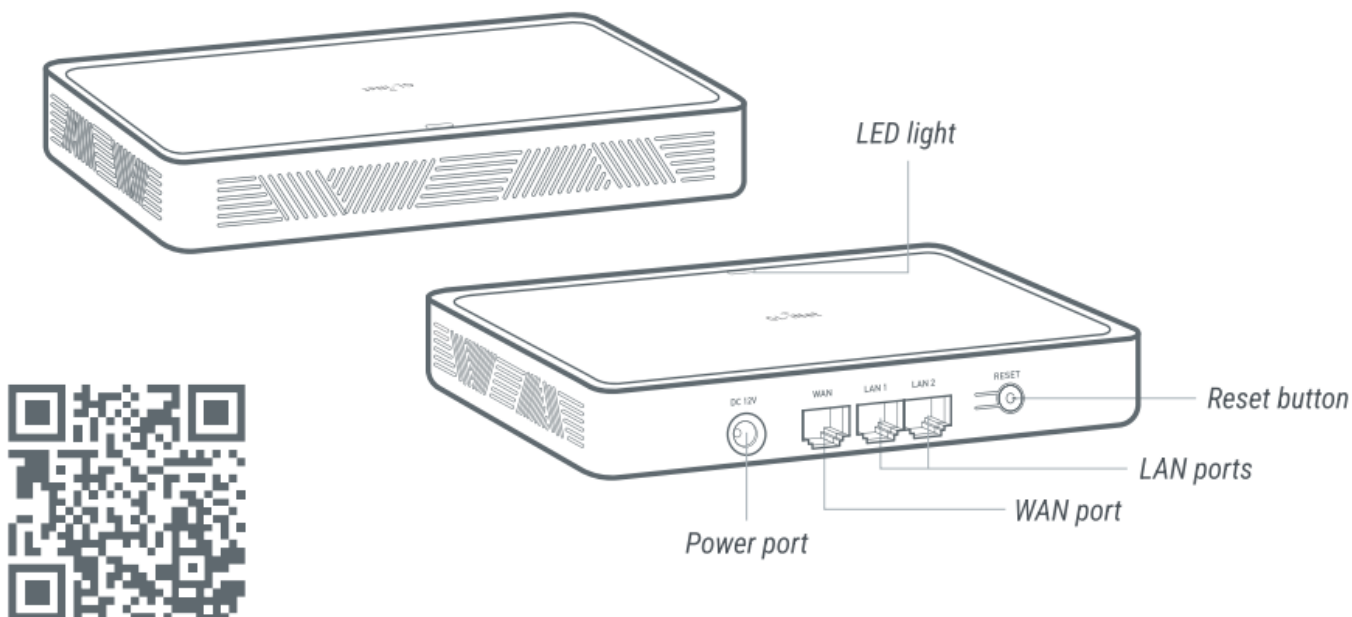

For the first-time setup guide, tutorial video, and FAQs, please scan the QR code above or visit www.gl-inet.com/support/gl-b3000.

Technical Support

For more detailed and updated instructions, please visit our website gl-inet.com/support/gl-b3000/


- For further questions, contact us via these methods:
- **Email:** support@gl-inet.com
- **Facebook:** facebook.com/gl.inet.wifi/
- **Forum:** forum.gl-inet.com

SETTING UP

Method 1: Set Up Your Router Using the Web Admin Panel


Power On

Connect your router to a power supply. Your router will broadcast both 2.4G and 5G Wi-Fi signal with the SSID: GL-B3000-xxx and GL-B3000-xxx-5G.

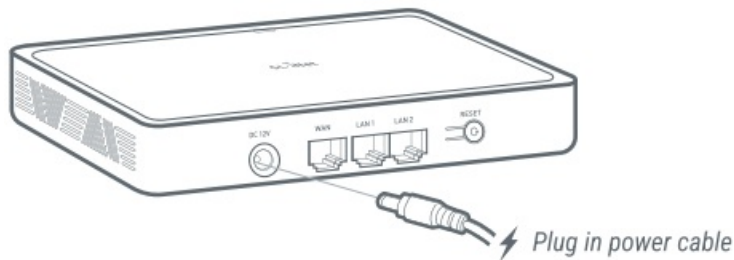

Connect Your Device to Router Via Wi-Fi


Look for the Wi-Fi networks named “GL-B3000-xxx” or “GL-B3000-xxx-5G”. Enter the default password printed on the bottom label of the router. Alternatively, if your device has a camera or QR code scanner, scan the QR code.

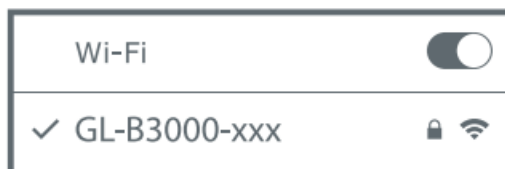

Search the SSID and connect to it




Via LAN

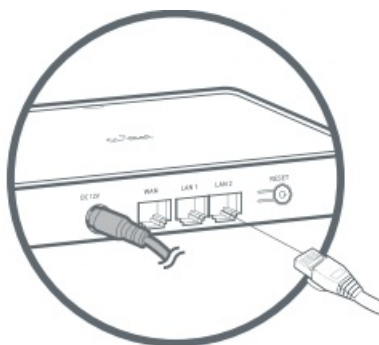

Plug the cable connecting to your computer into LAN port

Set Up Router

In a web browser, visit <http://192.168.8.1> to set up the router; start by choosing your preferred language.

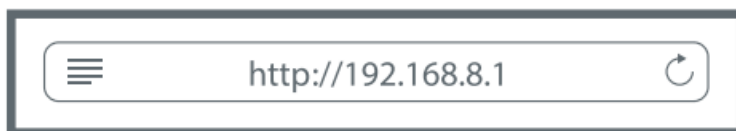

Method 2: Set Up Your Router Using the GL.iNet APP

1. Scan the QR code or search “glinet” in application store to download and install the APP.
2. Login to your account, choose to add new device and follow in-app instructions to set up



- <https://www.gl-inet.com/app/>

Repair / Reset

- To repair your network: Press and hold the Reset button for 3 seconds.
- To reset your router to factory settings: Press and hold the Reset button for 10 seconds.
(**Note:** This clears all your existing settings.)

Light Signal Indicators Explained

- **No light**
 - No power or an error
- **White light (constant)**
 - Stable internet connection
- **Blue light (constant)**
 - System power on
- **Blue light (blinking)**
 - Internet error, hardware update in progress, or system resetting

WARRANTY

- We provide two two-year limited warranty for routers and a 3-month limited warranty for accessories. Extra warranty may apply according to the local law in which the product purchase took place.
- Highly recommend using the included 12V/1.5A power adapter.
- Any damage to the router caused by not following the instructions will render this warranty null and void.
- Any damage to the router caused by modifying the PCBA, components or case will render this warranty null and void.
- Issues caused by the use of third-party firmware may not get official support from us.
- Any damage to the router caused by inappropriate use, e.g. inappropriate voltage input, high temperature, dropping in the water or on the ground will render this warranty null and void.
- Pictures on the instructions are only for reference. We reserve the right to change or modify these materials without further notice.

FCC STATEMENT

1. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- This device may not cause harmful interference, and
- This device must accept any interference received, including interference that may cause undesired operation.

2. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates and uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/ TV technician for help with an important announcement.

FCC Radiation Exposure Statement

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20cm between the radiator and your body. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter. This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s).

Operation is subject to the following two conditions

(1) This device may not cause interference. (2) This device must accept any interference, including interference that may cause undesired operation of the device. This equipment complies with IC RSS-102 radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20cm between the radiator and your body.

The user manual for LE-LAN devices shall contain instructions related to the restrictions mentioned in the above sections, namely that: i. the device for operation in the band 5150-5250 MHz is only for indoor use to reduce the potential for harmful interference to co-channel mobile satellite systems; The functions of Wireless Access Systems including Radio Local Area Networks(WAS/RLANs) within the band 5150-5350 MHz for this device are restricted to indoor use only within all European Union countries.

	AT	BE	BG	HR	CY	CZ	DK	EE	FI	FR	DE	EL	HU	IS	IE	IT
	LV	LI	LT	LU	MT	NO	PL	PT	RO	SK	SI	ES	SE	CH	NL	UK(NI)

Hereby, GL TECHNOLOGIES (HONG KONG) LIMITED declares that the radio equipment type [AX3000 Wireless Router, GL-B3000] is in compliance with the essential requirements and other relevant provisions of Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address:

<https://www.gl-inet.com/products/certificate>

- **Frequency bands:** 2.4G WIFI:2.412-2.472GHz; 5G WIFI:5.15-5.25GHz; 5.25-5.35GHz; 5.47-5.725GHz; 5.725-5.85GHz
- **Maximum output power:** 2.4G WiFi 19.55dBm; 5G WiFi 29.48dBm

Security Vulnerability Commitment

GL.iNET prioritizes the safety and security of our products and services. When a vulnerability is identified, we act swiftly to address and resolve it according to our “Vulnerability Disclosure Policy”. For details, please visit <https://www.gl-inet.com/security-support>. For customers seeking information about vulnerabilities and the latest updates, please visit at <https://www.gl-inet.com/security-updates/>.


Hong Kong Office

GL Technologies (Hong Kong) Limited Unit 601, Building 5W, Hong Kong Science Park, Shatin, N.T., Hong Kong

Shenzhen Office

Shenzhen Guanglianzhitong Tech Co., Ltd. Room 305 – 306, Skyworth Digital Building, Shiyan Street, Baoan District, Shenzhen, China, 518000 (+86-0755-86606126)

Documents / Resources

	GL iNet GL-B3000/Marbel AX3000 Wireless Router [pdf] User Manual 2AFIW-B3000, 2AFIWB3000, B3000, GL-B3000 Marbel AX3000 Wireless Router, GL-B3000 M arbel, AX3000 Wireless Router, Wireless Router, Router
---	---

References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.