

Hi-Velocity-RCM-Refrigerant-Module



Hi-Velocity RCM Refrigerant Module Instruction Manual


[Home](#) » [Hi-Velocity](#) » Hi-Velocity RCM Refrigerant Module Instruction Manual 

Contents

- [1 Hi-Velocity RCM Refrigerant Module](#)
- [2 Product Information](#)
- [3 Mounting Brackets](#)
- [4 Refrigerant Bypass](#)
- [5 Piping the RCM](#)
- [6 Installation Instructions](#)
- [7 RCM Specifications](#)
- [8 TERMS & CONDITIONS](#)
- [9 Documents / Resources](#)
 - [9.1 References](#)



Hi-Velocity RCM Refrigerant Module

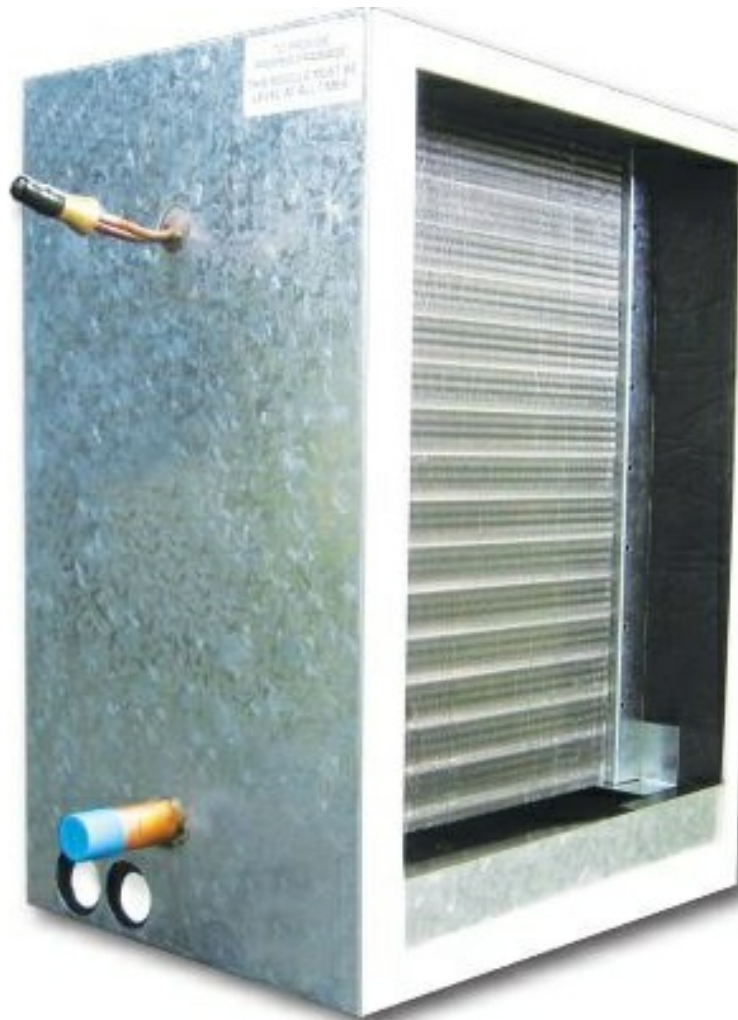

Specifications:

- **Model Numbers:** RCM-50 (1.5-2 Tons), RCM-70 (2.5-3 Tons), RCM-100 (3.5-5 Tons)
- **Includes:** TX Thermal Expansion Valve, Site Glass, Service/Access Port(s), Freeze Stat, L-Mounting Brackets, MountingTape
- **Manufacturer:** Module-RCM-Refrigerant-Module-Installation-120121

Product Information

The RCM Refrigerant Module is designed for small duct high-velocity heating, cooling, and home comfort systems. It includes essential components such as a thermal expansion valve, site glass, access ports, and freeze stat for efficient operation.

Installation Instructions

- **Mounting Brackets**
 - The refrigerant modules come with two L mounting brackets for installation. Ensure that no screws puncture the drain pan or coil while mounting the cooling coil to the air handler using the supplied brackets.
- **Freeze Stat:**
 - The Freeze Stat is crucial for preventing severe icing of the coil in case of undercharge or low load. Always install and use the Freeze Stat to avoid warranty issues related to RBM.

- **Thermal Expansion Valve (TX):**

- When brazing the TX valve to the copper liquid line, use a brazing rod suitable for dissimilar metals. Wet rag or use heat-dissipating paste on the TX body to prevent overheating.

- **Site Glass and Access Ports:**

- Ensure that the site glass and access ports are installed close enough to the coil for system startup, troubleshooting, and service needs.

- **External Equalizer Line:**

- Piping the condensate lines correctly is essential to prevent restricting the thermal expansion valve and reducing system capacity. Use a thermal expansion valve with an external equalizer if needed.

FAQ

- **Q: Why is the Freeze Stat important?**

- **A:** The Freeze Stat prevents severe icing of the coil due to undercharging or low load conditions, ensuring proper system operation and avoiding warranty issues.

Refrigerant Modules (RCM)

The cooling coil comes as a module and must be installed in the vertical position on the return air side of the air handler. For return air cut-out sizes, refer to Table 3 – Return Air Cutouts. Refrigerant modules come with two L mounting brackets, a thermal expansion valve, sight glass, access port(s), and an external freeze stat*. Fig. 01 shows an installed coil assembly and how each piece is connected.

IMPORTANT: The Freeze Stat (anti-ice control) serves the purpose of preventing severe icing of the coil in the event of an undercharge or low load on the coil. This piece of equipment must be used at all times. Failure to properly install the freeze stat will result in RBM-related warranty issues being voided.

NOTE: Do not remove
protective bubble wrap
from Freeze Stat

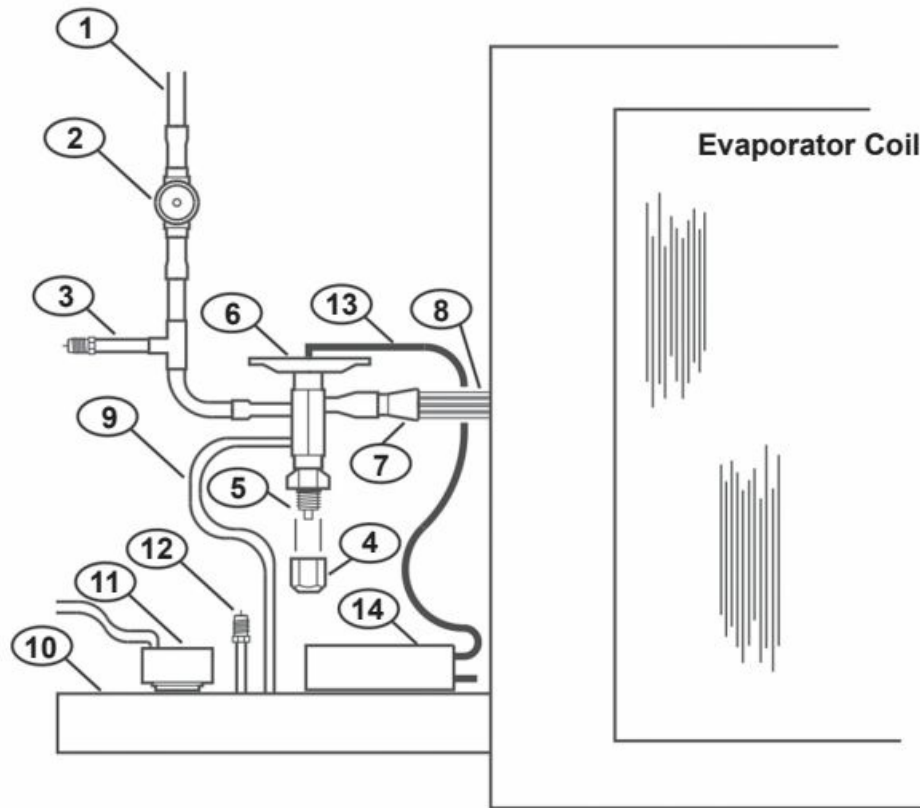


Fig. 01 - Coil Assembly

1. Liquid line
2. Site glass
3. High-side access port (if applicable)
4. Adjustment stem cap
5. Superheat adjustment stem
6. Thermal expansion valve (TX)
7. Refrigerant distributor
8. Distributor tubes
9. External equalizer line
10. Suction line
11. Freeze Stat (Anti-ice control)
12. Low-side access port
13. TX capillary tube
14. TX sensing bulb

R series modules can be used on R-410A condensers; if R-410A refrigerant components are used. All Energy

Saving Products R series modules are shipped with R-410A refrigerant components.

Mounting Brackets

Mounting the cooling coil to the air handler can be done with the L brackets supplied (Fig. 02), ensure that no screws puncture the drain pan or coil. Appendix B has the dimensions of the air handler units and cooling modules

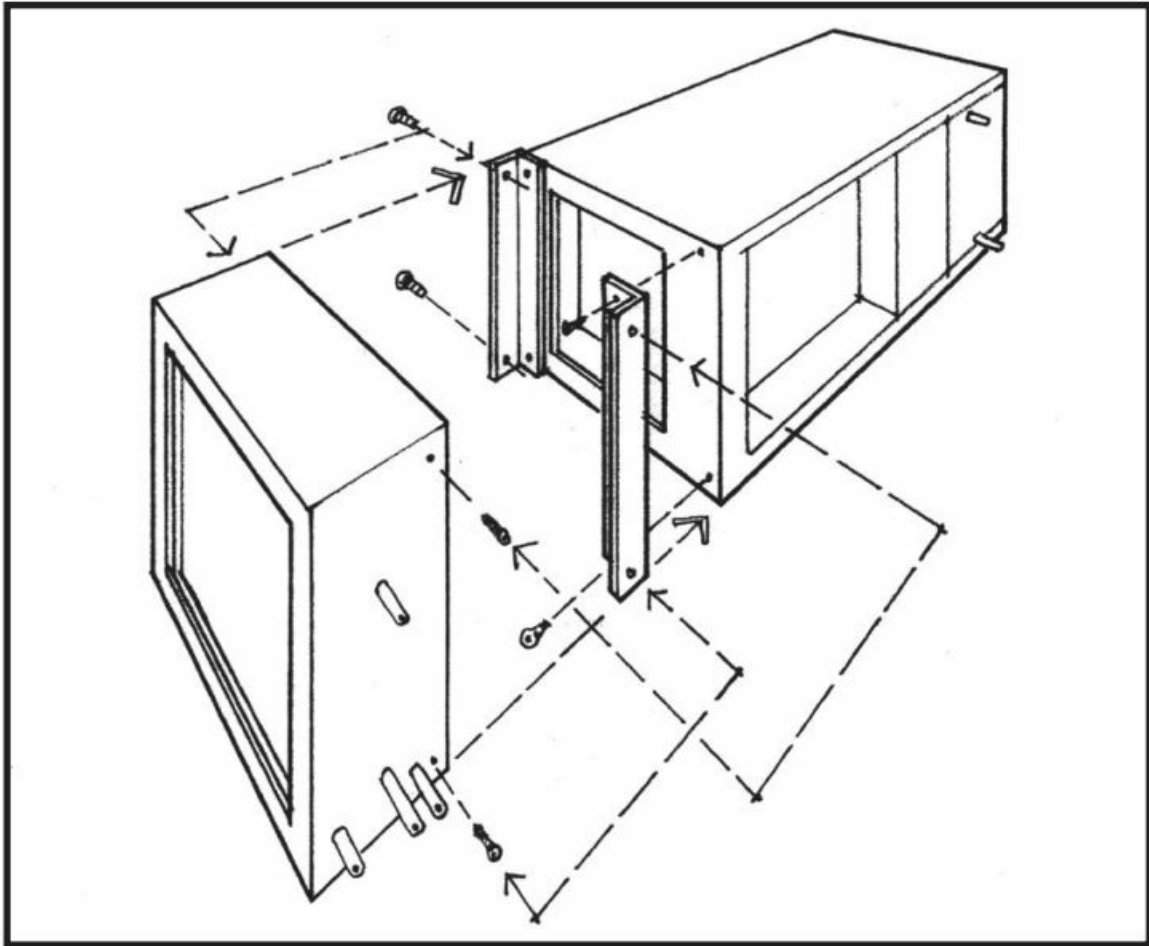


Fig. 02 - Mounting Brackets


Thermal Expansion Valve (TX)

When brazing the TX valve to the copper liquid line, a brazing rod that can bind dissimilar metals should be used. Always wet rag or use heat-dissipating paste on the TX body to reduce the chance of overheating the valve.

Thermal Expansion Sensing Bulb

The remote sensing bulb for the thermal expansion valve should be located on a clean, horizontal section of the suction line. It should be mounted on the top half of the pipe in the 2 o'clock or 10 o'clock position

Fig. 03 - TX sensing bulb

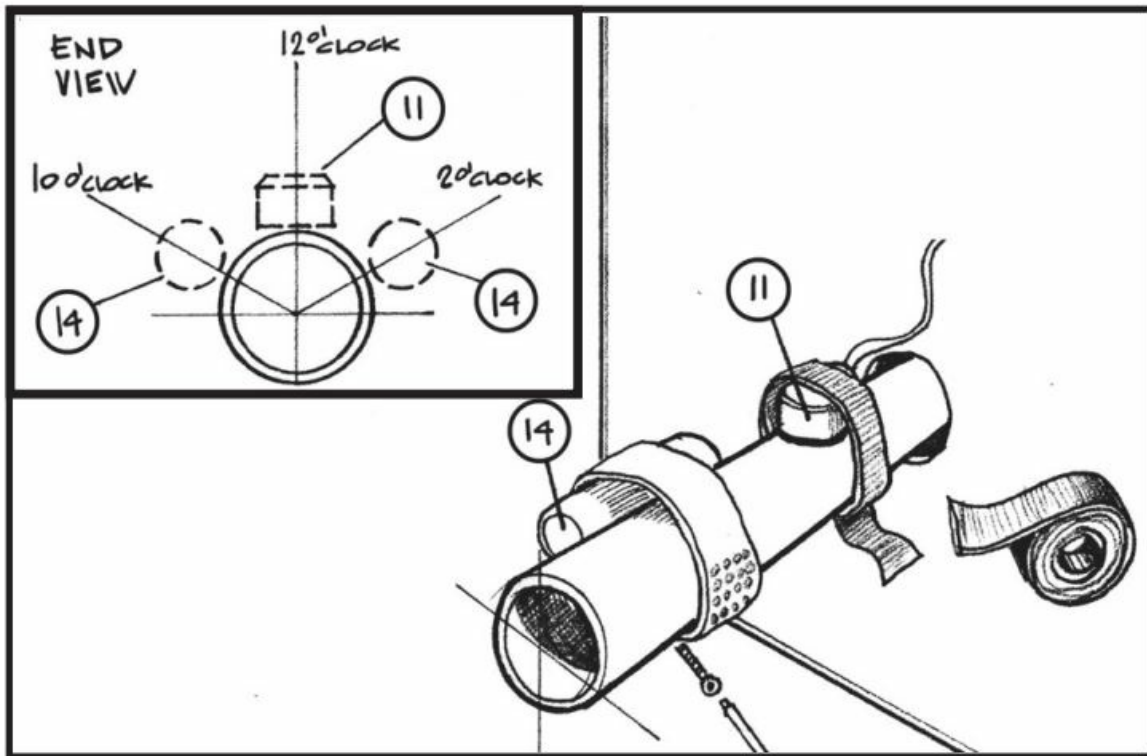

Site Glass and Access Ports

Site Glass and Access Ports

When refrigerant lines are connected to the air handler, a site glass needs to be installed (Fig. 01 – reference 2), as well as an access port(s) (Fig. 01 – reference 3 & 12). The site glass should be installed close enough to the coil to be seen while charging the system. The site glass and access ports are required for system startup and for future troubleshooting or service.

External Equalizer Line

The external equalizer line should be installed on the suctionline, immediately after the remote sensing bulb (Fig. 01 – reference 9). When the pressure drop through the evaporator is of any consequence:

- 3°F in the air conditioning range
- 2°F in the commercial temperature range
- 1°F in the low-temperature range

It will hold the thermal expansion valve in a relatively “restricted” position and reduce the system capacity unless a thermal expansion valve with an external equalizer is used.

Freeze Stat



The RCM Series cooling module comes with a freeze stat (anti-ice control). This freeze stat serves the purpose of preventing severe icing of the coil in the event of an undercharge or low load on the coil. NOTE: Do not remove protective bubble wrap from Freeze-Stat.

Important: The Freeze Stat (anti-ice control) must be used at all times. Failure to do so may void warranty


Install the Freeze Stat above the center line of the suction line and connect the wires to the Freeze Stat terminals on the air handler circuit board (Fig. 01 and Fig. 03 – reference 11).

Ensure that the TX bulb and the anti-ice control are fastened securely and are well insulated. Do not use a self-tightening clamp on the anti-ice control, as the control may be damaged by excessive tightening.

Refrigerant Bypass

All RCM coils come with check valve-ready TX valves. Third-party TX valves may require a bypass check valve.

Fig. 04 - Bypass check valve

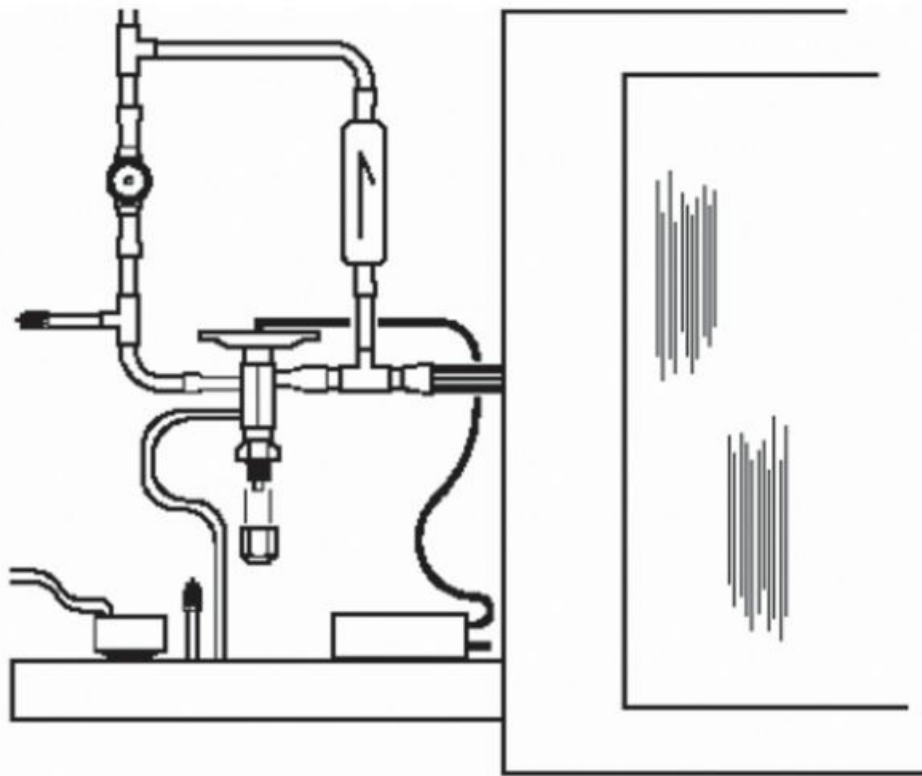


Drain Connections, P – Trap & Secondary Drain Pan

Important: Piping the condensate lines on a return side cooling coil can be dramatically different, be sure to read the info below.

The primary condensate drain must have a minimum 3" P-Trap installed (Fig. 05). The drain line must run at a slope of $\frac{1}{4}$ " per foot in the direction of the drain. RCM modules come with a $\frac{3}{4}$ " male CPVC primary and secondary outlet. It is good practice to install a clean-out right above the P-Trap. Using a "tee fitting" and cap in the P-Trap's construction can be used as the clean-out and as a way to prime the P-Trap if it ever dries out. A wet P-Trap is important. A dry P-Trap can be detrimental to proper drainage. If code requires a secondary drain line, run the secondary line using the same method as the primary. Otherwise, capping off the secondary drain line is acceptable. Do not run the secondary drain line to the secondary drain pan or use it as a vent to the atmosphere! An equipment stand/riser or rubber equipment mat may be necessary to elevate the module off of the ground to allow for a P-Trap.

Any installation that has the potential of property damage due to condensate must have a secondary drain pan installed. If the unit is installed in a high heat and/or high humidity location, extra insulation around the unit casing may be required. This will prevent excessive condensate from forming on the outer surface of the casing.

Fig. 05 - Secondary drain pan

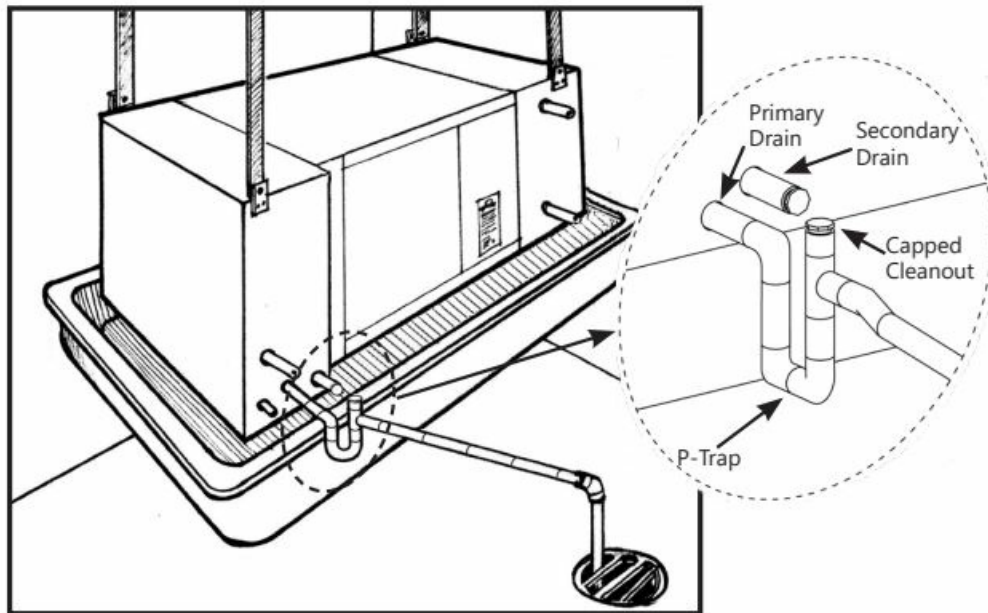

Piping the RCM

Only refrigerant-grade pipe and fittings are to be used with HiVelocity Systems. Plumbing fittings may contain wax or other contaminants which are detrimental to the proper operation of the system. Insulate the suction line with 3/8" insulation such as Armaflex. In high-heat areas, 1/2" insulation may be needed. If the lines are run in an area where temperatures could exceed 120°F or run longer than 50', then the liquid line may need to be insulated as well. Support the pipe every 5 feet, or whatever local code states.

Only refrigerant-grade pipe and fittings are to be used with HiVelocity Systems. Plumbing fittings may contain wax or other contaminants which are detrimental to the proper operation of the system. Insulate the suction line with 3/8" insulation such as Armaflex. In high-heat areas, 1/2" insulation may be needed. If the lines are run in an area where temperatures could exceed 120°F or run longer than 50', then the liquid line may need to be insulated as well. Support the pipe every 5 feet, or whatever local code states.

Pipe Sizing

Tables 01 and 02 contain line sizing information for the liquid and suction lines.

Table 01 – Liquid Line sizes								
	Tons							
Distance	1	1½	2	2½	3	3½	4	5
1'–25'	¼	¼	5/16	3/8	3/8	3/8	3/8	½
26'–50'	5/16	5/16	3/8	3/8	½	½	½	½
51'–75'	3/8	3/8	3/8	½	½	½	½	½
76'–100'	3/8	3/8	½	½	½	½	½	½

Table 02 – Suction Line sizes								
	Tons							
Distance	1	1½	2	2½	3	3½	4	5
1'–25'	5/8	5/8	¾	¾	¾	7/8	7/8	1
26'–50'	5/8	¾	¾	¾	7/8	7/8	1½	1½
51'–75'	¾	¾	7/8	7/8	1½	1½	1½	1½
76'–100'	¾	7/8	7/8	1½	1½	1½	1½	1½

The sizes given in the above tables are only for general reference, if the condenser manufacturer requires a different size than specified in Table 01 and Table 02, their sizing shall be used whenever a discrepancy occurs.

Outdoor Unit Installation

Locate the outdoor unit in a suitable location, as close as possible to the air handler. Maintain the clearances recommended by the manufacturers of the outdoor unit, to ensure proper airflow. The outdoor unit must be installed level, in a properly supported location. A liquid line filter/drier is recommended to be installed.

Wiring – Outdoor Unit

Make all connections to the outdoor unit with rain-tight conduit and fittings. Most building codes require a rain-tight disconnect switch at the outdoor unit as well (always check local codes). Run the proper size copper wires to the unit, and connect as per the manufacturer's recommendations. Ensure that the unit is set up for a TX system. If not, a hard start kit may be required.

Evacuating

After the piping is installed and all components have been brazed together, a vacuum pump must be used to evacuate the system from both the low and high side to 1500 microns. Add pressure to the system to bring the pressure above zero psig. After allowing the refrigerant to absorb moisture, repeat the above procedure. Evacuate the system to 500 microns on the second evacuation, and ensure that the system holds at the vacuum pressure. If not, check for leaks and evacuate again. If the vacuum holds, add refrigerant to raise the pressure to 2 psig. At this point open service valves on pre-charged condensing units, or add refrigerant to the system.

The use of an electronic leak detector is recommended, as it is more sensitive to small leaks under the low pressures.

Charging

Once the system has been determined clean and ready for charging, refrigerant can be added to the system. The service valves on the condenser must be open at this point. Never leave the system unattended when charging. With the system running, slowly add refrigerant to the system until the site glass is clear of all bubbles. If the site glass is clear of bubbles and the superheat is off, the TX valve will need to be adjusted (See Super Heat temperature settings). When adjusting the TX valve, never turn it more than a quarter turn at a time. Always allow 5 minutes for the system to settle down before making another TX adjustment. When adjusting the TX valve, a clockwise turn will close the valve allowing less refrigerant through. With less refrigerant flowing through the coil, less cooling will be done, which will bring up the suction line temperature.

Superheat

Superheat on Hi-Velocity systems with the RCM series should normally be around 8°F -12°F. The suction line should be set at approximately 42°F

Carry Over Screen


All RCM refrigerant cooling modules come supplied with a nylon mesh carry-over screen and six stand-off plugs. The HiVelocity units have a very high humidity removal rate, the airflow across the coil can grab moisture off the fins and carry it into the unit. With the carry-over screen in place it reduces the chance of moisture being carried into the unit.

Ensure that the nylon mesh is placed on the exiting air side of the cooling module (Fig. 07).

Installation Instructions


The carry-over screen is placed on air handler side of the cooling module (Fig. 07).

Fig. 07 - Screen on the air handler side

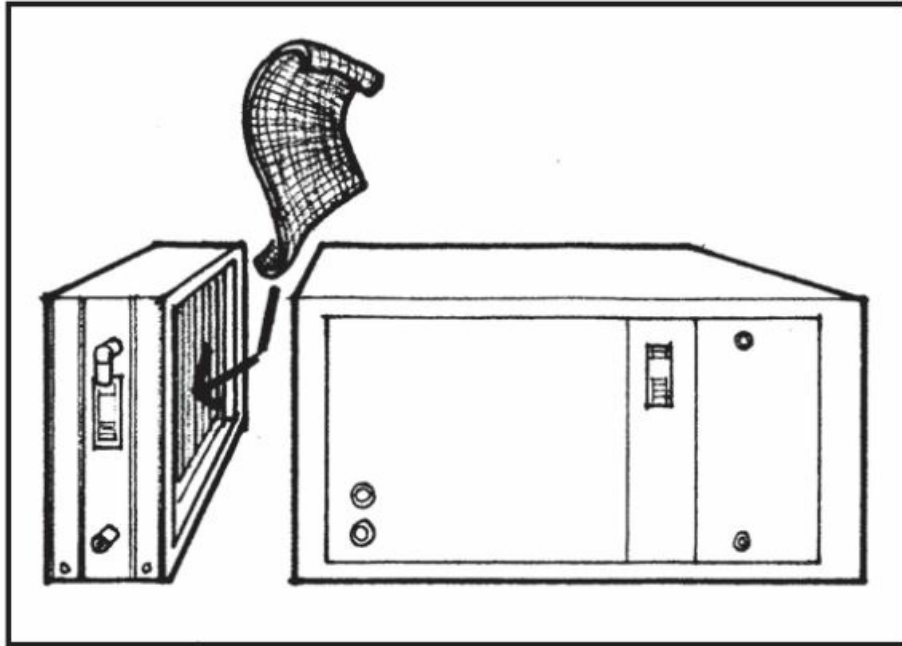


On the air handler side of the cooling module, attach three plastic stand-offs down each side of the cooling coil (Fig. 08).

Fig. 08 - Attach stand-off plugs

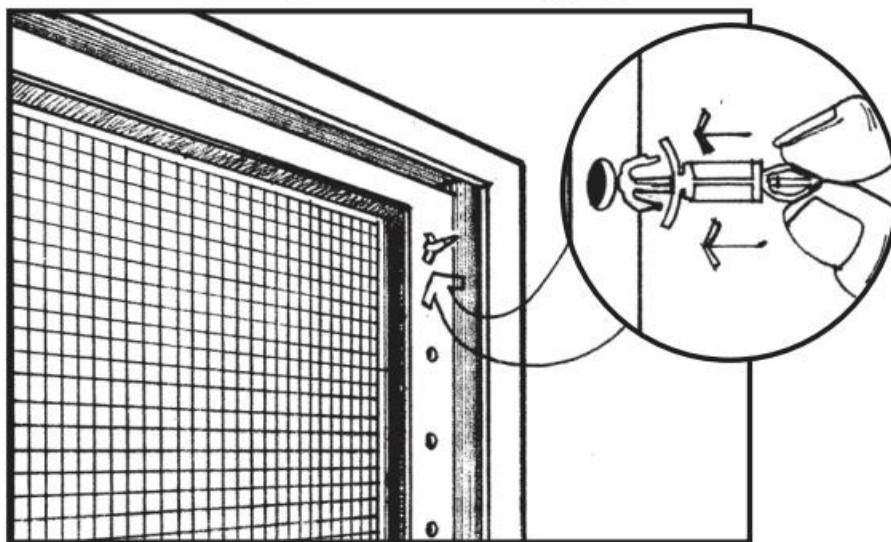

Place the nylon wire mesh over the stand-offs, ensuring the screen touches the drain pan. Then snap the screen over the plastic stand-offs (Fig. 09).

Fig. 09 - Attach screen to coil

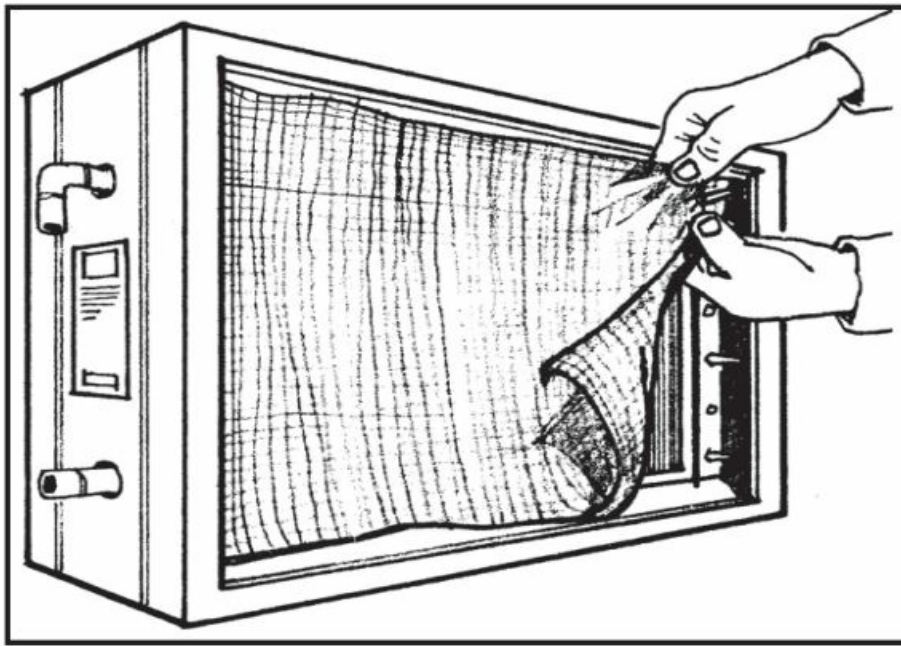

Return Air

When sizing the return air ducts, keep in mind that if they are too small they can create noise, but if they are too large, the air handler cannot build up proper pressure. Table 03 has recommended return air sizes for round and rectangular ducts. A variance of plus/minus 20% is allowable for sizing return ducts that connect to the Hi-Velocity Systems unit.


It is recommended to install a grill that is 10 – 20% larger than specifications require, this will ensure that there is no air velocity noise at the grill. Where allowed by local codes, a single return air grill may be used. When using a flexible duct for return air, use one duct size larger due to the higher friction loss.

Return Cutout

Fig. 10 shows the different locations the return air can be installed on Hi-Velocity Systems. Table 03 contains the dimensions needed for the return. All air handlers are shipped with a Return Air Cutout template; the template will guarantee maximum airflow across the coil.

<i>Table 03 – Return air cutouts</i>				
Model	A	B	C	D
50/51 H/BU	3"	17"	10"	14"
70/71 H/BU	3"	17"	15"	15"
100/101 H/BU	3"	17"	22"	15"

Fig. 10 - Return air cutout sizing

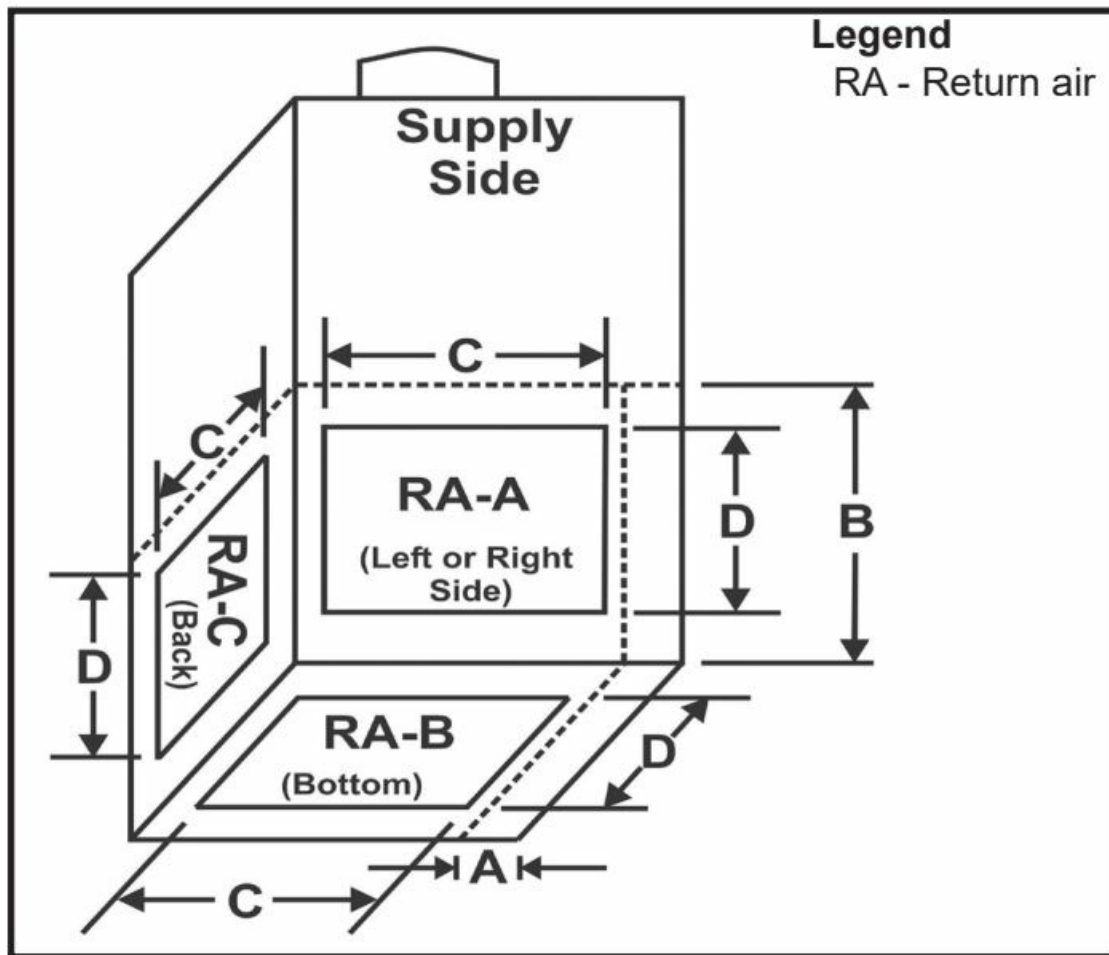


Note:

- DO NOT cut past the center plate or electrical box (Dim A & B).
- 100 and 140 Units CANNOT use return air "C" (RA-C).
- This drawing is NOT to scale.

Cooling Start-Up

1. Pipe system with Site Glass and Access Port(s) at the evaporator.
2. Leak check and evacuation system.
3. Check system operation with power to the outdoor unit off or use the service disconnect.
4. Connect gauges and open outdoor unit service valves.
5. Turn on the power to the outdoor unit and start the system.

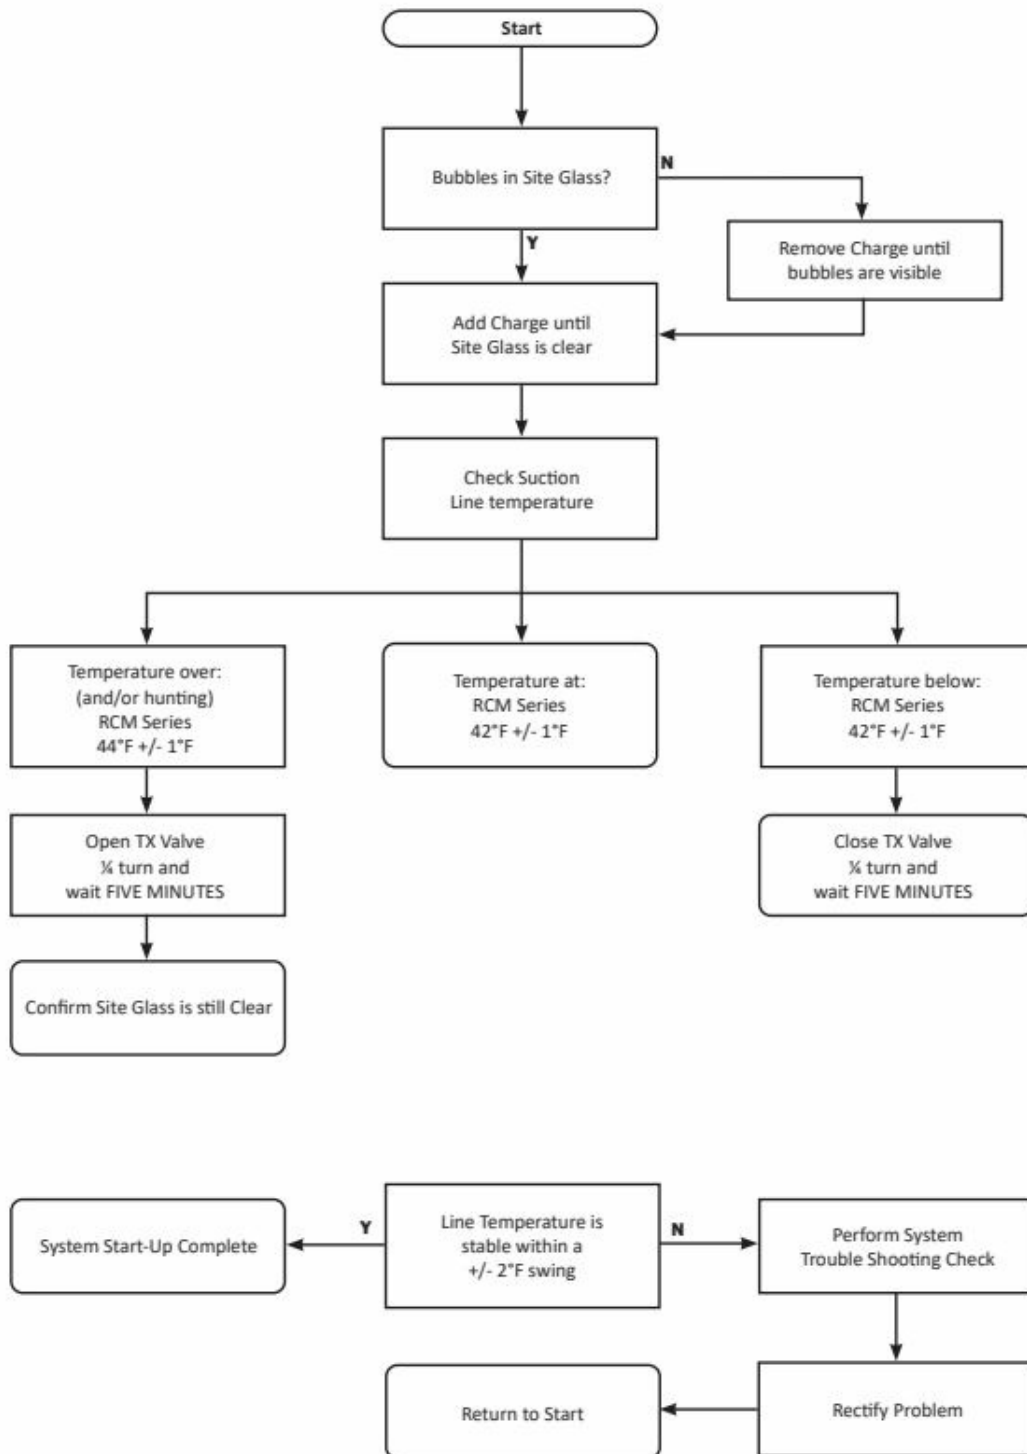

RCM Specifications

Refrigerant Cooling Module

Specifications		RCM-30	RCM-50	RCM-70	RCM-100
Part Number		4090200030	10090200050	10090200070	40090200100
Matching Air Handler		CU-31 JH-15/30	HE-Z/HE-B/HE-50/51 HV-50/51/52 CU-51 LV-Z/LV-B-750/751 LV-50	HE-Z/HE-B/HE/HV-70/71 LV-Z/LV-B-1050/1051 LV-70	HE-Z/HE-P/HE-B/HE/ HV-100/101 HE-P-240/241 (x2 Coils)
Tons ⁽¹⁾		1.0 Ton (3.5 kWh)	1.5 - 2.0 (5.3 - 7.0 Kw)	2.5 - 3.0 (8.8 - 10.6 Kw)	3.5 - 5.0 (12.3 - 17.6 Kw)
Refrigerant Type		R-410A	R-410A	R-410A	R-410A
TX Cooling MBH ⁽²⁾		6-12 (1.8-3.5 kW)	18-24 (5.3-7.0 kW)	30-36 (8.8-10.6 kW)	42-60 (12.3-17.6 kW)
Fin Material		Aluminum	Aluminum	Aluminum	Aluminum
Tubing Material		Copper	Copper	Copper	Copper
Type of Fins		.006 Al (0.1524mm)	.006 Al (0.1524mm)	.006 Al (0.1524mm)	.006 Al (0.1524mm)
Hydronic Connection Sizes	Liquid Line (Lq)	3/8" (9.5mm)	1/2" (13mm)	1/2" (13mm)	1/2" (13mm)
	Suction Line (S)	5/8" (15.9mm)	7/8" (22.3mm)	7/8" (22.3mm)	7/8" (22.3mm)
	Drain Connection	3/4" M CPVC (19mm)	3/4" M CPVC (19mm)	3/4" M CPVC (19mm)	3/4" M CPVC (19mm)
TXV with Built in Check Valve & Bypass		Yes	Yes	Yes	Yes
Site Glass		Yes	Yes	Yes	Yes
Freeze Stat		Yes	Yes	Yes	Yes
Access Port(s)		Yes	Yes	Yes	Yes
Shipping Weight		17 lbs (7.7 kg)	27 lbs (12.2 kg)	34 lbs (15.4 kg)	45 lbs (20.4 kg)
Coil Module Dimensions (L x W x H)		14 3/8" x 12 1/4" x 12 3/8" (365mm x 311mm x 314mm)	14 3/8" x 10 1/8" x 18 1/2" (365mm x 257mm x 470mm)	19 3/8" x 10 1/8" x 18 1/2" (492mm x 257mm x 470mm)	25 3/8" x 10 1/8" x 18 1/2" (645mm x 257mm x 470mm)

- **(1)** A minimum of four HE outlets per ton of cooling is needed. (2" Duct = Minimum eight 2" outlets per ton)
- **(2)** Smaller condensers may be matched to the air handler when needed (match TXV to condenser size)
- **MBH** – Thousand British Thermal Units per Hour
- **TX** – Thermal Expansion
- **TXV** – Thermal Expansion Valve

RCM Refrigerant Module comes with:

- Heat Pump Ready Thermal Expansion Valve with Built-In Check Valve
- Integrated Access Port(s)
- Site Glass
- Freeze Stat
- Two L-Mounting Brackets
- Carry-over Screen
- Drain Pan

WARRANTY

Energy Saving Products Ltd. is proud to offer a limited warranty. This warranty applies strictly to the first purchaser

at the wholesale level and only to the Air Handler unit and module. It does not include connections, attachments and other products or materials furnished by the installer.

This warranty excludes any damages caused by changes, relocation to, or installation in a new site. This warranty does not cover any defects caused by failure to follow the installation and operating instructions furnished with the Air Handler. This warranty does not cover defects caused by failing to adhere to local building codes and following good industry standards. Failure to correctly install the Air Handler, or material related to the unit, may result in improper system performance and/or damages and will void this warranty. This warranty does not cover material installed in or exposed to a corrosive environment. This warranty does not cover products subjected to abnormal use, misuse, improper maintenance, or alteration of the product. Using the Air Handler and/or module as a source of temporary heating/cooling during construction will void this warranty.

A Five (5) Year Limited Warranty is extended on all components in products manufactured exclusively by Energy Saving Products. These components include Motors, WEG Controllers, Circuit Boards, Dampers, Zoning Controls, Blowers, Motor & Blower Assemblies, Heating Coils, Chilled Water Coils, and Air Conditioning Coils. Note: If any product is installed in or exposed to a corrosive environment, the warranty will be void.

- A Three (3) Year Limited Warranty is extended on Electric Strip Heaters.
- A One (1) Year Limited Warranty is extended on replacement parts.

Products sold by Energy Saving Products but manufactured by others will carry the original manufacturer's warranty.

TERMS & CONDITIONS

- Warranty will not be considered unless a contractor has contacted Energy Saving Products Ltd. Technical Support department for assistance, and received a tech code.
- Any repair performed under warranty must be approved by Energy Saving Products Ltd. for this warranty to be valid.
- The liability of Energy Saving Products Ltd. is limited to and shall not exceed the cost of pre-approved replacement parts.
- This warranty does not cover shipping costs to and from the factory, labor costs or any other cost associated with the installation of the replacement part.
- Inoperative parts must be returned to Energy Saving Products Ltd. with an ESP RMA Form that includes model, serial number, and a detailed description of the entire problem. Inoperative parts must be returned in testable condition.
- Energy Saving Products Ltd. is not liable for any other damages, personal injury, or any other losses of any nature.

Follow these steps for Service or Repair:

1. Contact the installer of the product or a licensed service company
2. Contact the distributor
3. Contact Energy Saving Products Ltd. Mon-Fri 8 am – 4:30 pm MT 1-888-652-2219

This warranty replaces all other warranties expressed or implied.

www.hi-velocity.com


Energy Saving Products Ltd, established in 1983, manufactures the Hi-VelocitySystems™ product line for residential, commercial and multi-family markets. Our facilities house Administration, Sales, Design, Manufacturing, as well as Research & Development complete with an in-house test lab. Energy Saving Products prides itself on Customer Service and provides design services and contractor support. For all of your Heating, Cooling and Indoor Air Quality needs, the Hi-Velocity System is the right choice for you!

Build Smart, Breathe Easy
Hi-Velocity HE-Z Air Handlers, Green Technology



- **Phone:** 780-453-2093
- **Fax:** 780-453-1932
- **Toll Free:** 1-888-652-2219
- www.hi-velocity.com

Documents / Resources

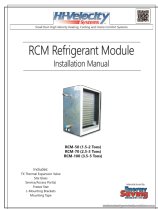

[Hi-Velocity RCM Refrigerant Module](#) [pdf] Instruction Manual RCM-50, RCM-70, RCM-100, RCM Refrigerant Module, RCM, Refrigerant Module, Module

References

- [MT !\[\]\(31b03e46ee8a80a1f1467b8c03bd76e8_img.jpg\) velocity.com](#)
- [Hi-Velocity !\[\]\(7d9665ff04f9d2270c38081c6215a724_img.jpg\) Energy Saving Products LTD.](#)
- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.