



# HIKVISION 6MP Poe Security Camera System User Guide

[Home](#) » [Hikvision](#) » HIKVISION 6MP Poe Security Camera System User Guide 

## Contents

- 1 HIKVISION 6MP Poe Security Camera System
- 2 Product Information
- 3 Chapter 1 System Requirement
- 4 Chapter 2 Network Connection
- 5 Chapter 3 Access to the Network Camera
- 6 Chapter 4 Camera General Configurations
- 7 Chapter 5 Appendix (PTZ series cameras)
- 8 Chapter 6 Frequently Asked Questions
- 9 Documents / Resources
  - 9.1 References
- 10 Related Posts



## HIKVISION 6MP Poe Security Camera System



## Product Information

### Specifications

- Operating System: Microsoft Windows XP SP1/7/8/10
- CPU: 3.0 GHz or higher
- RAM: 4G or higher

### Chapter 1: System Requirement

To use the product, your computer must meet the following system requirements:

- Operating System: Microsoft Windows XP SP1/7/8/10
- CPU: 3.0 GHz or higher
- RAM: 4G or higher

### Chapter 2: Network Connection

#### Setting the Network Camera over the LAN

**Purpose:** To view and configure the camera via a LAN, you need to connect the network camera in the same subnet with your computer, and install the AjDevTools software to search and change the IP of the network camera.

**Tools:** [AjDevToolssoftware download](#)

#### Wiring over the LAN

**Purpose:** To test the network camera, you can directly connect the network camera to the computer with a network cable. Connecting directly must supply the camera with DC 12V power supply.

#### Connecting Directly:

1. Set network camera over the LAN via a switch or a router. (If it is a POE switch, you do not need to power the camera).

#### Connecting via a Router or a Switch:

- Connect cameras to NVR.
- NVR with POE
- NVR without POE

### Chapter 3: Access to the Network Camera

#### Accessing by Web Browsers

##### Steps:

1. Computer download and install the AjDevTools software tool.
2. After installation, open the software and click the Start Search.
3. Search for the IP address of the camera.

4. Query the IP address of the Camera.
5. Query your computer IP address.
6. Open Network and Sharing Center – Details – View your computer's IPv4 Address, Subnet Mask, and Gateway.
7. Modify the IP address of the camera and computer in the same network segment.
8. Select the IP address of the camera.
9. Click IP Batch Manual Setting IP address.
10. Modify the IP address of the camera to be in the same network segment as the IP address of the computer or choose DHCP to obtain an IP address automatically.
11. Select OK – Successfully modified.
12. The status shows that the Login success, it can be accessed by the computer Web.

## **Web login**

1. Open the web browser or click Go to web.
2. In the browser address bar, input the IP address of the network camera, and press the Enter key to enter the login interface.
3. Input the user name and password and click Login.

**Note:** The default IP address is 192.168.1.123. Username: admin. First login, click install Web Plug-in when prompted. Password: 123456. You have to download and run the executable as administrator. If failed to install plug-in, download and save the WEBConfig.exe to the computer, close all browsers then re-install it. If there is a delay in video response when accessing remotely, please switch to Sub Stream instead. To learn the function of each button, just put the mouse on, it will show screen tips.

## **FAQ**

### **• Q: What are the system requirements for using this product?**

- A: The system requirements are as follows:
- Operating System: Microsoft Windows XP SP1/7/8/10
- CPU: 3.0 GHz or higher
- RAM: 4G or higher

### **• Q: How do I access the network camera via a web browser?**

- A: To access the network camera via a web browser, follow these steps:
- Download and install the AjDevTools software tool on your computer.
- Open the software and click Start Search.
- Search for the IP address of the camera.
- Query the IP address of the camera.
- Query your computer's IP address.
- Modify the IP address of the camera and computer to be in the same network segment.
- Open a web browser and enter the IP address of the network camera in the address bar.
- Enter the username and password to login.

### **• Q: What should I do if I encounter a delay in video response when accessing the network camera remotely?**

- A: If there is a delay in video response when accessing the network camera remotely, switch to Sub

Stream instead.

## **POE Security Camera System**

### **Quick Start Guide**

## **Chapter 1 System Requirement**

- **Operating System**

Microsoft Windows XP SP1/7/8/10

- **CPU**

3.0 GHz or higher

- **RAM**

4G or higher

- **Display**

1024×768 resolution or higher

### **Web Browser**

- For camera that supports plug-in free live view
- Internet Explorer 8 – 11, Mozilla Firefox 30.0 and above version and Google Chrome 41.0 and above version.

### **Note:**

- For Google Chrome 45 and its above version or Mozilla Firefox 52 and its above version which are plug-in free, Picture and Playback functions are hidden.
- To use mentioned functions via web browser, change to their lower version, or change to Internet Explorer 8.0 and above version.

## **Chapter 2 Network Connection**

### **Setting the Network Camera over the LAN**

#### **Purpose:**

To view and configure the camera via a LAN, you need to connect the network camera in the same subnet with your computer, and install the AjDevTools software to search and change the IP of the network camera.


**Tools:** [www.vikylin.com/download](http://www.vikylin.com/download)

### **Wiring over the LAN**

The following figures show the two ways of cable connection of a network camera and a computer:


#### **Purpose:**

1. To test the network camera, you can directly connect the network camera to the computer with a network cable. Connecting directly must supply the camera with DC 12V power supply

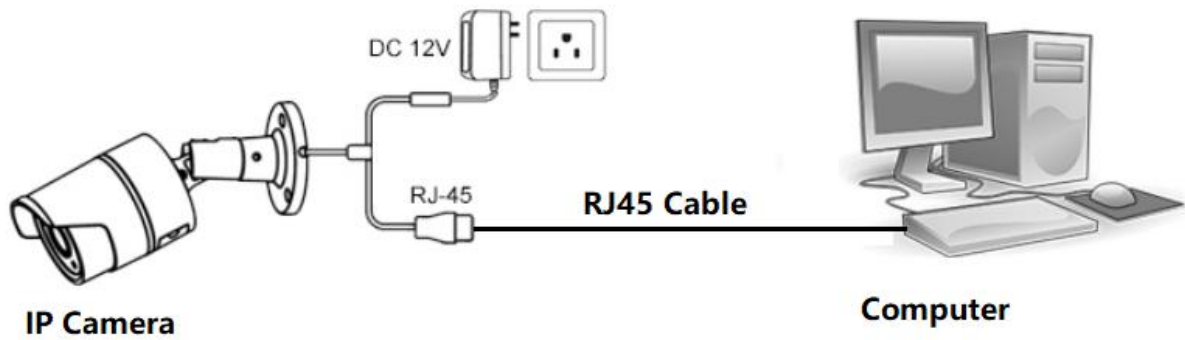


### Connecting Directly

- Set network camera over the LAN via a switch or a router. (If it is a POE switch, you do not need to power the camera).

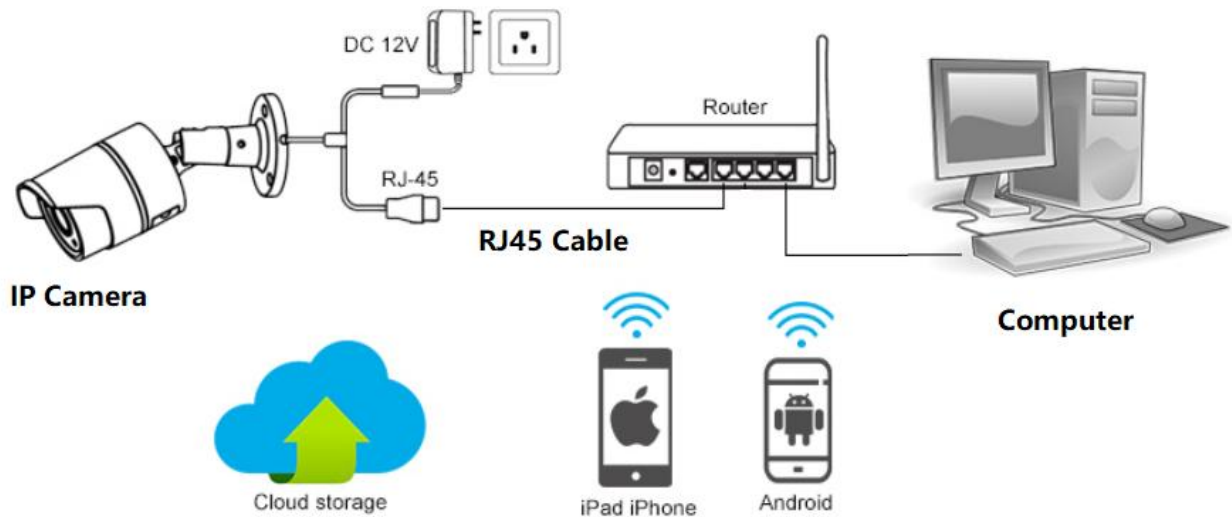


### Connecting via a Router or a Switch

- Connect cameras to NVR.

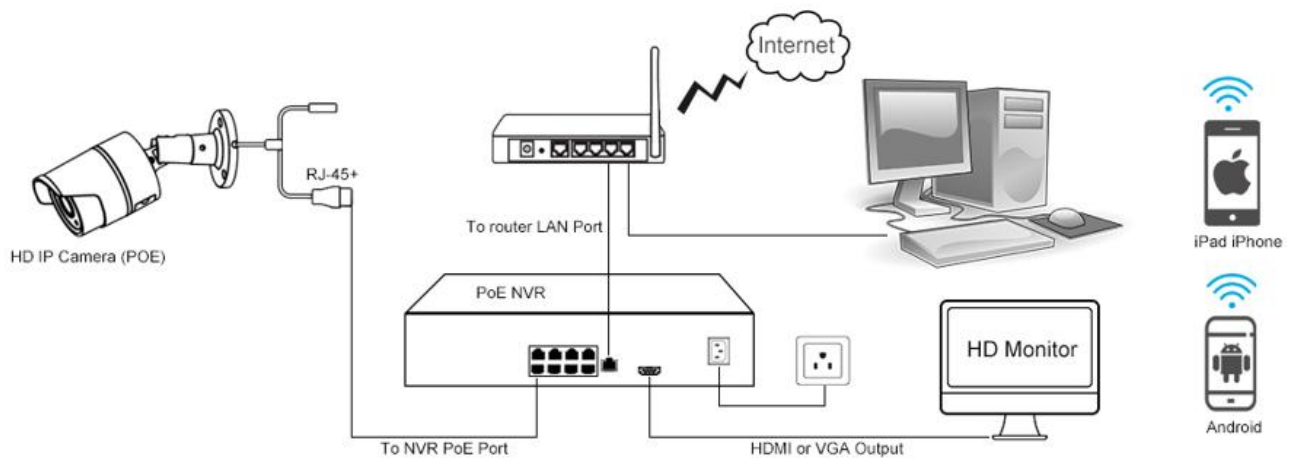

### 1. NVR with POE

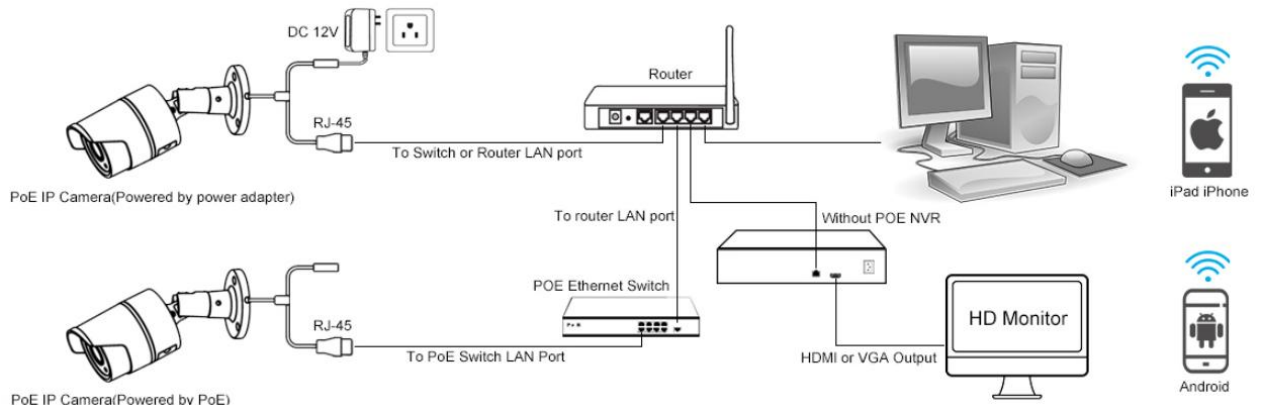


## 2. NVR without POE


## Chapter 3 Access to the Network Camera


### Accessing by Web Browsers Steps:

1. Computer download and install the AjDevTools software tool.
2. After installation, open the software and click the Start Search.
  1. Search for the IP address of the camera
  2. Query the IP address of the Camera

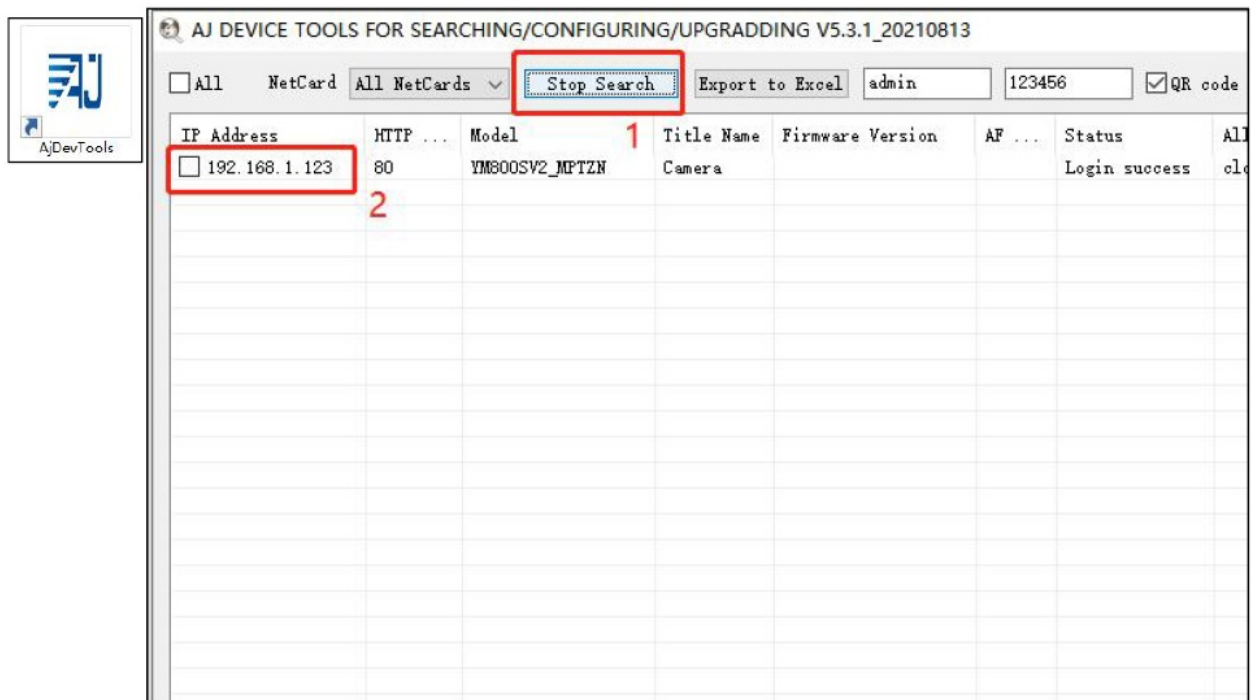


3. Query your computer IP address
  1. Open Network and Sharing Center-
  2. Details
  3. View your computer's IPv4 Address Subnet Mask and Gateway

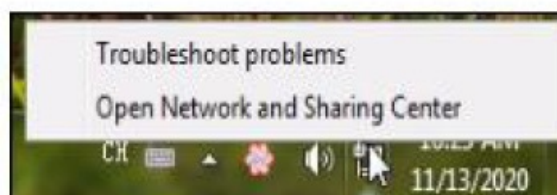

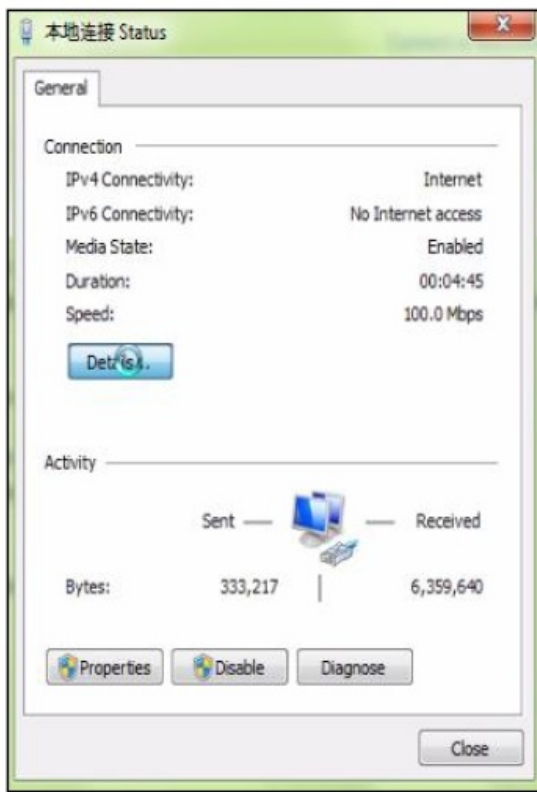


②

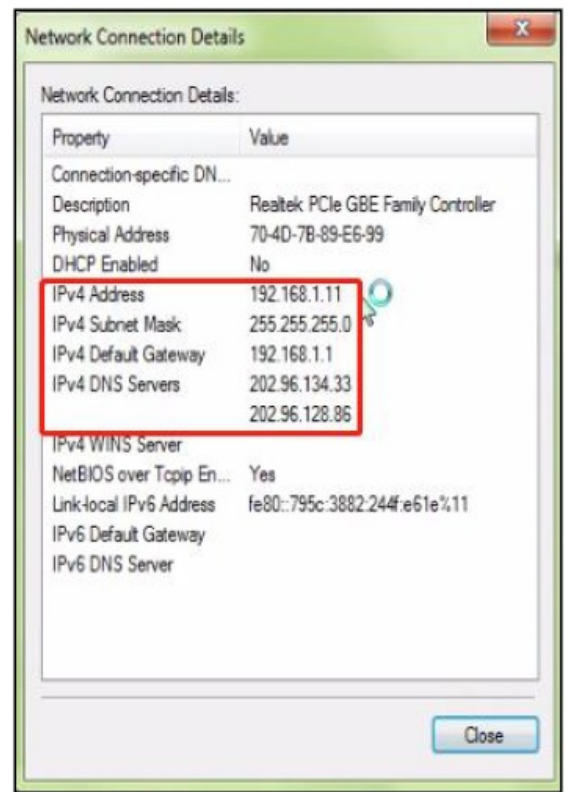

③


4. Modify the IP address of the camera and computer in the same network segment Setting method:

1. Select the IP address of the camera
2. Click IP Batch Manual Setting IP address

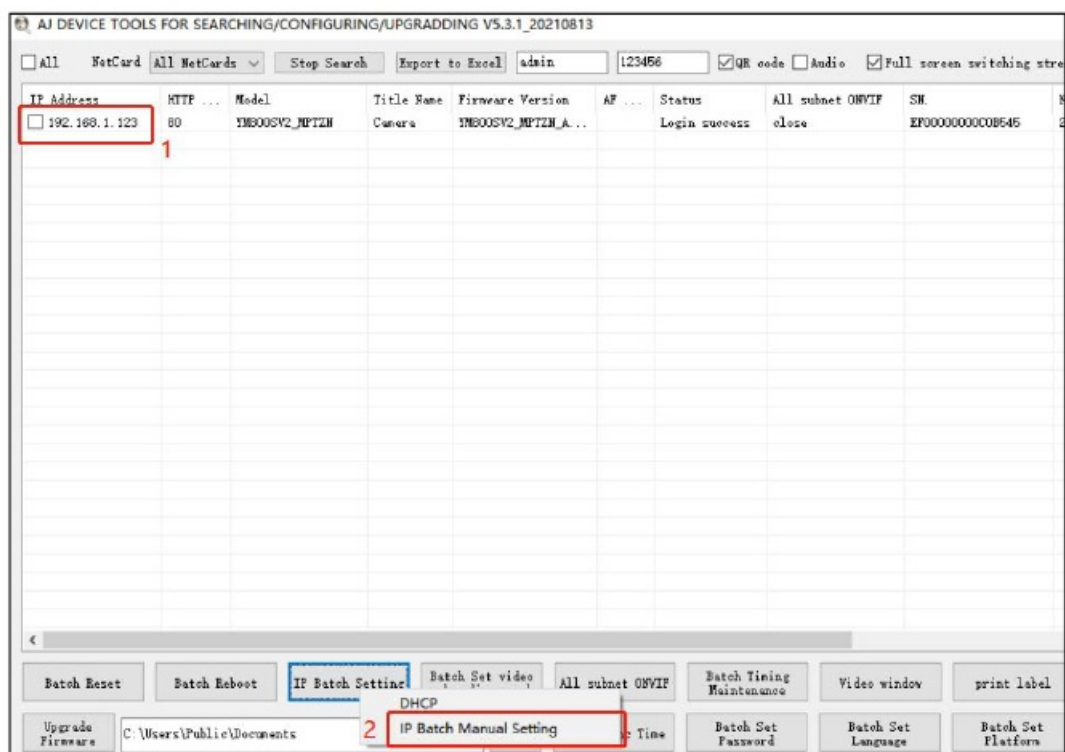


3. Modify the IP address of the camera to be in the same network segment as the IP address of the computer or choose DHCP to obtain an IP address automatically
4. Select OK—Successfully modified



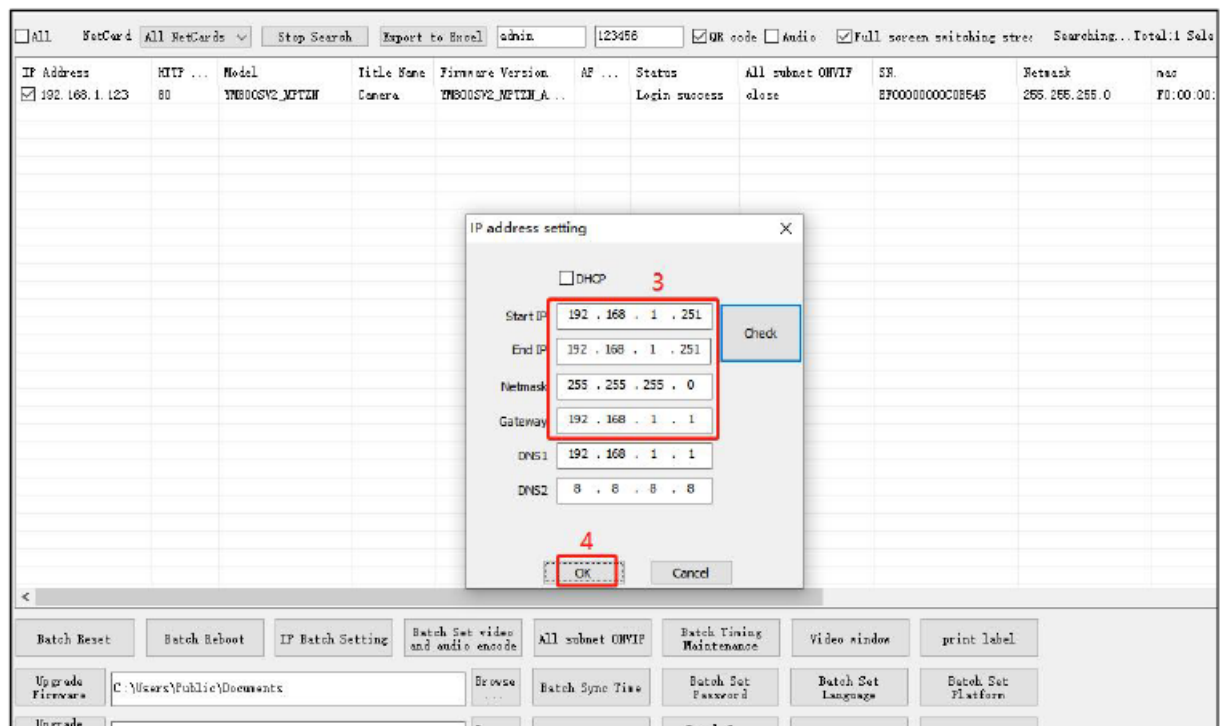

5. The status shows that the Login success, it can be accessed by the computer Web;

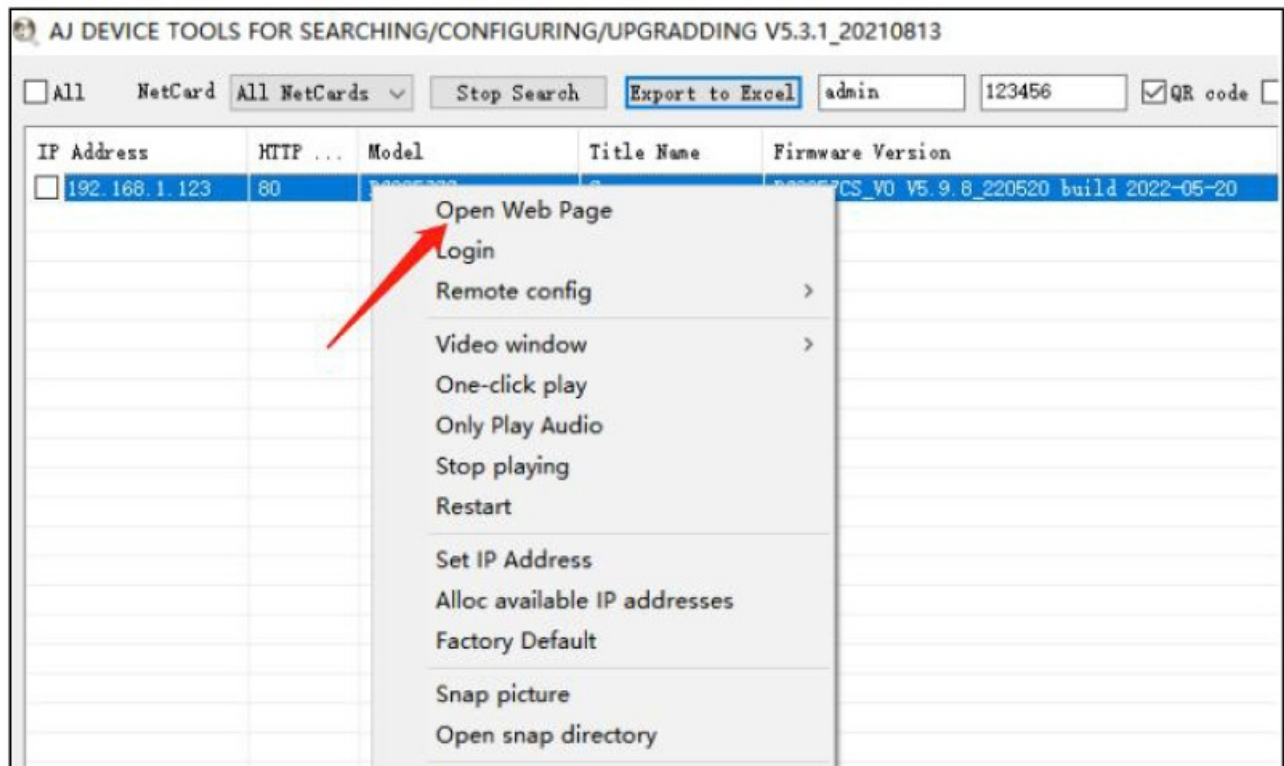

## Web login


1. Open the web browser or click Go to web
2. In the browser address bar, input the IP address of the network camera, and press the Enter key to enter the login interface
3. Input the user name and password and click Login.

## Note:


The default IP address is 192.168.1.123. Username admin Password 123456 First login Click "install Web Plug-in" when prompted.



1. You have to download and run the executable as administrator.

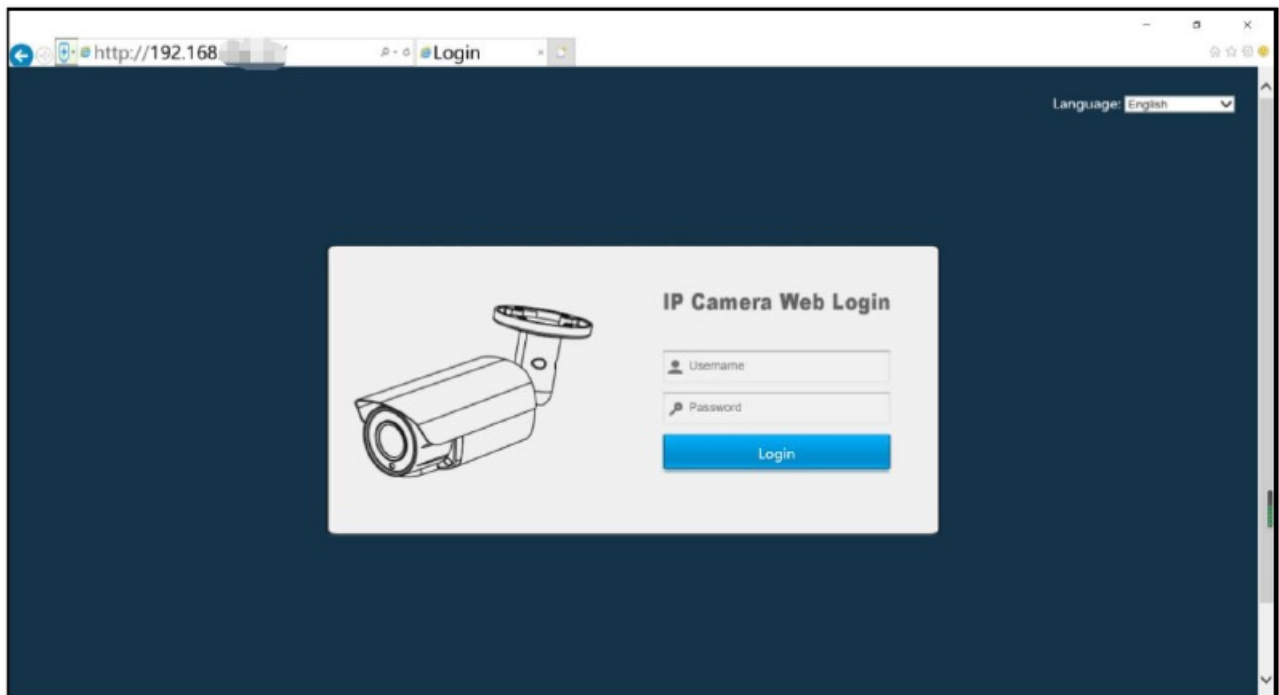

2. If failed to install plug-in, download and save the WEBConfig.exe to computer, close all browsers then re-install it.

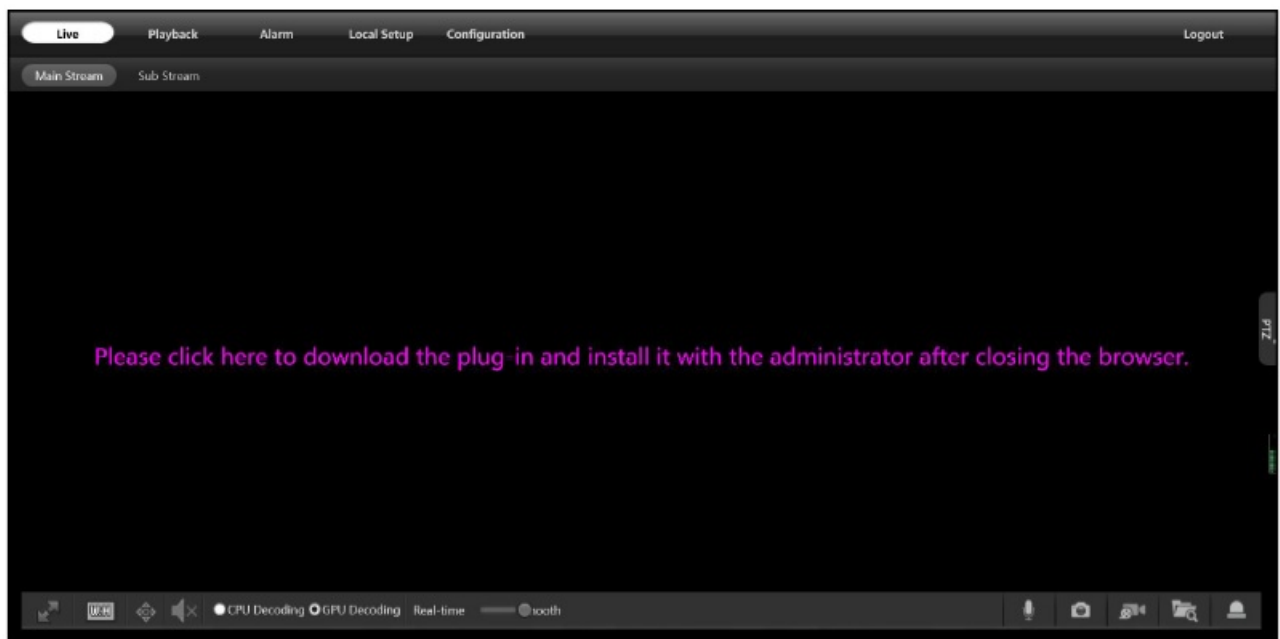


3. If there is a delay in video response when accessing remotely, please switch to Sub Stream instead. To learn the function of each button, just put the mouse on, it will show screen tips.



## Chapter 4 Camera General Configurations


### Configuring Image Settings

Steps: Configuration > Camera > Image > Image.

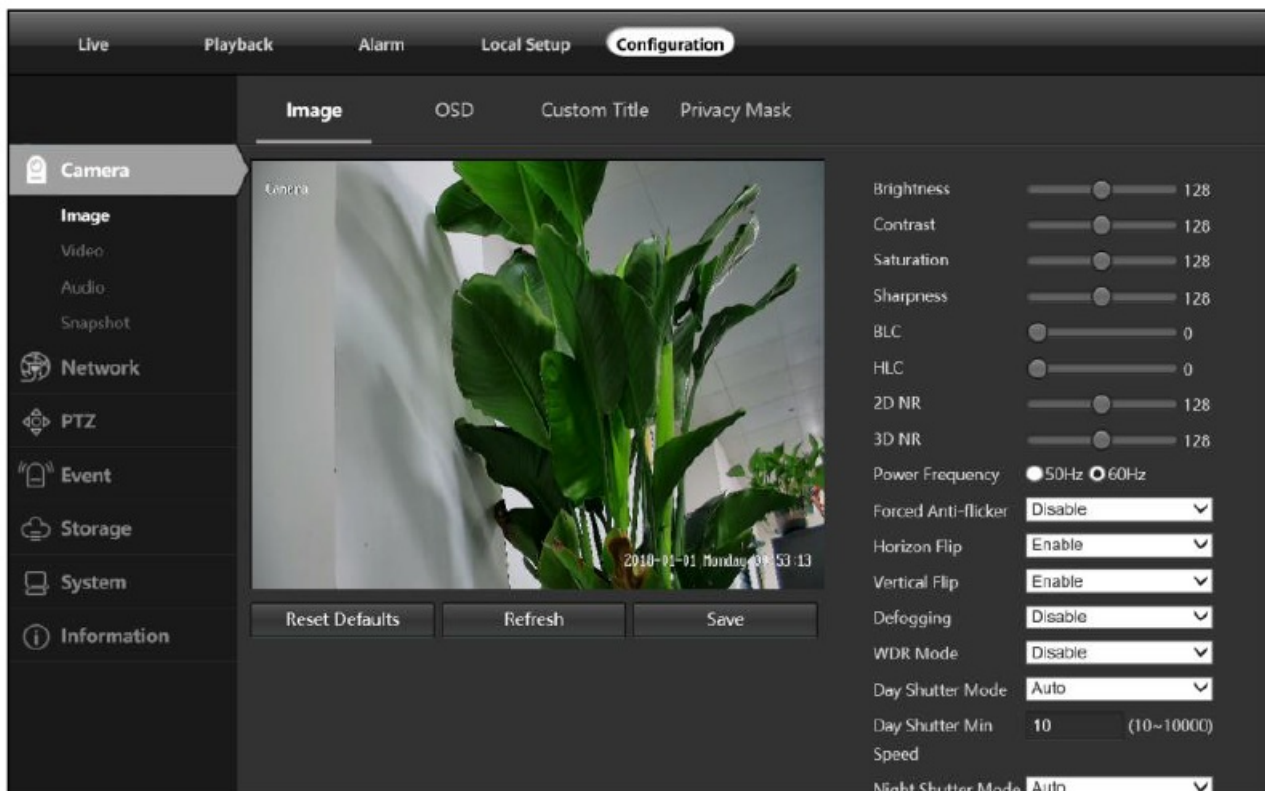

### Purpose :


- Configure the Brightness, Contrast, Saturation, Sharpness, BLC, HLC, 2D 3D NR, Power Frequency (50Hz PAL/60Hz NTSC), WDR, IRCut Setting, Advanced Image and Smart LED light Control.
- LED Brightness According to the application scenarios of different cameras, the brightness of the lamp can be adjusted, and the adjustment parameters are subject to the actual product.

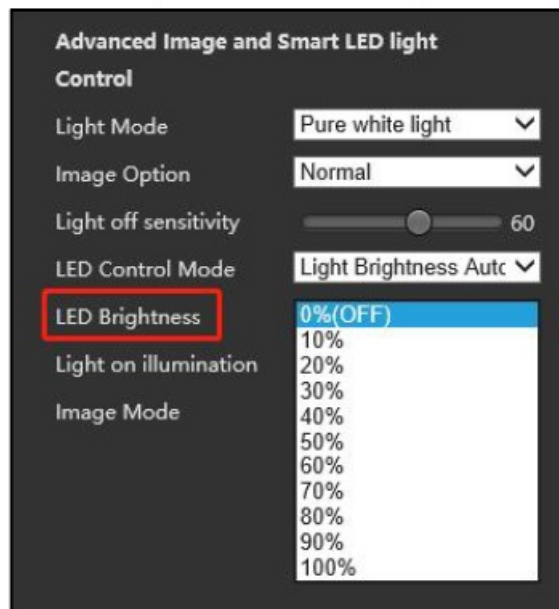

- **Note:** The display parameters vary according to the different camera models. Please refer to the actual interface for details.


## 1. Modify the camera “Title name”

**Steps:** Configuration > Camera > Image > OSD > Title Message.

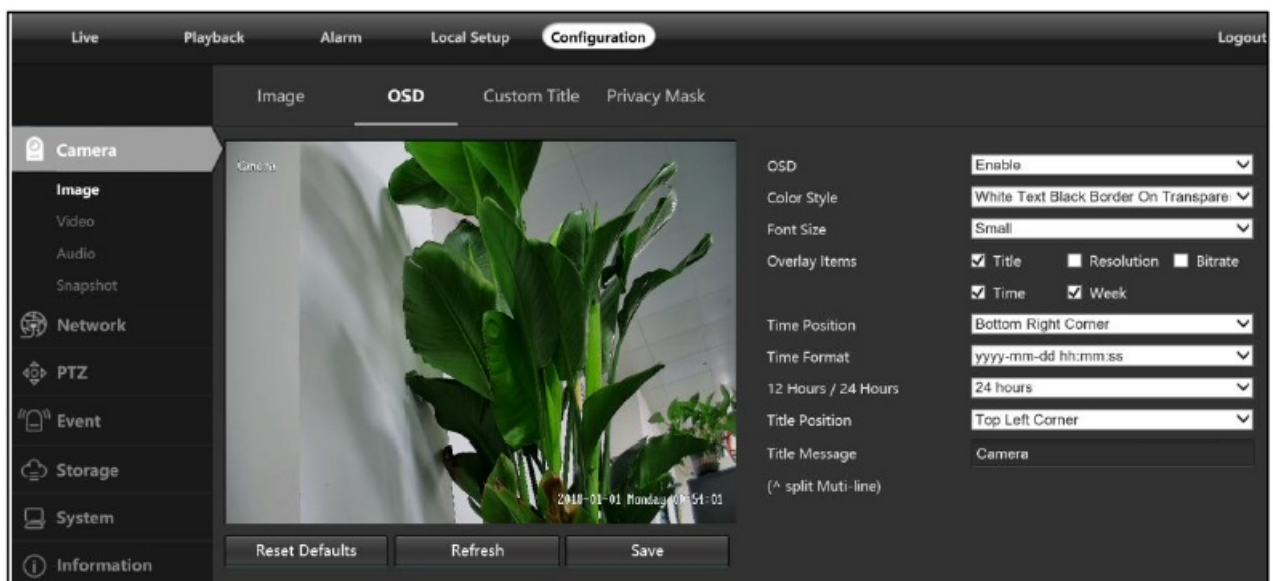


## 2. Privacy Mask function settings

**Steps:** Configuration > Camera > Image > Privacy Mask > Left mouse button > Select the privacy section > Save. ( Can choose four Privacy Mask parts.)

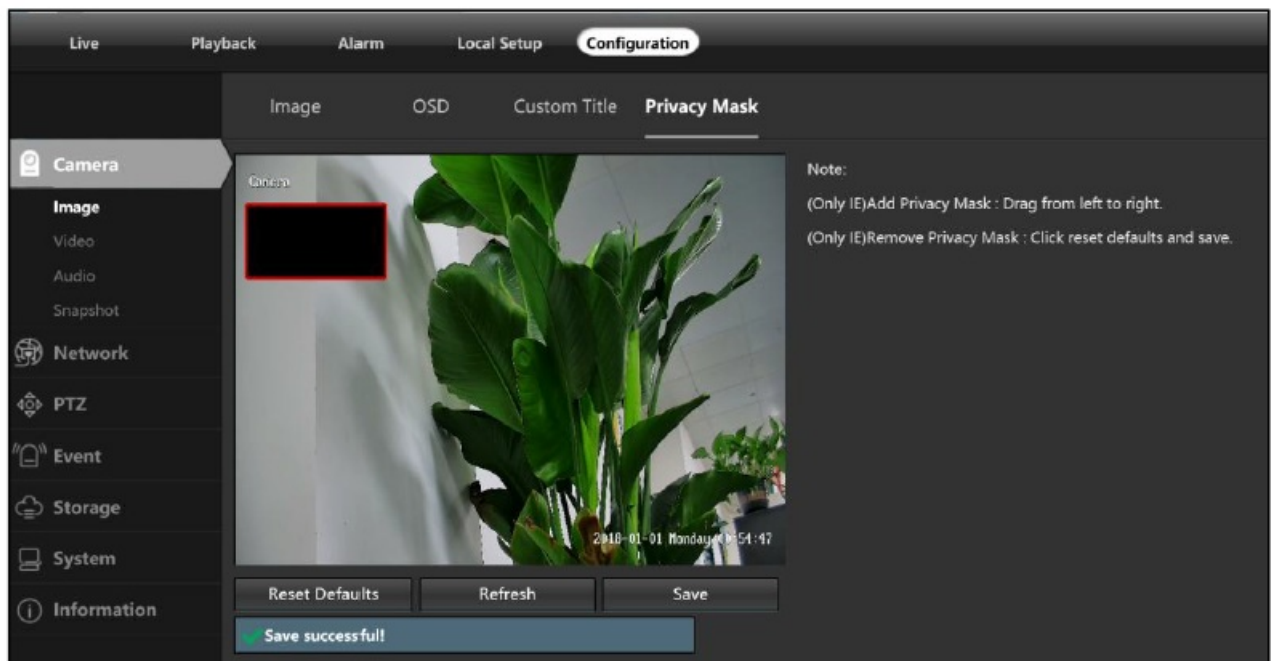


### 3. Video parameter settings

**Steps:** Configuration > Camera > Video > Encode > Main Stream > Sub Stream > Advance Encode > Save.  
(Can Modify Encode Mode -Resolution-FPS-Video Quality-Bit Rate.)

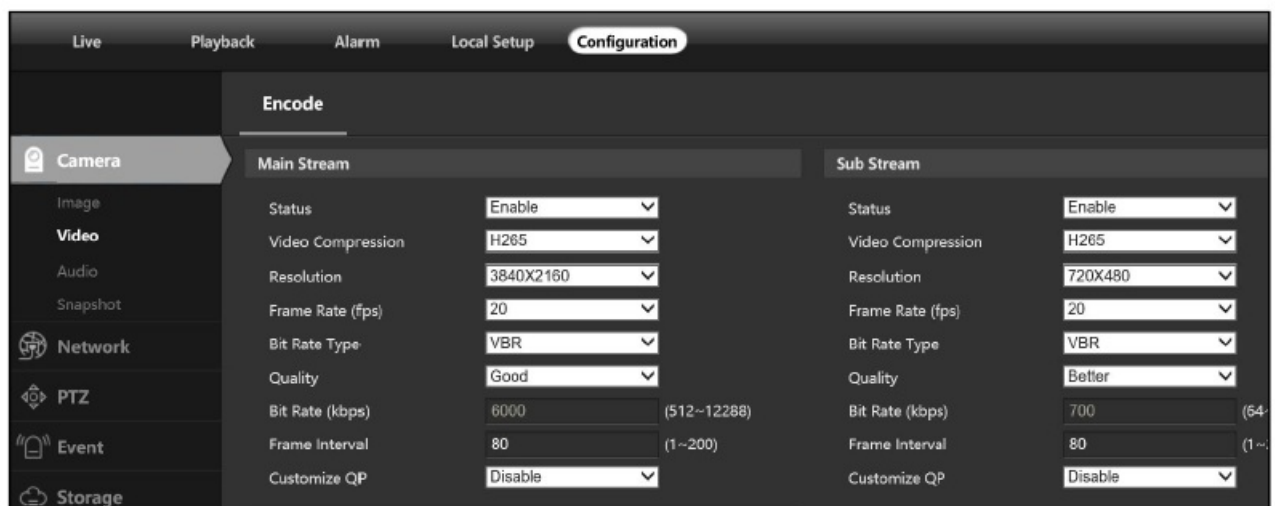

### 4. Audio settings

**Steps:** Configuration > Camera > Audio > Encode > Volume > Save.

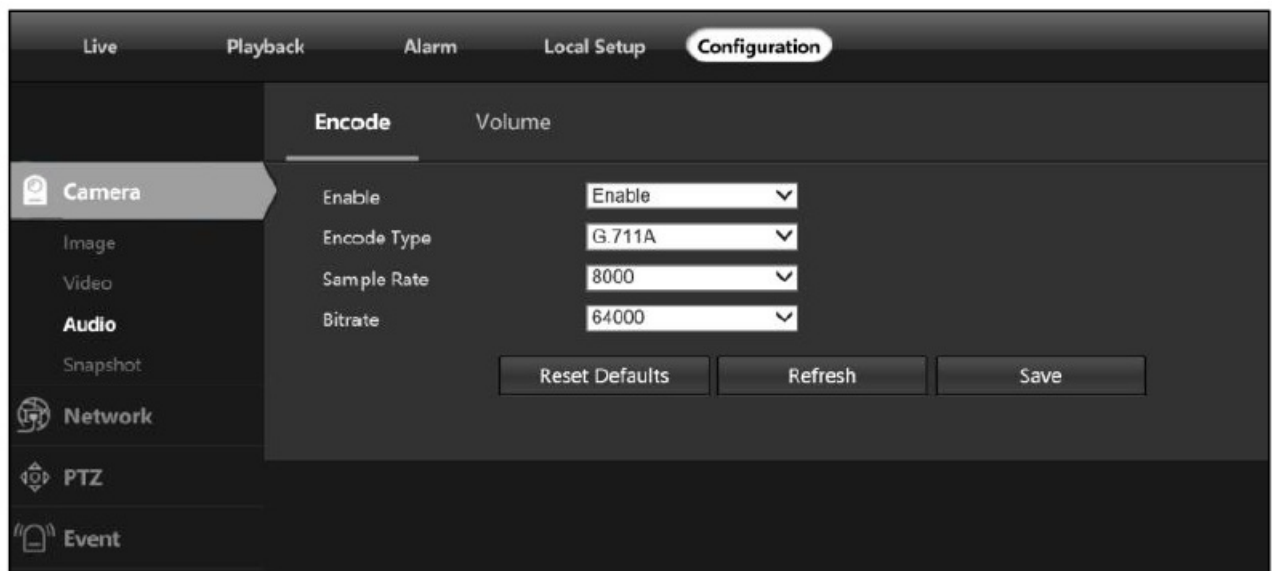

### 5. TCP/IP settings

**Steps:** Configuration > Network > TCP/IP > Save. (Can manually modify and DHCP IP address.)

The screenshot shows the 'Configuration' tab of a web interface. The left sidebar has 'Network' selected. The main area is titled 'TCP/IP'. It features a 'Mode' section with 'Static' selected and 'DHCP' unselected. Below this are fields for 'MAC Address' (F0-00-00-C0-B5-4E), 'IP Version' (IPv4), 'IP Address' (192.168.254.17), 'Subnet Mask' (255.255.255.0), 'Default Gateway' (192.168.254.1), 'Preferred DNS Server' (192.168.1.1), 'Alternate DNS Server' (8.8.8.8), 'Hostname' (IPCAM-C0B54E-YM800S), and 'All Subnet Onvif' (unchecked). At the bottom are 'Reset Defaults', 'Refresh', and 'Save' buttons.

## 6. Service Ports function settings

**Steps:** Configuration > Network > Service ports > Enable > Save.

The screenshot shows the 'Service Ports' configuration page. The left sidebar has 'Network' selected, and 'Service Ports' is highlighted. The main area is titled 'Service Ports'. It includes sections for 'WEB/ONVIF' (with 'WEB Enable' and 'Onvif Enable' checked, and 'Onvif Authentication' unchecked), 'HTTP/Onvif Port' (80), 'html5 Port' (12351), and 'HTTPS' (with 'https Port' set to 443). Below these are fields for 'https Certificate', 'https Private Key', and 'https Private KeyPassword', each with a 'Delete' and 'Upload' button.

## 7. P2P function settings

**Steps:** Configuration > Network > P2P > Enable > Save.



1. Using the P2P ID and QR code, you can access the camera remotely anywhere via smart phone with Internet access.
2. Please register an account via mobile phone after installing the Danale APP from APP Store or Google Play Market, then log in and add your camera to start previewing. Or you can go to the website <http://www.danale.com/> to register if you need PC remote access. You can download APP from the website to find out more.

#### **P2P function add steps:**


Visit the Apple App Store or the Google Play Store to download the Danale app for iOS or Android devices.

#### **Scan QR code download**




1. For new users, please select "Sign UP".
2. Create Account ,Please enter your email or mobile number
3. Fill in the received verification code
4. Select to Add devices
5. Select "QR Code to add " to get into the scan camera QR code page, or select "NEXT" to discover the connected local LAN IP camera.
6. Scan the QR code of the P2P interface displayed on the web side of the camera




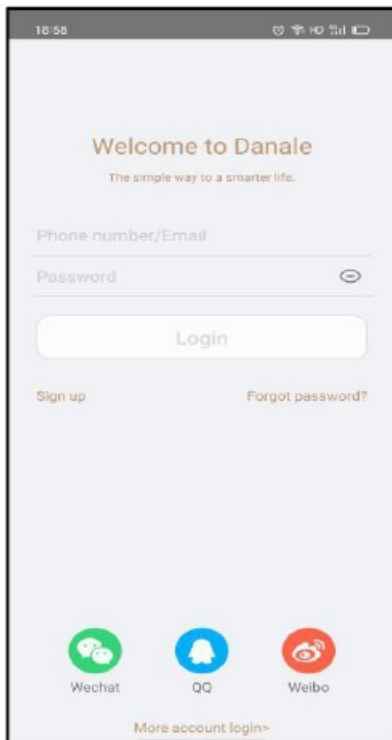


①

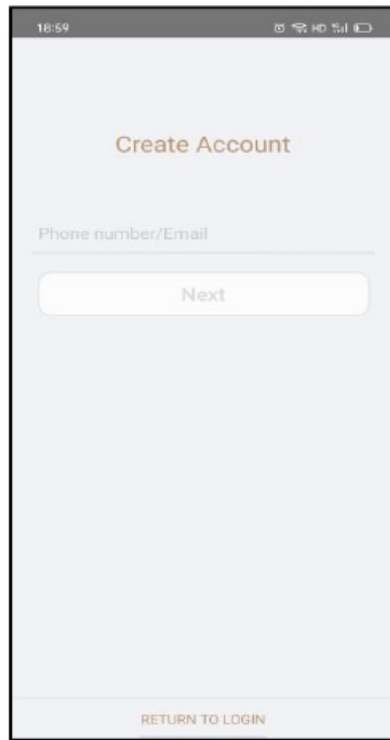


②

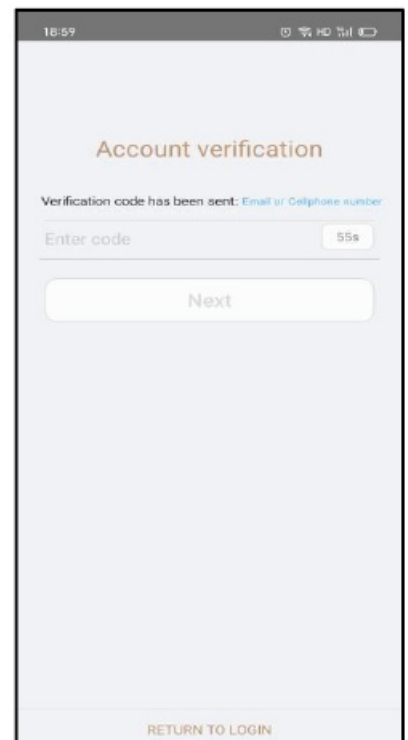

③

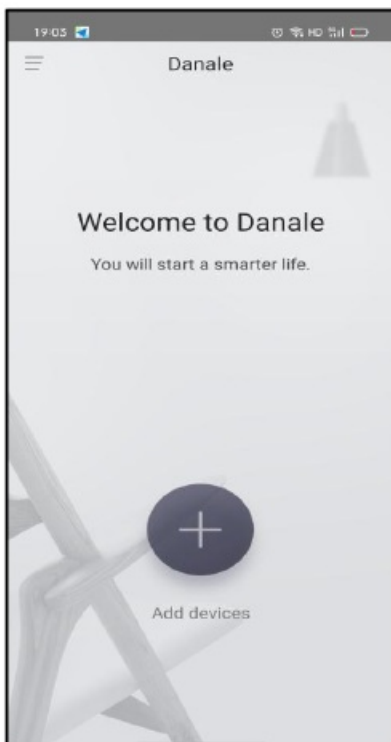

④

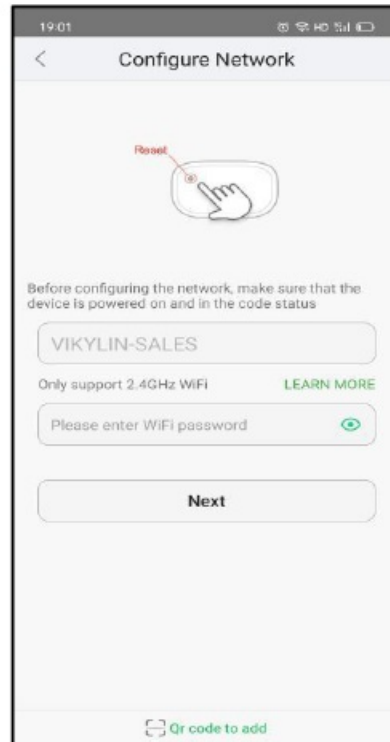


⑤




⑥

7. Choose Name you Device.
8. The camera has been successfully added to the phone.
9. Select the camera list to start viewing video.




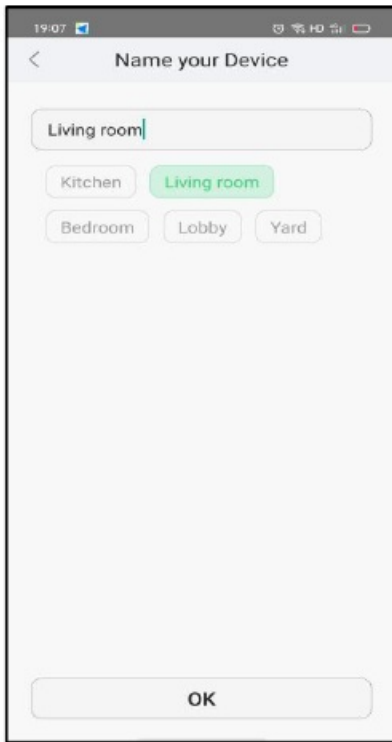

⑦

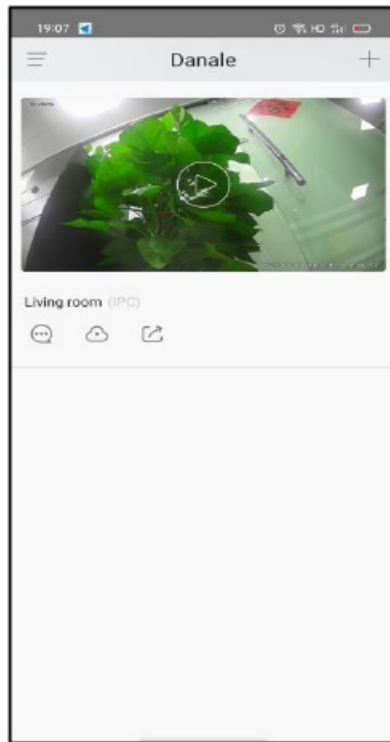

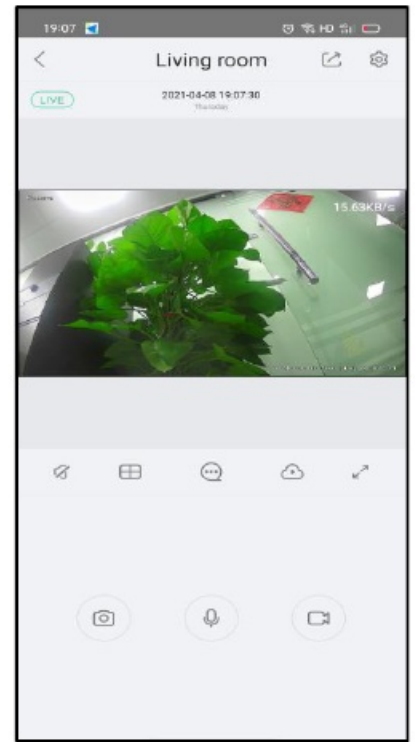

⑧



⑨

### Tips:

1. Select  to check your account profile and configure settings
2. To share your camera with your friends or another user, click “” icon and type in or scan his/her Danale account.

### Note:

If you can not connect the camera, please check your Internet connection and verify the IP address, gateway, and DNS setting in the camera. The Cloud login status should be online, which means the camera has registered to the cloud server.

### SMTP (Email) function settings

**Steps:** Configuration > Network > SMTP(Email) > Save.

#### • Purpose:

The system can be configured to send an Email notification to all designated receivers if an alarm event is detected, e.g., motion detection event.

#### • Before you start:

Please configure the DNS Server settings under Configuration > Network > Basic

**TCP/IP before using the Email function.**

The screenshot displays the 'SMTP (Email)' configuration page within a web interface. The top navigation bar includes 'Live', 'Playback', 'Alarm', 'Local Setup', and 'Configuration'. The left sidebar shows 'Camera' and 'Network' (selected), with sub-items like 'Basic', 'Service Ports', 'P2P', 'SMTP (Email)', 'FTP', 'RTMP', 'Alarm Server Center', and 'Connect Check'. The main area is titled 'SMTP (Email)' and contains the following fields:

- SMTP Server: SMTP.Gmail.COM
- Port: 465 (with a range indicator 1~65535)
- SSL: A dropdown menu with 'SSL' selected.
- Username: 123456@gmail.com
- Password: Masked with dots.
- Confirm Password: Masked with dots.
- Sender: 123456@gmail.com (with a placeholder (username@domain.com))
- Subject: hello
- Receive Mail Address: test1@gmail.com
- CC Mail Address: test2@gmail.com

At the bottom, there are four buttons: 'Email Test', 'Reset Defaults', 'Refresh', and 'Save'.

### SMTP Steps:

1. Enter the TCP/IP Settings (Configuration > Network > Basic > TCP/IP) to set the IPv4 Address, Subnet Mask, Default Gateway and the Preferred DNS Server.
2. Enter the SMTP (Email) interface: Configuration > Network > SMTP ( Email).
3. **Configure the following settings:**
  1. **SMTP Server:** IP address or host name (e.g., [smtp.gmail.com](mailto:smtp.gmail.com)) of the SMTP Server.
  2. **Port:** The SMTP port. The default TCP/IP port for SMTP is 25 (not secured). And the SSL SMTP port is 465.
  3. **SSL:** Disable, SSL, and StartTLS. When you select SSL or TLS , e-mails will be sent after encrypted by SSL or TLS. The SMTP port should be set as 465 for this encryption method.
  4. **Username:** Enter the correct email address.
  5. **Password:** Need a third party authorization password.
  6. **Sender:** Sender email address.
  7. **Receive Mail:** The email address of user to be notified.
4. Click Save to Save the setting.

### FTP function settings

Steps: Configuration > Network > FTP > Save.

### Purpose:

You can configure the FTP server related information to enable the uploading of the captured pictures to the FTP server. The captured pictures can be triggered by events or a timing snapshot task.

The screenshot shows the 'Configuration' tab with the 'FTP' sub-tab selected. The left sidebar lists various settings categories: Camera, Network (selected), Basic, Service Ports, P2P, SMTP (Email), FTP, RTMP, Alarm Server Center, and Connect Check. The main area contains the following fields:

- FTP Server: 192.168.1.139
- Port: 21 (with a range note: 1~65535)
- Username: admin
- Password: masked with dots
- Confirm Password: masked with dots and a toggle icon
- Store Path: alarm (with a note: (Path Examples: \$date or path1/path2 or path1/path2/\$date))

At the bottom, there are four buttons: Test, Reset Defaults, Refresh, and Save.

### FTP Steps:

1. Input the server address and port.
2. Configure the FTP settings; and the user name and password are required for the server login.
3. FTP Store Path.
4. Click Save to Save the setting.

### Enable Motion Detection Alarm


**Steps:** Configuration > Event > Video Detection > Enable > Setup Schedule > Setup Detection Area.

The screenshot shows the 'Configuration' tab with the 'Event' sub-tab selected. The left sidebar lists various settings categories: Camera, Network, PTZ, Event (selected), Motion Detect, IO, Intelligent Detect, Video Cover Alarm, Storage, System, and Information. The main area contains the following settings:

- ☒ Enable
- Schedule: Setup
- Detection Area: Setup
- ☐ Trigger Recording
- ☐ Trigger Snapshot
- Trigger Output 1: Disable (dropdown menu)
- ☐ Light Blink
- ☐ Upload Alarm Center
- ☐ Trigger Audio

At the bottom, there are three buttons: Reset Defaults, Refresh, and Save.


**Schedule:** Click Schedule “Setup” to set alarm period. It can enable alarm event only in the working period, then click “Ok” to complete schedule setting

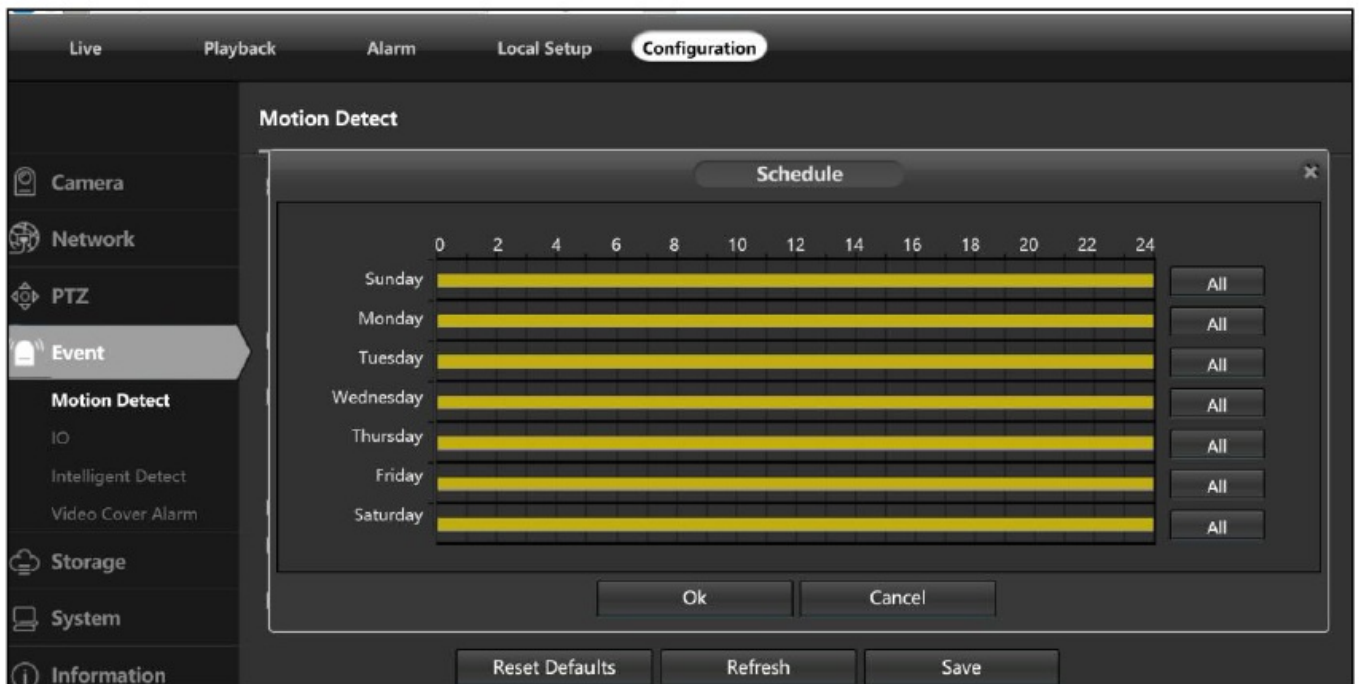

It is to set working period accordingly to the following methods:


- Press the left mouse button to drag on the setup interface to set.
- Click All to select the whole day

**Detection Area Click** Schedule “Setup”–Sensitivity–Threshold–Block Count–Night Time(Enable)–Night Sensitivity–Night Threshold.

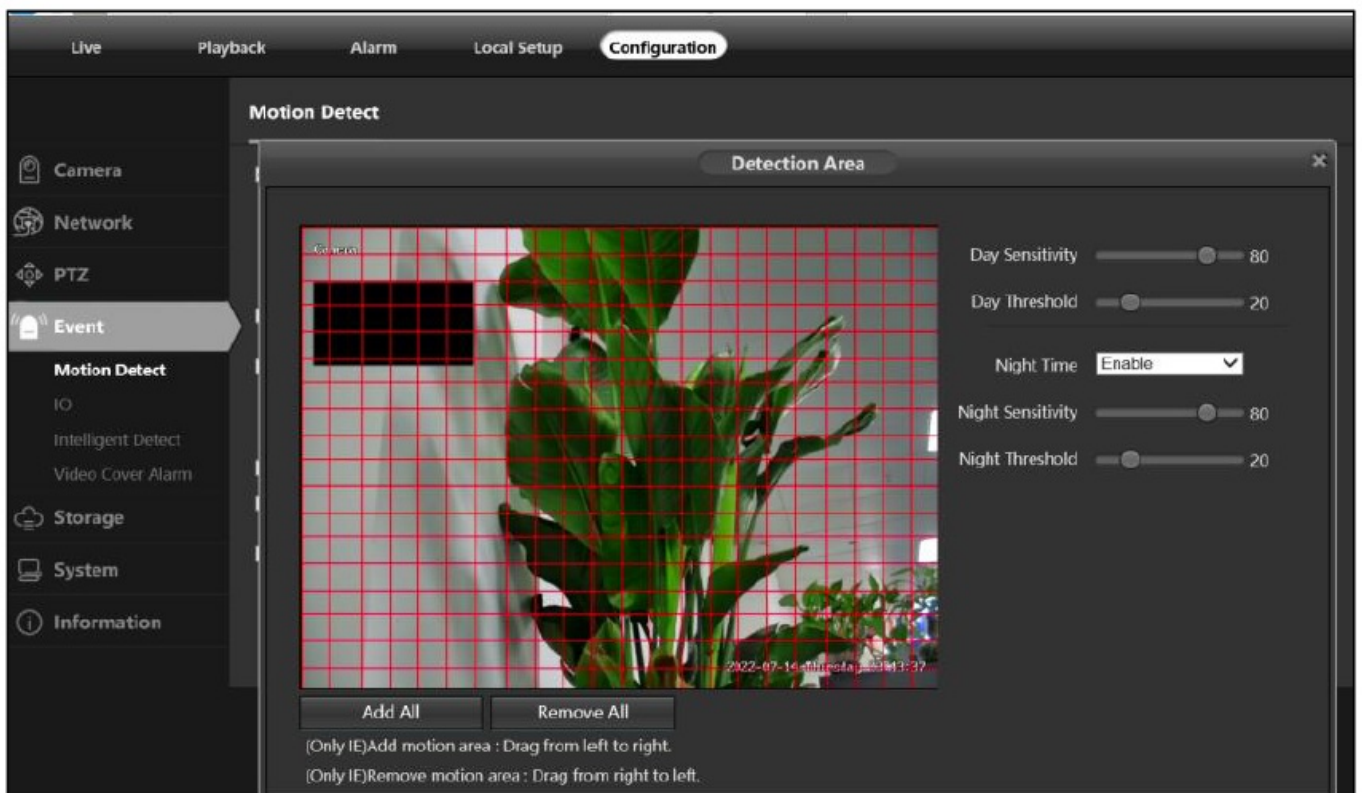

### Enable Intelligent Detect Alarm

Steps: Configuration > Event > Intelligent Detect> Save.

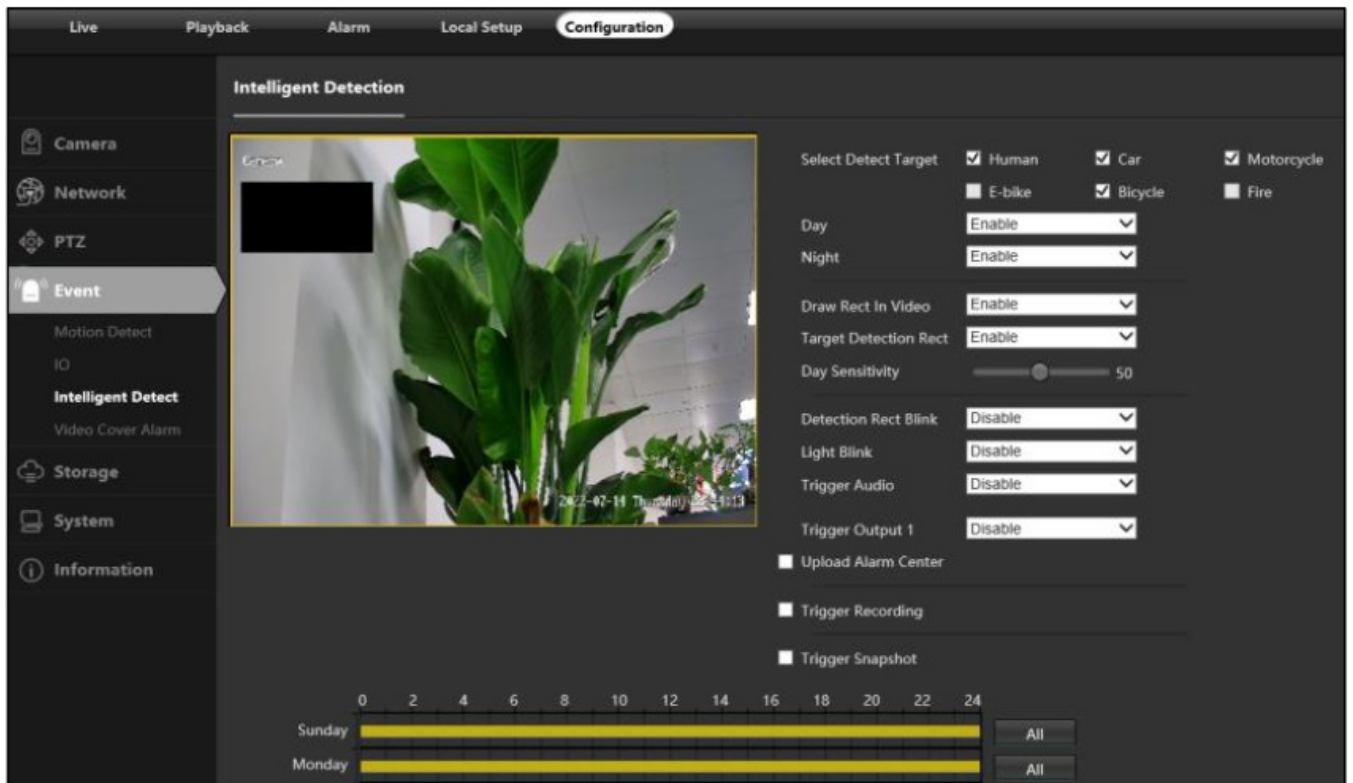


## Intelligent detection Steps

1. Detec Target Choose: supports Human detection and Car detection.
2. Day and Night: Intelligent detection opening time selection.
3. Draw rect in video: Set the size of the detection area.
4. Target detection Rect:Preview Display Detection Target Box.
5. Sensitivity: Range [1-100]. Sensitivity stands for the percentage of the body part of an acceptable target that enters the pre-defined region
6. Trigger Audio:Need to support speaker function can voice alarm prompt.
7. Click Save to Save the setting.

**Note:** Motion detection alarm and Intelligent detection alarm cannot be used at the same time.

## Storage Setting

**Steps:** Configuration > Storage > General Config > Save.

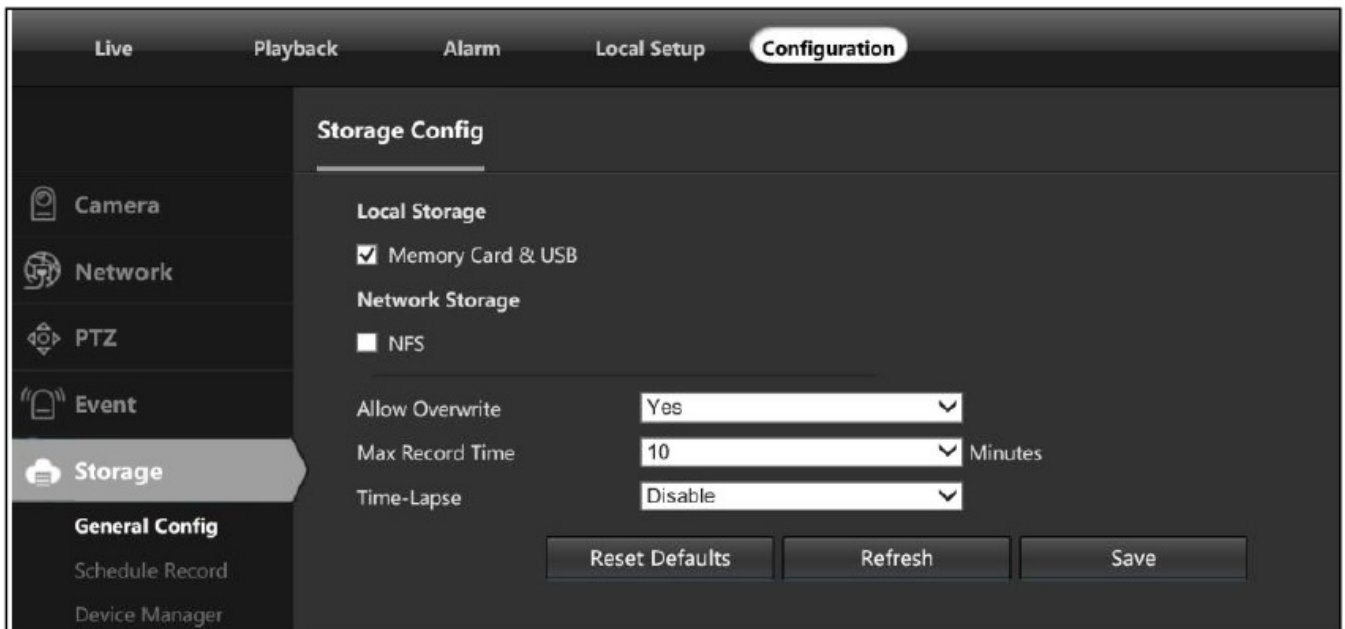

## NFS Steps


1. Select NFS , fill in the correct NFS server IP address and Store Path.
2. Click Save to Save the setting.
3. View Device Manager–Network Storage Device–State is mount

### Tips:

Before saving NFS, please confirm if the NFS server has been opened, and the read and write permissions have been turned on.

## Users Manage Modify Password

**Steps:** Configuration > System > Users Manage > Users > Add User or Modify Password.

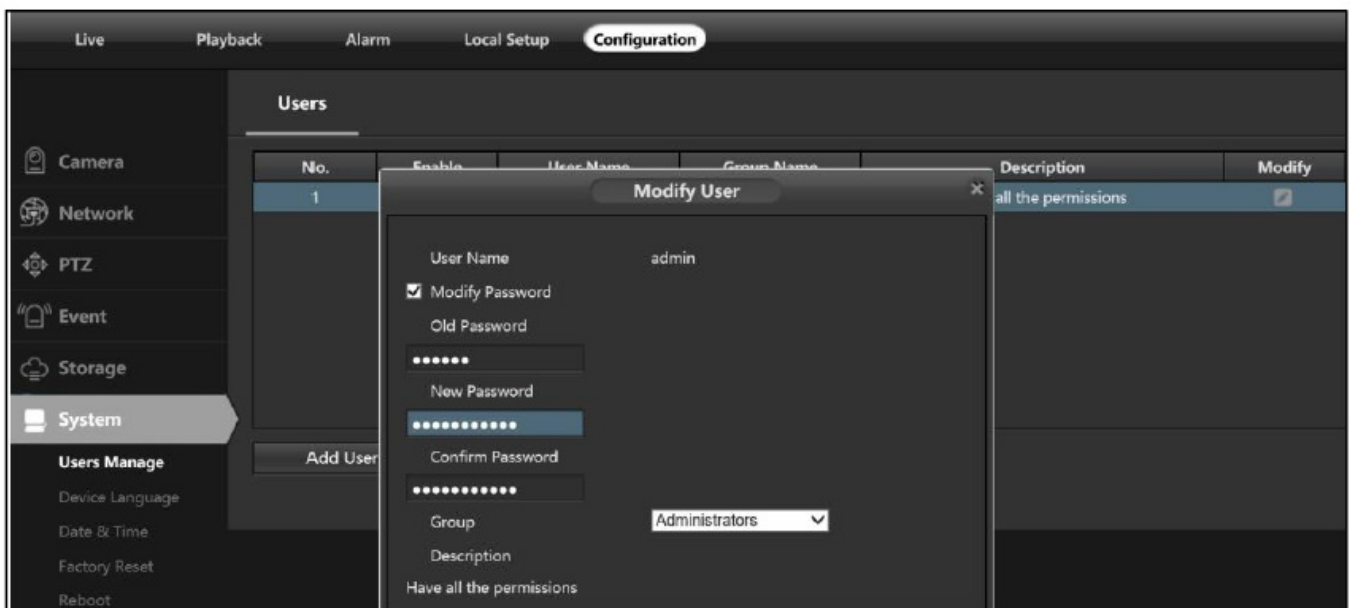

## Device Language






### Modify the camera “Time & Date”

**Steps:** Configuration > System > Time setup.

There are two time update modes available: Manual and NTP.


- Select your Time Zone, and click PC Sync, click Save, You can also set up the DST (Daylight Savings Time) if necessary. (Time and date will reset to 2018-01-01 if camera was restarted)
- If the camera is connected to the Internet, you can set up a NTP server for the camera to sync the time and date automatically.

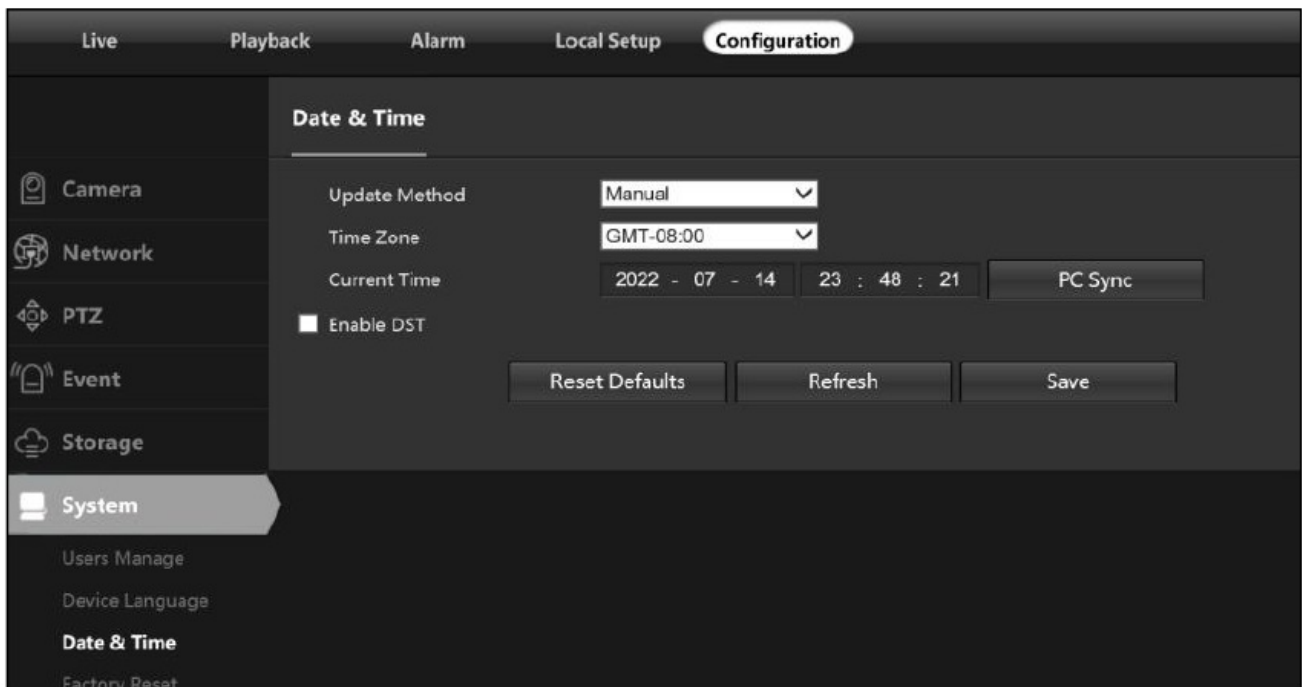

### Factory Reset

**Steps:** Configuration > System > Factory Reset.




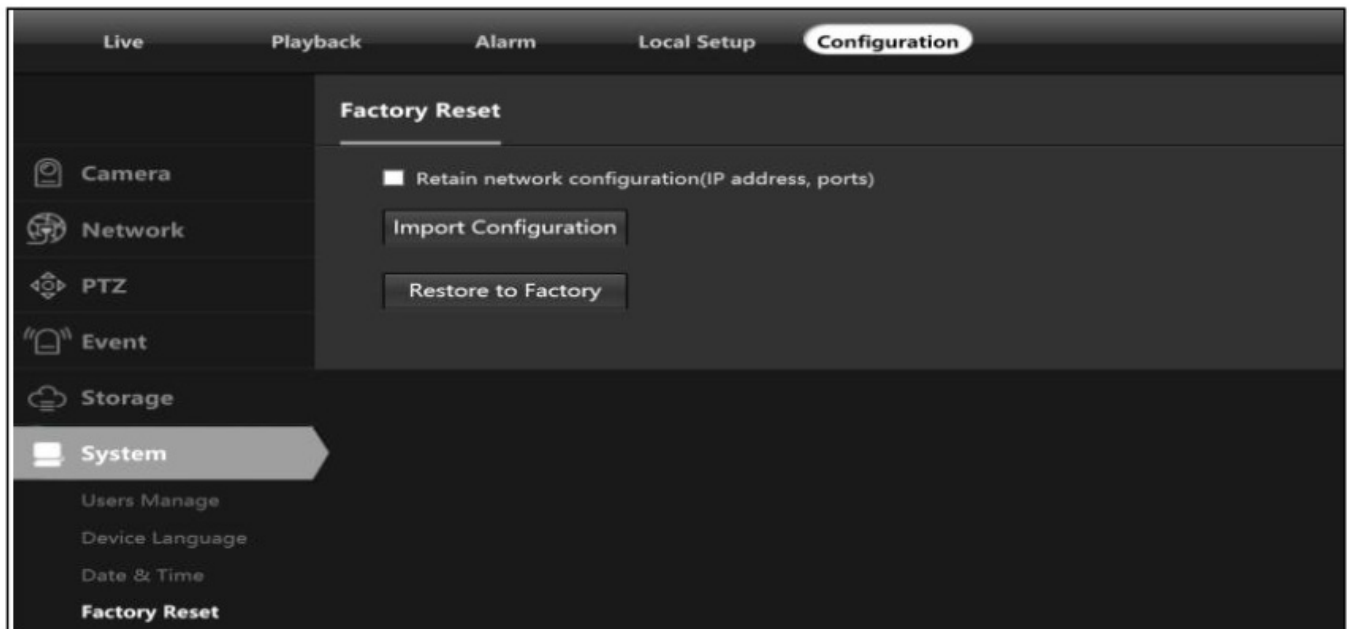

### Version firmware upgrade

**Steps:** Configuration > System > Upgrade > Select Firmware.

Normal state, it is not recommended to upgrade the firmware, please confirm the version with the technician before upgrading.

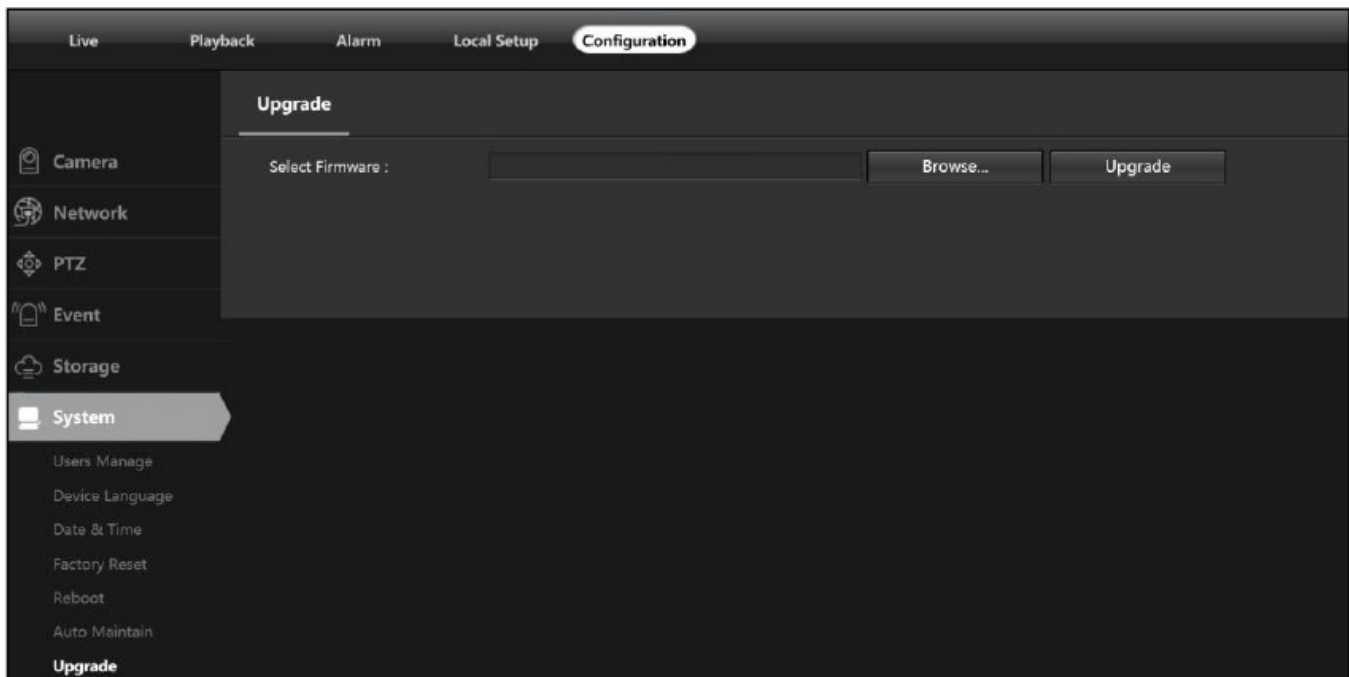


### Auto Tracking(For PTZ-4820-IZ only).

- Enable Auto Tracking.
- **Steps:** Live > Advanced Shortcut > Enable Auto Tracking > Run.

### Disable Auto Tracking.


Steps: Live > Advanced Shortcut > Disable Auto Tracking > Run.

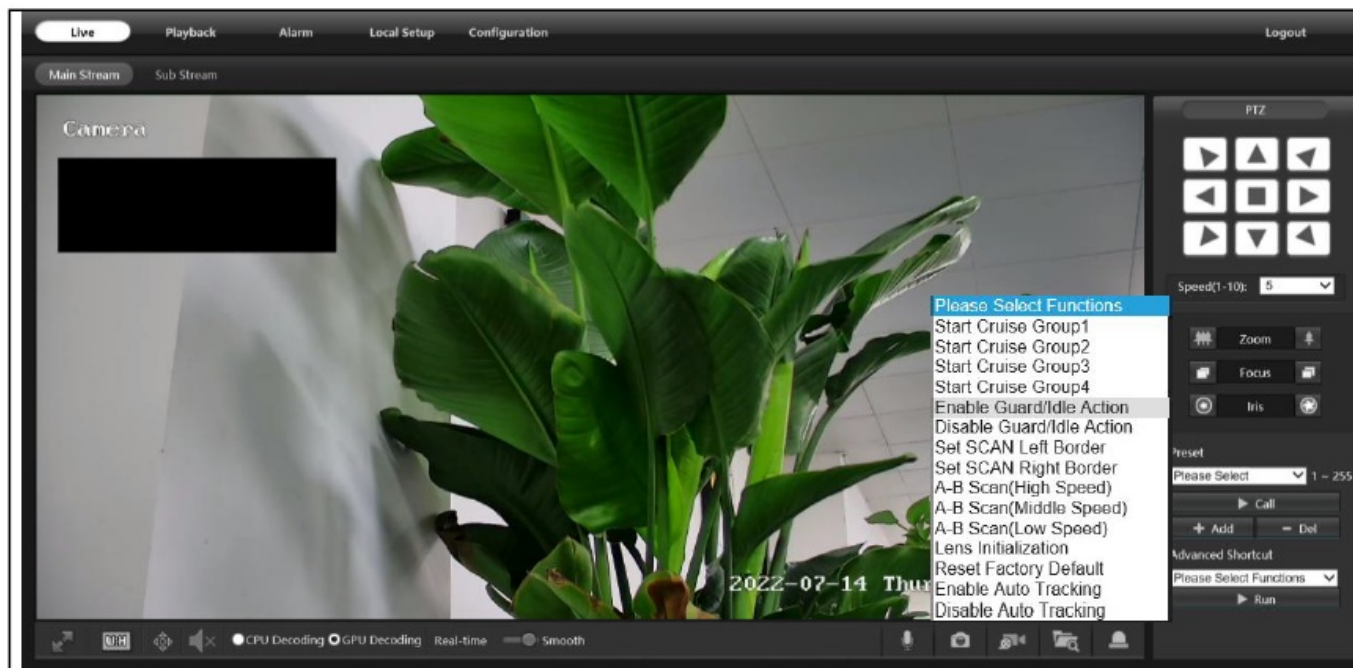


## Camera Connection to NVR

There are two ways that connect to NVR (two types of NVR).

- Connect to POE port NVR.
- Connect to without POE port NVR.

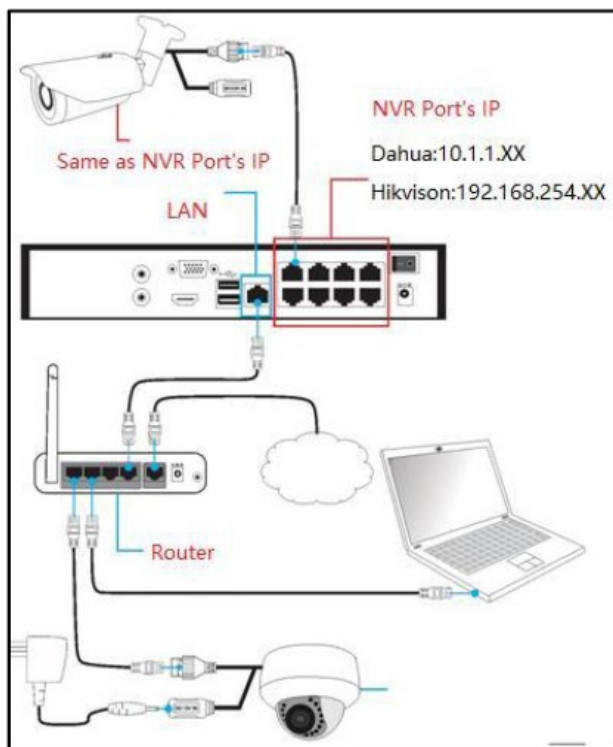

**POE port NVR**

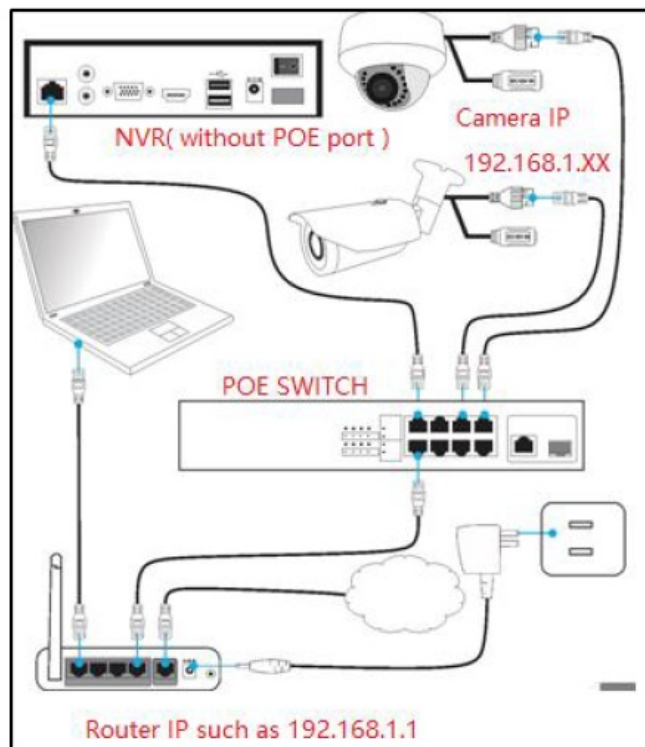

**Without POE port NVR**

The camera can work with Hikvision POE NVR, Plug and Play, besides, the IP camera also supports standard ONVIF protocol, which can be added to third-party video recorder easily with ONVIF.

**Note:**

1. Before connecting cameras to NVR that has POE switch ,make sure the NVR and cameras have valid IP scheme that matchs each other.( e.g.: Dahua NVR POE Port's IP Network Segment is 10.1.1.XX, so the camera IP must be 10.1.1.XX)
2. Before connecting cameras to NVR that has no POE switch, make sure the NVR , cameras and the POE switch router have valid IP scheme that matchs each other.( e.g.: POE switch router router's IP is 192.168.1.1, so the camera IP must be 192.168.1.XX)
3. Some POE NVR models support plug and play(such as Hikvision POE NVR), if the "Plug & Play"feature is not available or not applicable, please add camera manually.

## Chapter 5 Appendix (PTZ series cameras)

IP PTZ Function	Command	Comments
Start SEQUENCE No.1 (Preset:1-7,5s)	Call 65	Start SEQUENCE
Start SEQUENCE No.2 (Preset:9-16,10s)	Call 66	
Start SEQUENCE No.3 (Preset:17-24,15s)	Call 67	
Start SEQUENCE No.4 (Preset:25-32,20s)	Call 68	
Start SEQUENCE No.5 (Preset:33-40,30s)	Call 69	
Start SEQUENCE No.6 (Preset:41-48,60s)	Call 70	
Start SEQUENCE No.7 (Preset:49-56,90s)	Call 72	
Start SEQUENCE No.8 (Preset:57-64,120s)	Call 73	
Stop / End Set	Call 96	
Start A-B Low Speed SCAN	Call 87	Scan A – B
Start A-B middle Speed SCAN	Call 88	
Start A-B High Speed SCAN	Call 89	
Set SCAN Right Border	Set 93	

Stop / End Set	Call 96	
Set Guard / idle Action	Set 65+ Set pp	pp=1-7, Preset pp=11-18, Sequence (120seconds start)
Stop Guard / idle Action	Set 66	
Set Power on Action	Set 68+ Set pp	pp=1-7, Preset pp=11-18, Sequence
Set Power on Action A-B Scan	Set 70	
Stop Power on Action	Set 72	
Erase All Preset	Call 90	
Reload DEFAULT settings	Call 94	
Set Rotate Speed	Set 99+ Set pp	pp=20(Range1-64)
IR Control	Call 74, Open IR Call 76. Close IR Call 75. AUTO IR  Call 97. IR Power Max.  Call 98. IR Power Min.	


## Chapter 6 Frequently Asked Questions

### Why can't I open the default IP address 192.168.1.123 via web browser ?

The default IP address may not match your LAN's IP scheme. Check your computer's IP address before accessing the camera. If the IP address does not match the 192.168.1.x scheme, please install the IP search tool from the download website to modify the camera's IP address. Make sure the IP address of the camera matches the LAN IP scheme. For example, if the your LAN is 192.168.0.xxx, then set the IP camera to 192.168.0.123 and so on.

### How to reset the password ?

The default Username: admin, Password: 123456. If you lost the password or want to reset the camera's setting, please install the search tool to search the camera IP and click Batch Reset button.

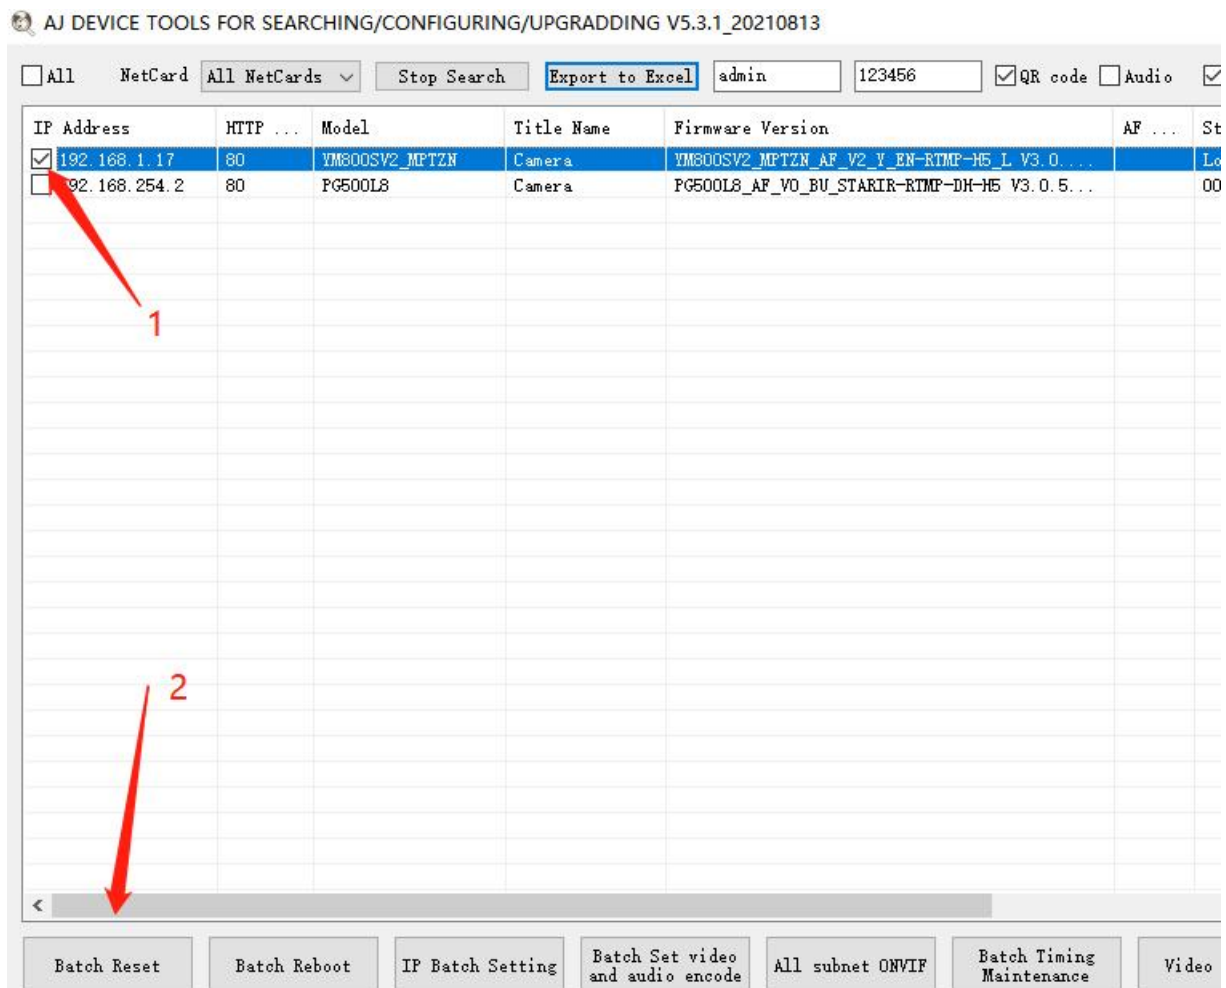

## How to upgrade the IP camera ?

1. Ask the supplier for the suitable firmware.
2. You can use the web browser, search tool, or PC client to upgrade the camera.
3. Go to the Configuration > System > update, click browse and select the firmware, then click Upgrade button and wait for the operation to complete.

## How to fetch the RTSP video stream and http snapshot ?

1. Main Stream: rtsp://admin:123456@IP address/stream0
2. Sub Stream: rtsp://admin:123456@IP address/stream1


## Why does the NVR not show image after adding your IP camera ?

1. Make sure you selected the right protocol and enter the correct username and password when adding the cameras.
2. Make sure the NVR and IP camera are the same IP scheme. (eg. NVR:192.168.1.x, and IP camera:192.168.1.y).
3. Try changing the camera encode mode to H.264 if the NVR can't support H.265. (Configuration -> Camera -> Video > Encode mode: H.264)

## How to make the NVR record in motion detection mode ?

1. Enable the IP camera motion detection function via web browser.
  2. Add the IP camera via ONVIF protocol.
  3. Change the NVR record mode to Motion Detection mode.
  4. Check the NVR screen motion detection icon and try playback (Please refer to your NVR's manual for NVR's motion record option.)
- 

## Documents / Resources

	<p><b><a href="#">HIKVISION 6MP Poe Security Camera System</a></b> [pdf] User Guide 6MP Poe Security Camera System, 6MP, Poe Security Camera System, Security Camera System, Camera System, System</p>
---	--

## References

- [ourdownload.store/](http://ourdownload.store/)
- [Danale](#)
- [VIKYLIN Download | Security Camera Firmware | CCTV System](#)
- [User Manual](#)