



# HK INSTRUMENTS CDT2000 Series Carbon Dioxide Transmitters Instruction Manual

[Home](#) » [HK INSTRUMENTS](#) » HK INSTRUMENTS CDT2000 Series Carbon Dioxide Transmitters Instruction Manual 

## HK INSTRUMENTS

### Contents

- [1 HK INSTRUMENTS CDT2000 Series Carbon Dioxide Transmitters](#)
- [2 INTRODUCTION](#)
- [3 APPLICATIONS](#)
- [4 SPECIFICATIONS](#)
  - [4.1 Performance](#)
  - [4.2 Technical Specifications](#)
  - [4.3 Physical](#)
  - [4.4 Electrical](#)
- [5 Conformance](#)
- [6 SCHEMATICS](#)
- [7 DIMENSIONAL DRAWINGS](#)
- [8 INSTALLATION](#)
- [9 RECYCLING/DISPOSAL](#)
- [10 WARRANTY POLICY](#)
- [11 Documents / Resources](#)
- [12 Related Posts](#)

## HK INSTRUMENTS CDT2000 Series Carbon Dioxide Transmitters



### INTRODUCTION

- Thank you for choosing an HK Instruments CDT2000 series carbon dioxide transmitter. The CDT2000 series is intended for use in commercial environments in HVAC/R applications.
- The CDT2000 series measures carbon dioxide (CO<sub>2</sub>), utilizing the industry-standard NDIR measurement principle, and temperature (T). Optional relative humidity (RH) measurement is also available in the same device. Each measurement parameter (CO<sub>2</sub>, RH, T) has a separate field configurable output.
- The CDT2000 series carbon dioxide transmitters are available with a Modbus configuration, relay, and touchscreen display.
- The CDT2000 series transmitters calibrate themselves automatically using ABCTM logic. The ABCTM logic requires that the space in which the transmitter is used needs to be unoccupied for four hours per day so that the indoor CO<sub>2</sub> concentration drops to the outside level. CDT2000-DC is a dual-channel model with a measuring channel and a reference channel that makes a continuous comparison and the necessary adjustment accordingly. CDT2000-DC is also suitable for buildings that are continuously occupied.

### APPLICATIONS

CDT series devices are commonly used to monitor:

- CO<sub>2</sub> and humidity levels in offices, public spaces, meeting rooms, and classrooms
- CO<sub>2</sub> levels of return air in ventilation systems incoming air and return air humidity levels in a ventilation system
- humidity in various industrial applications temperatures in the HVAC/R environment
- CDT2000-DC series devices can also be used in applications where there is a constant source of carbon dioxide present (for example hospitals and greenhouses)

### SPECIFICATIONS

#### Performance

**Measurement ranges:**

CO<sub>2</sub>: 400–2000 ppm

- **Temperature:** 0...50 °C
- **Relative humidity:** 0–100 %

**Accuracy:**

- **CO<sub>2</sub>:** ±40 ppm + 2 % of reading,
- **DC model:** 75 ppm or 10 % of reading (whichever is greater)
- **Temperature:** <0.5 °C
- **Relative humidity:** ±2...3 % at 0...50 °C and 10–90 % RH Total error band includes accuracy, hysteresis, and temperature effect over 5...50 °C and 10–90 % rH.

**Technical Specifications****Media compatibility:**

- Dry air or non-aggressive gases
- **Measuring units:** ppm, °C, and % RH

**Measuring element:**

CO<sub>2</sub>: Non-dispersive infrared (NDIR)

- **Temperature:** Pt1000 (models without rH-measurement Integrated (models with rH-measurement)
- **Relative humidity:** Thermoset polymer capacitive sensing element
- **Calibration:** Automatic self-calibration ABC Logic™ or continuous comparison (DC)

**Environment:**

- **Operating temperature:** 0...50 °C
- **Storage temperature:** -20...70 °C
- **Humidity:** 0 to 95 % RH, non condensing

**Physical**

- **Dimensions:**
  - **Case:** 99 x 90 x 32 mm
- **Weight:** 150 g
- **Mounting:** 3 screw holes slotted, 3.8 mm
- **Materials:**
  - **Case:** ABS
- **Protection standard:** IP20
- **Display (Optional)**
  - **Touchscreen Size:** 77.4 x 52.4 mm

## Electrical connections:

- **Power supply:** 5-screw terminal block (24 V, GND, CO2, rH, T) 0.2–1.5 mm<sup>2</sup> (12–24 AWG)
- **Relay out:** 3-screw terminal block (NC, COM, NO) 0.2–1.5 mm<sup>2</sup> (12–24 AWG)

## Electrical

**Input:** 24 VAC or VDC,  $\pm 10\%$  Current consumption: max 90 mA (at 24 V) + 10 mA for each voltage output or 20 mA for each current output

### CO2 output signal:

- 0–10 V,  $R > 1\text{ k}\Omega$
- 2–10 V,  $R > 1\text{ k}\Omega$  (optional voltage output, display required)
- 4–20 mA,  $R < 500\text{ }\Omega$

### Temperature output signal:

- 0–10 V,  $R > 1\text{ k}\Omega$
- 2–10 V,  $R > 1\text{ k}\Omega$  (optional voltage output, display required)
- 4–20 mA,  $R < 500\text{ }\Omega$

### Relative humidity output signal:

- 0–10 V,  $R > 1\text{ k}\Omega$
- 2–10 V,  $R > 1\text{ k}\Omega$  (optional voltage output, display required)
- 4–20 mA,  $R < 500\text{ }\Omega$

### Relay out:

SPDT Relay, 250 VAC / 30 VDC / 6 A Adjustable switching point and hysteresis


## Conformance

Meets requirements for CE marking:


- EMC Directive 2014/30/EU
- RoHS Directive 2011/65/EU
- LVD Directive 2014/35/EU
- WEEE Directive 2012/19/EU

**COMPANY WITH MANAGEMENT SYSTEM CERTIFIED BY DNV GL = ISO 9001 = ISO 14001 =**

## SCHEMATICS

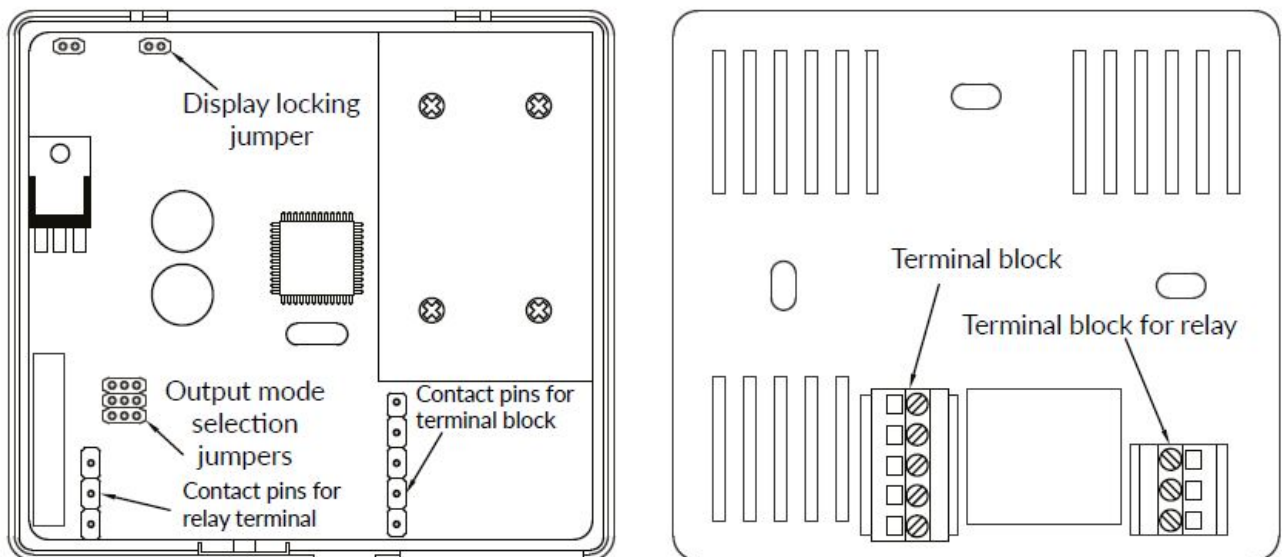

## DIMENSIONAL DRAWINGS

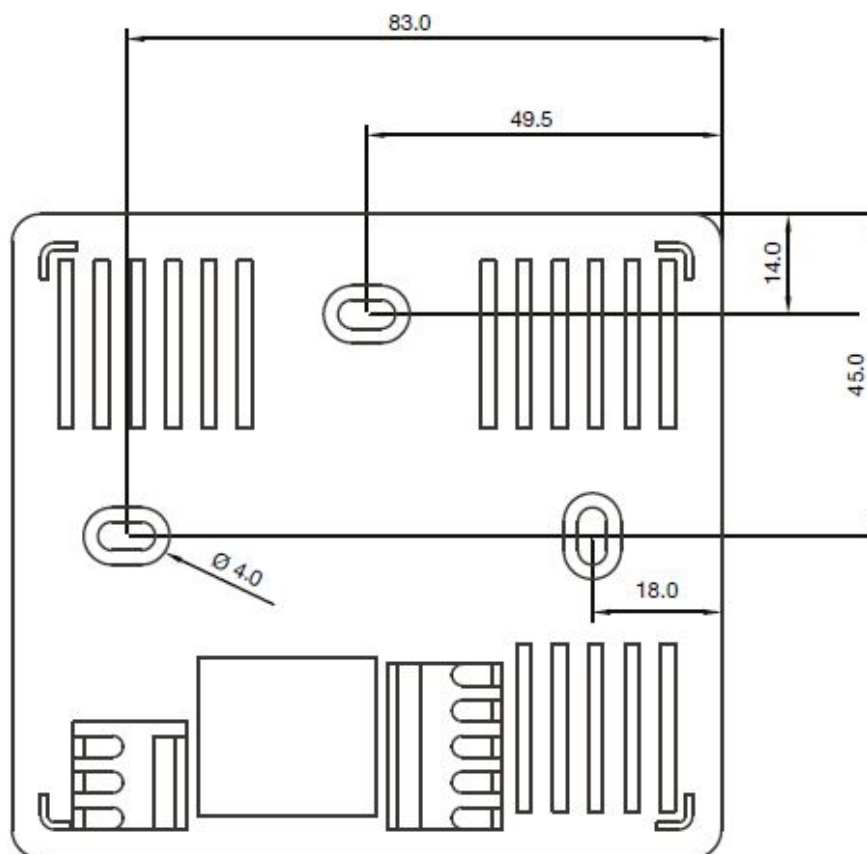

## INSTALLATION

1. Mount the device in the desired location (see step 1).
2. Route the cables and connect the wires (see step 2).
3. The device is now ready for configuration.

**WARNING!** Apply power only after the device is properly wired.


## **STEP 1: MOUNTING THE DEVICE**

1. Select a mounting location on the wall at 1.2–1.8 m (4–6 ft) above the floor and at least 50 cm (20 in) from the adjacent wall. Do not block device air vents from any direction and leave at least 20 cm (8 in) gap to other devices. Locate the unit in an area with good ventilation and an average temperature, where it will be responsive to changes to the room conditions. The CDT should be mounted on a flat surface.


Do not locate the CDT where it can be affected by:

- Direct sunlight
  - Drafts or dead areas behind doors
  - Radiant heat from appliances
  - Concealed pipes or chimneys
  - Outside walls or unheated/uncooled areas
2. Use the device as a template and mark the screw holes.
  3. Mount the wall plate with screws.
    - Incorrect installation may cause a shift in temperature output
    - Secure the lid with a locking screw, if the relay is connected to the mains power.

**Figure 1a - Surface mounting**

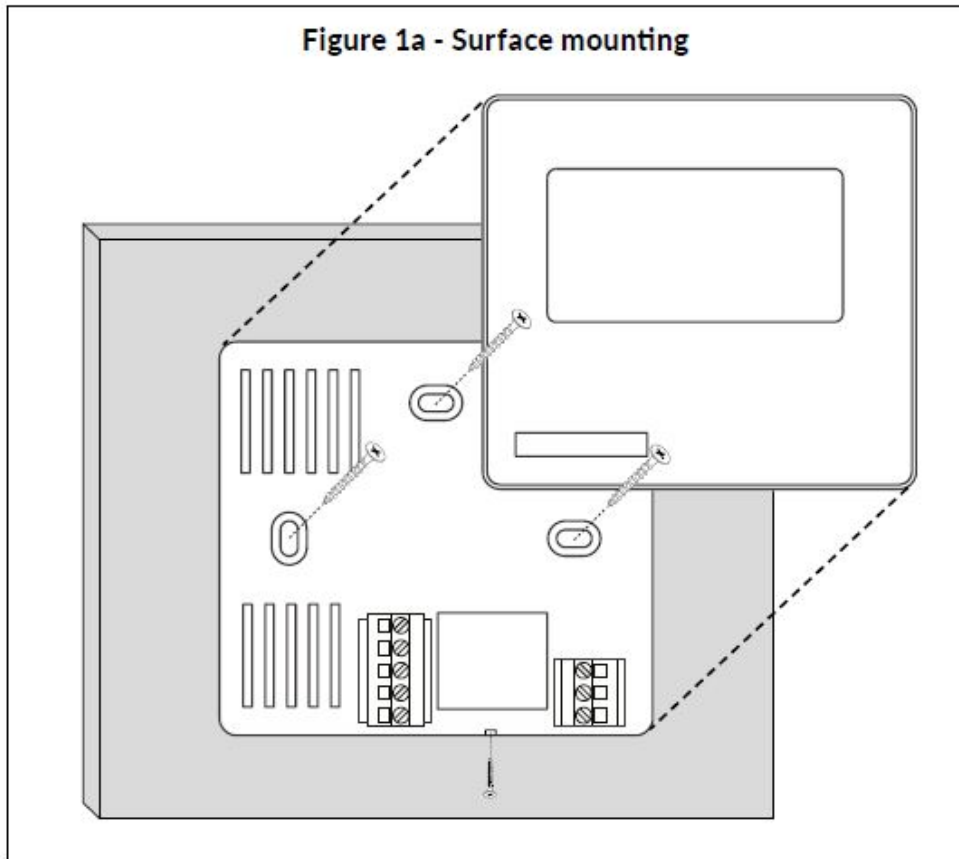

**Figure 1b - Mounting orientation**

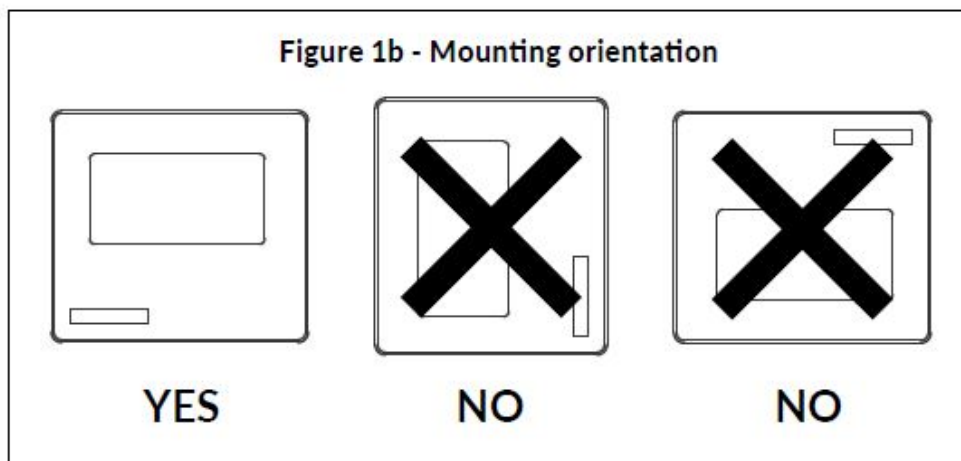

## **STEP 2: WIRING DIAGRAMS**


### **CAUTION!**

- For CE compliance, a properly grounded shielding cable is required.
- Use copper wire only. Insulate or wire nut all unused leads.
- Supply a separate cable for relay and signal out when using line voltage to power the relay.
- Any wiring may carry the full operating line voltage current based on field installation. The cover locking screw must be installed if the line voltage is supplied to the relay.
- Care should be used to avoid electrostatic discharge to the device.
- This unit has configuration jumpers. You may need to reconfigure this device for your application.


1. Route the cables through the square opening in the back plate or for surface wiring select a knockout on the top or bottom of the wall plate, as shown in Figure 2a.

2. Connect the wires as shown in Figures 2b and 2c.


**Figure 2a - Routing the cables**

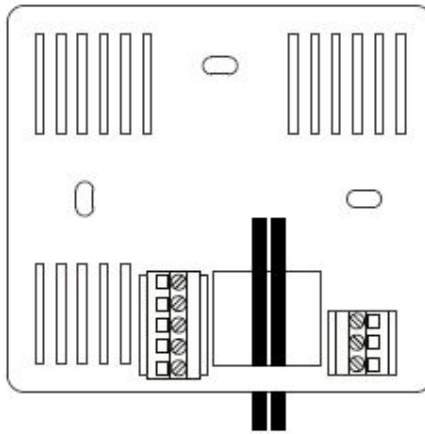

Wires can be routed through the square opening in the back plate

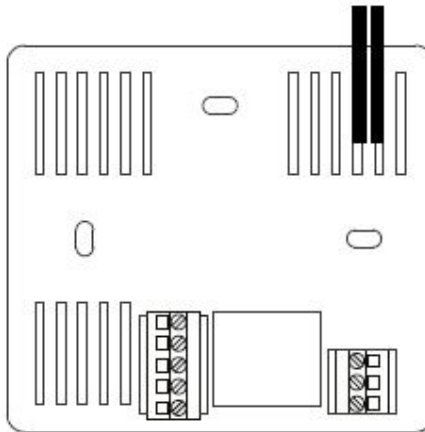


Wires can be routed through the top knockouts

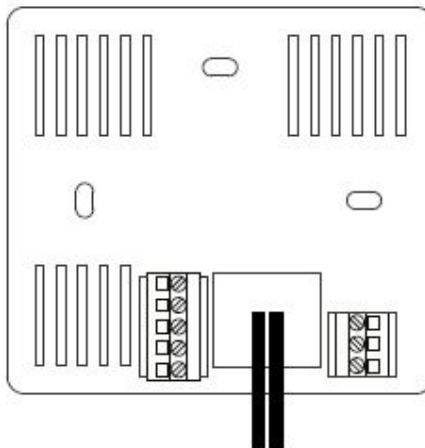

Wires can be routed through the bottom knockouts




**Figure 2b - Wiring diagram: Power input & signal output**

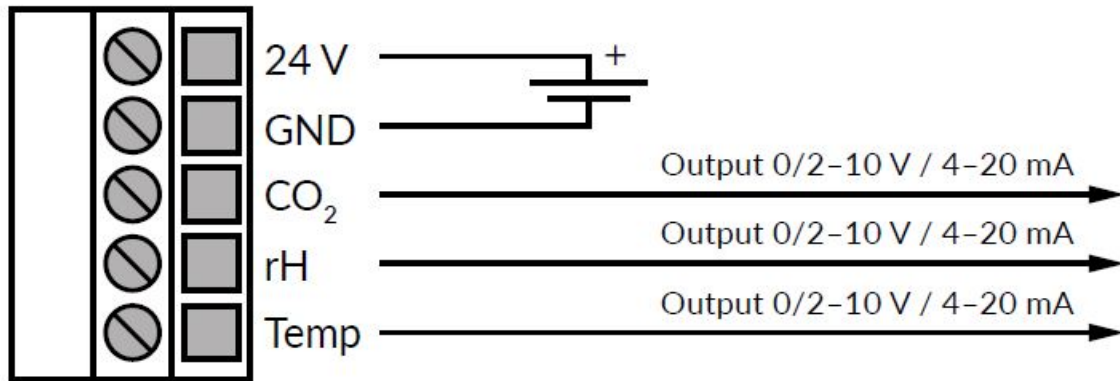


**NOTE!** When using long connection wires it may be necessary to use a separate GND wire for voltage output current to prevent measurement distortion. The need for an extra GND wire depends on the cross section and length of the used connection wires. If long and/or small cross-section wires are used, supply current and wire resistance may generate a voltage drop in the common GND wire resulting in a distorted output measurement.

**Figure 2c - Wiring diagram: Extra GND wire**

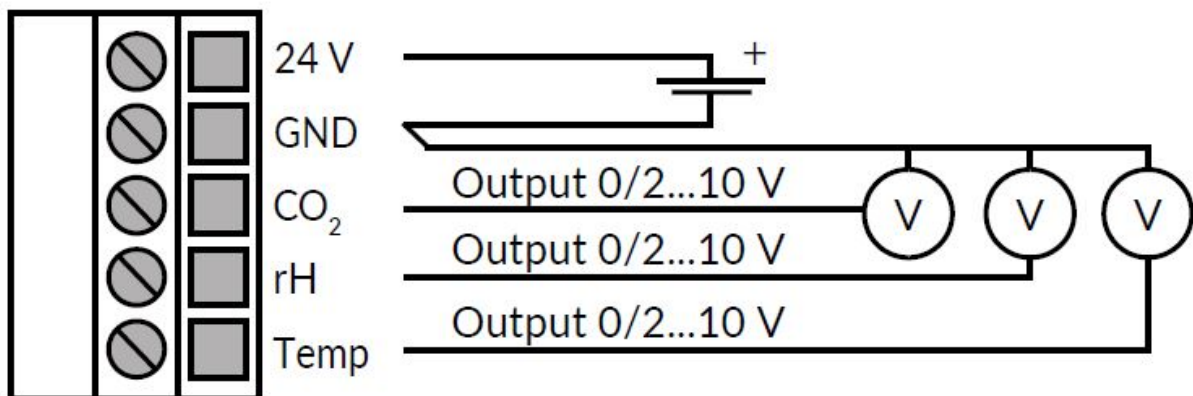

**Figure 2d - Wiring diagram: Relay**

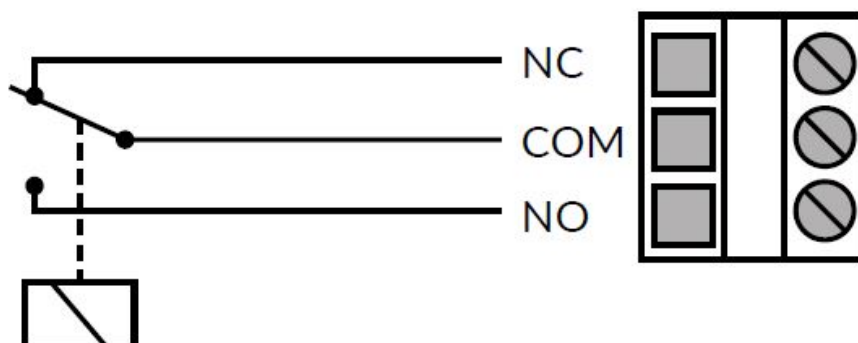


### STEP 3: CONFIGURATION

Configuration of the CDT series device consists of:

1. Configuring the jumpers (see step 4).
2. Configuration menu options.

(Display- and Modbus versions only. See the user manual for further details.)

### STEP 4: Jumper settings

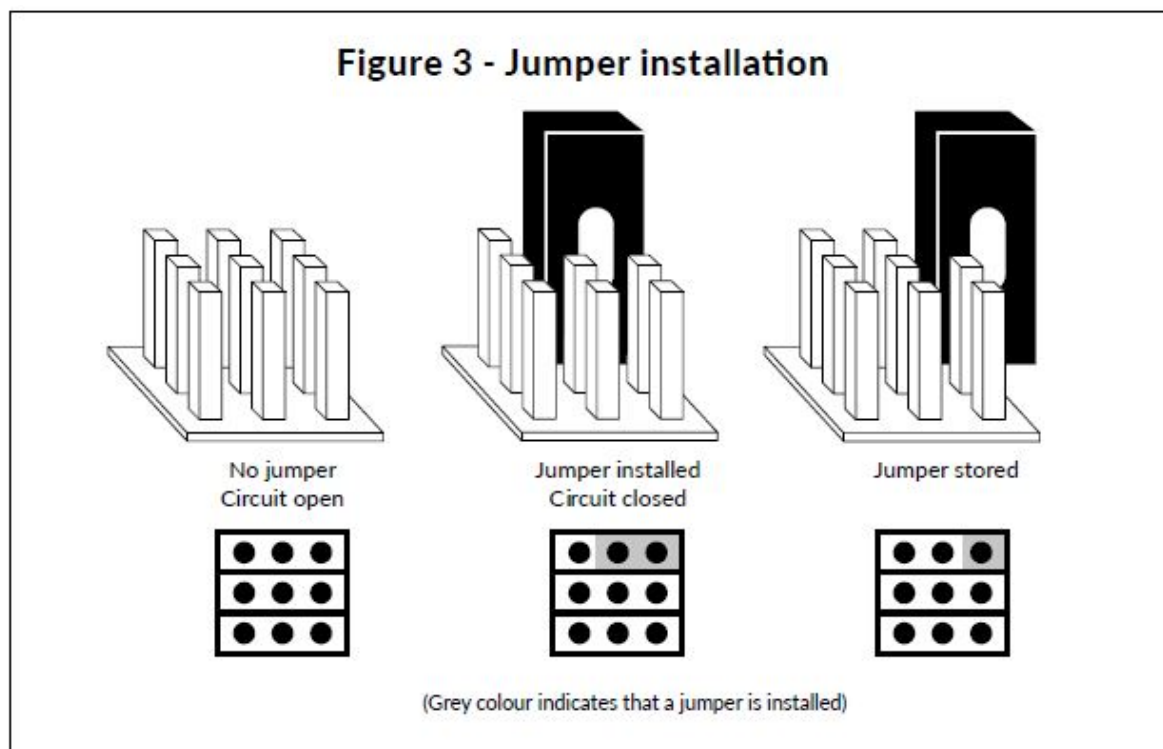


1. Configuration of the output modes of:

- Carbon dioxide (CO<sub>2</sub>)
- Relative humidity (RH)
- Temperature (Temp)

Select the output mode, current (4–20 mA) or voltage (0–10 V), by installing jumpers as shown in Figure 4. Each output are configured separately. To select 2–10 V output mode on a display version of the device: First, select 0–10 V output by jumper(s), then change the voltage (V) output from 0–10 V to 2–10 V via the configuration menu. Please see the user manual for more details.


**Figure 4**

Jumper installed to the left side pins:  
0-10 V output selected

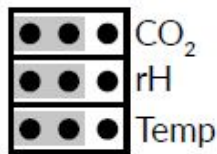


0-10 V 4-20 mA

Jumper installed to the right side pins:  
4-20 mA output selected

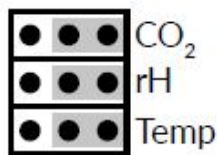

0-10 V 4-20 mA

First jumper installed to the right side pins:  
4-20 mA output selected for CO<sub>2</sub>  
Second and third jumper installed to the left side pins  
0-10 V outputs selected for relative humidity & temperature

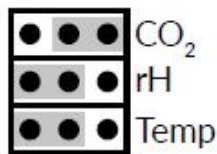

0-10 V 4-20 mA

## 2. Locking the display:

Install the jumper to lock the display to prevent access to the configuration menu after installation is completed (see the schematics for the location of the pins).

## RECYCLING/DISPOSAL




The parts left over from installation should be recycled according to your local instructions. Decommissioned devices should be taken to a recycling site that specializes in electronic waste.

## WARRANTY POLICY

The seller is obligated to provide a warranty of five years for the delivered goods regarding material and manufacturing. The warranty period is considered to start on the delivery date of the product. If a defect in raw materials or a production flaw is found, the seller is obligated, when the product is sent to the seller without delay or before the expiration of the warranty, to amend the mistake at his/her discretion either by repairing the defective product or by delivering free of charge to the buy-er a new flawless product and sending it to the buyer. Delivery costs for the repair under warranty will be paid by the buyer and the return costs by the seller. The warranty does not comprise damages caused by accident, lightening, flood or another natural phenomenon, normal wear and tear, improper or careless handling, abnormal use, overloading, improper storage, incorrect care or reconstruction, or changes and install-ation work not done by the seller or his/her authorized representative. The

selection of materials for devices prone to corrosion is the buyer's responsibility unless otherwise is legally agreed upon. Should the manufacturer alter the structure of the device, the seller is not obligated to make comparable changes to devices already purchased. Appealing for a warranty requires that the buyer has correctly fulfilled his/her duties arising from the delivery and stated in the contract. The seller will give a new warranty for goods that have been replaced or repaired within the warranty, however only to the expiration of the original product's warranty time. The warranty includes the repair of a defective part or device, or if needed, a new part or device, but not installation or exchange costs. Under no circumstance is the seller liable for damages compensation for indirect damage.

Documents / Resources

	<a href="#">HK INSTRUMENTS CDT2000 Series Carbon Dioxide Transmitters</a> [pdf] Instruction Manual CDT2000 Series, Carbon Dioxide Transmitters
	<a href="#">HK INSTRUMENTS CDT2000 Series Carbon Dioxide Transmitters</a> [pdf] Instruction Manual CDT2000 Series Carbon Dioxide Transmitters, CDT2000 Series, Carbon Dioxide Transmitters
	<a href="#">HK Instruments CDT2000 Series Carbon Dioxide Transmitters</a> [pdf] Instruction Manual CDT2000 Series Carbon Dioxide Transmitters, CDT2000 Series, Carbon Dioxide Transmitters, Dioxide Transmitters, Transmitters