



HOLLYLAND C1 Pro Hub Solidcom Intercom Headset System User Manual

[Home](#) » [HOLLYLAND](#) » HOLLYLAND C1 Pro Hub Solidcom Intercom Headset System User Manual 


HOLLYLAND C1 Pro Hub Solidcom Intercom Headset System




Contents

- [1 Interfaces](#)
- [2 Operation Guide](#)
 - [2.1 Hub Display Description](#)
 - [2.2 Hub Menu Description](#)
 - [2.3 Performing Group Settings via a Computer](#)
 - [2.4 Group A & B Buttons on Headsets](#)
 - [2.5 Cascaded Connection](#)
 - [2.6 Hub Display](#)
 - [2.7 Master/Slave Mode Settings](#)
 - [2.8 Hub Display](#)
 - [2.9 Three-System Cascaded Connection via the IP Network](#)
- [3 Parameters](#)
- [4 Safety Precautions](#)
- [5 Support](#)
 - [5.1 Statement](#)
 - [5.2 Trademark Statement](#)
- [6 FCC Requirement](#)
- [7 Documents / Resources](#)
- [8 Related Posts](#)


Interfaces

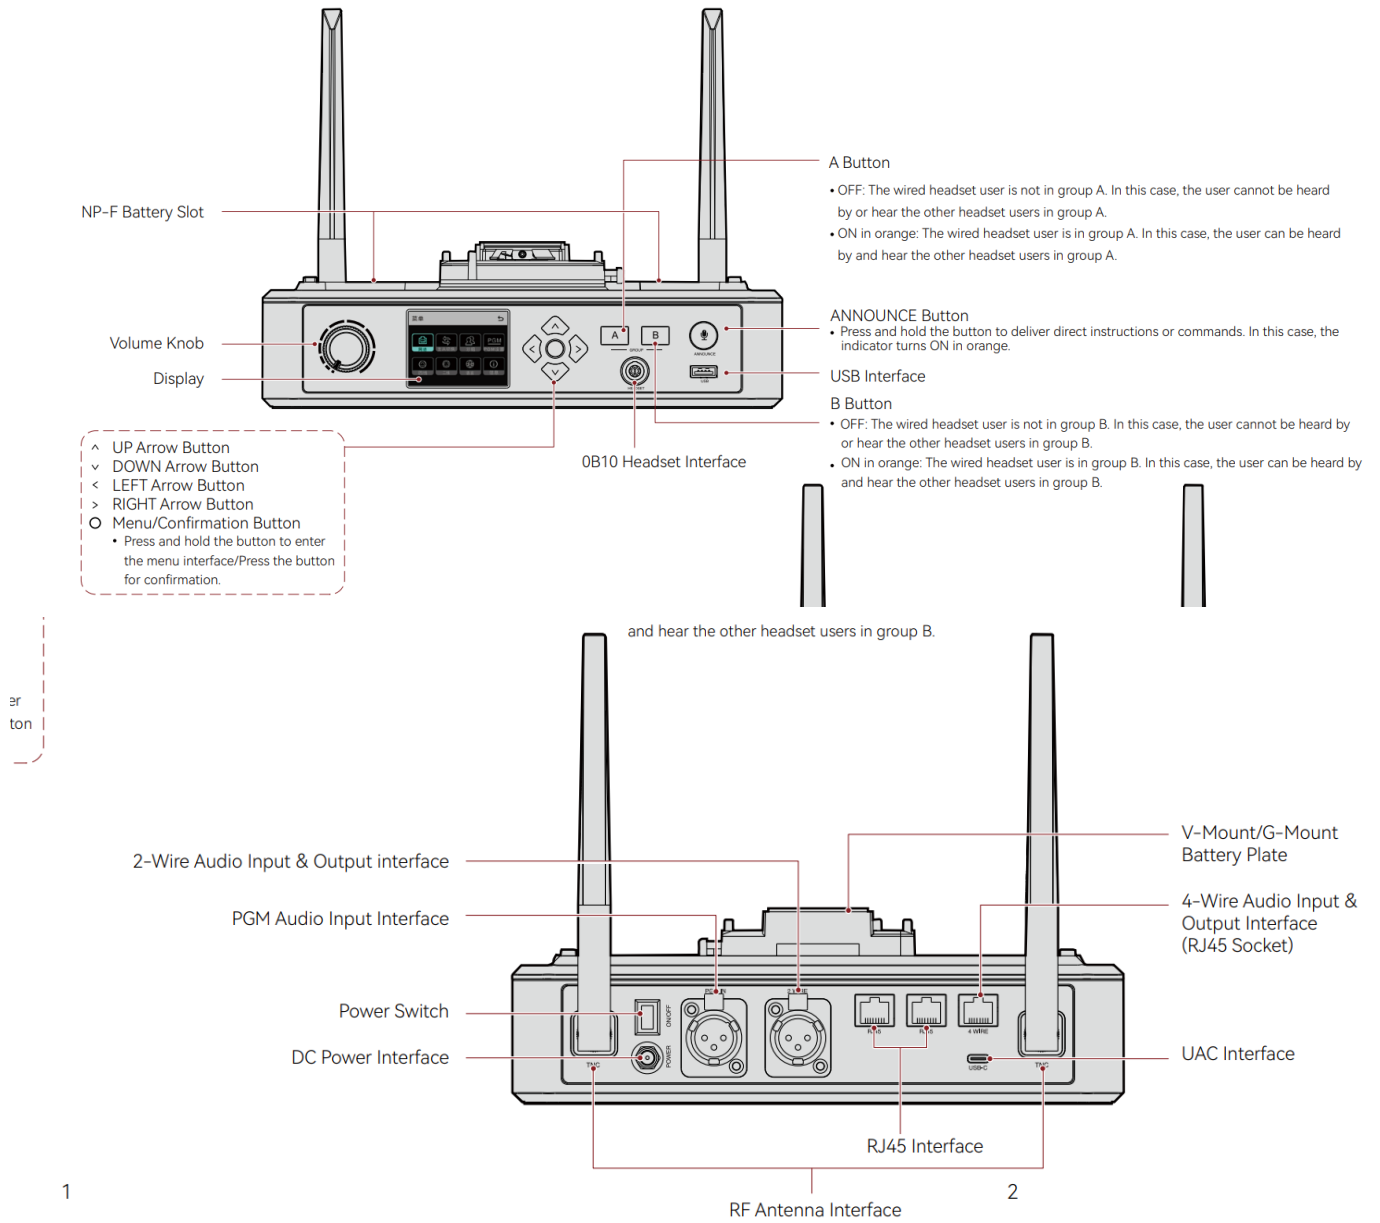


OB10 Wired Headset Interface

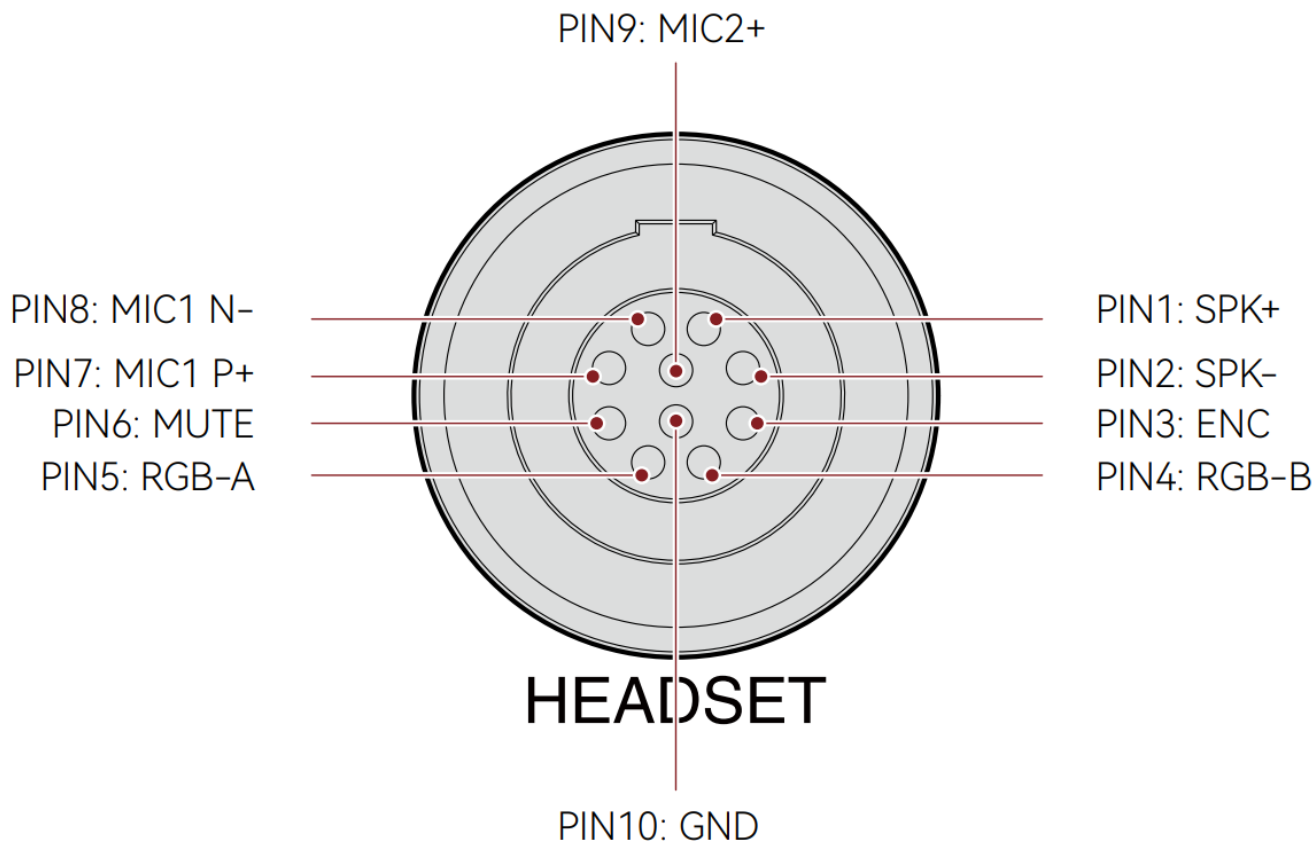


2-Wire Audio Input & Output Interface

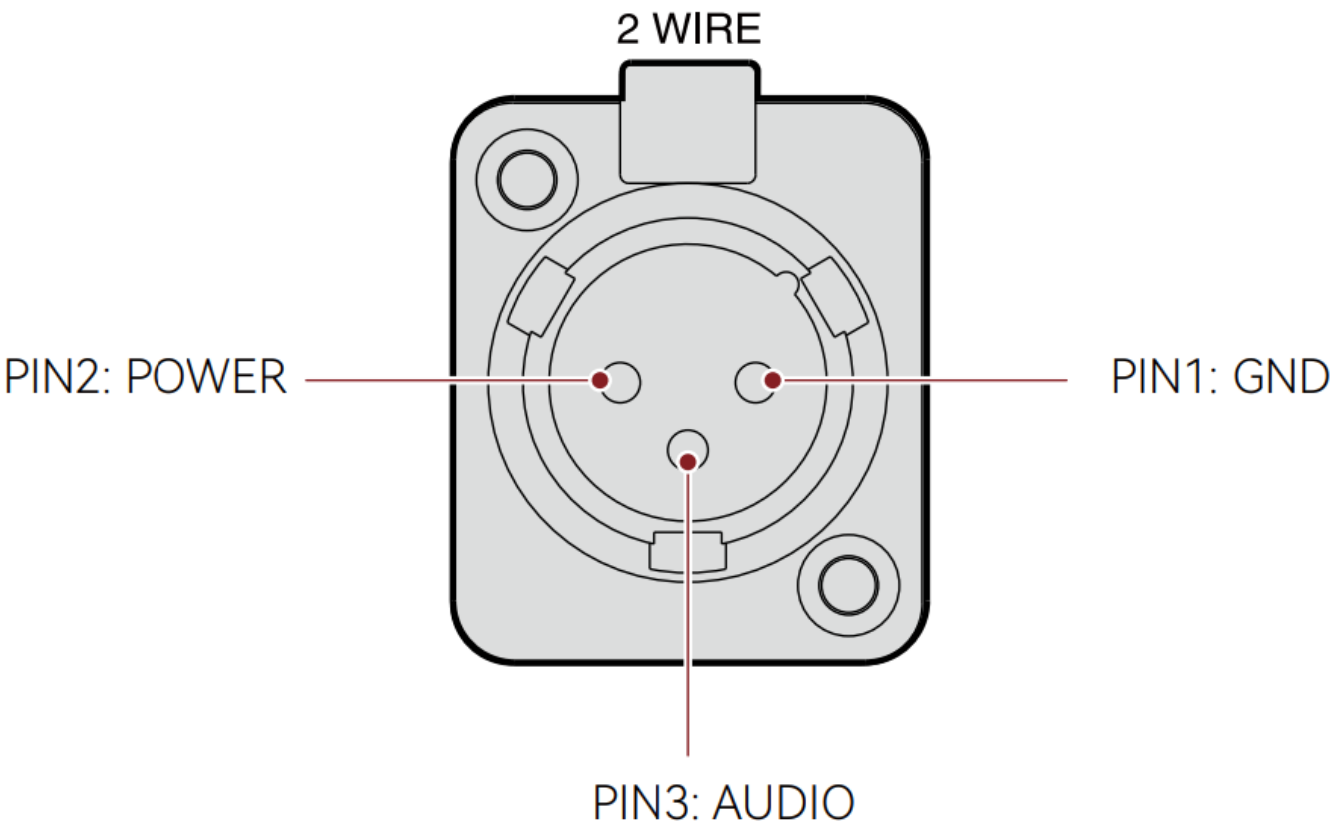

PGM Audio Input Interface

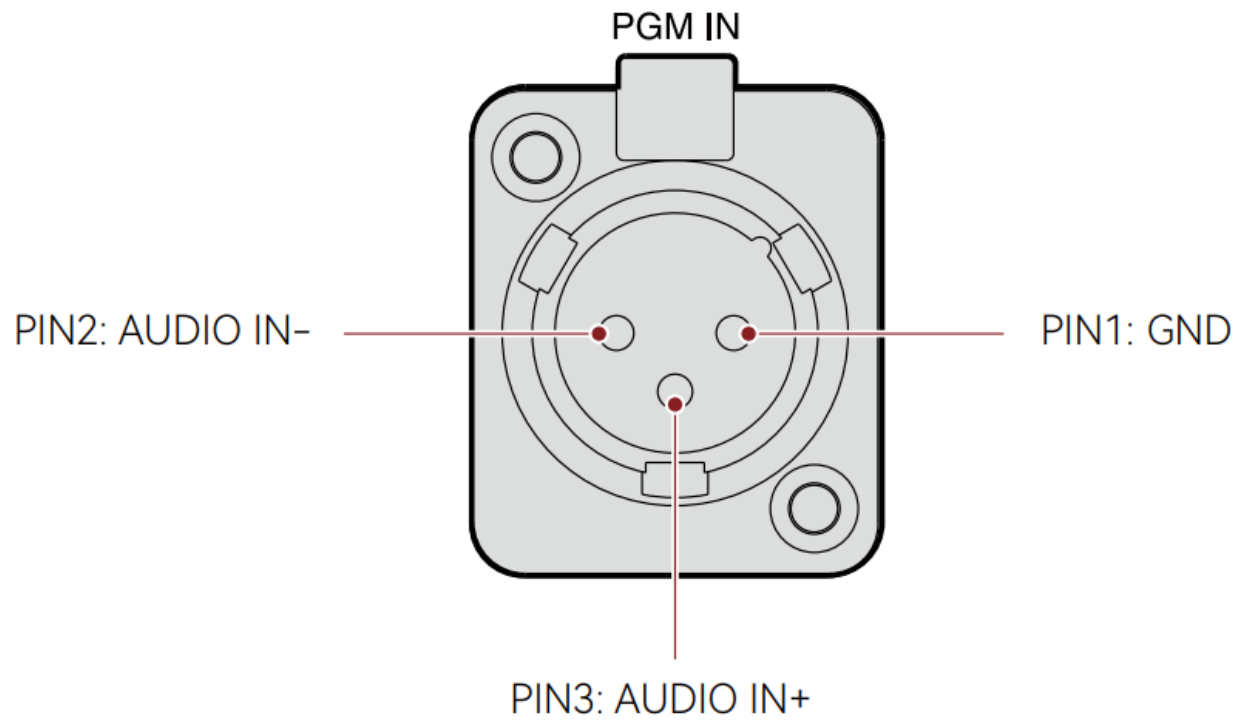


4-Wire Audio Input & Output Interface

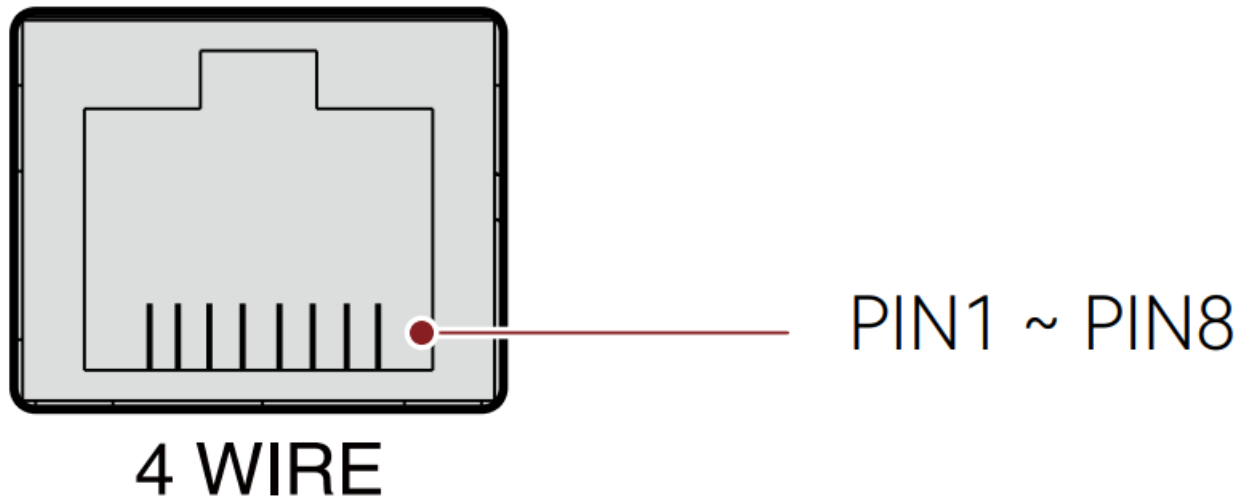

Standard Line Sequence			
PIN1	GND	PIN5	AUDIO OUT-
PIN2	GND	PIN6	AUDIO IN-
PIN3	AUDIO IN+	PIN7	GND
PIN4	AUDIO OUT+	PIN8	GND

Cross Line Sequence			
PIN1	GND	PIN5	AUDIO IN-
PIN2	GND	PIN6	AUDIO OUT-
PIN3	AUDIO OUT+	PIN7	GND
PIN4	AUDIO IN+	PIN8	GND


RJ451/RJ452 Interface

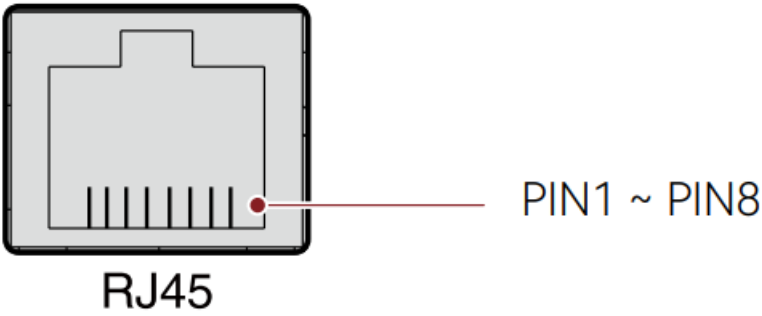

Standard Line Sequence			
PIN1	Tranceive Data+	PIN5	Not connected
PIN2	Tranceive Data-	PIN6	Receive Data-
PIN3	Receive Data+	PIN7	Not connected
PIN4	Not connected	PIN8	Not connected

Operation Guide

Hub Display Description

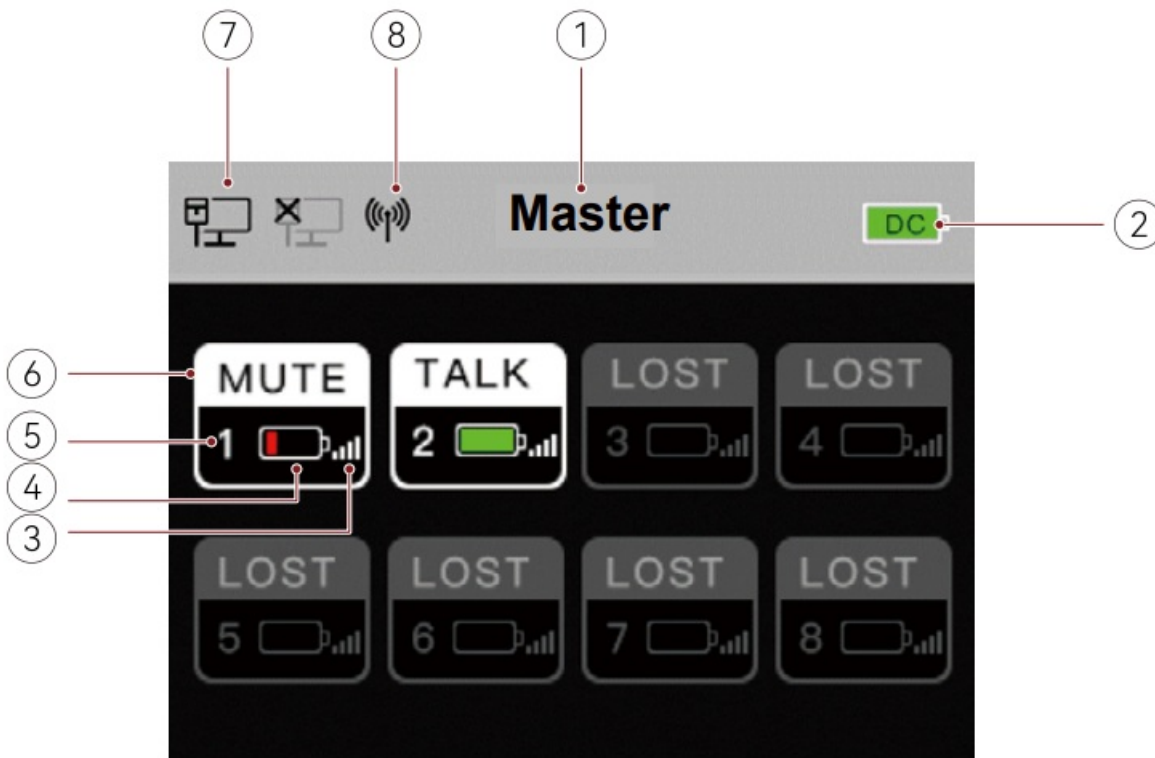

① Hub Mode (Master/Slave)

② Hub Battery Level

③ Wired Headset Signal Strength

④ Wired Headset Battery Level (Red: Low Battery)

⑤ Wired Headset Number

⑥ Wired Headset Status

TALK: The headset user can hear and talk with the other headset users.

MUTE: The headset user is muted and can only hear the other headset users.

LOST: The headset is disconnected from the hub.

LINK: The headset is reconnecting to the hub.


⑦ Network Connection Status

⑧ Wi-Fi Status

Hub Menu Description

Press and hold the Menu/Confirmation button for about 3 seconds to enter the menu interface.

Menu

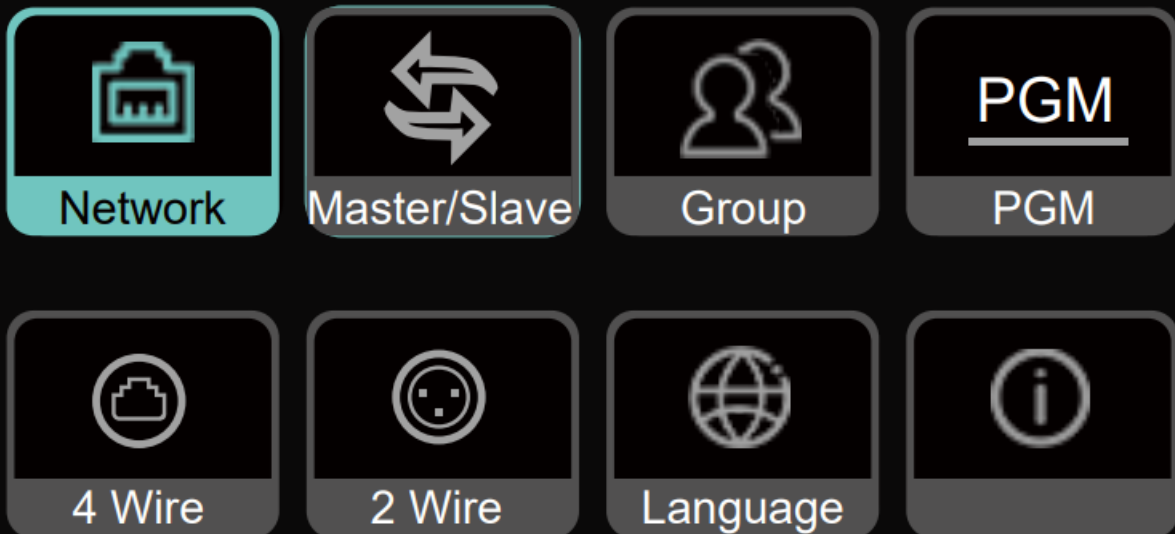

1. Select Network to enter the network configuration interface.

1.1 Select Wifi Setting and turn Wi-Fi on or off. After it is turned on, the IP address, SSID, and password are displayed.

WIFI Setting



ON



OFF

IP Address: 192.168. 217.100

SSID: HLD_12345678

Password: 12345678

1. 2 Select Wired Network Setting to switch between automatic IP and fixed IP modes. If fixed IP mode is used, you can modify the IP address, sub netmask, and gateway as well as view the user name and password for logging in to the web.

Wired Network Setting

ON

OFF

IP Address:

192.168.218.10

Modify

Subnet Mask:

255.255.255.0

Modify

Gateway:

192.168.218.1

Modify

User Name:

admin

Password:

12345678

- 2. Select Master/Slave to set the hub as the master device or slave device.
 - 2.1 Select Master Device to set the hub as the master device.

Master And Slave



Master Device

Slave Device



2.2 Select Slave Device and then select Scan to scan the IP addresses of master devices on the network. Select the IP address of the corresponding master device in the displayed list and confirm it. Then, the hub is successfully set as the slave device.

- When a single hub is used, the hub needs to be set as the master device.
- When more than two hubs are used in a cascaded connection, one hub needs to be set as the master device and the other hubs as the slave devices.

Master-Slave Device



Master 1 IP: 192.168.218.011



Master 2 IP: 192.168.218.012


Master 3 IP: 192.168.218.013

Master 4 IP: 192.168.218.014


Master 5 IP: 192.168.218.015

3. Select Group to perform group settings and view group status.

3.1 There are three options: Group A (All devices are in group A), Group A/B (All devices are in groups A and B), and Custom (The group settings can be customized on the web. All devices are in group A by default).

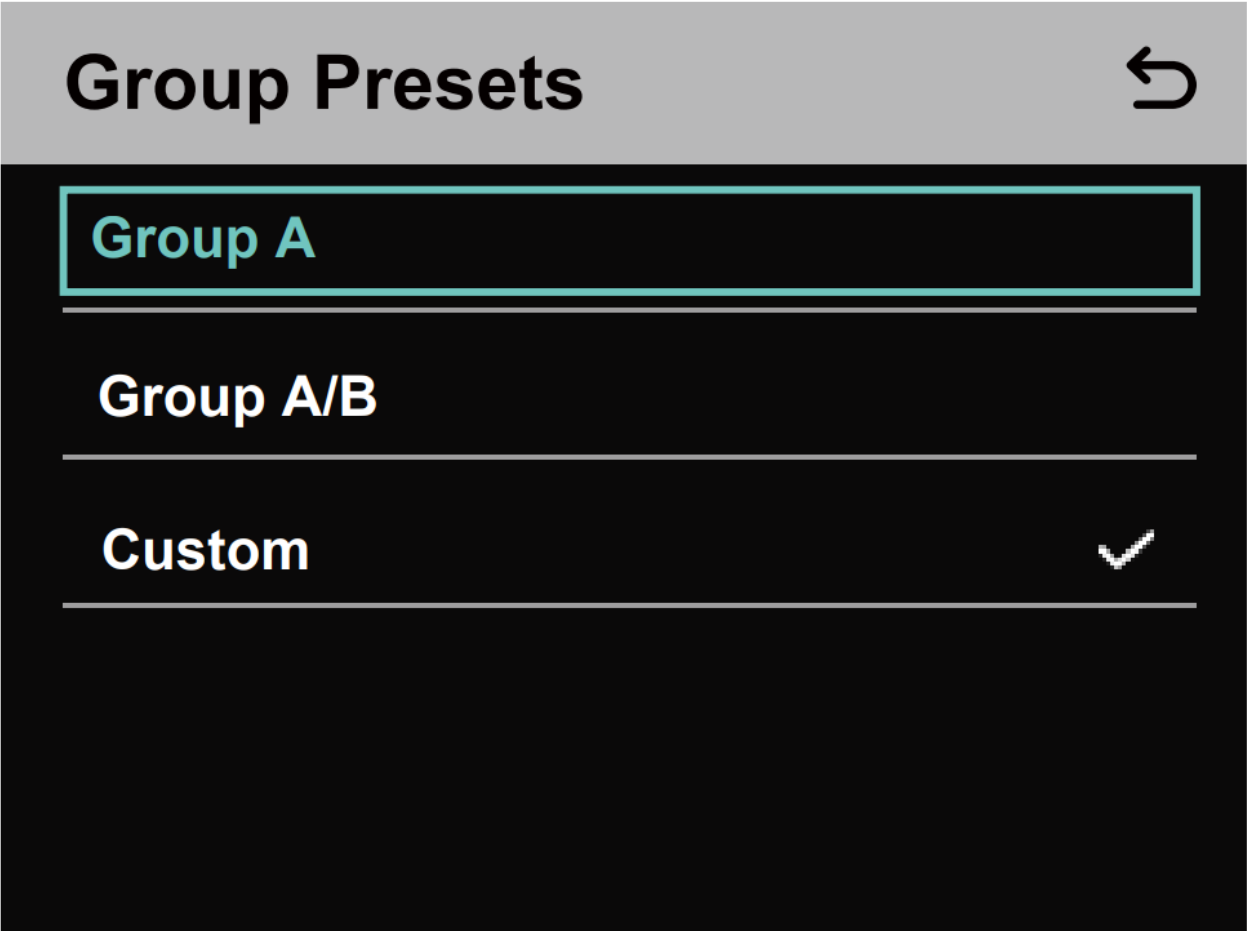


3.2 Select Group Review to view group settings.\

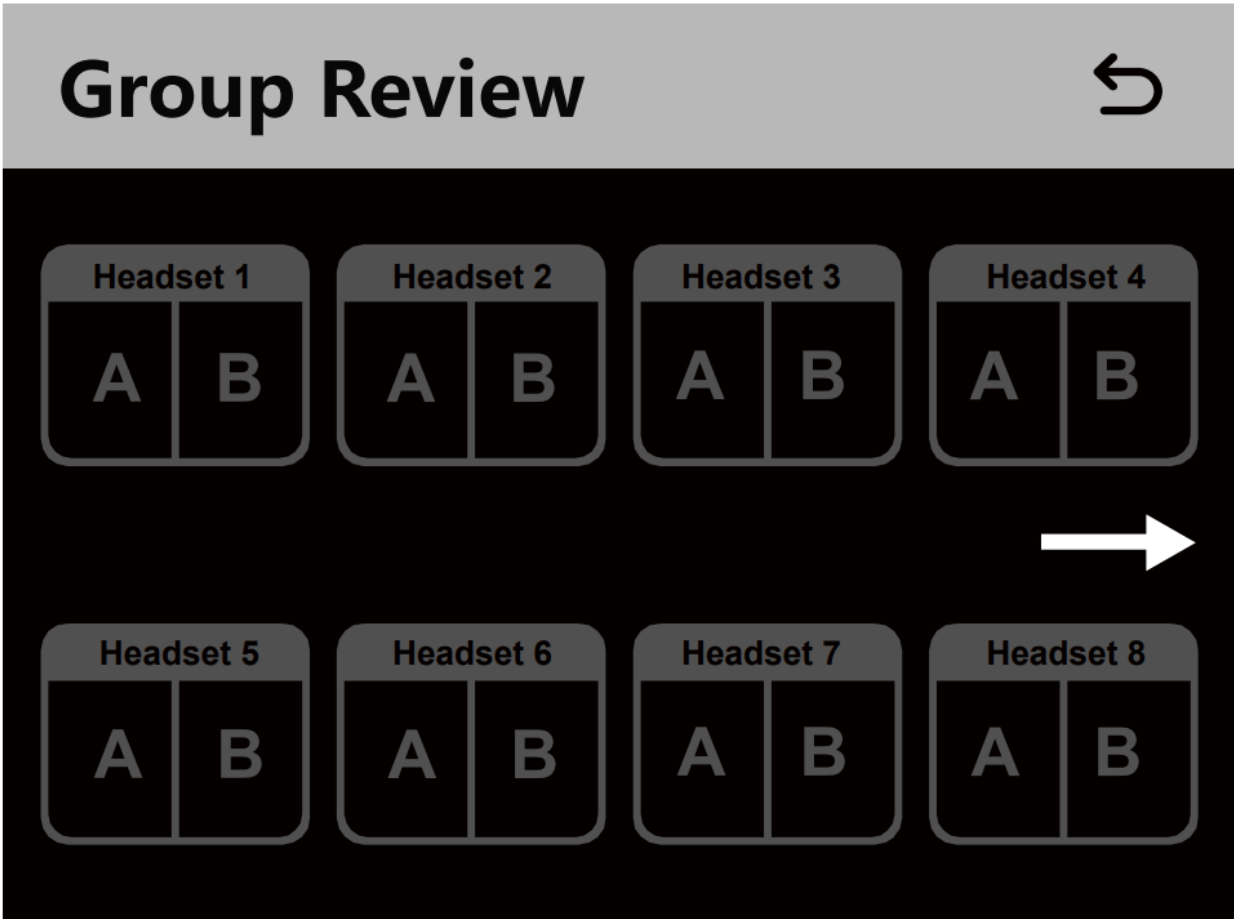

4. Select PGM to set the PGM audio gain according to the input volume

Gain Setting




-18dB

-12dB

-6dB

0dB


6dB



5. Select 4 Wire to perform 4-wire audio settings.

- 5.1 Select Input Gain to set the input gain according to the input volume.


Input Gain



-18dB

-12dB


-6dB

0dB

6dB

5.2 Select Output Gain to set the output gain according to the input volume.


Output Gain



-18dB

-12dB


-6dB

0dB

6dB

5.3 Select Line Sequence Switching to switch between Standard and Cross modes.

Line Sequence Switching



6. Select 2 Wire to perform 2-wire audio settings.

6.1 Connect the hub to a 2-wire device and set the corresponding cable compensation and terminal resistance on the hub. Power on the 2-wire device and turn off or disconnect its microphone to make sure that there is no other audio transmission on the 2-wire link. Otherwise, the accuracy of auto-null settings may be affected. After Auto Null is selected, auto-null settings for the 2-wire device will be performed automatically on the hub.

6.2 Select Cable Compen to check the 2-wire cable length and select the corresponding compensation option according to the cable length.

Cable Compen

50m

✓

100m

150m

200m

6.3 Select Terminal Res to check whether the 2-wire device connected via the 2-wire interface has terminal resistance. If it has, select OFF. Otherwise, select ON.

Terminal Res


ON

✓

OFF

6.4 Select Input Gain to set the input gain according to the input volume.


Input Gain



-18dB	
-12dB	
-6dB	
0dB	✓
6dB	


6.5 Select Output Gain to set the output gain according to the input volume.

Output Gain



-18dB	
-12dB	
-6dB	
0dB	✓
6dB	

7. Select Language to perform language

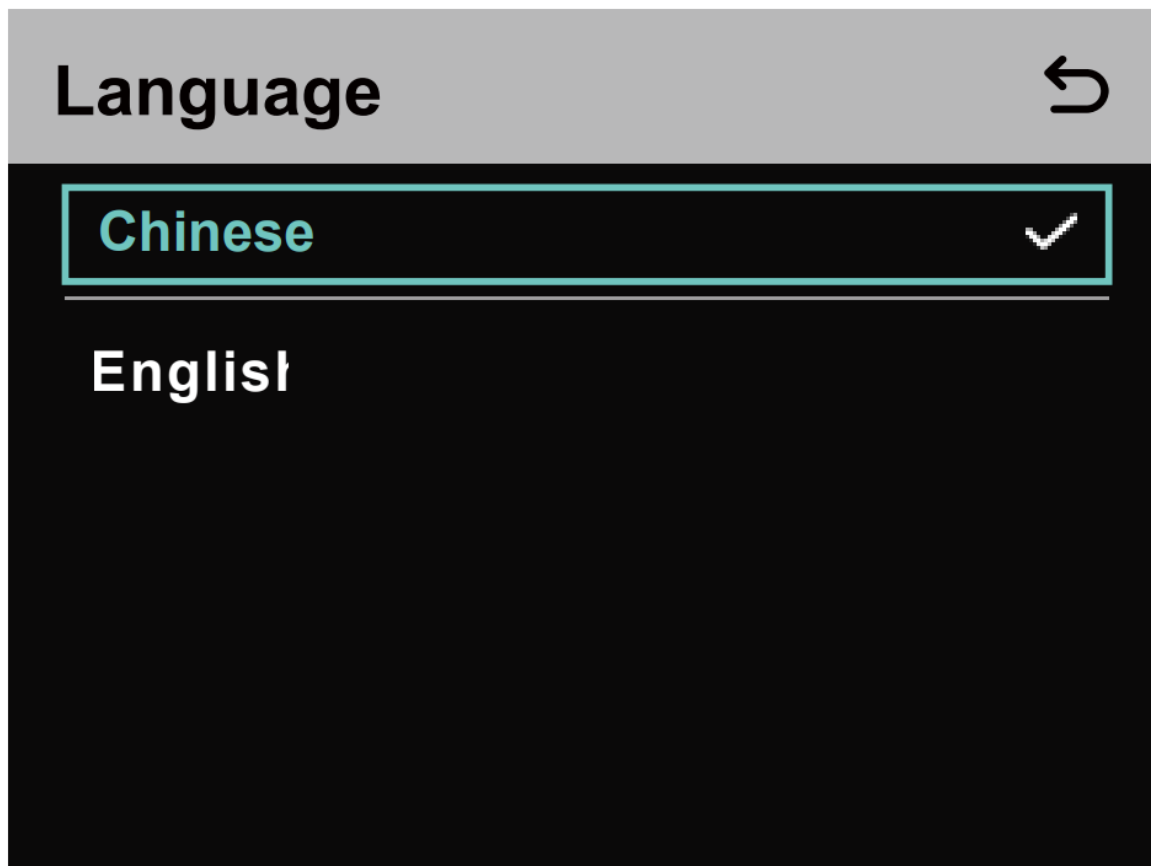

8. Select Info to check related information about the hub.




8.1 Select Reset to restore the configured hub information to the default settings.

Info	
Master-Slave	Slave Device
Reset	>
Version Information	V1.0.3.5
Hardware Number	H000

Performing Group Settings via a Computer

- Select Network > Wired Network Setting to view the default IP address, user name, and password of the hub.

IP Address Automatic



ON

OFF ✓

IP Address: 192.168.218.011

Modify

Subnet Mask: 255.255.255.001

Modify

Gateway: 255.255.255.001

Modify


User Name: admin

Password: 12345678

- Use a network cable to connect the hub to a computer via the RJ45 interface and set the IP address of the computer as 192.168.218.XXX. The default IP address of the hub is 192.168.218.10.



- Open a browser on the computer and visit <http://192.168.218.10> to enter the configuration page for the hub

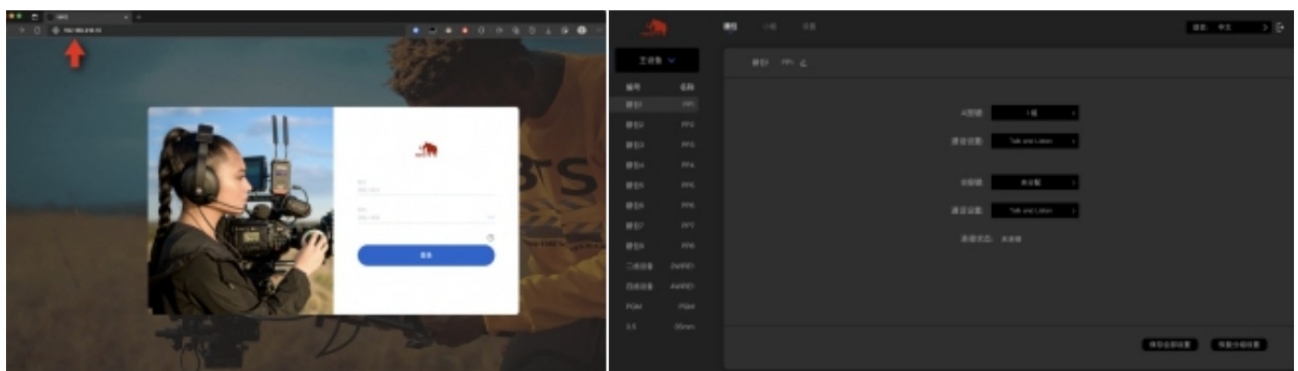

Group A & B Buttons on Headsets


After group settings are performed on the hub, the A or B button on a connected headset will light ON. The button light status indicates which group the headset has joined. To join or exit group A or B, simply press the A or B button on the headset.

A and B Button Light Status	Description
ON in orange	The headset user is in the corresponding group. In this case, the headset user can hear and talk with the other headset users in the same group.
OFF	The headset user is not in the corresponding group. In this case, the headset user cannot hear or talk with the other headset users.

Cascaded Connection


Multiple hubs can be cascaded to expand the number of headsets. The hub supports two cascade methods — 4-wire analog signal cascade and IP digital signal cascade. Generally, it is recommended to cascade two hubs using 4-wire analog signals, and cascade three or more than three hubs using IP digital signals.

It is recommended to use a CAT5e cable for cascade and use the 568B standard for the RJ45 interface.

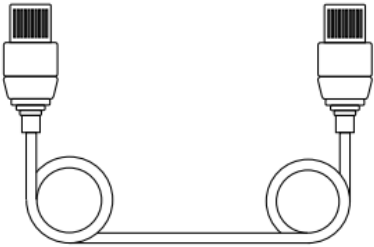Standard Network Cable	Specifications	Max Length
	CAT5e CAT6e	300 meters

Two-System Cascaded Connection via the 4-Wire Interface





Use a standard network cable to connect two hubs via the 4-w interface. The length of the network cable is up to 300 meters.

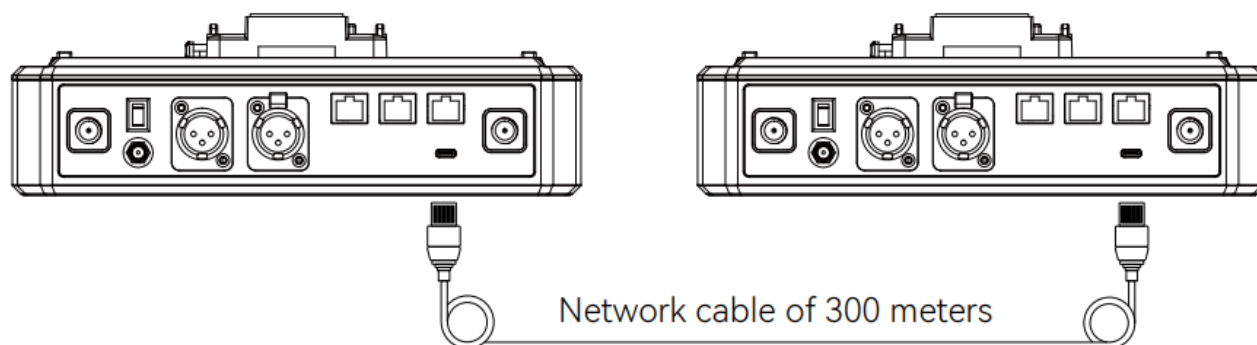

4-Wire Settings


After connecting two hubs using a network cable, select 4 Wire > Line Sequence Switching on the hubs, and then select Standard on one hub and Cross on the other.

Hub Display

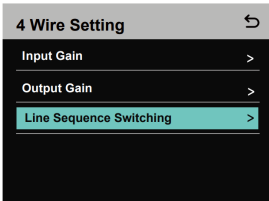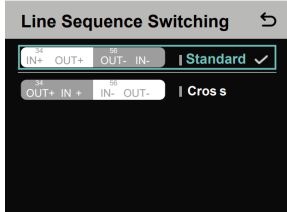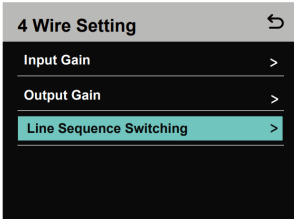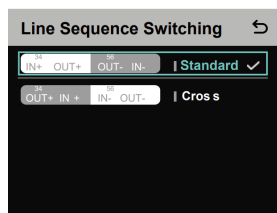Hub ①	Select 4 Wire > Line Sequence Switching.	Select Standard.
4-Wire Settings		
Hub ②	Select 4 Wire > Line Sequence Switching	Select Cross.
4-Wire Settings		

Two-System Cascaded Connection via the IP Network

Use a standard network cable to connect two hubs via the RJ45 interface. Either of the two RJ45 interfaces on the hub works. The length of the network cable is up to 300 meters.





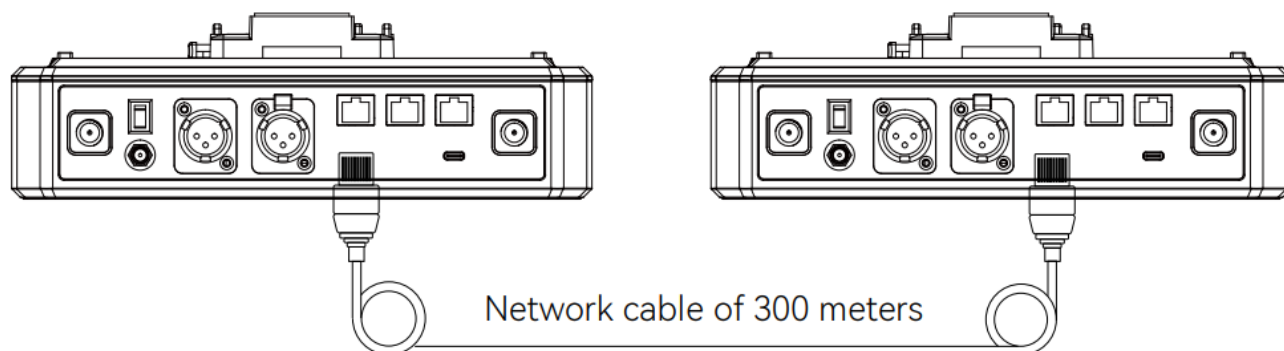


Master/Slave Mode Settings

After connecting two hubs using a network cable, select Master/Slave on the hub to set the hub mode. On one hub, select Master Device. On the other hub, select Slave Device > Scan and then select the IP address of the corresponding master hub.


Note that the IP Address Automatic function under the Network settings needs to be turned OFF on both two hubs

Hub Display

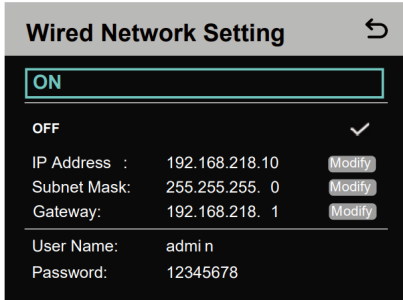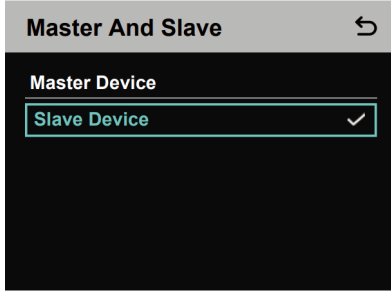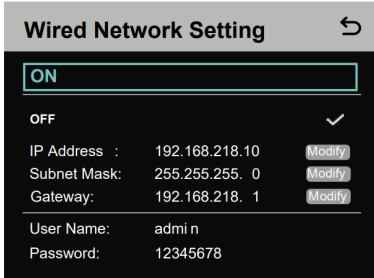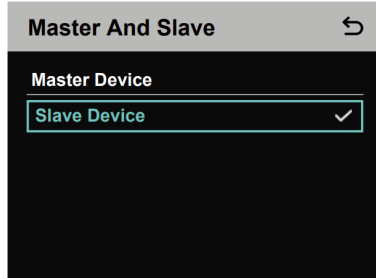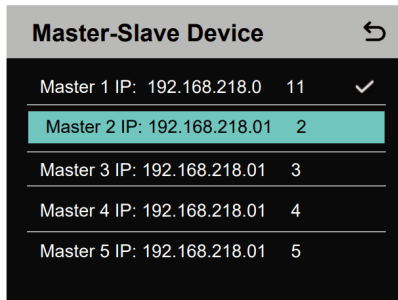Hub ①	Select Network and set IP Address Automatic to OFF.	Select Master/Slave > Master Device
Network Settings		
Hub ②	Select Network and set IP Address Automatic to OFF	Select Master/Slave > Slave Device > Scan.
Network Settings		
<p>After Scan is selected, the IP addresses of master devices will be displayed. Then, select the desired IP address using the arrow buttons and press the Menu/Confirmation button to confirm the IP address</p>		

Three-System Cascaded Connection via the IP Network

It is recommended to use the IP network connection to cascade three hubs. On one hub, select Master Device, and on the other two hubs, select Slave Device.

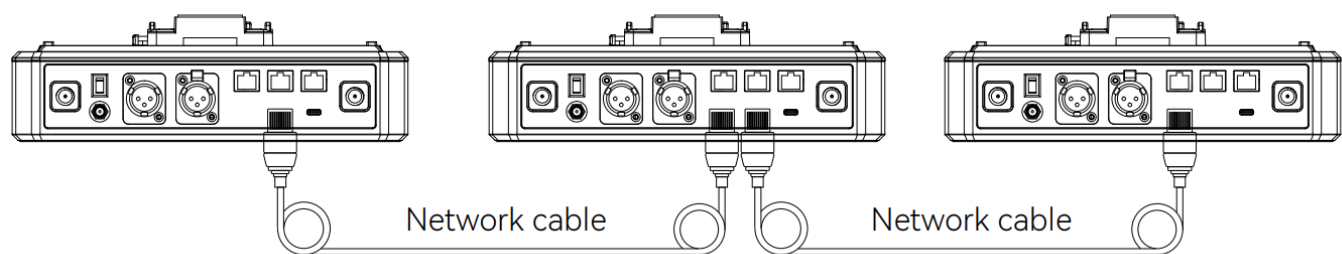

Parameters

Antenna	External
Power Supply	DC power, NP-F battery, V-mount battery, G-mount battery
Volume Adjustment	Adjustment knob
Power Consumption	<4.5W
Dimensions	(LxWxH): 259.9mmx180.5mmx65.5mm (10.2"x7.1"x2.6")
Net Weight	About 1300g (45.9oz) with the antennas excluded
Transmission Range	1,100ft (350m) LOS
Frequency Band	1.9 GHz (DECT)
Bandwidth	1.728MHz
Wireless Technology	Adaptive Frequency Hopping
Wireless Power	≤ 21dBm (125.9 mW)
Modulation Mode	GFSK
RX Sensitivity	<−90dBm
Frequency Response	150Hz–7kHz
Signal-to-Noise Ratio	>55dB
Distortion	<1%
Input SPL	>115dB SPL
Temperature Rang	0°C to 45°C (working condition) −10°C to 60°C (storage condition) Note: The highest working temperature is 40°C when the adapter is used f or the power supply.

Note: The frequency band and TX power vary by country and region.

Safety Precautions

Do not place the product near or inside heating devices (including but not limited to microwave ovens, induction cookers, electric ovens, electric heaters, pressure cookers, water heaters, and gas stoves) to prevent the battery from overheating and exploding.

Do not use non-original charging cases, cables, and batteries with the product. The use of non-original accessories may cause electric shock, fire, explosion, or other dangers.

Support

If you encounter any problems in using the product or need any help, please contact Hollyland Support Team via the following ways:



Hollyland User Group



HollylandTech



HollylandTech



ft~ HollylandTech



support@hollyland-tech.com



www.hollyland-tech.com

Statement

All copyrights belong to Shenzhen Hollyland Technology Co., Ltd. Without the written approval of Shenzhen Hollyland Technology Co., Ltd., no organization or individual may copy or reproduce part or all of any written or illustrative content and disseminate it in any form.

Trademark Statement

All the trademarks are owned by Shenzhen Hollyland Technology Co., Ltd.

Note:

Due to product version upgrades or other reasons, this User Manual will be updated from time to time. Unless otherwise agreed, this document is provided as a guide for use only. All representations, information, and recommendations in this document do not constitute warranties of any kind, express, or implied.

FCC Requirement

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the device. This device complies with Part 15 of the FCC Rules.

Operations are subject to the following two conditions:

- (1) This device may not cause harmful interference.
- (2) This device must accept any interference received, including interference that may cause undesired operations.

FCC Radiation Exposure Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

Note:

This device has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This device generates, uses, and can radiate radio frequency energy, and if it is not installed and used in accordance with the instructions, it may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this device does cause harmful interference to radio or television reception, which can be determined by turning the device off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.

- Increase the distance between the device and the receiver.
- Connect the device to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.



Documents / Resources

	<p>HOLLYLAND C1 Pro Hub Solidcom Intercom Headset System [pdf] User Manual 5803R, 2ADZC-5803R, 2ADZC5803R, C1 Pro Hub, C1 Pro Hub Solidcom Intercom Headset System, Solidcom Intercom Headset System, Intercom Headset System, Headset System</p>
-----------------------------------------------------------------------------------	-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------