


# Honeywell High Sensitivity Latching Digital Hall-effect Sensor **Installation Guide**

Home » Honeywell » Honeywell High Sensitivity Latching Digital Hall-effect Sensor Installation Guide 🖺



# Honeywell High Sensitivity Latching Digital Hall-effect Sensor

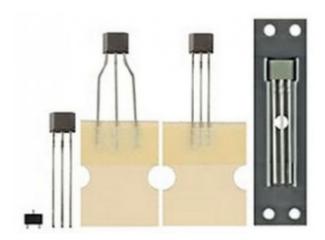

## **Contents**

- **1 GENERAL INFORMATION**
- **2 SOLDERING AND**
- **ASSEMBLY**
- **3 CLEANING**
- 4 Warranty/Remedy
- **5 For more information**
- 6 Documents / Resources
  - **6.1 References**
- **7 Related Posts**

#### **GENERAL INFORMATION**

## **CAUTION ELECTROSTATIC DISCHARGE DAMAGE**

Ensure proper ESD precautions are followed when handling this product

Failure to comply with these instructions may result in product damage.



#### **SOLDERING AND ASSEMBLY**

## **CAUTION**

## **IMPROPER SOLDERING**

- Ensure leads are adequately supported during any forming/shearing operation so that they are not stressed inside the plastic case.
- · Limit exposure to high temperatures.

Failure to comply with these instructions may result in product damage

 Surface mount (SS360NT, SS360ST, SS360ST-10K): Use infrared reflow process with active flux, lead-free solder.

**Do not** exceed peak temperature of 245°C [473°F] for a maximum of 10 seconds.

Through-hole leads (SS460S, SS460S-T2, SS460S-LP):

Wave solder at 250°C to 260°C [482°F to 500°F] for a maximum of three seconds. Burrs are allowed only if full lead length will pass through a 0,68 mm [0.027 in] dia. hole.

#### **CLEANING**

#### **CAUTION IMPROPER CLEANING**

• Do not use pressure wash. High-pressure stream could force contaminants into the package.

Failure to comply with these instructions may result in product damage

# **Table 1. Electrical and Environmental Specifications**

(At Vs = 3.0 Vdc to 24.0 Vdc, 20 mA load, TA = - $40^{\circ}$ C to  $150^{\circ}$ C [- $40^{\circ}$ F to  $302^{\circ}$ F] except where otherwise specified.

Characteristic Condition Min. Typ. Max. Unit
--

Supply voltage: SS360NT, SS360ST, SS360ST -10K SS360NT, SS360ST, SS360ST -10K SS460S, SS460S-T2, SS460S-LP	-40°C to 125°C [-40°F to 257° F] 150°C [302°F]	3.0 3.0 3.0	_ _ _	24.0 12.0 24.0	Vdc		
Supply current	Vsupply = 3.0 Vdc at 25°C [77 °F]	_	3.5 —	6.0 8.0	mA		
Output current	_	_	_	20	mA		
Vsat: SS360NT, SS360ST, SS360ST -10K SS460S, SS460S-T2, SS460S-LP	Gauss > 55 15 mA, Gauss > 55	_	_ _	0.6 0.6	V		
Output leakage current	Gauss < -55	_	_	10.0	mA		
Rise/fall time	25°C [77°F]	_	_	1.5	ms		
Thermal resistance: SS360NT, SS360ST, SS360ST -10K SS460S, SS460S-T2, SS460S-LP	single layer, single sided PCB		303 233		°C/W		
Magnetic characteristics: operate (Bop) release (Brp) differential		5 -55 40	30 -30 60	55 -5 80	Gauss		
Operating temperature	_	-40 [-40]	_	150 [302]	°C [°F]		
Storage temperature: SS360NT, SS360ST, SS360ST -10K SS460S, SS460S-T2, SS460S-LP		-40 [-40] -40 [-40]	<u> </u>	150 [302] 165 [329]	°C [°F]		
Soldering temperature and tim e: SS360NT, SS360ST, SS360 ST-10K SS460S, SS460S-T2, SS460S-LP	infrared reflow process: peak temperature 245°C [473°F] for 10 s max. wave soldering process: 250°C to 260°C [482°F to 500°F] for 3 s max.						

**NOTICE** These Hall-effect sensor ICs may have an initial output in either the ON or OFF state if powered up wit h an applied magnetic field in the differential zone (applied magnetic field >Brp and

**NOTICE** The magnetic field strength (Gauss) required to cause the switch to change state (operate and release) will be as specified in the magnetic characteristics. To test the switch against the specified limits, the s witch must be placed in a uniform magnetic field

**Table 2. Absolute Maximum Specifications** 

Characteristic	Min.	Тур.	Max.	Unit
Supply voltage	-26.0	_	26.0	V
Applied output voltage	-0.5	_	26.0	V
Output current	_	_	25	mA
Magnetic flux	_	_	no limit	Gauss

## **NOTICE**

Absolute maximum ratings are the extreme limits the device will momentarily withstand without damage to the d evice. Electrical and mechanical characteristics are not guaranteed if the rated voltage and/or currents are exce eded, nor will the device necessarily operate at absolute maximum ratings.

Figure 1. Sensor IC Block Diagram

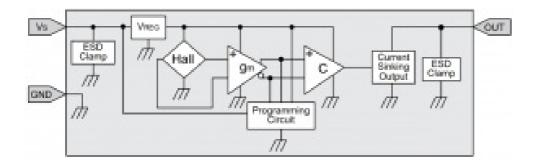


Figure 2. Typical Magnetic Characteristics vs Ambient Temperature at Supply Voltages

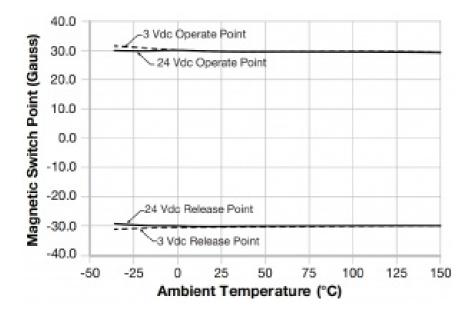


Figure 3. SS360NT, SS360ST, SS360ST-10K Maximum Rated Supply Voltage vs Temperature

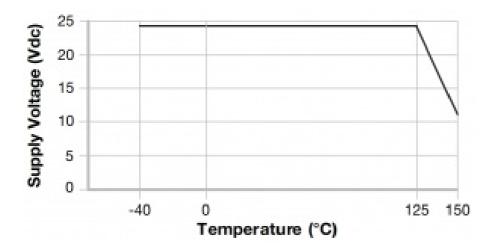


Figure 4. Magnetic Activation



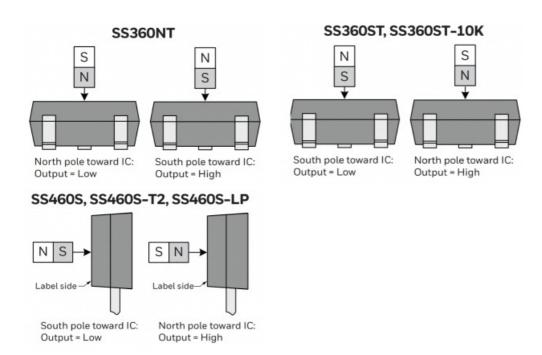



Figure 5. SS360NT, SS360ST and SS360ST-10K Sensor IC, Tape and Reel Mounting Dimensions (For


# SS360NT, SS360ST, SS360ST-10K Sensor IC

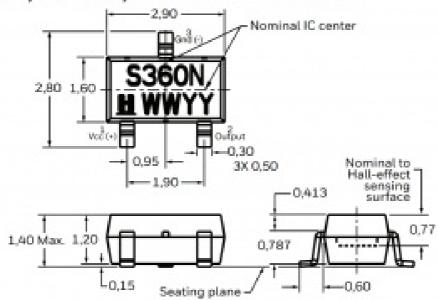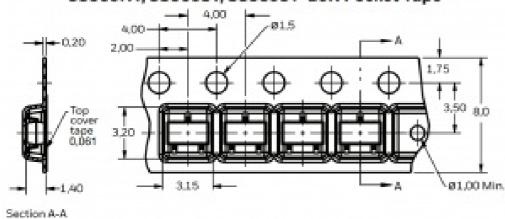

# SS360NT, SS360ST, SS360ST-10K Pocket Tape



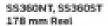

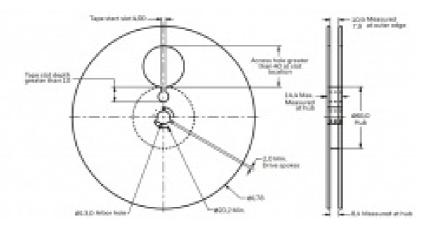




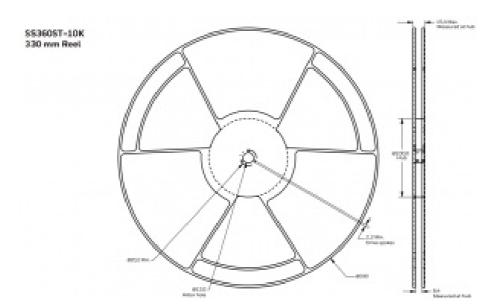



Figure 6. SS460S Sensor IC, SS460S-T2 and SS460S-T3 Sensor IC and Ammopack Tape-in-Box Mounting Dimensions (For reference only. mm)

# SS460S, SS460S-T3 Sensor IC

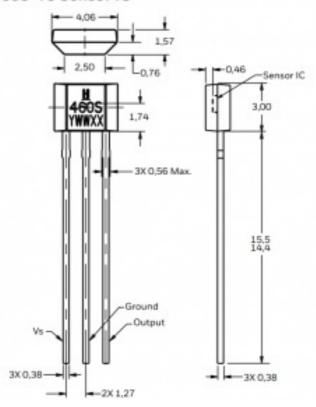

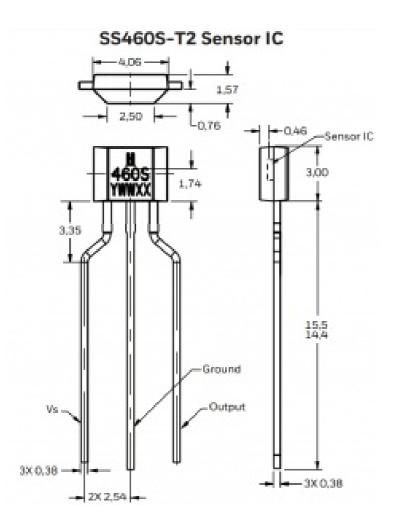

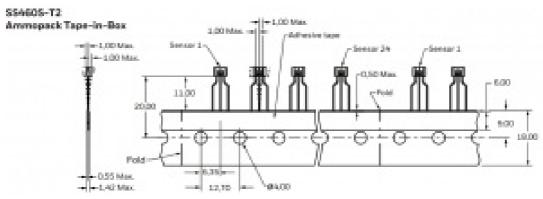


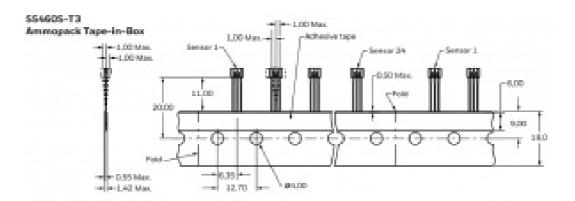


Note: Ensure the minimum hole size in the PCB is 0,68 mm dia. based on the IPC 2222 Level B standard.

Figure 7. SS460-LP Sensor IC, Tape and Reel Mounting Dimensions (For reference only. mm)


# SS460-LP Sensor IC

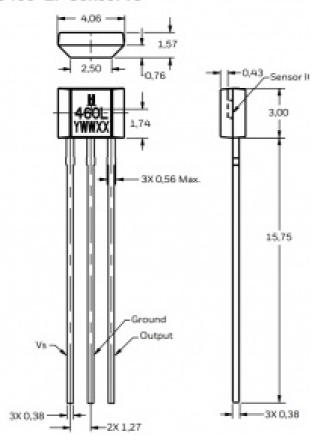

# SS460-LP Pocket Tape

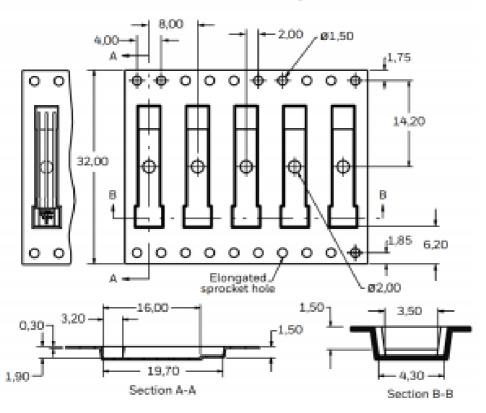

55460-LP 330 mm Reel

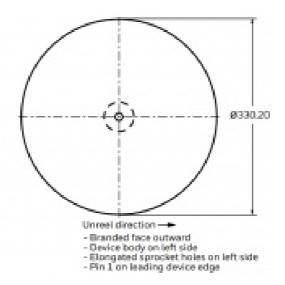



DO NOT USE these products as safety or emergency stop devices or in any other application where failure of the product could result in personal injury.

Failure to comply with these instructions could result in death or serious injury.

## Warranty/Remedy

Honeywell warrants goods of its manufacture as being free of defective materials and faulty workmanship during the applicable warranty period. Honeywell's standard product warranty applies unless agreed to otherwise by Honeywell in writing; please refer to your order acknowledgement or consult your local sales office for specific warranty details. If warranted goods are returned to Honeywell during the period of coverage, Honeywell will repair or replace, at its option, without charge those items that Honeywell, in its sole discretion, finds defective. The foregoing is buyer's sole remedy and is in lieu of all other warranties, expressed or implied, including those of merchantability and fitness for a particular purpose. In no event shall Honeywell be liable for consequential, special, or indirect damages.

While Honeywell may provide application assistance personally, through our literature and the Honeywell web site, it is buyer's sole responsibility to determine the suitability of the product in the application. Specifications may change without notice. The information we supply is believed to be accurate and reliable as of this writing.

However, Honeywell assumes no responsibility for its use.

#### For more information

Honeywell Sensing and Internet of Things services its customers through a worldwide network of sales offices and distributors.

For application assistance, current specifications, pricing or the nearest Authorized Distributor, visit sensing.honeywell.com or call:

Asia Pacific +65 6355-2828 Europe +44 (0) 1698 481481 USA/Canada +1-800-537-6945

> Honeywell Sensing and Internet of Things 9680 Old Bailes Road Fort Mill, SC 29707 www.honeywell.com



# **Documents / Resources**



<u>Honeywell High Sensitivity Latching Digital Hall-effect Sensor</u> [pdf] Installation Guide High Sensitivity Latching Digital Hall-effect Sensor, 50074541, SS360NT, SS360ST, SS360ST-10K, SS460S, SS460S-T2, SS460S-LP

## References

- H Products Advanced Sensing Technologies | Honeywell
- H Honeywell The Future Is What We Make It

Manuals+,