



HPRT QUTIE Mini Portable Label Printer Instructions

[Home](#) » [HPRT](#) » HPRT QUTIE Mini Portable Label Printer Instructions

HPRT

Contents [[hide](#)]

[1 Product Introduction Ameanance and ComponentsPacking list](#)

[2 Product Introduction](#)


[3 Paper Loading](#)

[4 Documents / Resources](#)

[5 Related Posts](#)

Product Introduction

Apearance and Components

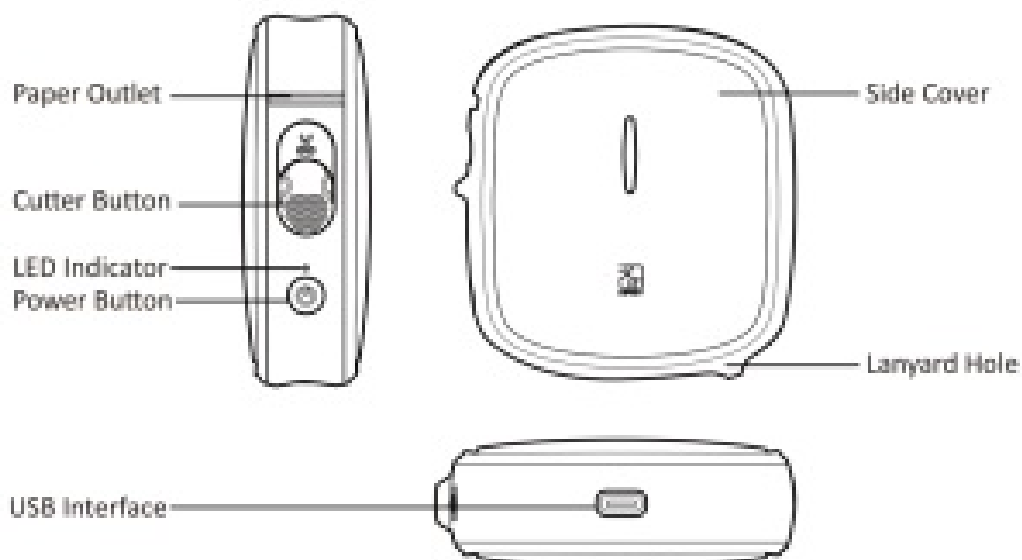

Packing list



Product Introduction

LED Indicator Status

- Red LED Error Status; ON: Error (Paper jam/Paper end/Cover opened) Quick Flash: TPH Is over-temperature Slow Flash: Low power
- Green LED Basic Status; ON: Charging finished/Printer Is ready Slow Flash: Charging


Button Operation

Hold down the power button for a few seconds: Turn on/off the printer


Press the power button: Position and calibrate the location of thermal label paper and heating line

Paper Loading

Place your hands on both sides of the side cover, push upward per the direction shown in the figure to open it.

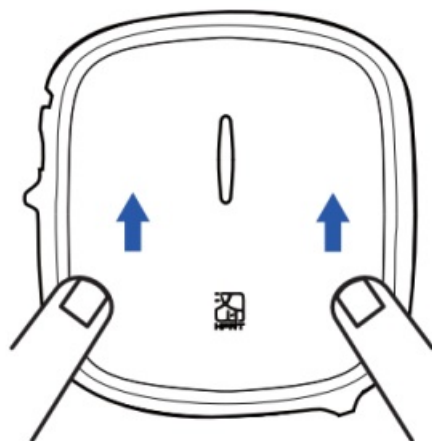

Load the paper as shown in the figure and make sure the thermosensitive layer faces up.

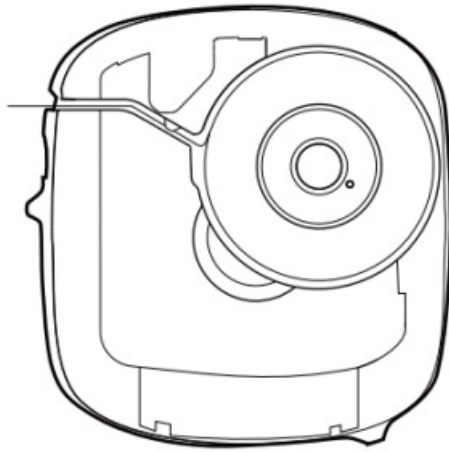

Close the side cover and pull some extra paper.



App Download

Scan the QR code to download App.




<http://yt.hpdt.com/GL>


Connection and Printing

01 Open App, click "Device Connection", select "Quote".

02 Select "Scan to get the template", then scan the QR code on the paper core to recharge consumables mileage and get the templates.

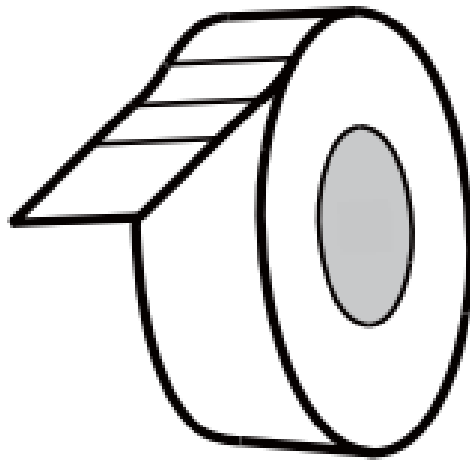

03 Edit the label as needed, and then click “Print” after editing.

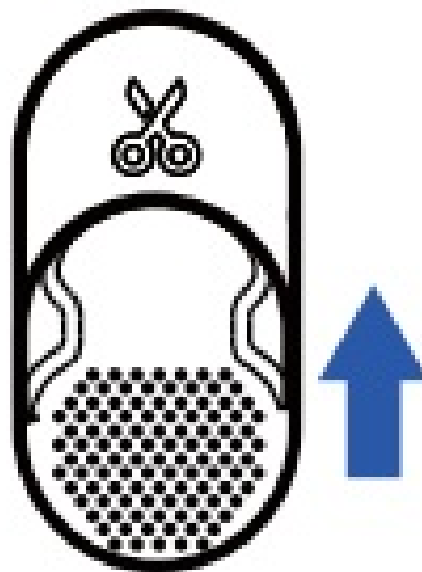


04 Push the cutter button to manually cut the paper.

Note: App operation shall be subject to the latest version.

Battery Charging

When the battery power is low, the red LED indicator will flash slowly. Please charge it by the exclusive USB cable in time. If you continue printing, it may power off automatically.

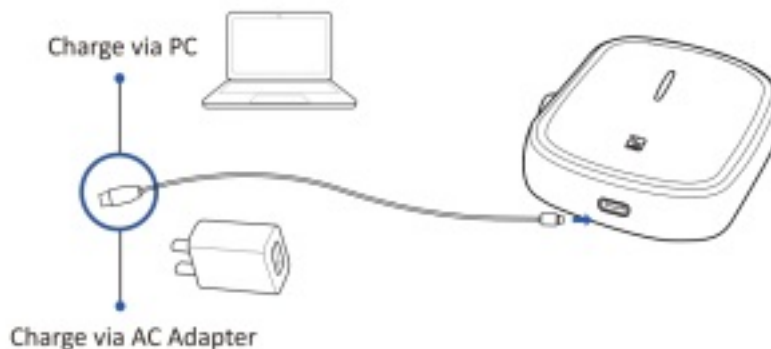

Note: The printer can be charged via a computer USB port or AC adapter. Please note that the AC adapter is not supplied.

FCC WARNING

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. NOTE: This equipment

has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. if this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Manufacturer: Xiamen Hanin Electronic Technology Co., Ltd.


Address: No.96,
Rongyuan Road,
Tongan District,
Xiamen,
China 361100

E-mail: support@hpert.com

Web: www.hpert.com



Documents / Resources

	HPERT QUTIE Mini Portable Label Printer [pdf] Instructions QUTIE, 2AUTE-QUTIE, 2AUTEQUTIE, QUTIE Mini Portable Label Printer, Mini Portable Label Printer, Portable Label Printer, Printer
---	---