



HUAWEI A03EU Smart Logger User Guide


[Home](#) » [Huawei](#) » HUAWEI A03EU Smart Logger User Guide 

Contents

- 1 HUAWEI A03EU Smart Logger
- 2 Product Information
- 3 LED Indicators
- 4 Ports
- 5 Product Usage Instructions
- 6 Device Installation
- 7 Electrical Connections
- 8 Overview
- 9 Installation Requirements
- 10 Device Installation
 - 10.1 Wall-Mounted Installation
- 11 Electrical Connections
- 12 Check Before Power-On
- 13 Powering On the System
- 14 FAQ
- 15 CONTACT
- 16 Documents / Resources
 - 16.1 References



HUAWEI A03EU Smart Logger

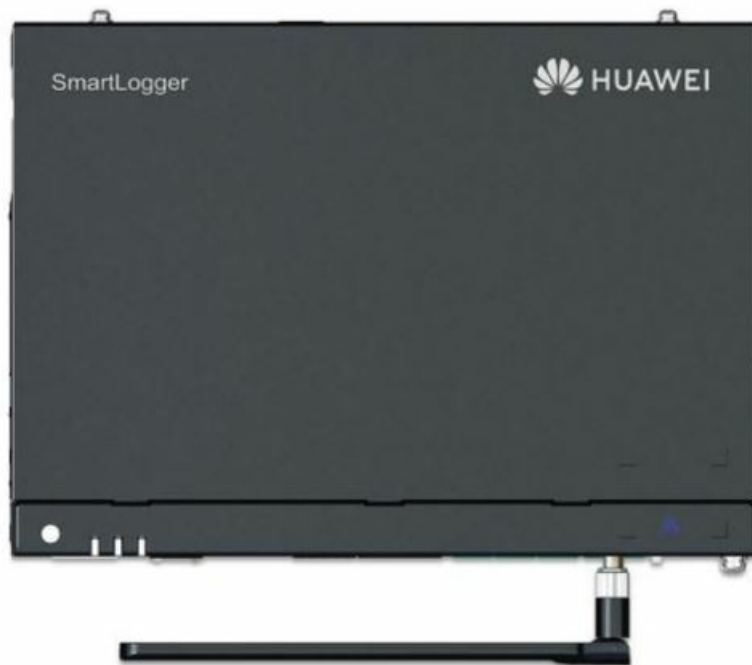

Product Information

The SmartLogger3000 is a device manufactured by HUAWEI TECHNOLOGIES CO., LTD. It is a versatile device that comes with various ports and features for efficient data monitoring and communication. The device includes LED indicators, mounting ears, SIM card slot, SFP ports, GE ports, USB port, DI ports, AI ports, DO ports, COM ports, 4G antenna port, and power input/output ports.

LED Indicators

- RUN – Indicates the device is running
- ALM – Indicates an alarm condition
- 4G – Indicates the 4G network status

Ports

- MBUS port – Used for MBUS networking
- SFP ports – Used for connecting optical modules
- GE ports – Used for LAN and WAN connections
- USB port – Used for USB devices
- DI ports – Used for receiving passive dry contact signals
- AI ports – Used for analog input signals
- DO ports – Used for digital output signals
- COM ports – Used for RS485 communications
- 4G antenna port – Used for connecting a 4G antenna
- 12 V input/output power port – Used for power supply or output
- 24 V input power port – Used for power supply

Product Usage Instructions

Installation Requirements:

The SmartLogger should be installed according to the following requirements:

- **Dimensions:** Refer to the product documentation for dimensions
- **Space:** Provide adequate space for installation

Device Installation

SmartLogger Wall-Mounted Installation:

Follow the steps below to install the SmartLogger on a wall:

1. Refer to the product documentation for detailed installation instructions.

Power Adapter Wall-Mounted Installation:

Follow the steps below to install the power adapter on a wall:

1. Install the power adapter on the right side of the SmartLogger.
2. Ensure that the AC power cable port faces upward.

Flat Surface-Mounted Installation:

Follow the steps below to install the SmartLogger on a flat surface:

1. Refer to the product documentation for detailed installation instructions.
2. Ensure that the power adapter indicator faces upward or outward.

Electrical Connections

Preparing Cables:


Prepare the following cables for electrical connections:

Type	Recommended Specifications
PE cable	—
RS485 communications cable	—
MBUS cable (optional)	Supplied with the SmartLogger
DI signal cable	—
Output power cable	—
AI signal cable	—
DO signal cable	—
Ethernet cable	Supplied with the SmartLogger
24 V input power cable (optional)	—

NOTE

- The information in this document is subject to change without notice.
- Every effort has been made in the preparation of this document to ensure accuracy of the contents, but all statements, information, and recommendations in this document do not constitute a warranty of any kind, express or implied.
- You can download this document by scanning the QR code.
- Operators should understand the components and functioning of a grid-tied PV power system, and they should be familiar with relevant local standards.
- Carefully read the user manual before installing the equipment to get familiar with product information and safety precautions.
- Huawei shall not be liable for any consequences caused by the violation of the storage, transportation, installation, and operation regulations specified in this document and the user manual.
- Use insulated tools when installing the equipment. For personal safety, wear proper personal protective equipment (PPE).


Overview

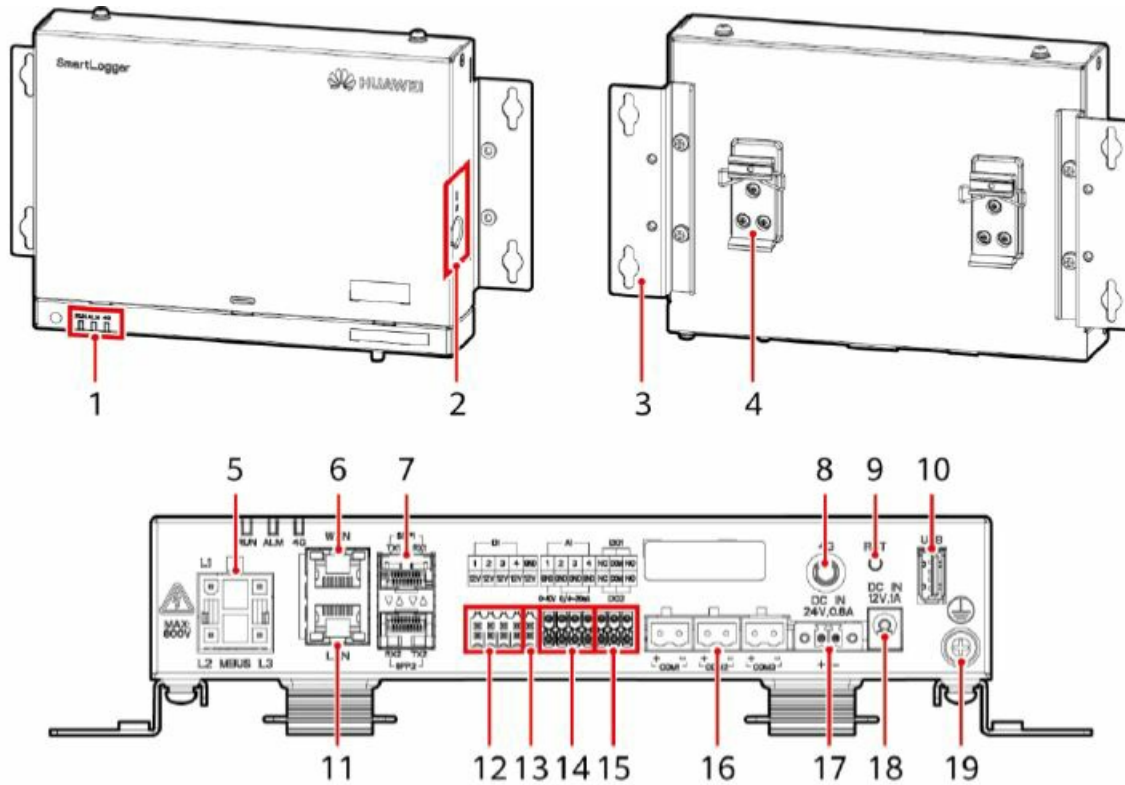


1. LED indicators (RUN, ALM, 4G)
2. SIM card slot (SIM)
3. Mounting ear
4. Guide rail clamp
5. MBUS port (MBUS)
6. GE port (WAN)
7. SFP ports (SFP1, SFP2)
8. 4G antenna port (4G)
9. RST button (RST)
10. USB port (USB)
11. GE port (LAN)
12. DI ports (DI)
13. 12 V output power port (12V/GND)
14. AI ports (AI)
15. DO ports (DO1, DO2)
16. COM ports (COM1, COM2, COM3)
17. 24 V input power port (DC IN 24V, 0.8A)
18. 12 V input power port (DC IN 12V, 1A)
19. Protective ground point

Installation Requirements

Dimensions

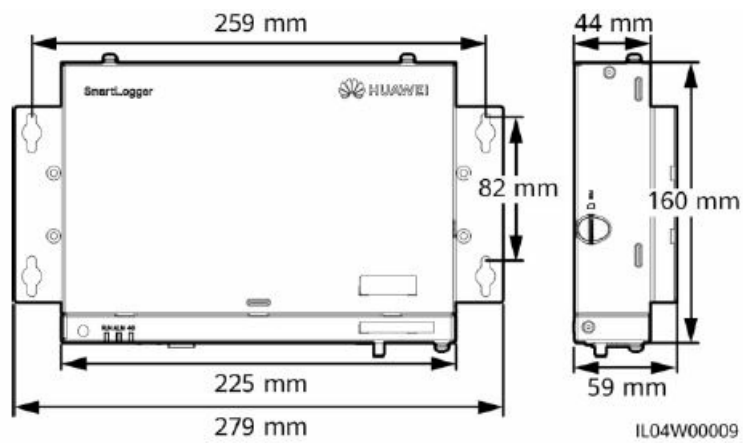

Space

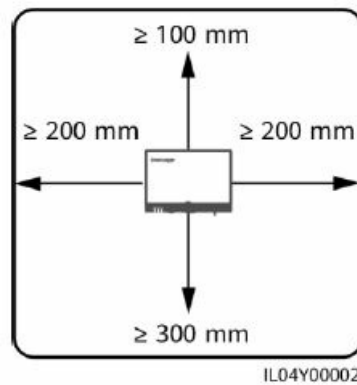


Device Installation

Installing the SmartLogger

Wall-Mounted Installation

Notice


- Install the SmartLogger on a flat and secure interior wall.
- When wall-mounting the SmartLogger, ensure that the cable connection area faces downwards for ease of cable connection and maintenance.
- You are advised to use the tapping screws and expansion tubes delivered with the SmartLogger.

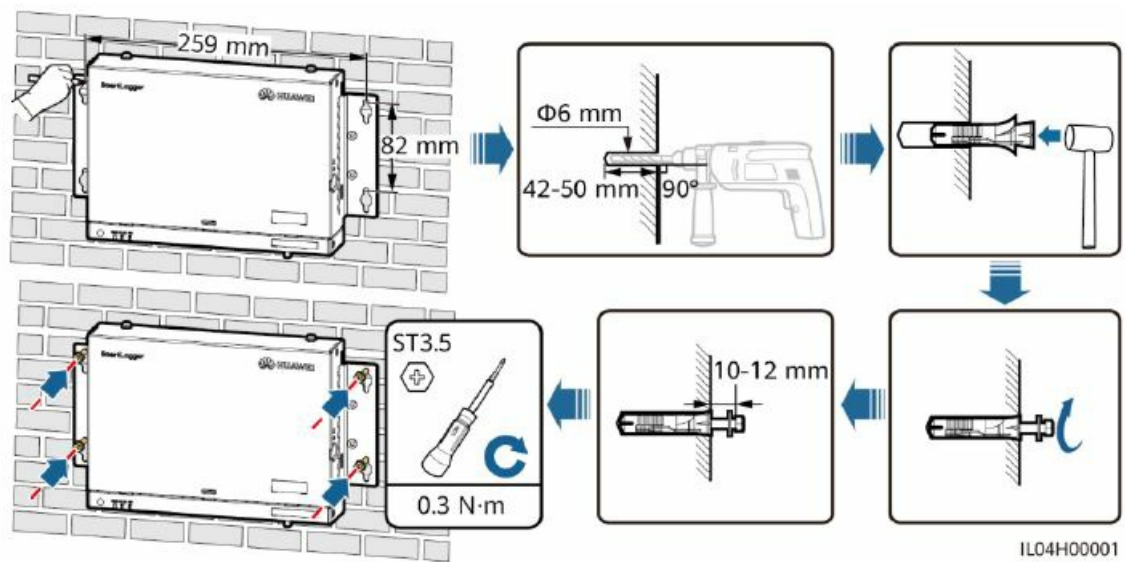

Guide Rail-Mounted Installation

Note


- Before installing the SmartLogger, prepare a standard 35 mm guide rail and secure it.
- The recommended effective length of the guide rail is 230 mm or greater.

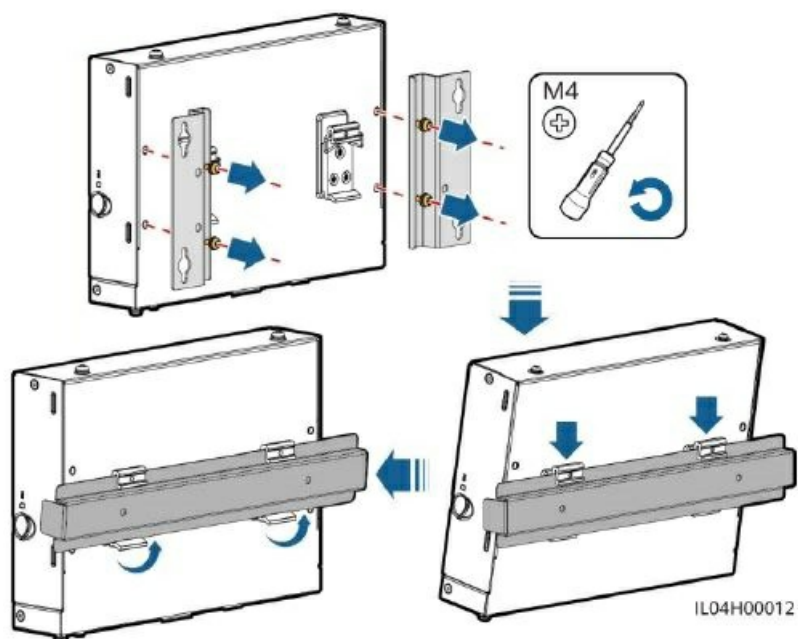

Installing the Power Adapter


Wall-Mounted Installation

Note: It is recommended that the power adapter be installed on the right side of the SmartLogger. Keep the AC power cable port upward.

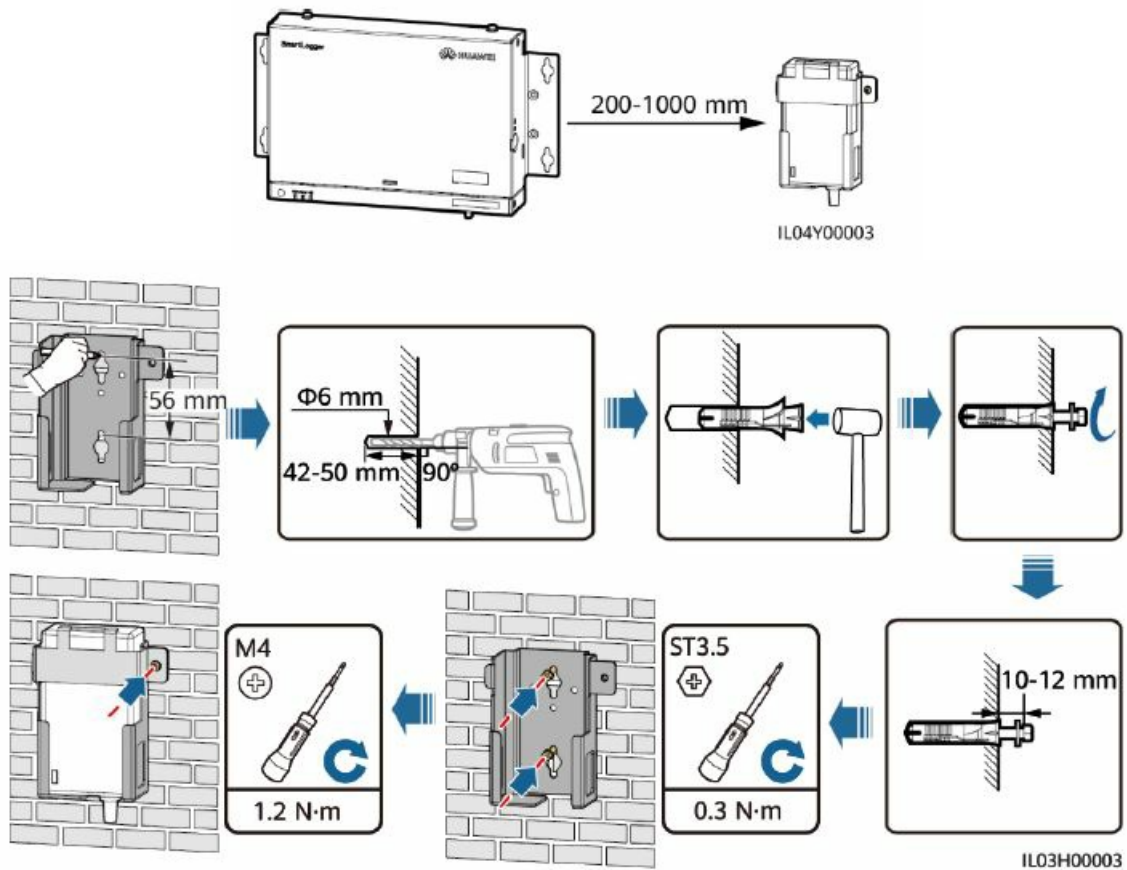

Flat Surface-Mounted Installation

Note: Ensure that the power adapter indicator faces upward or outward.

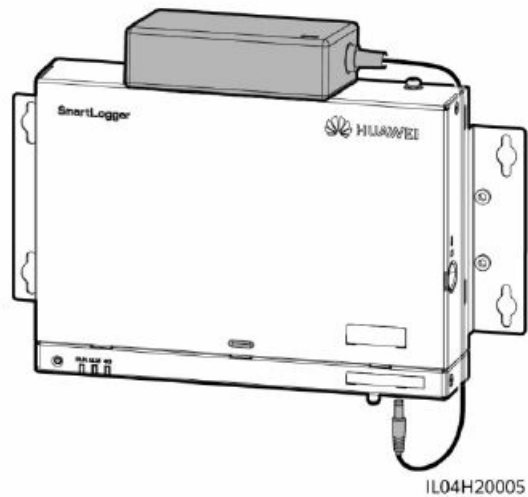

Electrical Connections

Note

- Connect cables in accordance with the installation laws and regulations of the country or region where the project is located.
- Before connecting cables to ports, leave enough slack to reduce the tension on the cables and prevent poor cable connections.
- One SmartLogger3000A can connect to a maximum of 80 solar inverters, and one SmartLogger3000B can


connect to a maximum of 150 solar inverters.

Preparing Cables

Type	Recommended Specifications
PE cable	Outdoor copper cable with a cross-sectional area of 4–6 mm ² or 12–10 AWG
RS485 communications cable	Two-core or multi-core cable with a cross-sectional area of 0.2–2.5 mm ² or 24–14 AWG
MBUS cable (optional)	Supplied with the SmartLogger
DI signal cable	Two-core or multi-core cable with a cross-sectional area of 0.2–1.5 mm ² or 24–16 AWG
Output power cable	
AI signal cable	
DO signal cable	
Ethernet cable	Supplied with the SmartLogger
24 V input power cable (optional)	Two-core cable with a cross-sectional area of 0.2–1.5 mm ² or 24–16 A WG

Connecting the PE Cable

Note: To enhance the corrosion resistance of the ground terminal, apply silica gel or paint on it after connecting the PE cable.

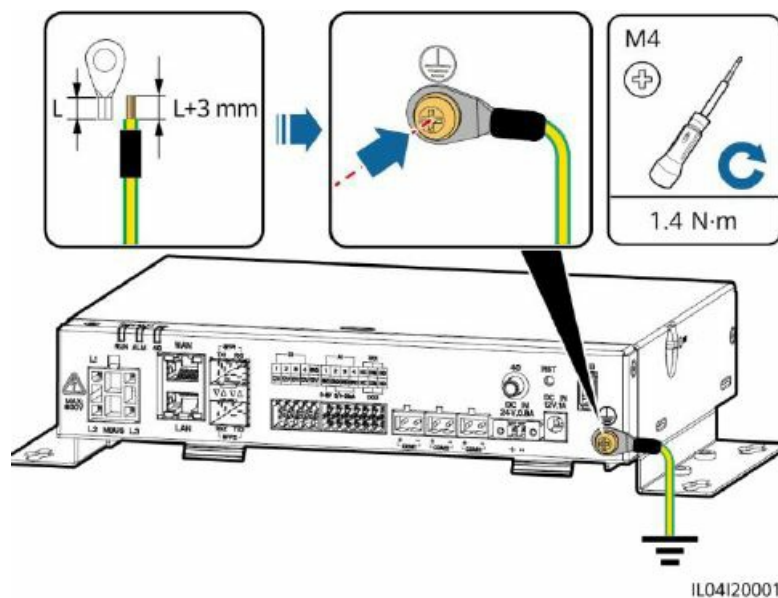


Connecting the RS485 Communications Cable

NOTE

- It is recommended that the RS485 communication distance be less than or equal to 1000 m.
- The SmartLogger can connect to RS485 communications devices, such as a solar inverter, an environmental monitoring instrument (EMI), and a power meter over the COM port.
- Ensure that the RS485+ and RS485– terminals are respectively connected to the COM+ and COM– ports on

the SmartLogger.

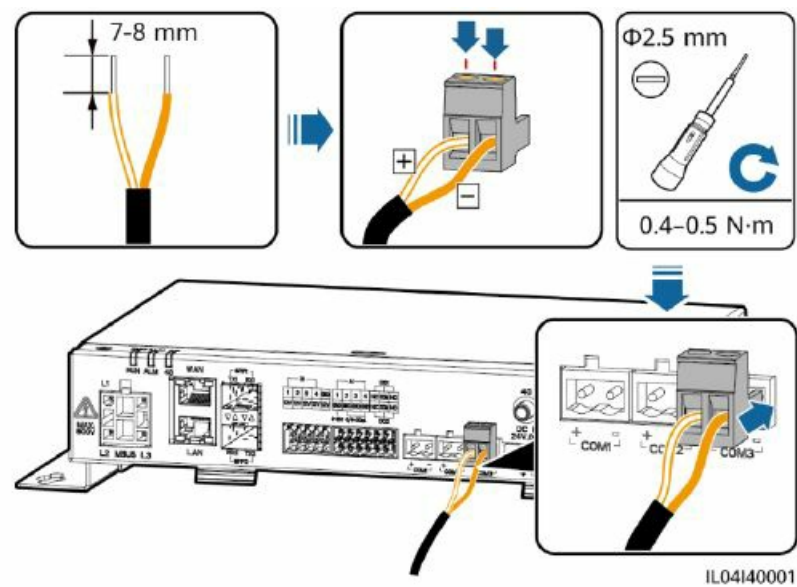


Port	Identifier	Description
COM1, COM2, COM3	+	RS485A, RS485 differential signal+
	–	RS485B, RS485 differential signal–

Cascading Connection

NOTE

- You are advised to connect fewer than 30 devices to each RS485 route.
- The baud rate, communications protocol, and parity mode of all devices on the RS485 cascading link must be the same as those of the COM ports on the SmartLogger.

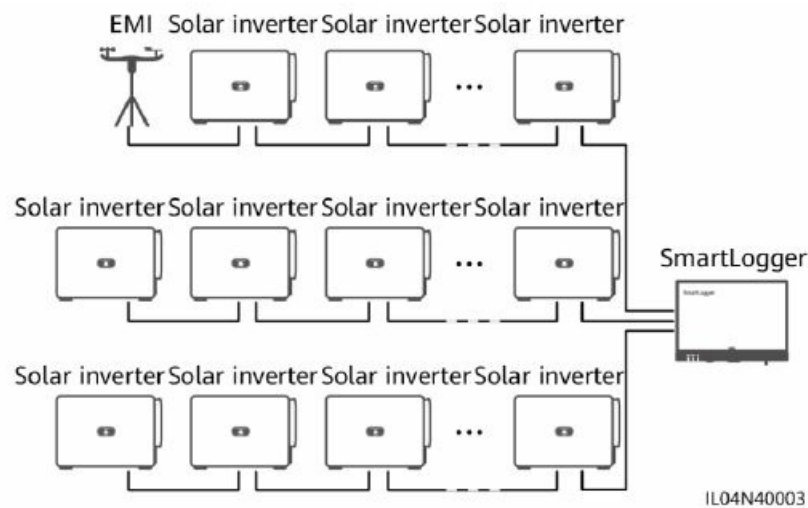


Connecting the MBUS Cable


NOTE

- Ensure that both the solar inverter and SmartLogger support MBUS communication.
- If the SmartLogger is connected to the solar inverter through an AC power cable, no RS485 communications cable needs to be connected.

- If the SmartLogger communicates through MBUS, a miniature circuit breaker (MCB) or knife fuse switch needs to be installed to prevent device damage in the case of short circuits.

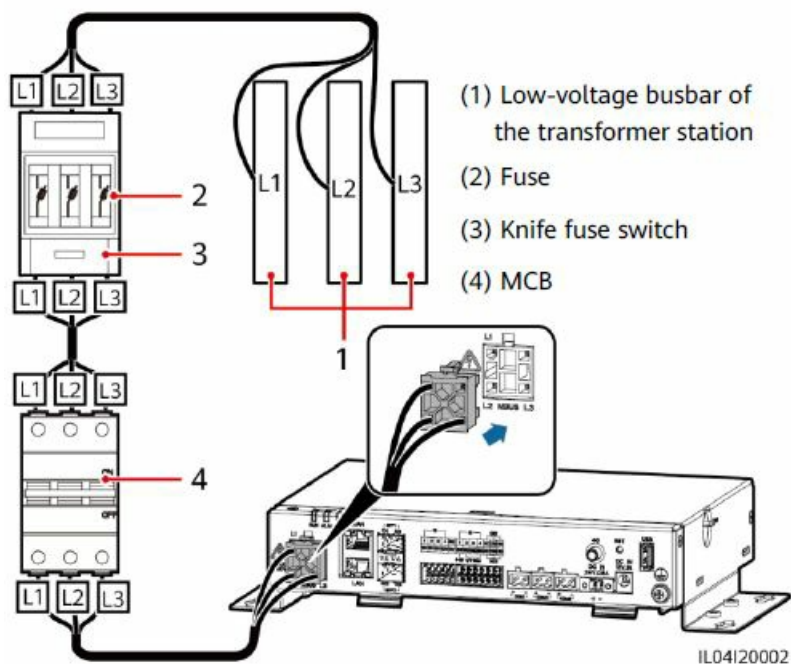


MBUS Networking

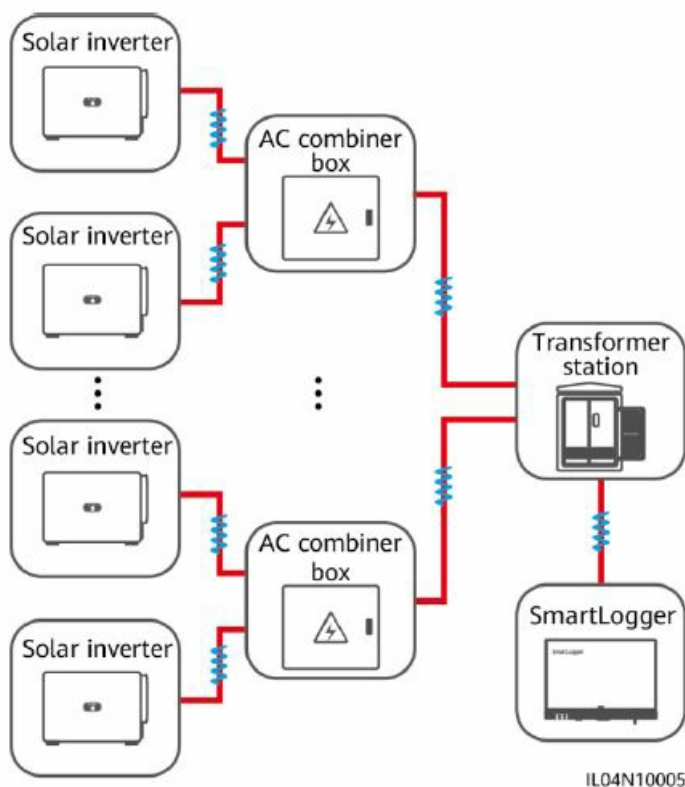

Connecting the DI Signal Cable

NOTE

- The SmartLogger can receive DI signals such as remote power grid scheduling commands and alarms over DI ports. It can only receive passive dry contact signals.
- It is recommended that the signal transmission distance be less than or equal to 10 m.

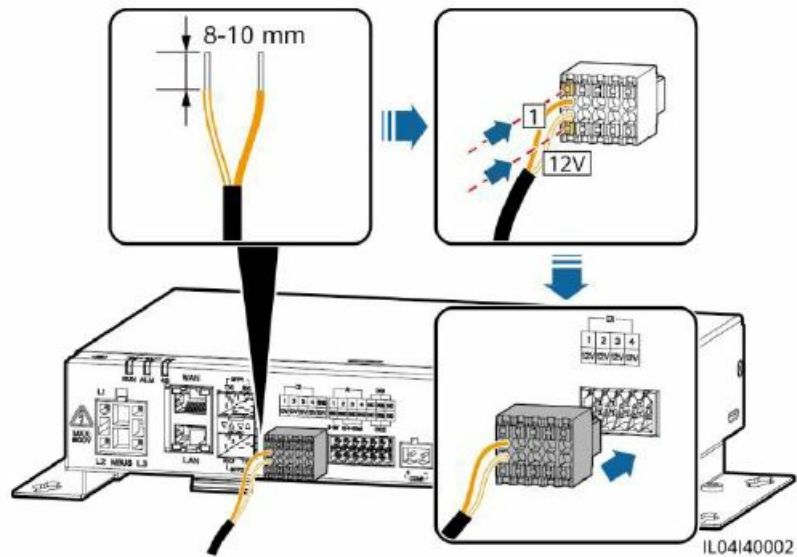


Port	Description
DI1	Can receive passive dry contact signals.
DI2	
DI3	
DI4	

Connecting the Output Power Cable

NOTE


- In the export limitation or audible and visual alarm scenario, the SmartLogger can drive the coil of the intermediate relay through the 12 V output power port.
- It is recommended that the transmission distance be less than or equal to 10 m.

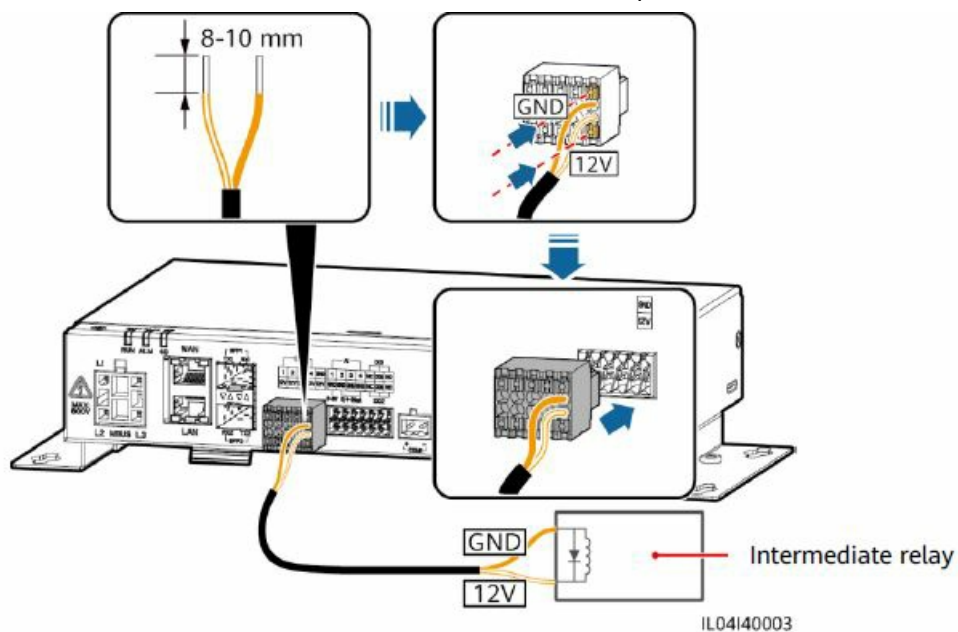

Connecting the AI Signal Cable

NOTE

- The SmartLogger can receive AI signals from EMIs over AI ports.
- It is recommended that the transmission distance be less than or equal to 10 m.
- AI ports 1, 2, 3, and 4 are for AI+ signals, and the GND port is for AI– signals.

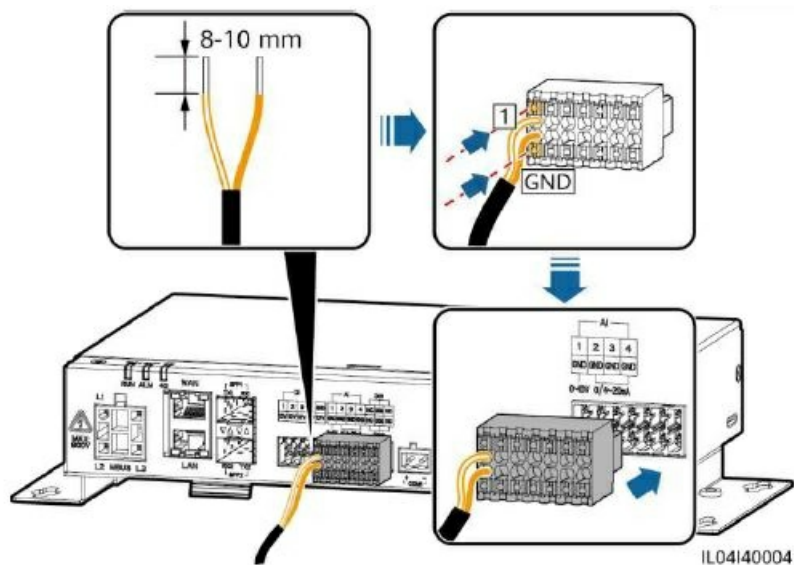


Port	Description
AI1	Supports 0–10 V input voltage.
AI2	Supports 4–20 mA or 0–20 mA input current.
AI3	
AI4	

Connecting the DO Signal Cable

NOTE


- The DO port supports a maximum of 12 V signal voltage. The NC/COM is a normally closed contact, while the NO/COM is a normally open contact.
- It is recommended that the transmission distance be less than or equal to 10 m.

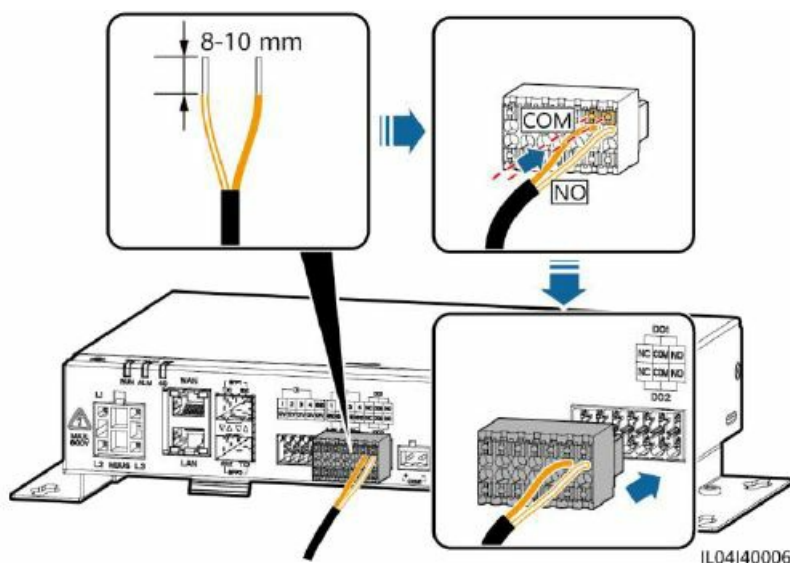

Connecting the Ethernet cable

NOTE


- The SmartLogger can connect to an Ethernet switch, router, or PC over a WAN port.
- The SmartLogger can connect to a SmartModule or PC over a LAN port.
- If the delivered network cable is too short, you are advised to prepare a network cable of Cat 5e or higher specifications and shielded RJ45 connectors. The recommended communication distance is less than or equal to 100 m. When crimping the network cable, ensure that the shielding layer of the cable is securely connected to the metal shell of the RJ45 connectors.

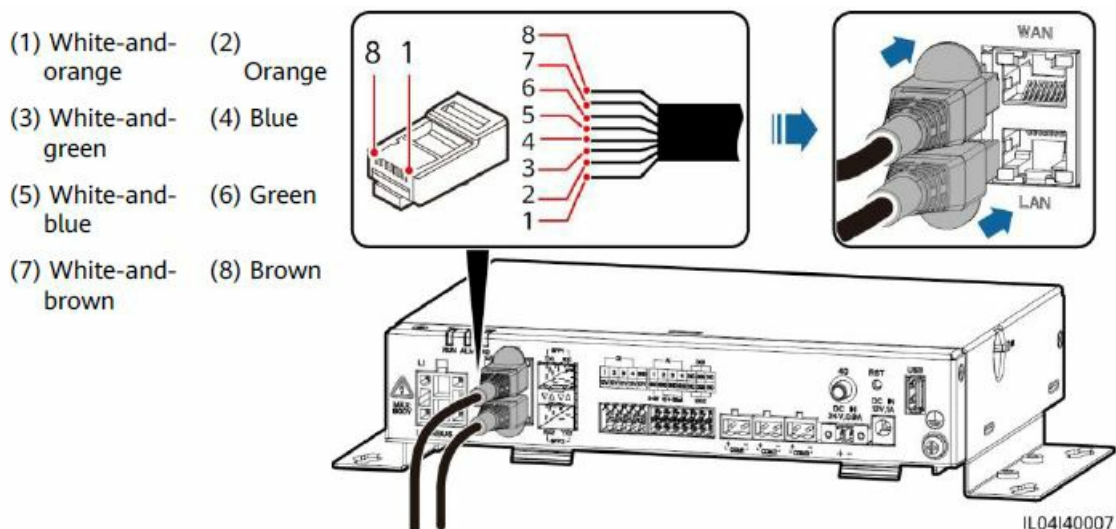

Connecting the Optical Jumper

NOTE

- The SmartLogger can connect to devices such as the access terminal box through optical fibers.
- Optical modules are optional. Configure the 100M or 1000M optical module based on the peer port on the optical switch. The optical module should use the SFP or eSFP encapsulation.
- The transmission distance supported by the 100M optical module should be greater than or equal to 12 km, and the transmission distance supported by the 1000M optical module should be greater than or equal to 10 km.
- When inserting an optical module into the SFP1 port, verify that the side with a label faces upward. When inserting an optical module into the SFP2 port, verify that the side with a label faces downward.
 - Insert the optical module into the SFP1 or SFP2 port. If there are two modules, insert one into each port.
 - Connect the two cables delivered with the optical modules to the ports on the optical modules.

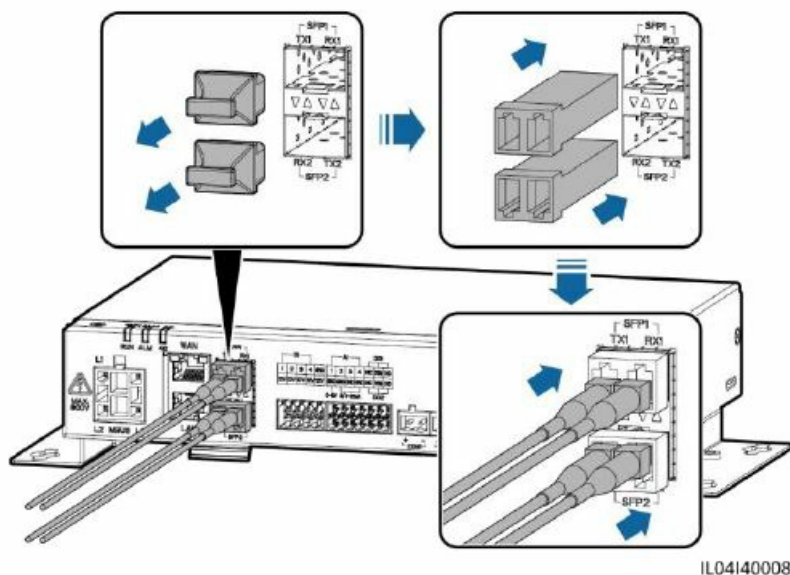


Installing the SIM Card and 4G Antenna

NOTE

- Prepare a standard SIM card (size: 15 mm x 25 mm; capacity ≥ 64 KB). Monthly traffic of the SIM card \geq Monthly traffic of the solar inverter + Monthly traffic of the power meter +
- Monthly traffic of the EMI. If other devices are connected to the SmartLogger in the network, the monthly traffic of the SIM card needs to be increased as required.
- Install the SIM card in the direction shown by the silkscreen on the SIM card slot.
- Press the SIM card in place to lock it. In this case, the SIM card is correctly installed.
- When removing the SIM card, push it inward to eject it.


Monthly Traffic Requirement of SIM Cards		Traffic Baseline
Solar inverter	10 MB + 4 MB x Number of solar inverters	<ul style="list-style-type: none">• Device performance data can be refreshed every 5 minutes.• The solar inverter logs and I-V diagnosis data can be exported monthly. The solar inverters can be upgraded monthly.
Power meter	3 MB x Number of power meters	
EMI	3 MB x Number of EMIs	

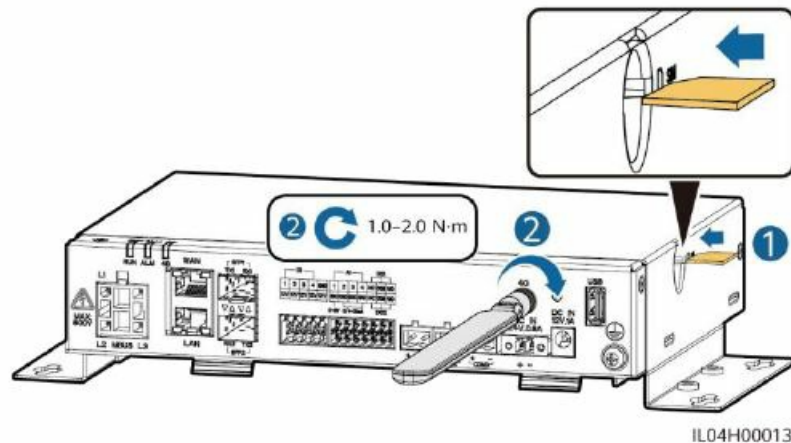

Connecting the 24 V Input Power Cable

The 24 V input power cable needs to be connected in the following scenarios:

- The 24 V DC power supply is used.
- The SmartLogger connects to the power supply through the 12 V input power port, and the 24 V input power port functions as the 12 V output power port to supply power to devices.

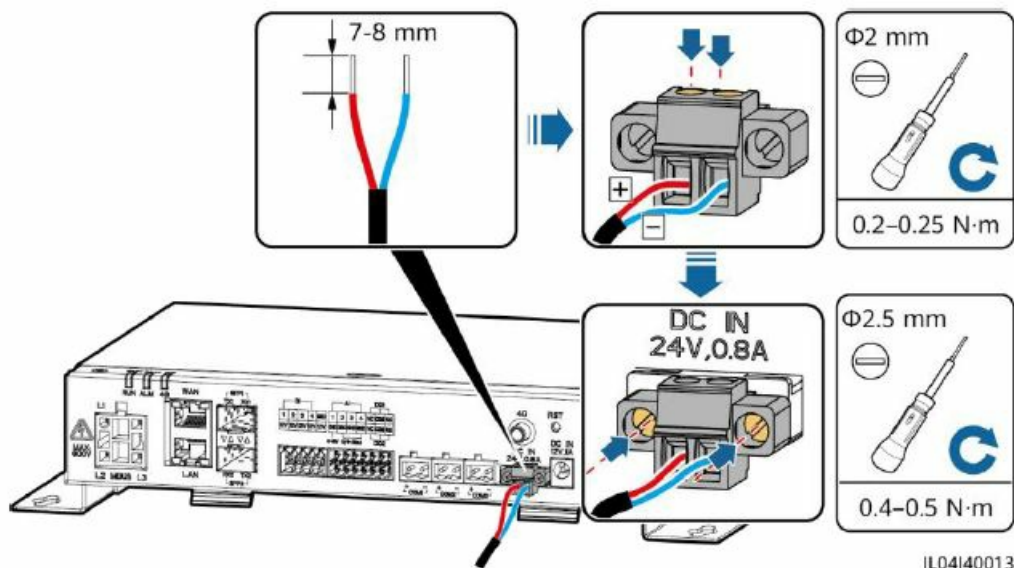


Check Before Power-On

No.	Criterion
1	The SmartLogger is installed correctly and securely.
2	All cables are securely connected.
3	Routing of the power cable and signal cable meets the requirements for routing strong- current and weak-current cables and complies with the cable routing plan.
4	Cables are bound neatly, and cable ties are secured evenly and properly in the same direction.
5	There is no unnecessary adhesive tape or cable tie on cables.

Powering On the System

1. Connect the power supply.

- **Method 1:** When a power adapter is used, connect the power adapter cable and turn on the switch on the AC socket side.

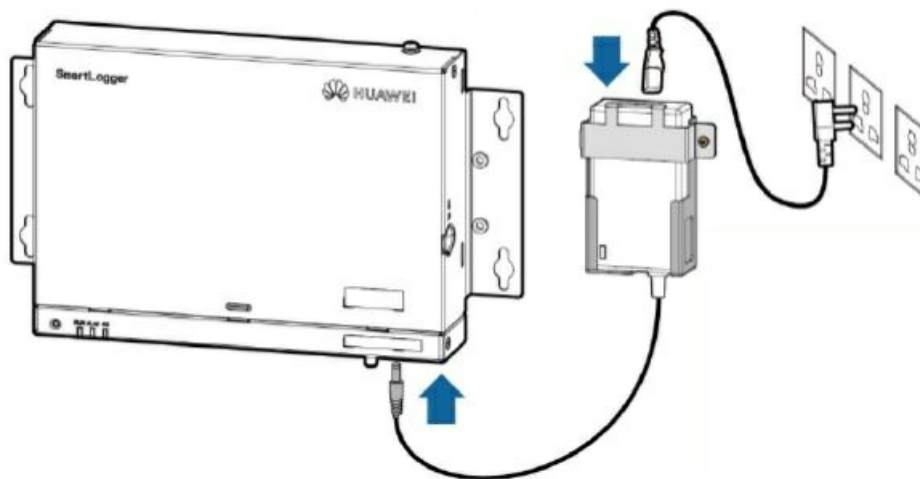

• NOTE

- The rated input voltage of the power adapter is 100–240 V AC, and the rated input frequency is 50/60 Hz.
- Select an AC socket that matches the power adapter
- **Method 2:** When the DC power supply is used, check that the cable between the DC power supply and

the SmartLogger is correctly connected. Turn on the upstream power switch of the DC power supply.

2. When MBUS is used for communication, turn on all the upstream switches of the MBUS port.

3. Observe the LED indicators to check the running status of the SmartLogger.

Indicator	Status		Meaning
Running indicator (RUN)	Green off		The SmartLogger is not powered on
	Blinking green slowly (on for 1s and then off for 1s)		The communication between the SmartLogger and the management system is normal.
	Blinking green fast (on for 0.125s and then off for 0.125s)		The communication between the SmartLogger and the management system is interrupted.
Alarm/ maintenance indicator (ALM)	Alarm status	Red off	No system alarm is raised.
		Blinking red slowly (on for 1s and then off for 4s)	The system raises a warning alarm.
		Blinking red fast (on for 0.5s and then off for 0.5s)	The system raises a minor alarm.
		Steady red	The system raises a major alarm.
	Maintenance status	Green off	No local maintenance is in progress.
		Blinking green slowly (on for 1s and then off for 1s)	Local maintenance is in progress.
		Blinking green fast (on for 0.125s and then off for 0.125s)	Local maintenance fails or the connection to the app is to be set up.
		Steady green	Local maintenance succeeded.
4G indicator (4G)	Green off		The 4G/3G/2G networking function is not enabled.
	Blinking green slowly (on for 1s and then off for 1s)		The 4G/3G/2G dialup succeeded.
	Blinking green fast (on for 0.125s and then off for 0.125s)		The 4G/3G/2G network is not connected or the communication is interrupted.

NOTE: If an alarm and local maintenance happen concurrently, the alarm/maintenance indicator shows the local maintenance state first. After local maintenance ends, the indicator shows the alarm state.

NOTE: The WebUI screenshots are for reference only.

1. Set the IP address for the PC on the same network segment as the SmartLogger IP address.

Port	IP Settings	SmartLogger Default Value	PC Setting Example
LAN port	IP address	192.168.8.10	192.168.8.11
	Subnet mask	255.255.255.0	255.255.255.0
	Default gateway	192.168.8.1	192.168.8.1
WAN port	IP address	192.168.0.10	192.168.0.11
	Subnet mask	255.255.255.0	255.255.255.0
	Default gateway	192.168.0.1	192.168.0.1

NOTE

- When the IP address of the WAN port is on the 192.168.8.1–192.168.8.255 network segment, the IP address of the LAN port is automatically switched to 192.168.3.10, and the default gateway is 192.168.3.1. If the connection port is a LAN port, adjust the network configuration of the PC accordingly.
- It is recommended that the PC be connected to the LAN port on the SmartLogger or the GE port on the SmartModule. When the PC is connected to the GE port on the SmartModule, adjust the network configuration of the PC to the configuration mode when the PC is connected to the LAN port on the SmartLogger.
- Enter <https://XX.XX.XX.XX> in the address box of the browser (XX.XX.XX.XX is the IP address of the SmartLogger). If you log in to the WebUI for the first time, a security risk warning is displayed. Click Continue to this website.
- Log in to the WebUI.




IL03J00002

Parameter	Description
Language	Set this parameter as required.
User name	Select admin .
Password	<ul style="list-style-type: none"> The initial password is Changeme. Use the initial password upon first power-on and change it immediately after login. Then, use the new password to log in again. To ensure account security, change the password periodically and keep the new password in mind. A password left unchanged for a long period of time may be stolen or cracked. If a password is lost, the device needs to be restored to factory settings. In these cases, the user is liable for any loss caused to the PV plant. If you enter wrong passwords for five consecutive times in 5 minutes, your account will be locked out. <p>Try again 10 minutes later.</p>

NOTE: After logging in to the WebUI, a dialog box is displayed. You can view the recent login information. Click OK. On the Deployment Wizard page, set parameters as prompted. For details, see Help on the page.

NOTE: During parameter setting, click Previous, Next, or Skip as required.

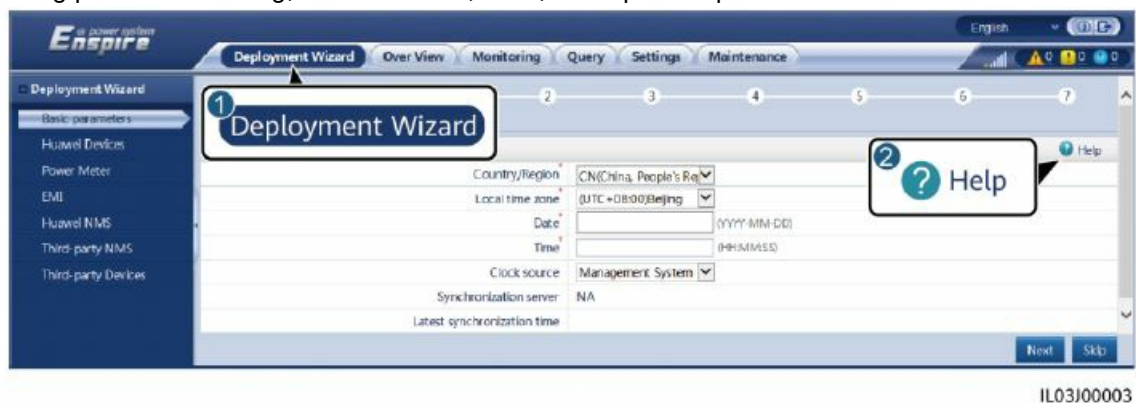


After the parameters are configured, click Finish.

Connecting to the SmartLogger over an App

NOTE

- The FusionSolar app is recommended when the SmartLogger is connected to the FusionSolar smart PV management system. The SUN2000 app is recommended when the SmartLogger is connected to other management systems.
- The FusionSolar app or SUN2000 app communicates with the SmartLogger through the WLAN to provide functions such as alarm query, parameter settings, and routine maintenance.
- Before connecting to the app, ensure that the WLAN function has been enabled on the SmartLogger. By default, the WLAN function is available within 4 hours after the SmartLogger is powered on. In other cases, hold down the RST button (for 1s to 3s) to enable the WLAN function.
- Access the Huawei app store (<http://appstore.huawei.com>), search for FusionSolar or SUN2000, and

download the app installation package. You can also scan the QR code to download the installation package.

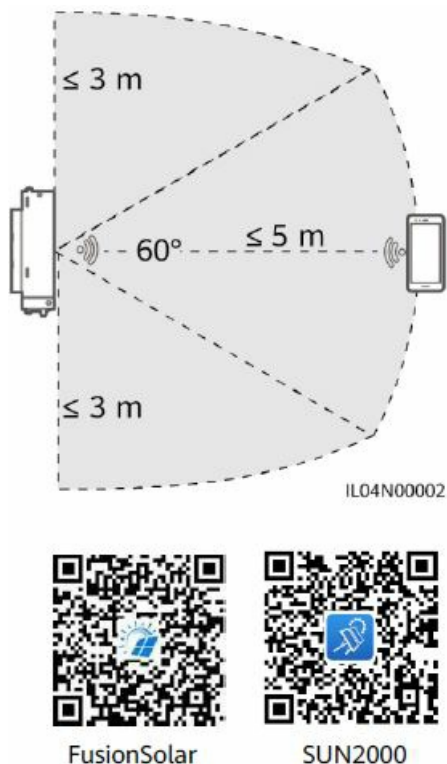

Connecting the SmartLogger to the FusionSolar Smart PV Management System

1. Enable the public network of the mobile phone, open the FusionSolar app, log in to intl.fusionsolar.huawei.com as installer account, and choose My > Device commissioning to connect to the WLAN hotspot of the SmartLogger.
2. Select installer and enter the login password.
3. Tap LOG IN and go to the Quick Settings screen or SmartLogger screen.

Connecting the SmartLogger to Other Management Systems

1. Open the SUN2000 app and connect to the WLAN hotspot of the SmartLogger.
2. Select installer and enter the login password.
3. Tap LOG IN and go to the Quick Settings screen or SmartLogger screen.



NOTE

- The screenshots in this document correspond to the FusionSolar app version 3.7.008 (Android) and SUN2000 app version 3.2.00.013 (Android).
- The initial WLAN hotspot name of the SmartLogger is Logger_SN and the initial password is Changeme. The SN can be obtained from the SmartLogger label.
- The initial passwords of installer and user are both 00000a for the FusionSolar app device commissioning and SUN2000 app.
- Use the initial password upon first power-on and change it immediately after login. To ensure account security, change the password periodically and keep the new password in mind. Not changing the initial password may cause password disclosure. A password left unchanged for a long period of time may be stolen or cracked. If a password is lost, the device cannot be accessed. In these cases, the user is liable for any loss caused to the PV plant.
- If the SmartLogger is powered on for the first time or the factory defaults are restored, and parameter configuration is not performed on the WebUI, the quick settings screen is displayed after you log in to the app. You can set parameters as required.

FAQ

The SmartLogger 9.1 Cannot Be Powered On

1. Check whether the DC output power cable of the power adapter is connected to the 12 V input power port on the SmartLogger.
2. Check whether the power cable is connected to the power adapter.
3. Check whether the power cable is connected to the AC socket.
4. Check whether the power adapter is faulty.

The SmartLogger Cannot Find Devices

1. Check the RS485 communications cable and AC power cable connections. If any cable is loose, disconnected, or reversely connected, rectify the connection.
2. Check the RS485 communications parameter settings. Ensure that the baud rate and communication address are set correctly and that the device address is within the search address range of the SmartLogger.
3. Check whether the devices that do not support automatic identification, such as the EMI and power meter, have been manually added.
4. Check whether the devices connected to the SmartLogger are powered on.

The 4G Communication Is Abnormal

1. Check whether the SIM card is properly installed.
2. Check whether the SIM card is damaged or the charge is overdue.
3. Check whether the 4G antenna is tightened or damaged.
4. Check whether the management system parameters and wireless network parameters are set correctly.

The SmartLogger Cannot Communicate with the Management System

1. If a wired network is used, check whether the WAN port or SFP port of the SmartLogger is correctly connected.
2. If a wireless network is used, check whether the SIM card and antenna are correctly installed.
3. Check whether the parameters of the wired or wireless network are set correctly.
4. Check whether the management system parameters are correctly set.

How Do I Set Export Limitation Parameters

1. Log in to the WebUI as admin, and choose Settings > Power Adjustment > Export Limitation.
2. Set corresponding parameters as prompted. For details, see Help on the page.

RST Button

Operation	Function
Hold down the button for 1s to 3s.	When WLAN is set to OFF in idle state , hold down the RST button for 1s to 3s to power on the WLAN module. The alarm/maintenance indicator (ALM) then blinks green fast for 2 minutes (other indicators are off) and the SmartLogger waits for connecting to the app. If the app fails to be connected, the WLAN module is automatically powered off after it is powered on for 4 hours.
Hold down the button for more than 60s.	Within 3 minutes after the SmartLogger is powered on and restarted, hold down the RST button for more than 60s to restart the SmartLogger and restore factory settings.

Connecting the SmartLogger to the FusionSolar Smart PV Management System


For details, see the PV Plants Connecting to Huawei Hosting Cloud Quick Guide (Inverters + SmartLogger3000). You can scan the QR code below to obtain the document.



CONTACT

- Huawei Technologies Co., Ltd.
- Huawei Industrial Base, Bantian, Longgang
- Shenzhen 518129 People's Republic of China
- solar.huawei.com.
- **Issue:** 08
- **Part Number:** 31500BWF
- **Date:** 2021-04-30
- HUAWEI TECHNOLOGIES CO., LTD.

Documents / Resources

<div>SmartLogger 5000 Quick Guide</div> <div>PDF ID: PDF Name: 1101010007 Date: 2017-01-20 HUAWEI TECHNOLOGIES CO., LTD.</div> <div></div>	<div>HUAWEI A03EU Smart Logger [pdf] User Guide A03EU Smart Logger, A03EU, Smart Logger, Logger</div>
---	---

References

-  [_____](#)